

QDCH-V2312

ASSEMBLY INSTRUCTION

BFTLPT-3009

Caution:

- Place on a flat surface.
- Ensure all latches are locked.
- Ensure the waste holding tank is assembled correctly and the cap is screwed on correctly.
- Weight bearing limit is no more than 200 kg.
- Do not lean on the seat cover during operation.
- Do not use water with a temperature higher than 40 degrees.

Thank you for selecting this product. Before use, please carefully read this operation manual to understand the correct use of this product.

Special attention should be paid to important safety warnings and the operation manual should be kept for reference.

Note: our company reserves the right to improve the product and instructions contained therein which may be changed without notice.

The appearance of the product depends on the material of the object.

Part list:

Ax1



17L base water tank

Bx1



Wash basin

Cx1



Column

Ix1



Portable Toilet

Dx1



Drain Pipe

Ex1



Faucet

Fx1



Hand soap
Dispenser

Gx1




Air release cap

Hx1



Elbow

Jx1

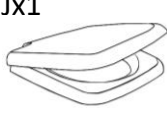

Adapter M85-44


Product Specification:




Portable handwash stand		Portable Toilet	
Fresh water tank	17L	Fresh water tank	10L
Hand soap tank	3L	Waste water tank	20L
Foot pump ability	200M L	Piston pump ability	120ML
Hand soap dispenser ability	1ML	Level indicator, Air release valve, Rotating emptying spout	

Assemble instruction:

1. Screw the column to the fixed point.

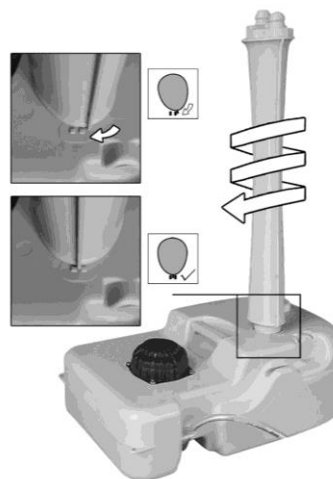


2. Install the washbasin onto the column.

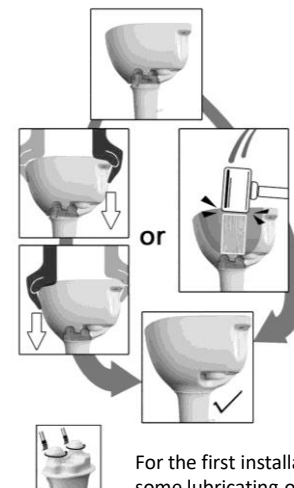


For the first installation, you can apply some lubricating oil to the top of the column for easy installation.

3. Install water pipe and faucet.

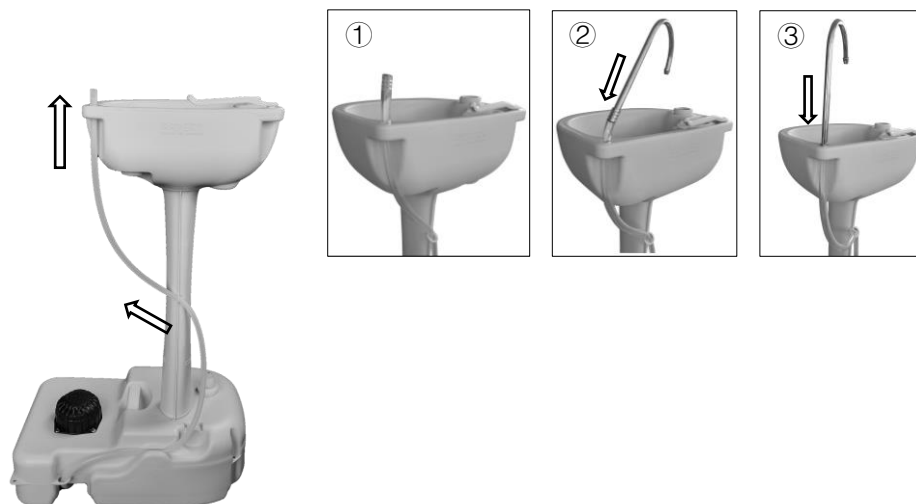


Assemble instruction:

4. Install the other parts onto the stand.

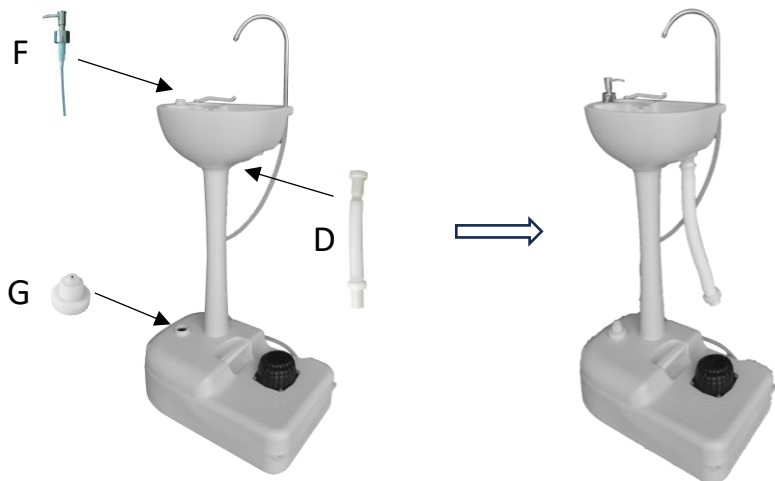


5. Assemble the toilet seat and lid on to the toilet.

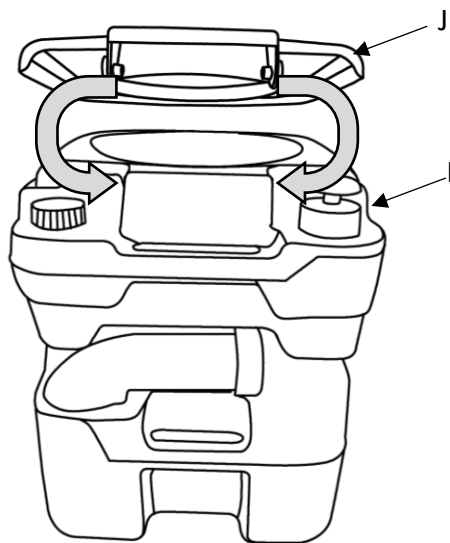

3

Assemble instruction:

6. Connect the water pipe to the filling opening of portable toilet through the elbow

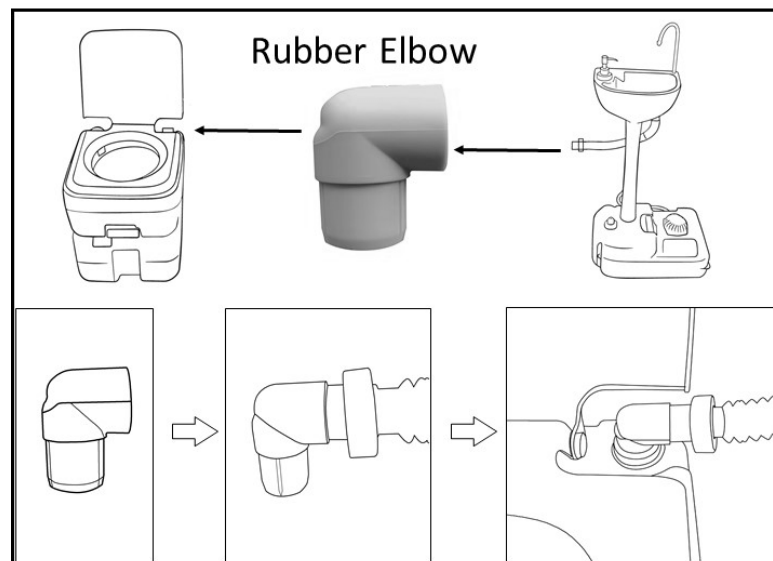


How to use it:



4

How to user it:

Use toilet operation:

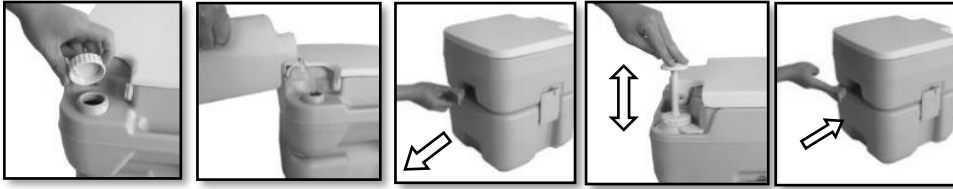

1. Fill the tank with fresh water.
2. Open slide valve.
3. Open seat cover.
4. Press piston pump for flush
5. Close slide valve

Clean toilet operation:



1. Open the latch.
2. Move away the fresh water tank.
3. Take the waste holding tank to emptying.
4. Replace the fresh water tank.
5. Close the latch.

Maintenance and Storage:

1. Clean the tanks regularly in order to achieve long term storage.
2. Lubricate the slide valve periodically with lubricants (Vaseline recommended)
3. Release the waste holding tank cap for long term storage.
4. Avoid strong sunlight and high temperatures.
5. If the piston pump is hard to pull up, pull it out and add lubricants to the built-in rings or open the fresh water tank cap to maintain pressure balance before use.