

USER MANUAL

YG-BC-170A2EQ(B)

Dual-Zone Wine & Beverage Refrigerator

Before use, carefully read and follow all safety precautions in this manual.

CONTENTS

Important Safety Rules	01
Installation Instructions	05
Operating the Beverage Refrigerator	08
Troubleshooting Guide	11
Limited Warranty	14
Record Keeping / Customer Service	15

This English edition is a faithful translation of the supplied Chinese manual.

IMPORTANT SAFETY RULES

Before using this appliance, it must be properly positioned and installed as described in this manual. To reduce the risk of fire, electric shock, or personal injury, follow these basic precautions:

DANGER Plug the appliance into a grounded three-prong outlet. Do not remove the grounding prong, and do not use an adapter or extension cord.

- Provide a separate electrical circuit for this appliance. Use an outlet that cannot be switched off by a wall switch or pull cord.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion. Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.
- Disconnect the appliance from electrical power before cleaning or maintenance.
- Do not plug in or unplug the power cord with wet hands.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electric shock or death.
- Do not attempt to repair or replace any part of the appliance unless specifically recommended in this manual. All other servicing should be performed by a qualified technician.

WARNING Two or more people are recommended to move and install the appliance safely. Failure to do so may result in back or other injury.

- Keep the front of the appliance completely unobstructed to ensure proper ventilation. Install it in a well-ventilated area with an ambient temperature of 60°F (16°C) to 90°F (32°C). Install in a protected area away from wind, rain, water spray, or dripping water.
- Do not place the appliance near ovens, grills, or other high-temperature heat sources.
- Install the appliance in accordance with state and local codes. All electrical, water, and drain connections must comply with applicable requirements. Use a standard 115 V AC, 60 Hz electrical supply that is properly grounded in accordance with the National Electrical Code and local codes and ordinances.
- Do not kink or pinch the power cord. Use a 15-amp fuse or circuit breaker.
- Level the appliance for proper operation. Adjust the leveling feet if necessary.
- Do not allow children to operate, play with, or climb inside the appliance.
- Do not use solvent-based or abrasive cleaners inside the appliance. These cleaners may damage or discolor the interior.
- Use this appliance only for its intended purpose.

IMPORTANT SAFETY RULES - FLAMMABLE REFRIGERANT

For your safety, observe the following recommendations.

- This appliance contains a small quantity of R600a refrigerant. R600a is environmentally friendly but flammable. It does not damage the ozone layer or contribute significantly to the greenhouse effect.
- During transportation and installation, make sure the tubing of the refrigerant circuit is not damaged.
- Avoid using or operating sharp objects near the appliance.
- Leaking refrigerant may ignite and may cause eye injury.

DANGER Risk of fire or explosion due to flammable refrigerant. Do not use mechanical devices to defrost the refrigerator. Do not puncture refrigerant tubing. Service must be performed only by trained service personnel.

- If any damage occurs, keep the appliance away from open flames and any equipment that may create sparks. Disconnect the appliance from the power supply.
- Thoroughly ventilate the room in which the appliance is located for several minutes. Contact Customer Service for further instructions and advice.
- The installation room must provide at least 1 cubic meter of space for every 0.28 oz of refrigerant. The refrigerant charge is also stated on the appliance rating label.

WARNING Before attempting to service this product, consult the service manual. All safety precautions must be followed. Dispose of the appliance in accordance with federal and local regulations. Carefully follow operating instructions to avoid puncturing refrigerant tubing.

- To prevent child entrapment, keep this product out of the reach of children and away from areas where children can access the cooler.

IMPORTANT SAFETY RULES


To reduce the risk of fire, electric shock, or injury when using this appliance, follow these basic precautions:

WARNING Read all instructions before using the beverage refrigerator.

- Do not allow children to operate, play with, or climb inside the appliance.
- Never clean appliance parts with flammable liquids. The fumes may create a fire or explosion hazard.
- Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance. The fumes may create a fire or explosion hazard.

DANGER / WARNING Risk of child entrapment. Child entrapment and suffocation remain hazards with discarded appliances. Before disposing of your old beverage refrigerator, remove the doors but leave the shelves in place so children cannot easily climb inside.

PRODUCT OVERVIEW & TECHNICAL DATA

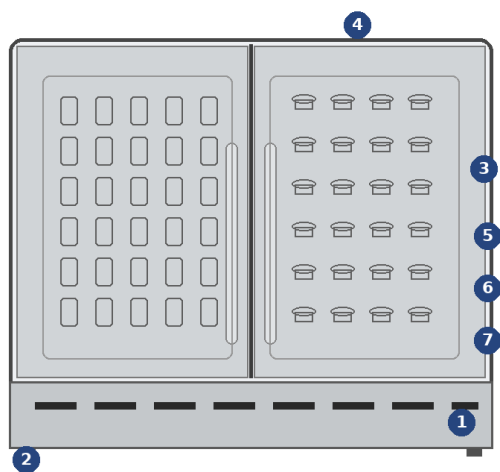

Storage Configuration

- Left zone: up to 80 standard 12 oz beverage cans
- Right zone: up to 33 standard 750 mL Bordeaux wine bottles

Parts Legend

- 1 Air outlet grille
- 2 Adjustable feet
- 3 Stainless steel handles
- 4 Foamed doors
- 5 Display control panels
- 6 Removable wire shelves (6)
- 7 Removable wooden shelves (6)

Technical Data

Item	Specification
Voltage	115 V / 60 Hz
Rated current	1.2 A
Temperature range	34°F-65°F (1°C-18°C)
Net weight	117.3 lb
Gross weight	149.3 lb
Product dimensions	29.7 in W x 22.4 in D x 34.3 in H
Package dimensions	33.5 in W x 25.9 in D x 42.9 in H
Refrigerant	R600a

INSTALLATION INSTRUCTIONS

Before Using the Beverage Refrigerator

- Before connecting the beverage refrigerator to power, leave it standing upright for approximately 24-36 hours. This reduces the possibility of a cooling-system malfunction caused by improper handling during transportation.
- Remove all exterior and interior packaging. Verify that all parts are included: 6 wire shelves, 6 wooden shelves, 2 stainless steel handles, 1 L-shaped screwdriver, and 1 user manual.
- Clean the interior with a soft cloth and warm water.

Installing the Beverage Refrigerator


- This appliance is designed for either freestanding or built-in installation.
- Place the product on a floor strong enough to support it when fully loaded. Adjust the front leveling feet at the bottom of the product as needed.
- Keep the product away from direct sunlight and heat sources such as stoves, heaters, and radiators. Direct sunlight may affect the acrylic coating, and heat sources may increase power consumption. Extremely hot environments may also prevent proper operation.
- Do not install the appliance where the ambient temperature is below 60°F (16°C). Avoid damp areas.
- For best performance, an ambient temperature between 72°F and 78°F is recommended. Operation may be affected if the ambient temperature is above or below this recommended range.

Cabinet Opening for Built-In Installation

For built-in installation, leave approximately 6 mm (1/4 in) of clearance on each side and above the beverage refrigerator for proper airflow to cool the compressor and condenser. Do not block the front exhaust vent. If the unit is too tall to fit securely, adjust the leveling feet to reduce the overall height.

MINIMUM BUILT-IN OPENING Width: 29.97 in (76.1 cm) | Depth: 22.69 in (57.6 cm) | Height: 34.50 in (87.6 cm)

INSTALLATION DIMENSIONS

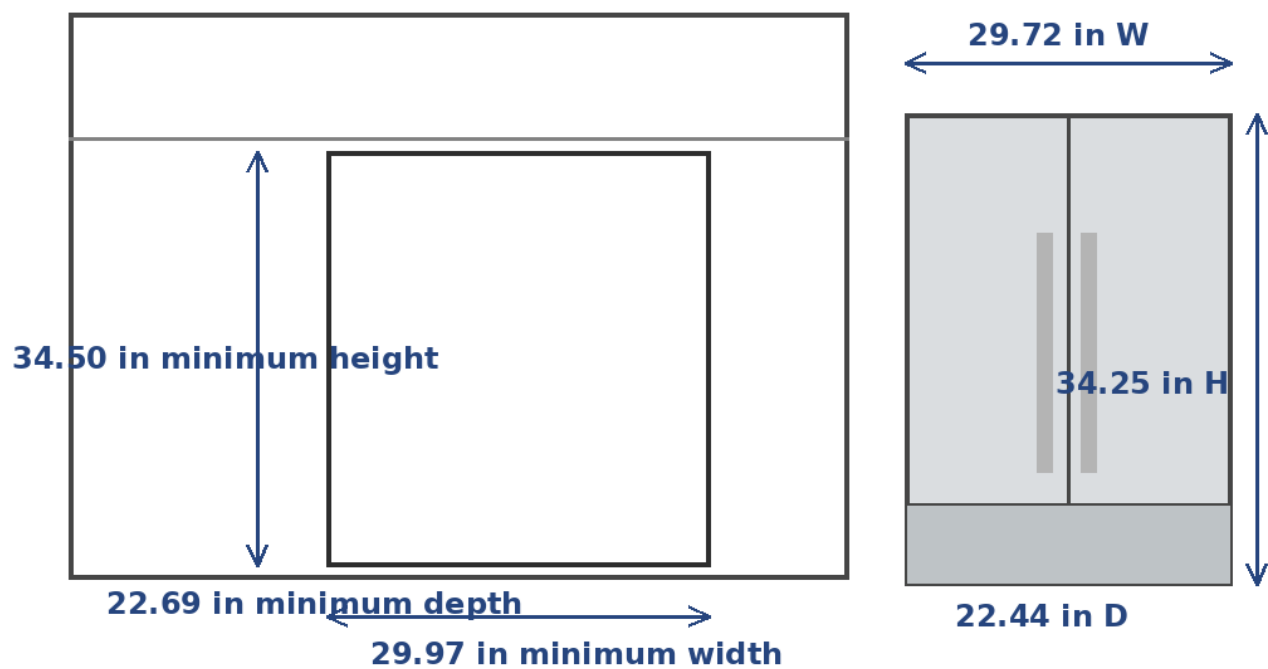

Allow the specified clearances and keep the front ventilation area unobstructed.

INSTALLATION INSTRUCTIONS - ELECTRICAL CONNECTION

CAUTION Improper use of the grounded plug can result in electric shock. If the power cord is damaged, have it replaced by an authorized service center.

For your safety, this appliance must be properly grounded. The power cord is equipped with a three-prong plug designed for a standard three-prong wall outlet to minimize the risk of electric shock.

CAUTION Connect the appliance only to a properly installed and grounded outlet. Under no circumstances cut or remove the third (ground) prong from the power cord. Questions regarding power and/or grounding should be directed to a certified electrician or authorized service center.

- The appliance should always be connected to its own individual electrical outlet with a voltage rating that matches the rating label on the appliance. This provides the best performance and helps prevent household wiring circuits from overheating and creating a fire hazard.
- Never unplug the appliance by pulling on the power cord. Always grasp the plug firmly and pull it straight out from the outlet.
- Immediately repair or replace any power cord that is frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage at either end.
- When moving the appliance, take care not to damage the power cord.
- This appliance requires a standard 115/120 V AC, 60 Hz, three-prong outlet. Have the outlet and circuit checked by a qualified electrician to verify proper grounding. If only a standard two-prong wall outlet is available, it is your responsibility to replace it with a properly grounded three-prong outlet.
- Secure the power cord behind the appliance so it is not exposed or positioned where it could create an accidental-injury hazard.

INSTALLATION INSTRUCTIONS


Extension Cord

To avoid a potential safety hazard, do not use an extension cord with this appliance. If an extension cord is required, use a UL/CUL-listed, three-wire grounding cord rated for 115 V and at least 10 A.

Installing the Handles


The beverage refrigerator is supplied with handles. Follow the steps below to install them. The illustration shows a right-hinged door as an example.

1. Remove the door gasket from the handle-installation area on the inside edge of the door. The gasket can be removed by hand. If it is difficult to remove from the center, start at a corner.
2. Insert the two handle screws, lock washers, and flat washers from the inside of the door toward the outside.
3. Align the handle holes with the screws. Tighten the screws with a screwdriver until the handle is level and secure. Do not overtighten, as this may damage the components.
4. Reinstall the gasket into the door channel.

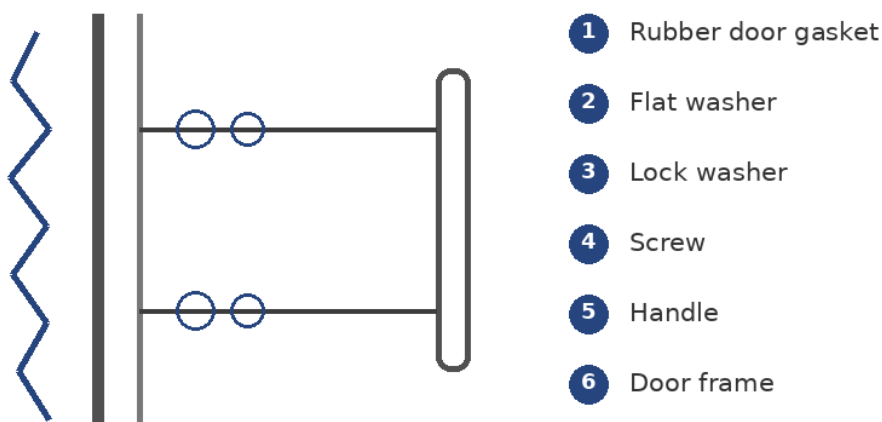

OPERATING THE BEVERAGE REFRIGERATOR

Control Panels

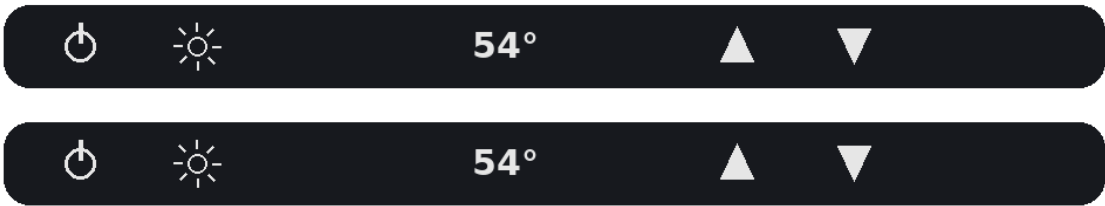

Control	Function
ON/OFF	Press and hold the ON/OFF button for 5 seconds to turn the appliance on or off.
Interior light	The top light turns on when the door is opened and turns off when the door is closed. While the door is open, use the LIGHT button to manually turn the light on or off.
Temperature display	Press and hold the LIGHT button for 5 seconds to switch the display between °C and °F.
+	Raises the set temperature by 1°C or 1°F.
-	Lowers the set temperature by 1°C or 1°F.

CAUTION If the appliance is unplugged, loses power, or is turned off, wait 3-5 minutes before restarting. Attempting to restart too soon may prevent the appliance from starting.

When the beverage refrigerator is used for the first time, or restarted after a long period of non-use, there may be a slight difference between the set temperature and the LED display reading. This is normal during the initial stabilization period and should resolve after the unit has operated for several hours.

OPERATING THE PRODUCT

This product is designed for storing and cooling beverages. It is not intended for storing perishable food.

Large-Capacity Storage

Can and bottle dimensions may vary. As a general reference, the beverage refrigerator can hold approximately:

LEFT ZONE Up to 80 standard 12 oz beverage cans

RIGHT ZONE Up to 33 standard 750 mL Bordeaux wine bottles

Moving the Product

1. Remove all beverage cans and wine bottles.
2. Secure all loose items inside the appliance, including shelves, with tape.
3. Turn the adjustable leveling feet to their lowest position to avoid damage.
4. Tape the doors securely closed.
5. Keep the appliance safely upright during transportation. If horizontal transport is unavoidable, place the refrigerator on its back with the doors facing upward.
6. Protect the exterior of the appliance with a blanket or similar material.

CARE & MAINTENANCE

Cleaning the Beverage Refrigerator

Turn off the power, unplug the appliance, and remove all contents, including shelves. Wash the interior surfaces with warm water and a baking-soda solution (approximately 2 tablespoons of baking soda to 1 cup of water). Wash the shelves with a mild detergent solution. When cleaning the control panel or any electrical components, wring excess water from the sponge or cloth. Clean the exterior cabinet with warm water and mild liquid detergent, rinse thoroughly, and wipe dry with a clean soft cloth.

CAUTION Disconnect the appliance from power during cleaning to avoid the risk of electric shock or personal injury.


Automatic Defrost

The rear evaporator automatically defrosts. Condensation collects in the drain channel behind the rear evaporator and flows through the drain tube into the drip pan near the compressor, where it evaporates.

Power Failure

Most power failures are corrected within a few hours and should not affect the internal temperature if door openings are minimized. If the power will be off for an extended period, take appropriate steps to protect the stored beverages.

Activated Carbon Filter System

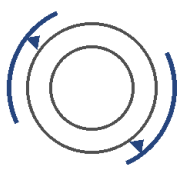

Rotate 45°

The appliance includes an activated carbon filter to help keep the cabinet air fresh and odor-free. The filter is located at the bottom of the rear panel and should be replaced every 12 months.

- Turn the filter 45° counterclockwise and pull it out.
- Remove the existing filter and replace it with a new one.
- Insert the new filter into the cabinet and turn it 45° clockwise.

Energy-Saving Tips

Place the beverage refrigerator in the coolest area of the room, away from heat-producing appliances and direct sunlight. Ensure adequate ventilation around the unit and never cover any ventilation openings. Keep door-opening time as short as possible; frequent opening can affect internal temperature.

TROUBLESHOOTING GUIDE

Many common beverage refrigerator problems can be solved easily without a service call. Before contacting support, try the following troubleshooting steps.

Problem	Possible Cause	Solution
Unit does not operate	Power cord is not plugged in. Unit is not turned on. Circuit breaker has tripped or fuse has blown.	Plug in the power cord. Turn on the unit. Check the circuit breaker and replace any blown fuse.
Unit is not cold enough	Ambient temperature is high and more cooling time may be required. Door is opened too often. Door is not fully closed. Door gasket does not seal properly.	Check the temperature setting. Reduce door openings. Make sure the door closes completely. Inspect the door gasket.
Compressor starts and stops frequently	Room temperature is higher than normal. A large amount of contents was added. Door is opened often or is not completely closed. Temperature setting is incorrect. Door gasket is not sealing.	Use the door properly. Check the door gasket. Avoid frequent door openings. Verify the temperature setting.
Fan runs continuously	This can be a normal function of the cooling system. Lower temperature settings and hot room conditions can increase fan run time.	No action is normally required if cooling performance is normal.
Fan cycles on and off frequently	To circulate air and maintain the set temperature, the fan may cycle while the compressor is operating, approximately every 20 seconds.	This cycling is normal. If the fan stops completely and does not resume, contact service.
Light does not work	Power cord is not plugged in. Circuit breaker has tripped or fuse has blown. LIGHT button is set to OFF.	Check power, breaker/fuse, and the LIGHT setting.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Vibration noise	Unit is not level. Beverage cans are vibrating. An object is obstructing the area beneath the unit.	Check that the unit is level. Reposition vibrating cans and remove any obstruction.
Unit makes excessive noise	The unit may not be level. Clicking may occur from refrigerant flow. Gurgling can occur at the end of a cooling cycle. Expansion and contraction of the inner walls can also cause popping or cracking sounds.	Level the refrigerator. Normal refrigerant and cabinet expansion noises do not require service.
Display shows EL or EH	The air-temperature sensor in the corresponding zone has failed.	Contact Customer Service.
Light flashes	In some cases this is normal, such as when the automatic defrost function begins. The set temperature may also be higher than the internal temperature.	Adjust the temperature as needed.
Frost on the rear interior wall	Humidity inside the cabinet is too high or the temperature is set too low.	Unplug the unit and allow it to defrost manually. Reconnect after all ice has melted. If the condition repeatedly returns, contact the service center.
Door does not close properly	Unit is not level. Door has been reversed or installed incorrectly. Gasket is deformed or damaged. Shelves are positioned incorrectly.	Level the unit. Reinstall/align the door as needed. Clean or properly seat the gasket. Reposition the shelves.

TROUBLESHOOTING GUIDE - ERROR CODES

Display / Alarm	Possible Cause	Recommended Action
E1, E2, E5, E6, E7, E8, E9, EA, EU	Temperature sensor fault and/or communication error.	Contact Customer Service.
L0	Low-temperature alarm.	Contact Customer Service.
HI	High-temperature alarm.	Confirm that the internal and external fans are operating and that the compressor is working normally. If the fans and compressor are running but temperature remains abnormal, a temperature sensor may have failed. If the internal fan has stopped, the fan may be faulty. Contact Customer Service for technical support.
Et	Temperature-difference alarm.	Turn off the unit and unplug it. Leave the door open and ventilate the cabinet for 24-36 hours to clear the fault code. If the problem remains, carefully remove the internal fan rear cover and check for icing. Allow all ice to melt completely, then restart the unit and set the desired temperature. Do not initially set the temperature to the lowest setting.
E0	Door is not closed properly.	Make sure the door is fully closed. If it is not completely shut, close it securely. If the problem remains, contact Customer Service for inspection and support.

LIMITED WARRANTY

One-Year Parts Warranty

For one (1) year (12 months) from the date of initial delivery, if a component fails due to a defect in materials or workmanship, replacement parts will be provided at no charge. Installation guidance will be provided through video tutorials or online instructions. For additional assistance, contact the technical support team by email. This warranty covers the parts required to correct such defects, provided the appliance has been properly installed and operated in accordance with this manual.

Three-Year Compressor Warranty

During years two (2) through three (3) from the date of initial delivery, if the compressor fails, a replacement compressor will be provided at no charge. You are responsible for service labor and shipping costs. Transportation of the beverage refrigerator to a service facility and return shipment to the user may be at the user's expense.

Items Not Covered by Warranty

- Damage caused by accident, misuse, abuse, improper handling, negligence, acts of God (including fire, earthquake, flood, or wind), government action, war, riot, labor dispute, strike, work stoppage, carrier delay, or any other cause beyond the seller's control.
- Loss of contents due to spoilage or deterioration.
- Incidental or consequential damages.
- Parts and labor for door springs, door frames and/or related components; door liners, door rails and/or door brackets; light bulbs and/or plastic light covers; and the plastic inner liner.
- Puncturing the evaporator will void warranty coverage for the entire refrigeration system.
- Repairs performed by unauthorized service personnel are not covered.
- Service requests not caused by defects in materials or workmanship, including operating instructions, door reversal, installation, and setup.
- Failures caused by external factors, including user damage, improper operation, abnormal supply voltage, accidents, fire, flooding, and force majeure events.
- Replacement of household fuses or resetting of circuit breakers.
- Equipment failure caused by abnormal use.
- This warranty applies only in Canada and the continental United States, excluding Hawaii, Alaska, and overseas territories.

PURCHASER ACKNOWLEDGMENT The purchaser understands and acknowledges that this appliance is a dedicated beverage cooler. Risks associated with use, including but not limited to beverage spoilage, humidity fluctuations, temperature variation, liquid leakage, fire hazards, water damage, mold/bacterial growth, excessive drying, and similar conditions, are assumed by the purchaser.

CUSTOMER SERVICE

Please read this guide carefully. Keep the original proof of purchase (such as the sales invoice) with this manual to verify the warranty period.

SAVE TIME AND MONEY Before contacting Customer Service, refer to the Troubleshooting Guide. It lists common problems and simple solutions you can try yourself.

Customer Information

Field	Information
Name	
Product Model	YG-BC-170A2EQ(B)
Purchase Date	
Address	

Contact Us

We take pride in providing quality service and strive to ensure your satisfaction. If you have any questions or concerns, contact the beverage refrigerator Customer Service team and describe the issue. In many cases, they can help resolve the problem directly.

Email: service@yeegolife.com

Maintenance / Service Record

Date	Issue / Fault	Parts Replaced	Service Unit	Technician

ACTIVATE YOUR WARRANTY & JOIN US

Visit: <https://yeego.vip/>



Email: service@yeegolife.com

- Activate your product warranty
 - VIP-exclusive service
- Personalized product care and service records

If you have any questions about our products, please let us know at any time.