




Microwave Oven with Air Fryer

User manual

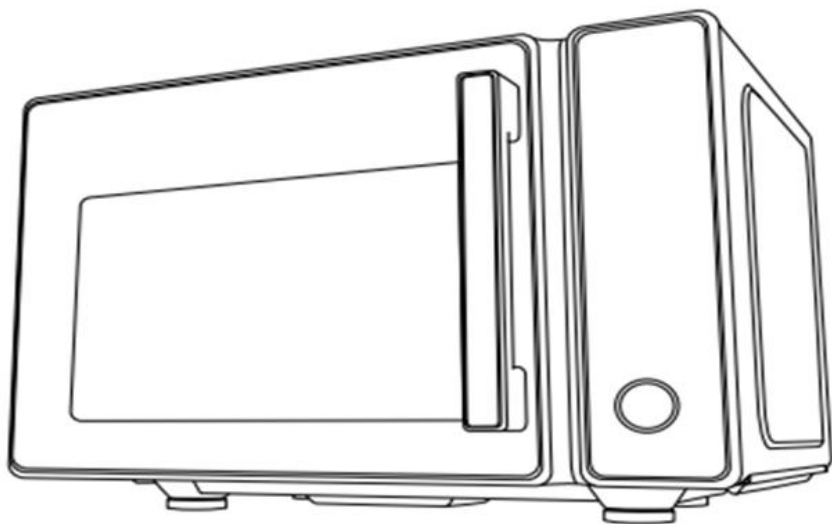

Model: MAT24001

MANUAL DIRECTORY

- 01 Product Placement Specifications**
- 02 Product Safety Precautions**
- 03 Product Parts And Function Instructions**
- 04 Selection Of Cooking Utensils**
- 05 Instructions For Use Of The Control Panel**
- 06 Procedure Description**
 - Initial State
 - Oven Lamp Function
 - Start Key/ Quick Microwave/ Confirm Function
 - Stop/ Clear/ Unlock Function
 - Unlock Function
 - Buzzer Function
 - Quick Microwave Function
 - Automatic Menu Function
 - Automatic Microwave Mode
 - Automatic Air Fryer Mode
 - Manual Mode Menu Function
 - Manual Microwave
 - Manual Air Fryer
 - Dual Function Mode
 - Defrost Mode
 - Time Mode Thawing
 - Weight Mode Defrosting
 - Food Thawing Weight And Schedule
- 07 Operation Guide**
- 08 Common Recipes And Menus**
 - Microwave Menu
 - Air Fried Menu
 - Microwave + Air Fried Menu
- 09 Cleaning And Maintenance**
- 10 Specifications**
- 11 Common Problem**

Dear user:

Thank you for choosing and using the microwave oven. In order to enable this product to serve you better, please read the manual carefully before use, and keep this manual for easy reference. This manual is only applicable to **MAT24001** Microwave Oven with Air Fryer. All the contents in the manual are for reference only during the user's use and maintenance. The actual product shall prevail, and the pictures are for reference only.

*All the contents in the manual have been carefully checked. If there are any printing errors or misunderstandings in the contents, the company reserves the right to interpret.

1. Product Placement Specifications

The microwave oven must be placed 90cm above the ground. In order to ensure the air circulation around the microwave oven, the peripheral clearance must at least ensure the following values: 25CM on the top, 5CM on the right side, 10CM on the left side, and 10CM on the back side. During work, do not block the vents. And keep the environment clean to prevent cockroaches and other reptiles from entering the microwave oven.

The microwave oven must not be close to TV sets, radios, antennas, etc. (Otherwise there will be interference and noise)



Do not place the microwave oven in a hot, humid place. Such as gas stove, live area or beside the sink.

Do not take off the feet of the microwave oven. The product must be laid flat in a safe and stable location.

If the indoor humidity is too high, this product cannot be used. This product is only suitable for home use. The product cannot be placed in a cabinet and other places with narrow space and poor air circulation.

Do not subject the door and top of the product to excessive pressure.

power supply

The microwave oven must use a standard socket, and before use, confirm that the voltage frequency is consistent with the voltage frequency on the product label.

Grounding instructions

This product must use an outlet that is connected to a safety ground. Once leakage occurs, the grounding device can provide a current loop, which is easy to avoid electric shock.

Electric fan

When the microwave oven is used, the fan will continue to work for 1 minute to dissipate heat to protect the cavity and electronic components.

2. Product Safety Precautions

In order to ensure safe use and avoid injury and property damage to you and others, please be sure to observe the following safety precautions. Failure to observe the safety warnings and incorrect use may result in accidents.

Please check and confirm the following items before use:



Whether the door body and main body of the product are damaged or cracked, do not use them if they are deformed, damaged or cracked.



The product must be grounded for use. In case of leakage, grounding can provide a current loop to avoid electric shock. The power plug must be plugged into a single-phase two-pole socket with a grounding device.



Before use, please read the manual carefully. The product is only suitable for the purposes specified in this manual.



Before cooking, check whether the utensils are suitable for use in a microwave oven.

Please pay attention to prevent the following items from happening, otherwise it will cause dangerous situations such as product damage or personal injury.

1. Prohibited matters



If the furnace door or related facilities are damaged, do not use it again until it is repaired by qualified maintenance personnel.



Except those qualified for maintenance, other personnel should not disassemble, repair or modify this product without authorization. Otherwise, dangerous accidents such as product damage or personal injury may occur.



Do not use it for voltages other than AC 120V~ to avoid fire or electric shock. Do not use the power cord plug or cord body damage.



Do not touch or unplug the power plug with wet hands, as this may cause electric shock.



It is forbidden to bring the product close to flammable and explosive materials. When using, pay attention to keeping a certain safe distance from curtains, curtains, curtain walls or similar objects to prevent fire.



Do not bend the power cord forcibly, close to high temperature, bundle it, or carry heavy objects to avoid damage to the power cord and cause fire or electric shock.



When it is found that the product is not working properly, do not continue to use it.



Please check the socket, power cord and power cord plug when using it. If you find that the socket hole is loose or the power cord or power plug is damaged, do not use it.



Do not knock on the control panel, outer cover, cavity, furnace door and other parts to avoid malfunction of the product.



Do not place this product in hot and humid places.



This product is only suitable for household use, and cannot be used for laboratory tests or other commercial purposes, and cannot be used in a cabinet.



Do not use rough scrubbing tools or sharp metal scrapers to clean the oven door, glass, control panel, housing and cavity, as this will cause damage.



This product cannot be operated in the mode of an external timer or an independent remote control system.



WARNING

Do not block the suction hole, or the exhaust hole may cause a fire. Please maintain it frequently to avoid clogging the air holes and air outlets with residues, garbage, and dust.



WARNING

When the product is not in use or when going out, please be sure to unplug the power cord, otherwise it is prone to malfunction or danger.

2. Dangerous matters



Beware Of Electric Shock

Avoid actions that may cause damage to the power cord and power cord plug, such as immersing the power cord or plug in water, placing the power cord near a high temperature, forcibly bending, twisting, stretching, pressing, or bundling the power cord. Because it is damaged and used, it may cause dangerous accidents such as short circuit, electric shock, and fire.



Watch Out For Fires

Do not use this product for purposes other than those stated in the product manual, such as drying items, etc., as this may cause a fire.



Watch Out For Fires

Do not place flammable objects in the fire cavity around the product to avoid fire.



Watch Out For Fires

If smoke is found, turn off the appliance switch or unplug the power plug, and keep the furnace door closed to control the spread of the fire. Please stop the operation of the product in time, unplug the power plug, and cut off the main power supply in the house if necessary.



WARNING

Unclean products will cause surface deterioration of the appliance, affect the service life of the appliance, and may lead to dangerous accidents.

3. Dangerous matters



CAUTION

Do not let children and other personnel who are not familiar with the operation of the product use this product. Only when sufficient guidance has been provided to enable children to adopt safe operations and understand that incorrect use can cause danger, can children be allowed to use it without supervision.



CAUTION

Note: When the product is in use and after use, the surface of the cabinet, the air outlet, the furnace door and the cavity are hot. In order to avoid burns, please do not touch it with your hands.



CAUTION

When stirring, turning over food during cooking, or taking food at the end of cooking, the temperature of the utensils and food is very high, please use insulated gloves or clamps to avoid scalding.



CAUTION

When the furnace door is opened, do not drag the container on the furnace door, and the load of the furnace door cannot exceed 4.5Kg.



CAUTION

If you are carrying medical equipment (including but not limited to pacemakers), please consult your doctor before using this product. The operation of the frying oven may affect medical equipment.



CAUTION

If white smoke is emitted during the first use, it is not a malfunction. This is due to the volatilization of the protective oil of the components.



CAUTION

If you are carrying medical equipment (including but not limited to pacemakers), please consult your doctor before using this product. The operation of the frying oven may affect medical equipment.



WARNING

When the product is in use, only touch the specified operating area to prevent burns.



WARNING

The product must be used on a stable and heat-resistant surface to avoid product damage or accidents.

4. Instructions



WARNING

Only use high temperature resistant containers
Before using a variety of different appliances, you should confirm whether it is high temperature resistant. When using plastic or paper packaging for cooking, pay attention to avoid fire.



WARNING

Cannot cook food directly in the oven cavity
Food must be placed in suitable containers.



WARNING

During and after cooking, the surface and internal temperature of the product is very high. Do not clean it immediately, be sure to clean it after it has cooled down to avoid scalding.



WARNING

Please clean the dust on the power plug regularly. When not in use for a long time, pull out the power plug. Do not pull the wire when



CAUTION

Please pull out the power plug before cleaning. Do not use corrosive cleaning agents to avoid damage or corrosion of the product.



CAUTION

Do not allow cash cards and IC cards near the microwave oven to avoid demagnetization or damage.



WARNING

Do not use this product to heat baby milk powder or baby food. The heated food will become very hot and will burn the baby's mouth and



CAUTION

Do not use a general thermometer, you must use a meat thermometer to check the cooking results. If the cooking result is insufficient, put it in the oven to continue cooking.



NOTE



The cooking recipe only provides reference time for cooking. The factors that affect the cooking time are: the degree of rawness, starting temperature, altitude, serving size, size, food shape, and container type that consumers like. If you are familiar with the operation of this product, you can appropriately refer to the above factors to adjust the cooking time.



WARNING

When using, you must control the cooking time, always pay attention to the food to be heated, and do not stay away. Excessive heating of food may cause smoke and fire.

3.Product Parts And Function Instructions

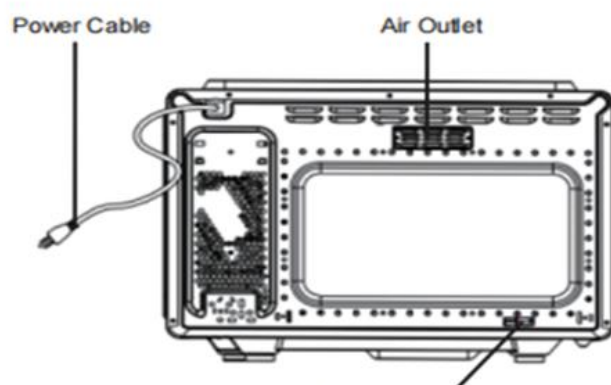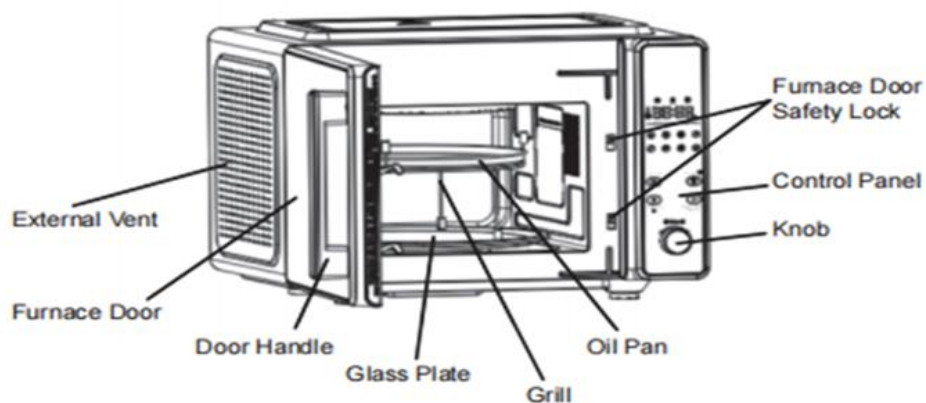
































Partition Wall Column (Do Not Disassemble)

The partition wall pillar acts as a limiter. Make sure to keep a distance between the back of the microwave oven and the wall to ensure ventilation


Note: To protect the operator, during the cooking process, opening the oven door will stop cooking. After closing the oven door and pressing the [Start/+30Sec/Confirm] key, continue cooking.

4. Selection Of Cooking Utensils

Type Of Container	Icon	Microwave Mode		Microwave + Air Frying Mode
Heat-resistant Glass Container		<ul style="list-style-type: none"> For foods that are prone to high temperatures when heating, please use super heat-resistant glass containers that are resistant to 		
Heat-labile Glass Container		<ul style="list-style-type: none"> Sculpted glass and tempered glass cannot be used either 		
Heat-resistant Plastic Container		<ul style="list-style-type: none"> Please use the container marked [Can be used in microwave ovens]. 1) The use of containers with poor heat resistance is prohibited. 2) The use of tightly sealed lids is prohibited. 3) Foods with high oil and high sugar content are prone to high heat, so heat-resistant plastic containers cannot be used. 		
Heat-labile Plastic Container		<ul style="list-style-type: none"> Containers made of polyethylene, melamine, phenol, urea resin and other materials are susceptible to deterioration due to the influence of 		
Ceramics, Porcelain		<ul style="list-style-type: none"> Do not use containers with color pictures, gold and silver decorations, otherwise it is easy to cause colors, decorations to peel off, and sparks. 	Note: Containers with color pictures on the inside may cause odor/peeling, please do not use them.	
Lacquerware		<ul style="list-style-type: none"> It may cause the paint to peel off and break. 		
Aluminum And Other Metal Containers			Note: The handle of the metal container is made of resin material and cannot be used.	
Wooden, Bamboo, And Paper Containers		<ul style="list-style-type: none"> Easily cause burning. 	Note: When the cooking temperature is below 250°C, paper containers with heat-resistant	
Microwave Special Cling Film		<ul style="list-style-type: none"> It is recommended to use plastic wrap with a heat-resistant temperature of 140°C. Note: Cooking with a lot of oil cannot be used. 	<ul style="list-style-type: none"> The cling film will melt in high temperature, so it cannot be used. 	
Aluminum Foil		<ul style="list-style-type: none"> It can be used with oil pan and grill. Remember that the aluminum foil cannot touch the inner wall of the oven cavity. 		
This product comes with a glass plate, grill, and oil pan				

5. Instructions For Use Of The Control Panel

Instructions for use of the control panel:

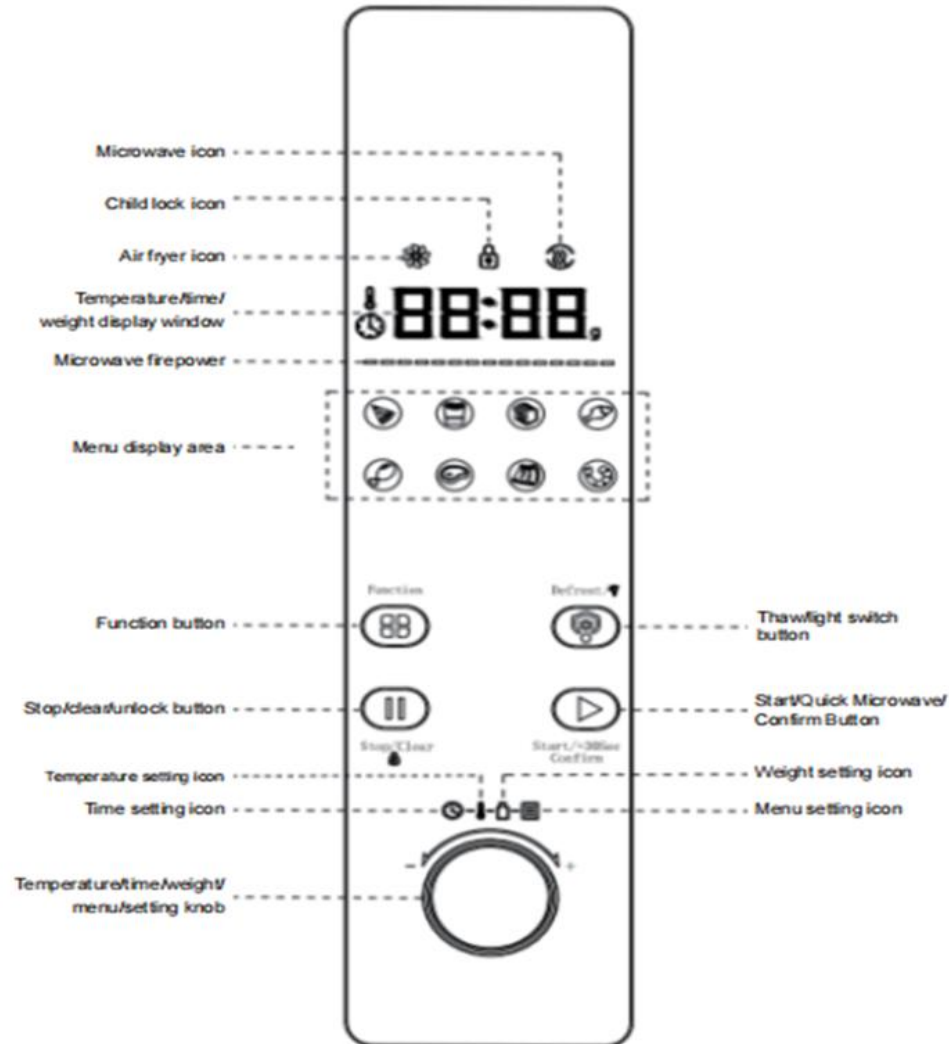

[Start/ +30sec/ Confirm] Key Function:



- ①. When setting the function, press the [Start/+30Sec/Confirm] key as the confirmation key.
- ②. After setting the cooking program, press [Start/+30Sec/Confirm] to start cooking.
- ③. In the cooking pause state, press the [Start/+30Sec/Confirm] key to continue cooking.

[Stop/ Clear] Key Function:



- ①. During the setting process, press the [Stop/Clear] key to cancel the current setting and return to the initial interface of the menu.
- ②. When running, press the [Stop/Clear] key to enter the pause state (the indicator light flashes), press the key again to cancel the running program and return to the initial interface state of the menu; if there is no operation within 30 minutes of the pause state, then Exit the function interface and enter self-locking.
- ③. In the self-locking state, long press the [Stop/Clear] key for two seconds to unlock;

Child Lock Function:



- ①. In standby mode, child lock, "🔒" screen lock icon is on, and pressing any operation key is invalid at this time.
- ②. After power-on, if there is no operation within three minutes, the child lock icon will light up and the lock will be automatically locked.
- ③. After the work is over, if there is no operation within three minutes, the child lock will also be triggered automatically at this time.
- ④. Unlock: In the locked state, press and hold the [Stop/Clear] key for two seconds to release the child lock, the "🔒" screen lock icon will go out, and the initial interface of the menu will be entered.

Buzzer:

There will be 1 sound for effective key operation, 2 sound for food prompt (end of preheating for 5 minutes), and 5 long sound after cooking.

Quick Microwave Function:



- ①. In the initial interface state of the menu, press [Start/+30Sec/Confirm], every time you press it, the time will be increased by 30 seconds, and the microwave icon on the display will light up, 100% microwave power output, and start with a delay of 2 seconds.
- ②. During operation, you can press the [Start/+30Sec/Confirm] key to increase the cooking time (30 seconds increments).
- ③. During running, press [Stop/Clear] once to enter the pause state, and press [Stop/Clear] again to exit the operation and return to the initial interface of the menu.

Auto Mode Menu Function:

In the initial interface state of the menu, rotate the knob to select the menu, A-01...A-06, F-01...F-08, display in a loop.

Automatic Microwave Mode



- ①. Rotate the knob to select different microwave heating menus (A-01...A-06), and the microwave icon will light up at this time.
- ②. Press [Start/+30Sec/Confirm] key to confirm and enter the food weight selection.
- ③. Rotate the knob to select the food weight (the display will show the corresponding food weight, and the cooking time will be automatically set according to the weight), and the weight icon "g" will light up.
- ④. Press [Start/+30Sec/Confirm] key to cook food and display the countdown time.

Microwave Menu (A-01...A-06): (Weight Unit: g):

A-01 Automatic Reheating (Reheat)			A-02 Meat		A-03 Fish	
100% Microwave Power			100% microwave power		80% Microwave Power	
Weight	Time		Weight	Time	Weight	Time
125	1:30		200	5:00	200	3:30
250	2:40		300	6:00	300	4:45
375	3:50		400	7:00	400	6:00
500	5:00		500	8:00	500	7:15
625	6:10		600	9:00	600	8:30
750	7:20					
A-04 Pasta			A-05 Popcorn		A-06 Vegetable	
80% Microwave Power			100% Microwave Power		1/3-100%	2/3-40%
Weight	Water	Time	Weight	Time	Weight	Time
55	450	8:00	80	3:00	140	2:10
110	790	10:00	100	3:30	340	4:30
170	1190	12:00	120	4:00	500	5:30

Automatic Air Fryer Mode



- ①. Rotate the knob to select different air frying heating menu (air frying icon lights up), F-01...F-08, select the type.
- ②. Press [Start/Confirm] key to confirm, enter food cooking, and display the countdown time.

Automatic air fryer menu (B-01...B-08):

Function	Time(Min)		Temp(*F)	
	Default		Default	
(F-01) Pizza	10		340	
(F-02) French Fries	18		400	
(F-03) Bread	3		390	
(F-04) Fish	12		380	
(F-05) Drumsticks	20		360	
(F-06) Steak	12		400	
(F-07) Spare Ribs	18		380	
(F-08) Shrimp	12		360	

Manual Mode Menu Function

Manual Microwave Mode:



- ①. In the initial interface state of the menu, press the [Function] key once to enter the custom microwave mode, the display shows the letter 'A', and the microwave icon is lit at the same time, and it enters the P100 display after one second.
- ②. Rotate the knob to select the power, a total of five levels of P100-P80-P60-P40-P20, the firepower bar corresponds to the number of bars.
- ③. Press 【Start/30Sec/Confirm】 key to confirm and enter the cooking time setting corresponding to the firepower.
- ④. Rotate the knob to choose the cooking time (0:10-60:00).

Manual Air Fryer Mode:



- ①. In the initial interface state of the menu, press the [Function] key twice to enter the custom air frying mode, the screen displays the letter 'F', and the air frying icon is lit at the same time, and the temperature will display 400F after one second.
- ②. Rotate the knob to set the cooking temperature (temperature adjustment range: 180-450 degrees Fahrenheit, step *F)
- ③. Press 【Start/30Sec/Confirm】 key to confirm and enter time setting.
- ④. Rotate the knob to set the time, the time adjustment range: 1-60 Min, the adjustment step is: 1Min.

Dual Function Mode (Air Frying + Microwave):



- ①. Press the [Function] key three times to enter the combination grill setting, the screen displays the letter 'C', and the two icons 'air frying+microwave' are lit at the same time, and the time display is '01:00' after one second.
- ②. Rotate the knob to adjust the cooking time.
- ③. Press the [Start/30Sec/Confirm] key to start cooking, and the countdown for cooking will be displayed.

Defrost Mode Menu Function

Time Mode Thawing



- ①. In the initial interface state of the menu, press the [Defrost/☃] key once to enter the 'd1' defrosting and heating menu, the screen displays 'd1' (defrosting time adjustment), and the time icon '⌚' lights up.
- ②. Rotate the knob to adjust the time (4:00 ~ 60:00).
- ③. Press [Start/30Sec/Confirm] key to start defrosting by time and display the countdown of cooking.

Defrosting In Weight Mode:



- ①. In the initial interface state of the menu, press the [Defrost/☃] key twice to enter the 'd2' defrosting heating menu, the screen displays 'd2' (defrost weight adjustment), and the weight icon 'g' lights up.
- ②. Rotate the knob to adjust the weight (automatically correspond to the heating time).
- ③. Press [Start/30Sec/Confirm] key to start defrosting by weight and display the countdown of cooking.
- ④. When 1/3 of the defrosting time is left, the work is automatically suspended, reminding the user to turn over, and then click [Start/30Sec/Confirm] to star.

The corresponding table of the weight and time of thawing food (d1...d2):

Weight (g)	100	200	300	400	500	600	700	800	900
Time (m:s)	2:30	4:00	6:30	9:30	12:30	14:30	16:45	19:00	22:30
Weight (g)	1000	1100	1200	1300	1400	1500	1600	1700	1800
Time (m:s)	24:00	26:15	28:30	30:45	33:00	35:15	37:30	39:45	42:45

7.Operation Guide

Preparation:

01

Please place the microwave oven on a flat table according to the "product placement" described in this manual, ensure that sufficient heat dissipation distance is reserved around the product, and keep air circulation around the product. Do not approach flammable and explosive materials.



02

Insert the power plug into the socket with the same voltage and frequency as the product, and make sure that it is not used in the same line with other high-power electrical appliances. Please use sockets above 10A.



03

Please preheat the product for 5 minutes before starting the air frying function cooking.



04

Please prepare the grill and utensils before use, and place them according to the picture



05

Please place the ingredients evenly in the utensils.



06

Please wear anti-scalding gloves, and put the net plate with the ingredients
Put it into the preheated cavity and make sure it is stable.

Warning: Please wear anti-scald gloves to prevent burns.

**07**

Use the control panel to select the corresponding menu corresponding to the food you are cooking or adjust to the appropriate time and temperature according to your own needs.

**08**

After the food is cooked, cut off the power supply, wear anti-scalding gloves, and carefully remove the net plate from the cavity.

Warning: When taking out the food, please wear anti-scald gloves and be careful not to touch the cavity to avoid scalding.

**09**

The delicious food has been cooked, enjoy it!

Warning: Please handle it carefully, and remember to lay it flat on the table to avoid being scalded by steam, dumped by the net tray, and scalded by oil or hot food.



8.Common Recipes And Menus

Microwave Menu:

Food	Weight/ Specification	Time(Min)	Gear
potato	450g-600g	12'00"	P100
Ribs	400g-450g	6'30"	P100
vegetables	350g	4'30"	P100
fish	450g	6'30"	P80
soup	450g	4'30"	P100


Air Fried Menu:

Food	Weight/ Specification	Air fryer preheating	Time(Min)	Temp(°F)
French fries	400g	YES	18'00"	400°F
Chicken wings	450-650g	YES	20'00"	360°F
fish	250g	YES	10'00"	380°F
steak	200g	YES	10'00"	400°F
Ribs	400-600g	YES	18'00"	380°F
shrimp	300-400g	YES	10'00"	380°F
Pizza	10 inches	YES	10'00"	340°F
Bread slices	100-160g (four pieces)	YES	3'00"	400°F

Microwave + Air Frying Combination Menu:

Food	Weight/ Specification	Time(Min)	Gear/Temp(°F)
Whole chicken	1000-1300g	30'00"0	Microwave P100 + Air fried 400F

9.Cleaning And Maintenance

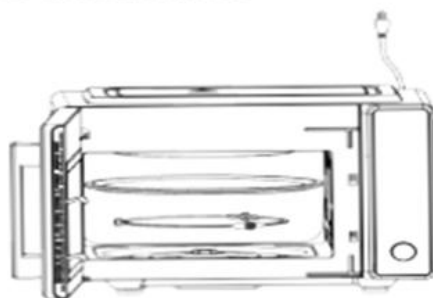

- Please use a slightly damp soft cotton cloth or sponge moistened with a neutral detergent to clean and wipe the surface of the microwave oven. In order to prevent damage to the operating parts of the oven, do not let water seep into the side vents.
- Before cleaning the product, be sure to cut off the power supply, and clean and maintain it after the furnace cavity has completely cooled down.
- If the control panel gets wet, please wipe it with a soft cotton cloth. Do not wipe the control panel with rough or abrasive items.
- In order to keep the oven clean, avoid the attached residual food or liquid, smoke, ignition and other phenomena that may be caused by heating, please clean and maintain the microwave oven cavity after the oven cavity is completely cooled. Please use a damp cloth to wipe the liquid or real residues splashing in the furnace. Do not use rough or abrasive items (such as steel wire balls, etc.) to avoid damage to the surface of the cavity.
- After each use, please clean the glass turntable and wheel assembly.
- After cooking, use detergent to clean the grill and the oil pan.
- Please use a soft cotton cloth to wipe the furnace door and the glass of the furnace door. If the oil is difficult to clean, you can wipe it with a

soft cotton cloth or sponge dipped in a neutral detergent, and finally wipe the water droplets with a dry cloth.




Note:

1. After cooking, clean the inside of the frying oven with a soft cloth or paper towel sprayed with a non-abrasive detergent. Special attention should be paid to the cleaning of furnace doors and windows. When cleaning the stains in the frying oven, you can use a soft cloth dipped in a small amount of soft lotion to wipe. If there are stubborn stains, you can leave it for a while after wiping and then wipe it again. Do not spray the cleaning agent directly into the frying oven.
2. During cooking, some food grease will splash on the microwave oven wall. If it is not cleaned in time, the grease will accumulate in the microwave oven and cause the stove to smoke when the frying oven is used next time, and the attached stains will be removed after grilling. Harder to clean,
3. After cooking high-fat foods (such as beef/pork/lamb) in the pot, thoroughly clean the oven cavity every time.
4. After cooking vegetables, there will be residual water vapor on the bottom plate. After the oven cavity has cooled down, clean it with a dry cloth.

10.Specifications

Model	MAT24001	
Rated Voltage	120V	
Rated Frequency	60Hz	
Rated input power	Microwave Oven	1500W
	Air Fryer	1800W
Rated Microwave Output Power	900W	
Microwave Oscillation Frequency	2450MHz	
Dimensions (Including Handle)	506X360X408mm	
Cavity Size	338X353X195mm	
Furnace Cavity Volume	24L	
Product Weight	19kg	

11. Common Problem

Problem	Possible Causes	Solution
No product display	Not plugged in tightly	Unplug it, wait 10 seconds, and then plug it back in.
	The fuse in the power supply line is blown or the leakage protector operates	Reinstall a fuse above 10A or reset the leakage protector.
	There is a problem with the socket	Use other electrical appliances to test whether there is a problem with the socket.
	Standby mode	Press any key or open the furnace door and then close it.
Product won't start	The furnace door is not closed properly	Close the furnace door carefully
	The [Start/+30Sec/Confirm] button is not pressed	Press [Start/+30Sec/Confirm] button
	Press the [Stop/Clear ] key accidentally	Press [Start/+30Sec/Confirm] button to restart
Child lock is on  and cannot be operated	The microwave oven is set to child safety lock mode	Press [Stop/Clear ] key for 2 seconds to exit child safety lock mode
Microwave oven interferes with TV and cordless phone reception	When using a microwave oven, other wireless devices such as radio, TV, wireless network, telephone, Bluetooth, etc. may cause interference.	This is a normal phenomenon. Please keep the microwave oven away from the above products before using it.
The fan is still running after cooking	The product is cooling the cavity and electronic components, and the fan will continue to run for 1 minute after each shutdown.	Normal phenomenon
The product has a small amount of white smoke and peculiar smell when used for the first time	This is caused by excessive volatilization of grease on the protective parts in the oven cavity	Normal phenomenon

Technical Support

Whenever possible, please consult the troubleshooting steps provided in the manual first, or visit the our website as normally they have abundant information to troubleshoot the problem you might have. If all else fails, and you believe the product is faulty, please contact us for details. For technical questions, information about our products and to order spare parts, our service team is at your disposal as follows:
Service time: Monday to Friday from 9 a.m. to 6 p.m.
E-Mail: service@uten.com
URL: <http://www.uten.com>

Please make sure that you have the following information on hand.

- Operation manual
- Model number (this can be found on the cover of this manual)
- Description of the accessories
- Accessory number
- Proof of purchase with date of purchase
- Order number

Important NOTE:

Please do not send your product to our address without a request from our service team. The costs and the risk of loss for unsolicited mailings are borne by the sender. We reserve the right to refuse to accept unsolicited consignments or to return the relevant goods to the sender freight collect or at the sender's expense.



Manufacturer: SHENZHEN RBU TECHNOLOGY GROUP CO., LTD
Address: 9 Tengfei Road, Longcheng Sub-District, Longgang District, Shenzhen, China

Distributor: AGM USA, LLC
Address: 1521 E Francis St, unit a Ontario, CA 91767, United States

For more information please contact us at service@uten.com



MADE IN CHINA