



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana **UK** office: Ipswich **AU** office: Truganina
DE office: Hamburg **FR** office: Saint Vigor d'Ymonville **PL** office: Gdańsk



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



US:cs.us@costway.com
UK:cs.uk@costway.com
AU:cs.au@costway.com

USER'S MANUAL

Safety Box EL10001

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Opening the safe for the first time

1. Move the Battery box cover to the left.
2. Insert the emergency key and turn anti-clockwise to the limit and hold.
3. Powered by four AAA batteries.
4. Turn the knob clockwise, the door open.

ATTENTION: DO NOT LEAVE THE BACKUP KEY IN THE SAFE, OR THE SAFE CANNOT BE OPEN IF THE ELECTRONIC SYSTEM MALFUNCTIONED.

Change password

There are two sets of independent initial password: 1234 and 123456

Change password 123456:

1. With safe door opening, press the green button inside the safe box to light yellow indicator.
2. Enter any 3-8-bit password end with button # and re-enter the new password again end with button # to confirm password changing.

Change password 1234:

1. With safe door opening, press o twice, then press the green button inside the safe box, yellow light on.
2. Enter any 3-8-bit password end with button # and re-enter the new password again end with button # to confirm password changing.

Vibration alarm

1. Press the button "*" key to automatically enter the automatic alarm state, and at the same time all three red, yellow and green lights on the screen will light up, and the alarm can be canceled by entering the correct password when the alarm is triggered.
2. When each door is opened, the vibration alarm turns off, and needs to be turned on again. If the wrong password is entered 3 times in a row, the alarm will turned on. Enter the correct password to clear the alarm.

Assembly



Take out the shelf and put it on the rack in safe.



Take out battery cover from the box and fit it.