 
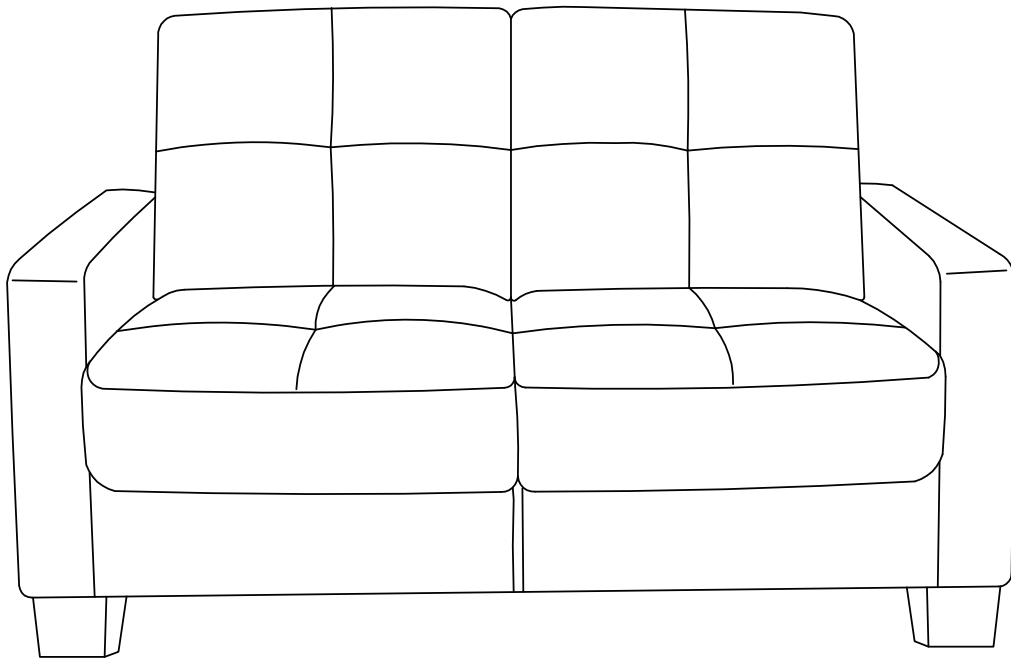


Assembly Instructions

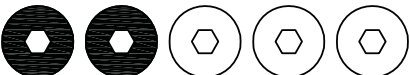

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Wrench



(Included)

Phillips Screwdriver



(Not Included)



2 PERSONS RECOMMENDED

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES



When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.



Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.




Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.



Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.




Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

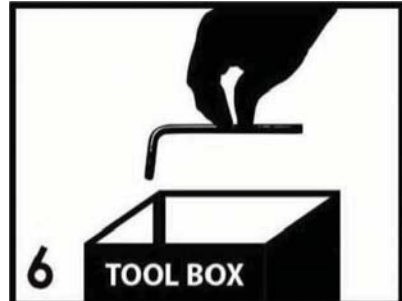

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

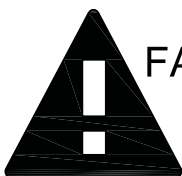


FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List



#1 x 1pc
Seat Frame

 


#2 x 2pcs
Seat Cushion



#3 x 1pc
Crossbar


 
#4 x 1pc
Back Frame




#5 x 2pcs
Arm




#6 x 4pcs
Leg

 Hardware List



#A x 12pcs
Threaded Rod Ø8*70mm

 

#B x 1pc
Washer



#C x 12pcs
Hex Nut



 
#D x 12pcs
Flat washer



#E x 4pcs
Bolt 5/16" x 2-3/8"



#F x 1pc
Allen Wrench




#G x 2pcs
Screw



#1
 
#G x 2pcs

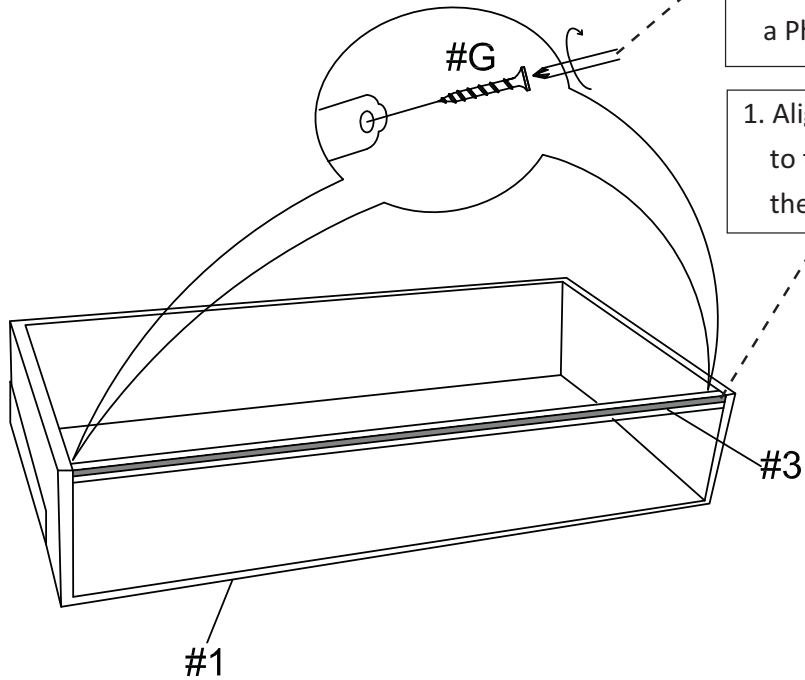

2. Insert a screw (#G) into each end of the crossbar (#3). Secure using a Phillips screwdriver.

1. Align the crossbar (#3) to the opening side of the seat frame (#1).




#2
 
#A x 8pcs
#C x 8pcs
#D x 8pcs

1. Insert 4 threaded rods (#A) into the holes along each arm (#5) and turn right to tighten.

2. Insert the other ends of those threaded rods (#A) into the holes along the sides of the seat frame (#1).

3. Insert a flat washer (#D) then a hex nut (#C) onto the threaded rods (#A) and secure using the wrench (#B).

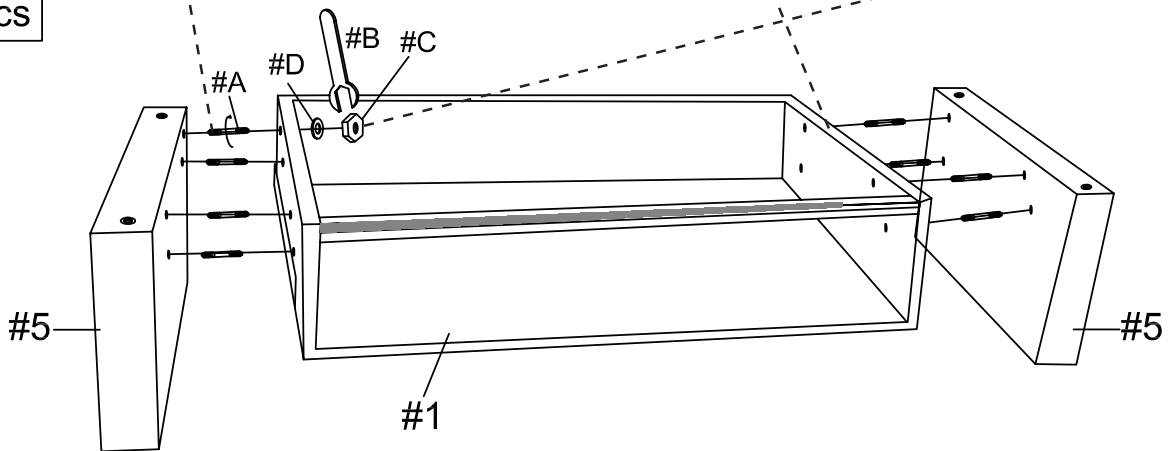




#3

#E x 4pcs

 1. Align the legs (#6) to the corners along the bottom.

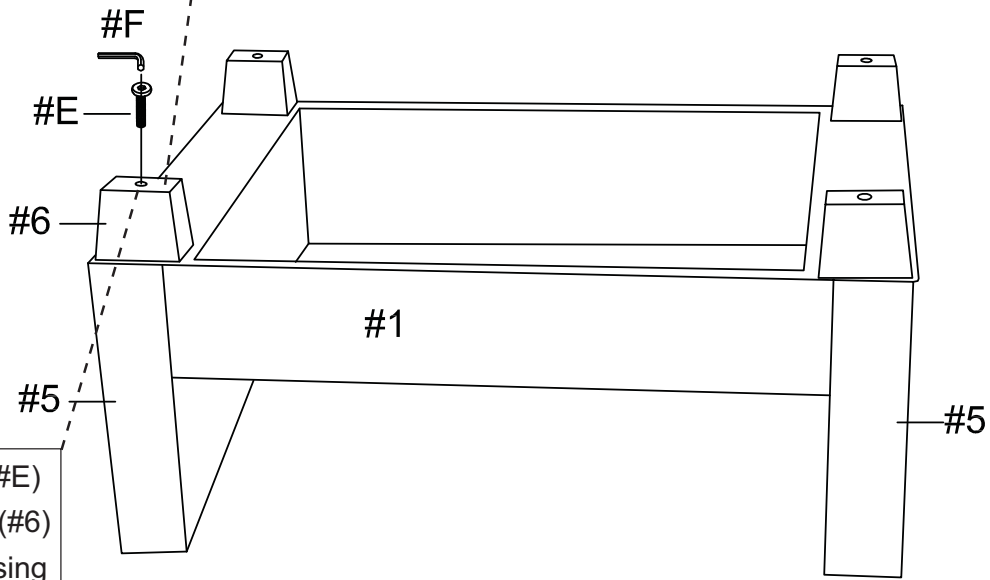

2. Insert a bolt (#E) into each leg (#6) and secure using the Allen wrench.




#4

 
#A x 4pcs
#C x 4pcs
#D x 4pcs

1. Insert 4 threaded rods (#A) into the holes along the back frame (#4) and turn right to tighten.


2. Insert the other ends of those threaded rods (#A) into the holes along the back.

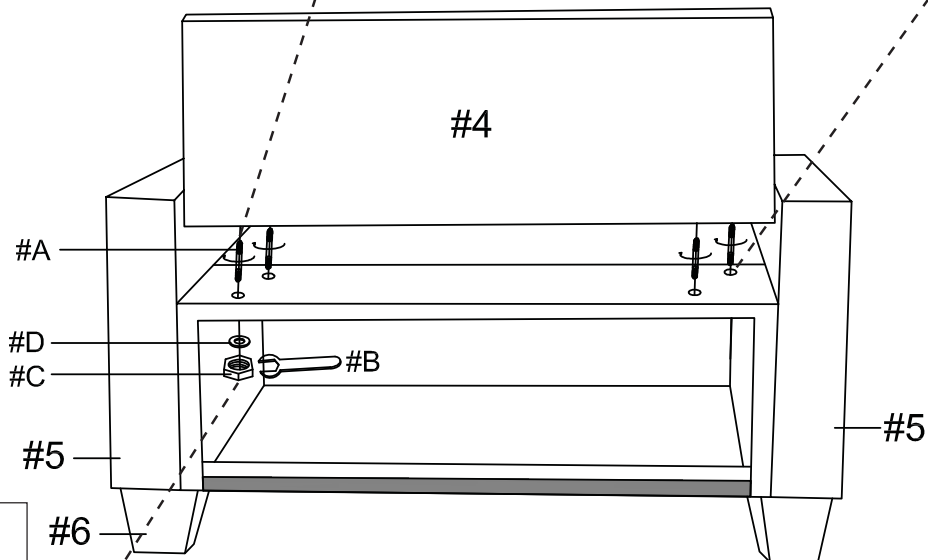

 3. Insert a flat washer (#D) then a hex nut (#C) onto the threaded rods (#A) and secure using the wrench (#B).

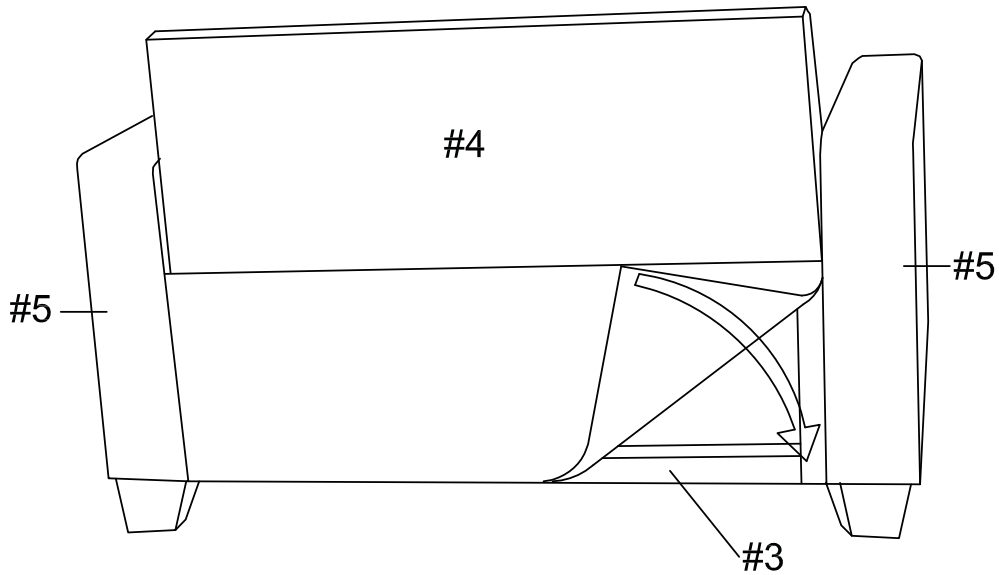

 Carefully turn the completed table upright. Make sure the table is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.

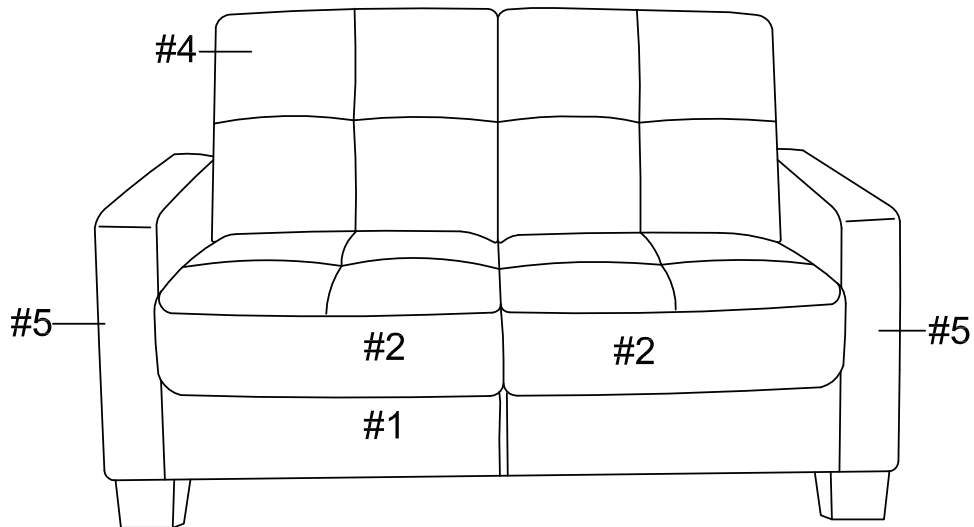

ASSEMBLY IS COMPLETED