 


INSTALLATION

 
 
Product Manual

Version: 750015US-01-26A-AA

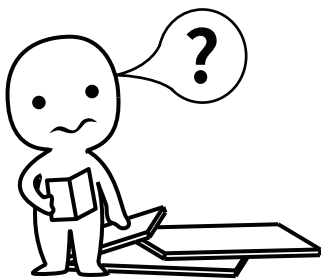


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

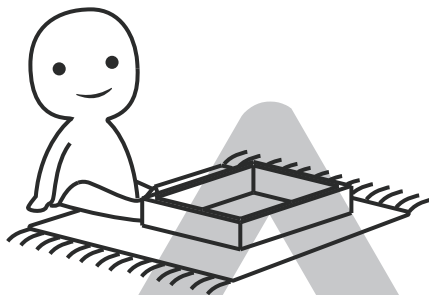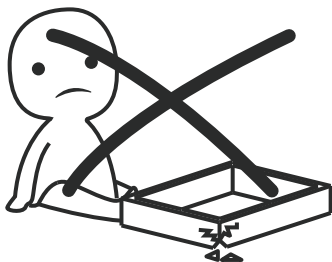



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

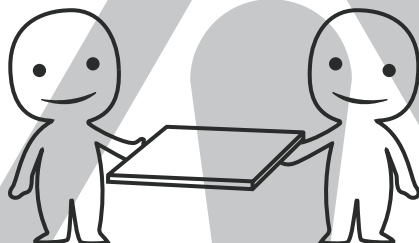

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

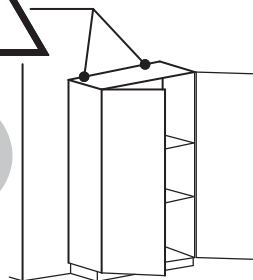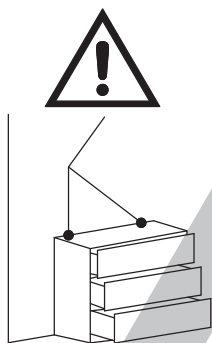

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

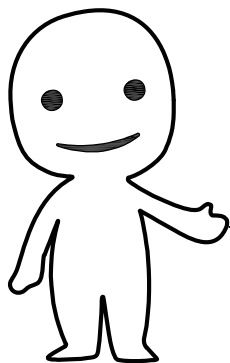

Please prepare the following tools

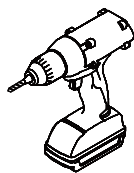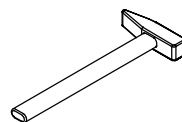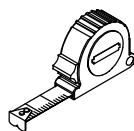     


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 96



CRB1595A

 B x 96



CRA0635B

C x 96




D x 7




CRF0620A

 E x 80



CRF0630A

 F x 56




CRC0540A

G x 8



 H x 12




DGA861C

J x 108



CRD3520A

 K x 12



L x 102



CRD3514A

M x 6



N x 4




P x 16



CRE0418A

 Q x 6

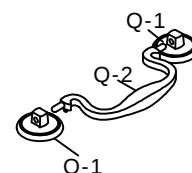


R x 12



CRE0414A

 S x 11

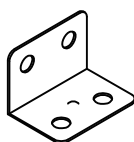


T x 44




CRD3512A

 U x 8

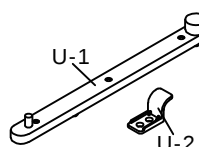

V x 4

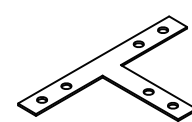 

W x 12




X x 36




CRE0316A

 Y x 2



Z x 2

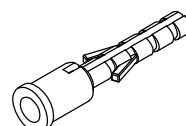 


AA x 2



CRD3535A

 BB x 44



CC x 44






CRD0314A

DD x 10



   CRD3525A

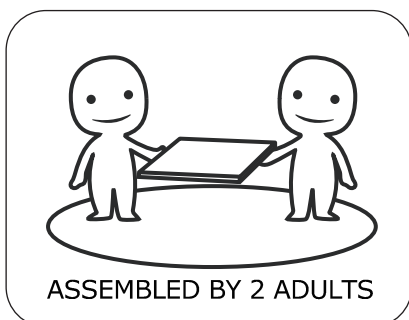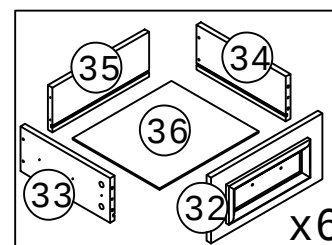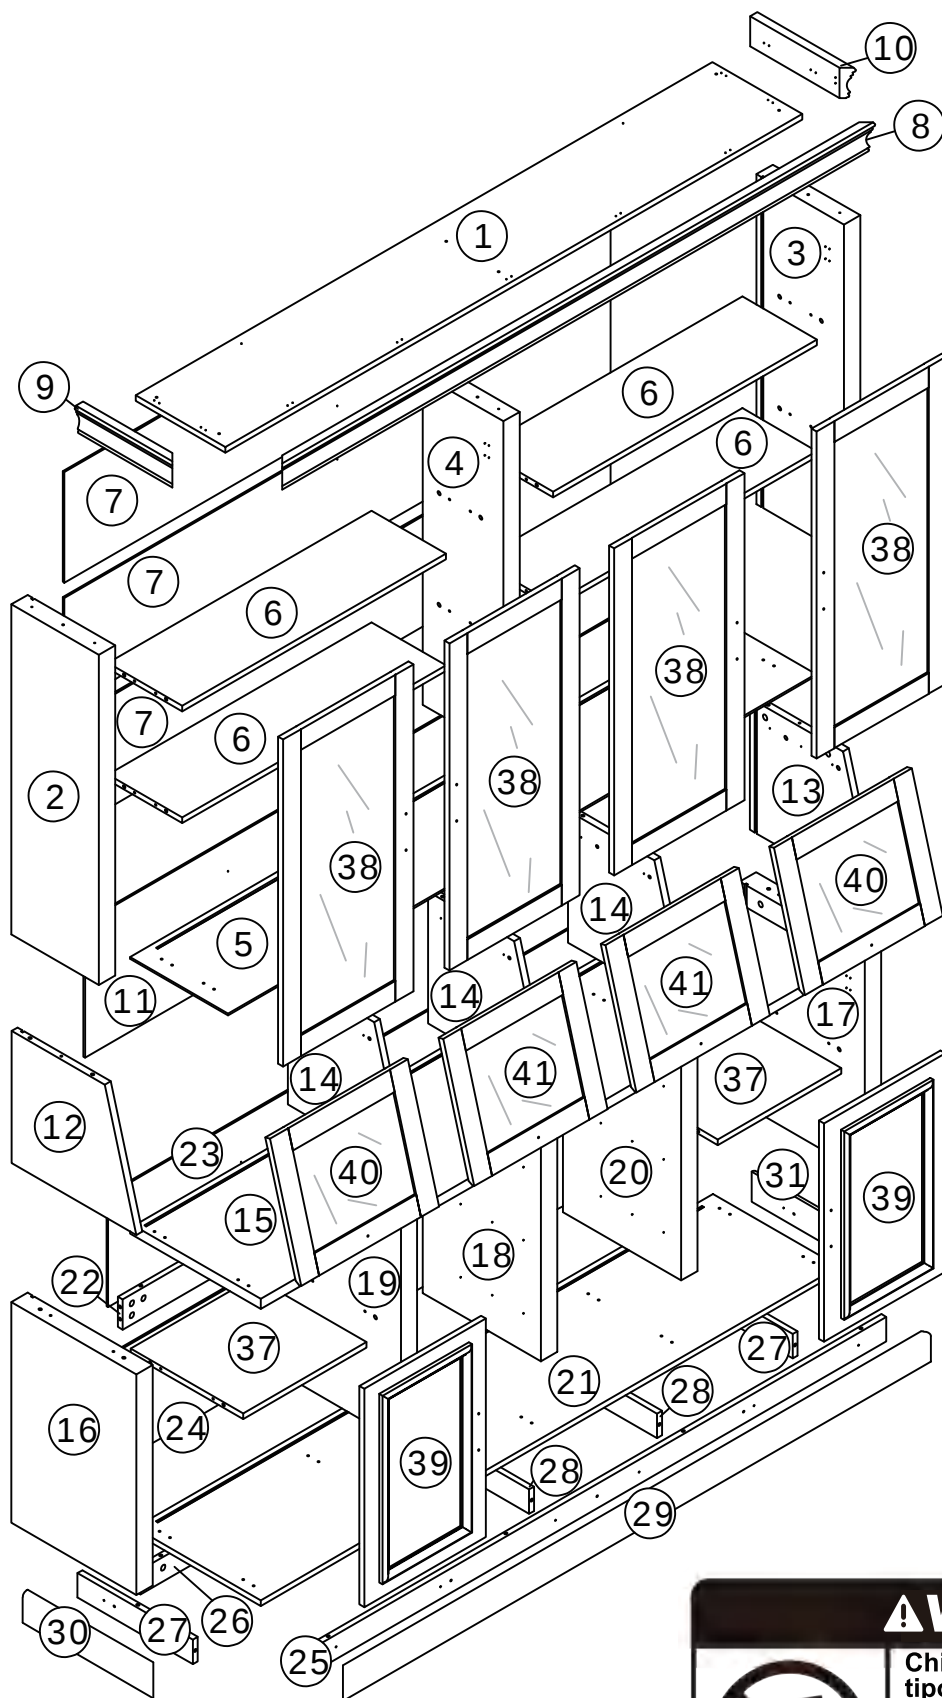


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

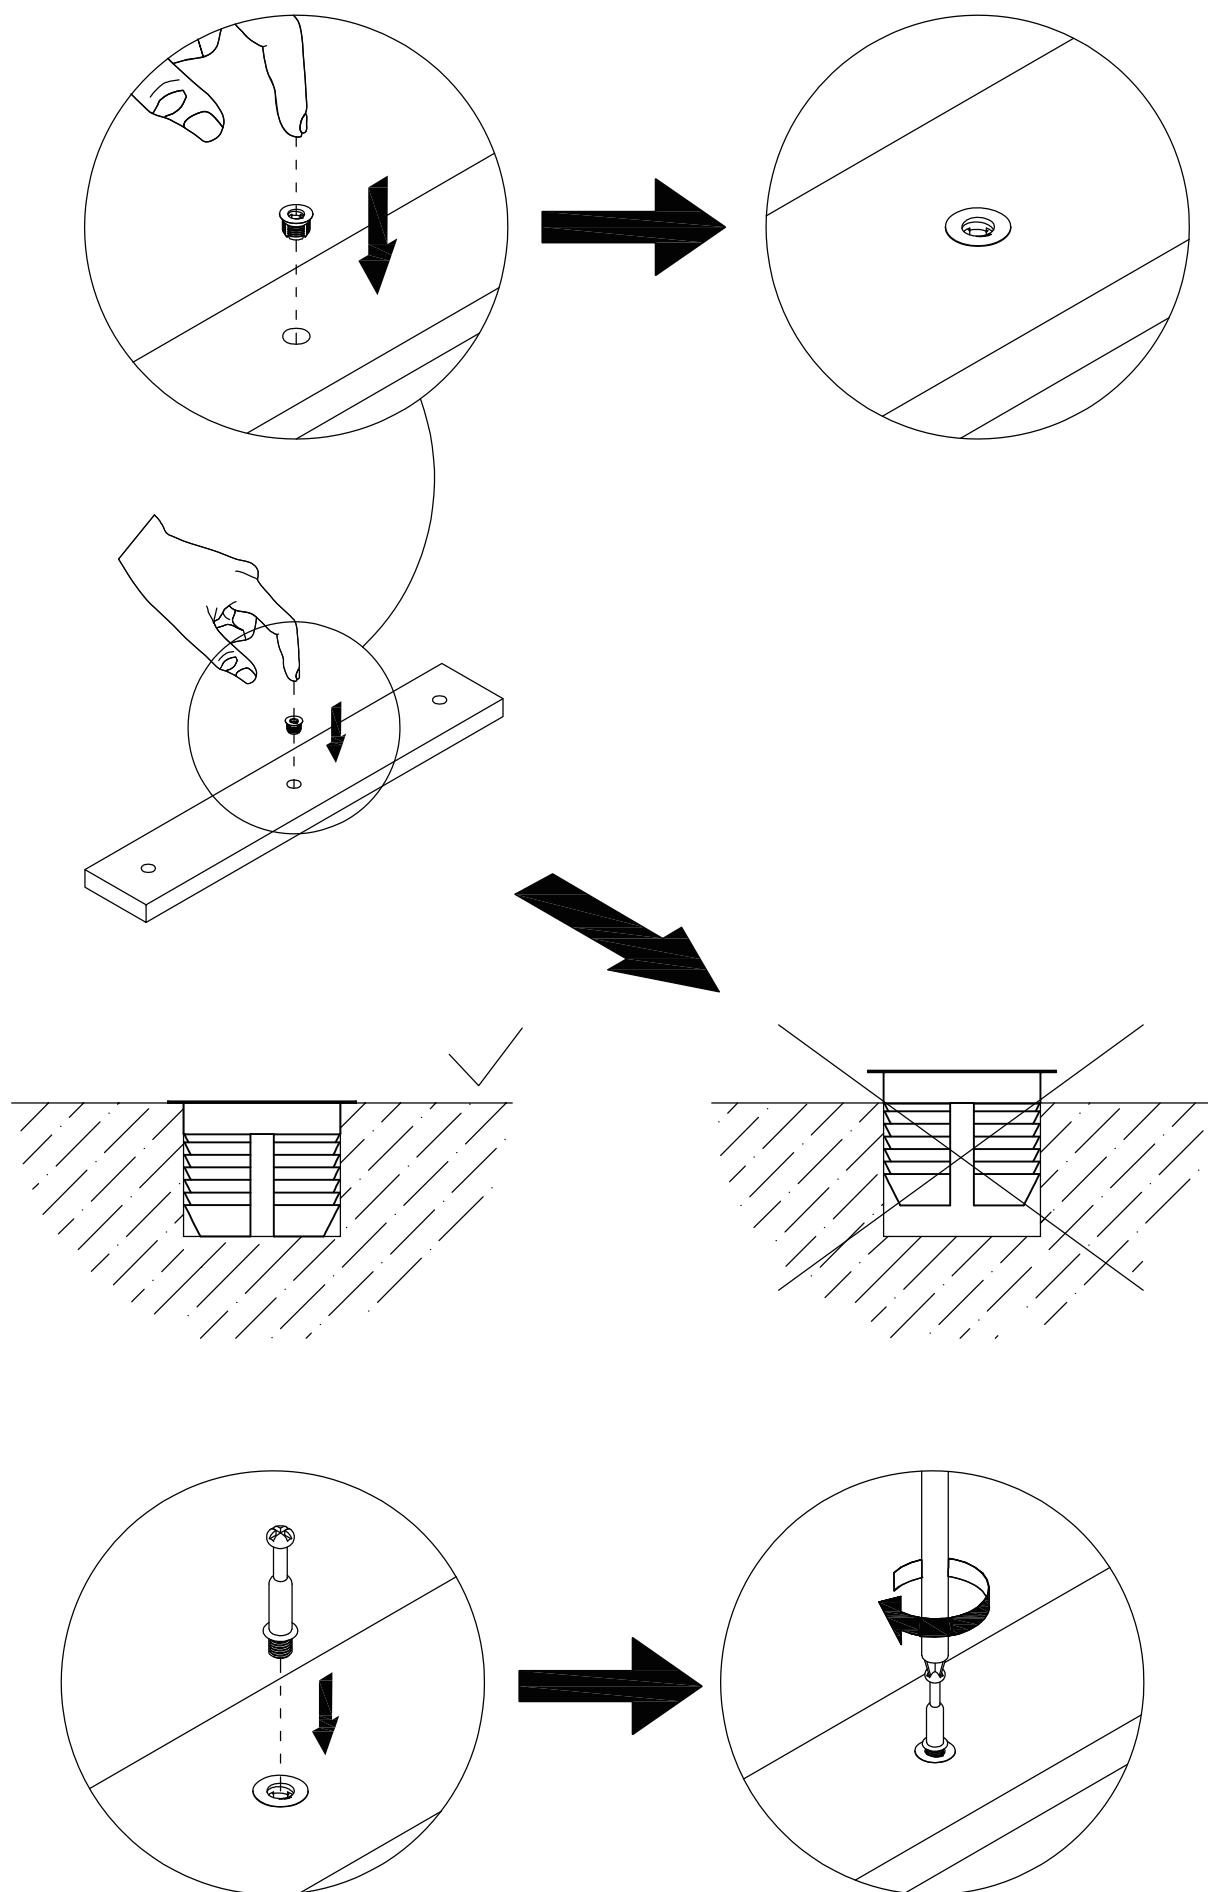


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

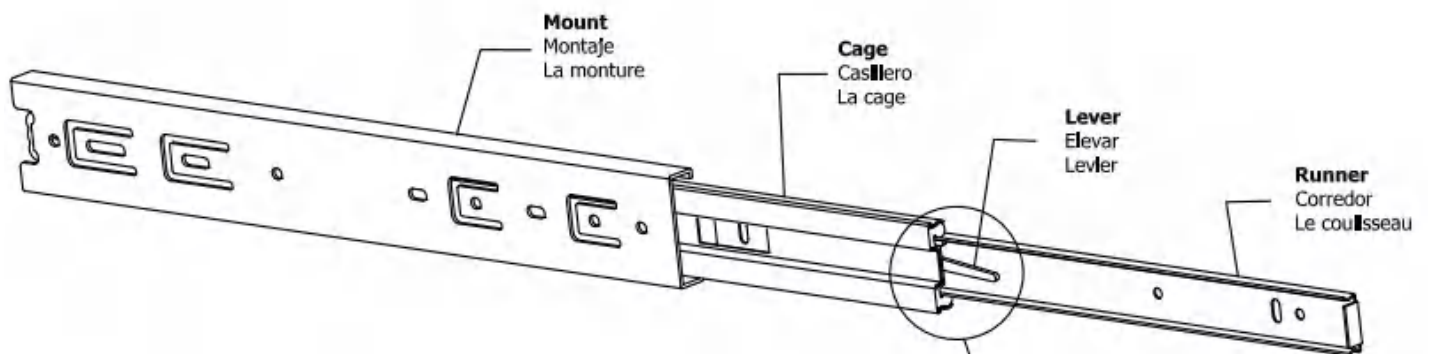

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

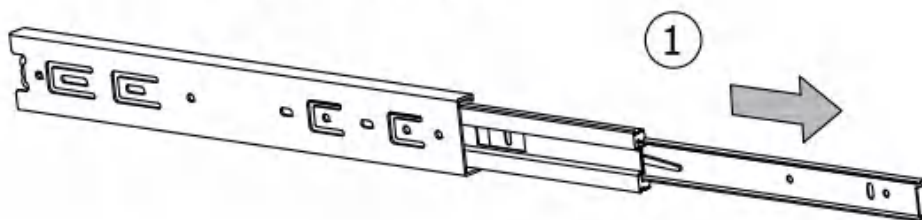

 STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

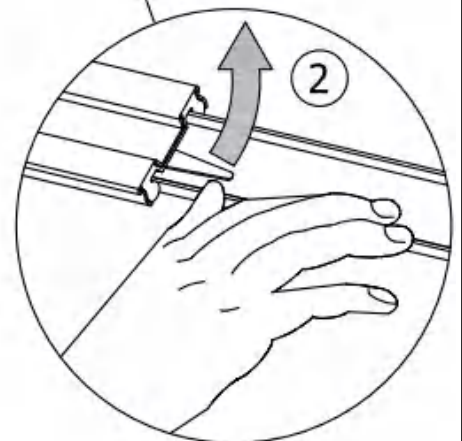


 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

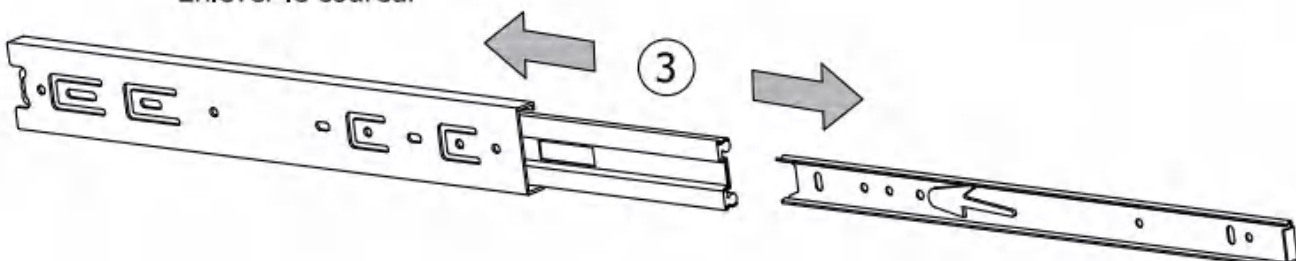


1



  
Secure slide rail (K-1) to panels 19 and 20 using screw (J).

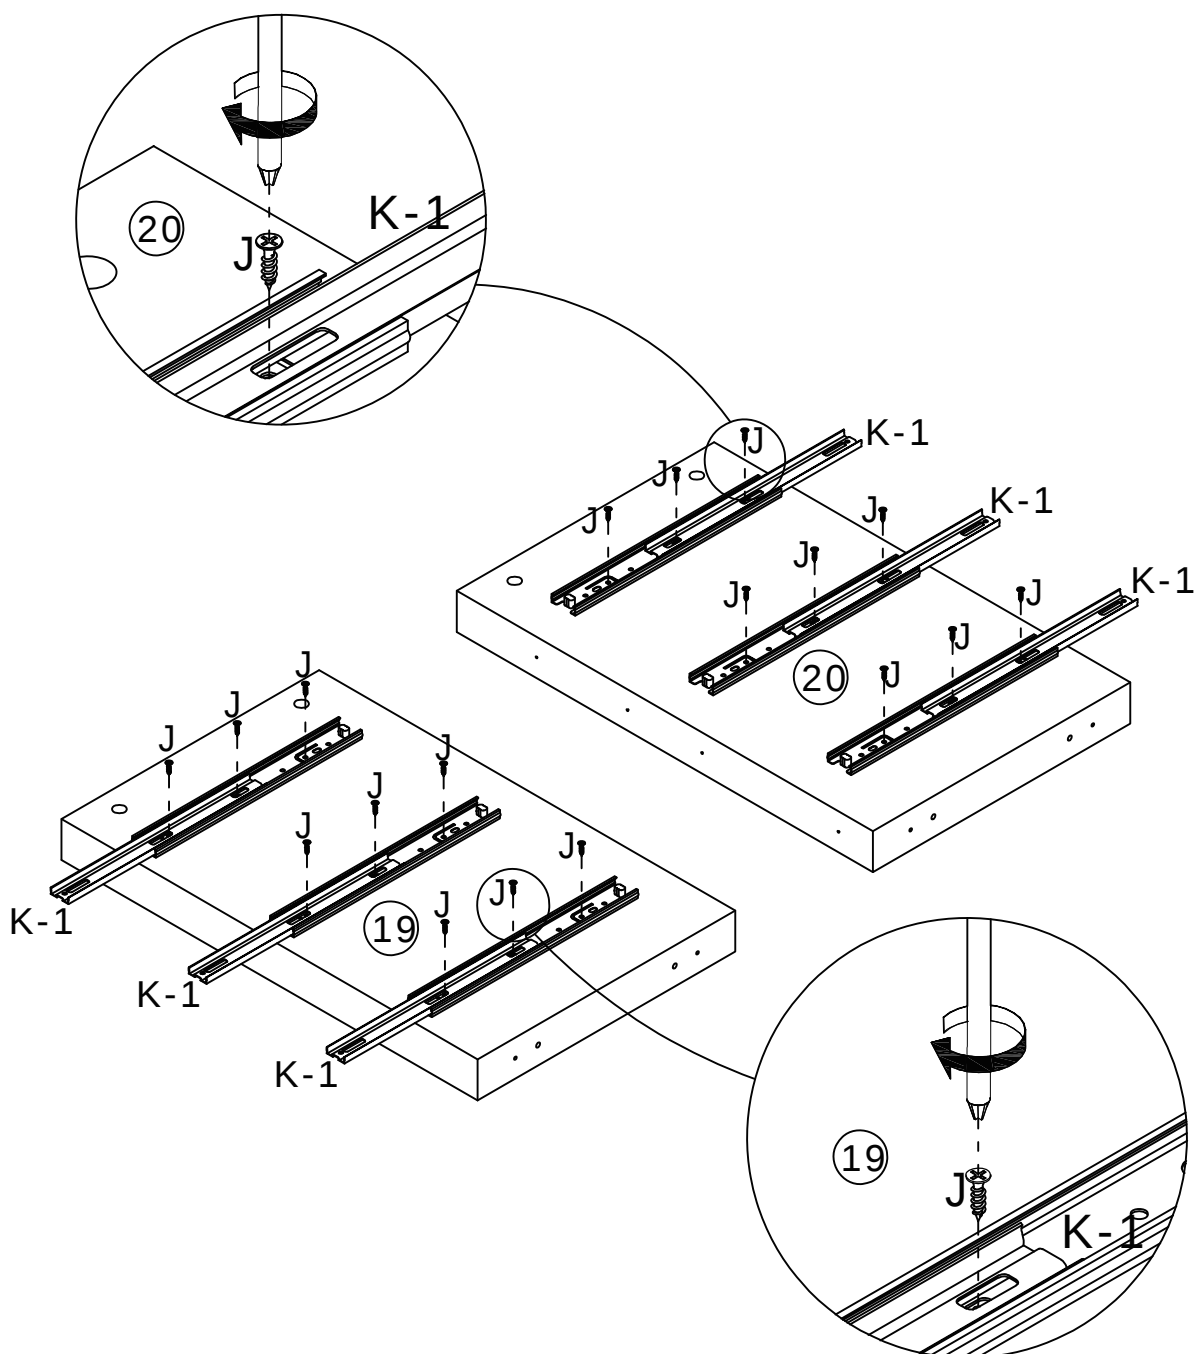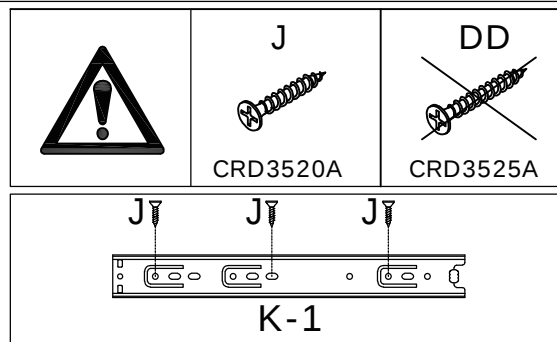

2

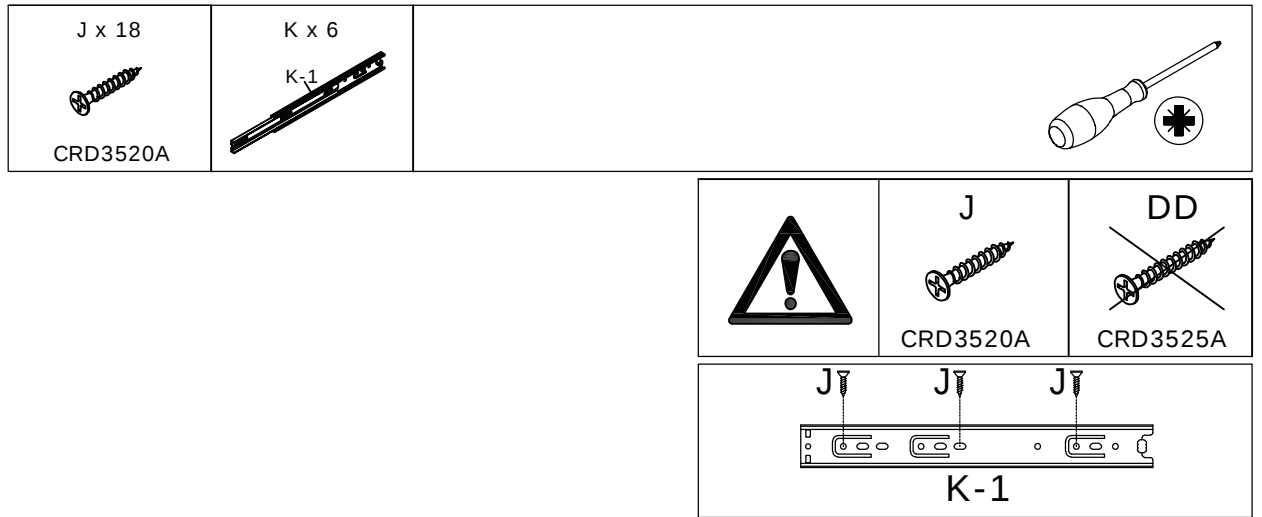 

 Secure slide rail (K-1) to **both sides of** panel 18 using screw (J).

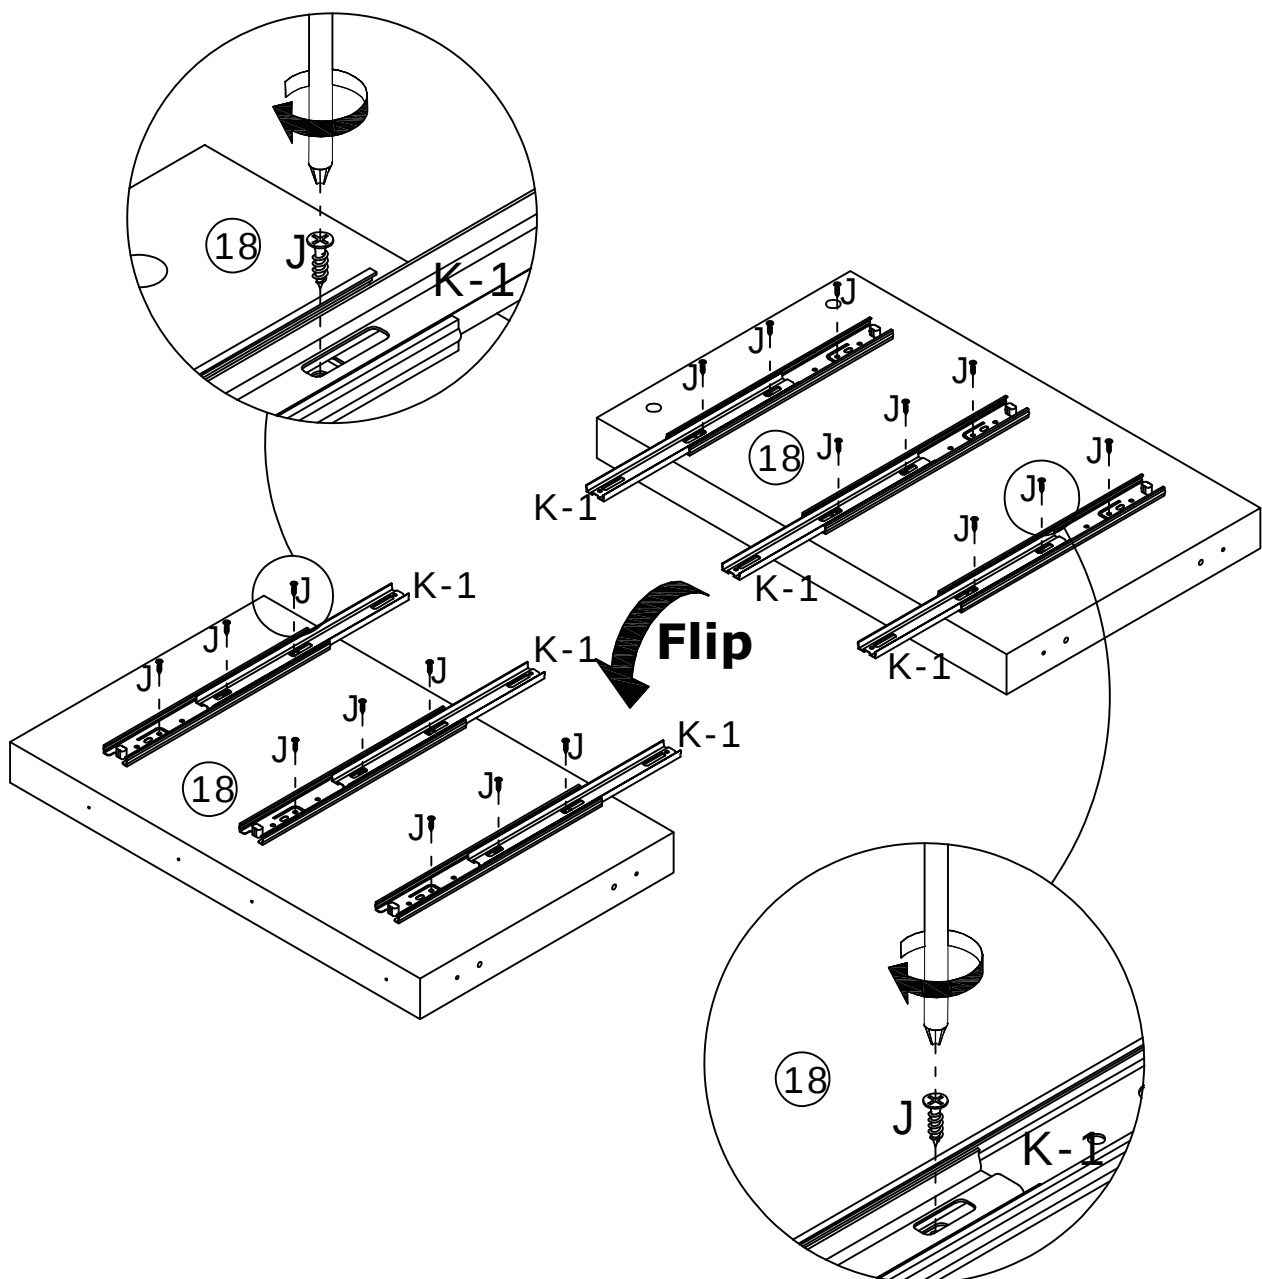


3

B x 12






CRA0635B

 C x 12



   Press plug (C) to panels 16, 17, 19, and 20, and screw self-tapping rod (B) onto the holes.

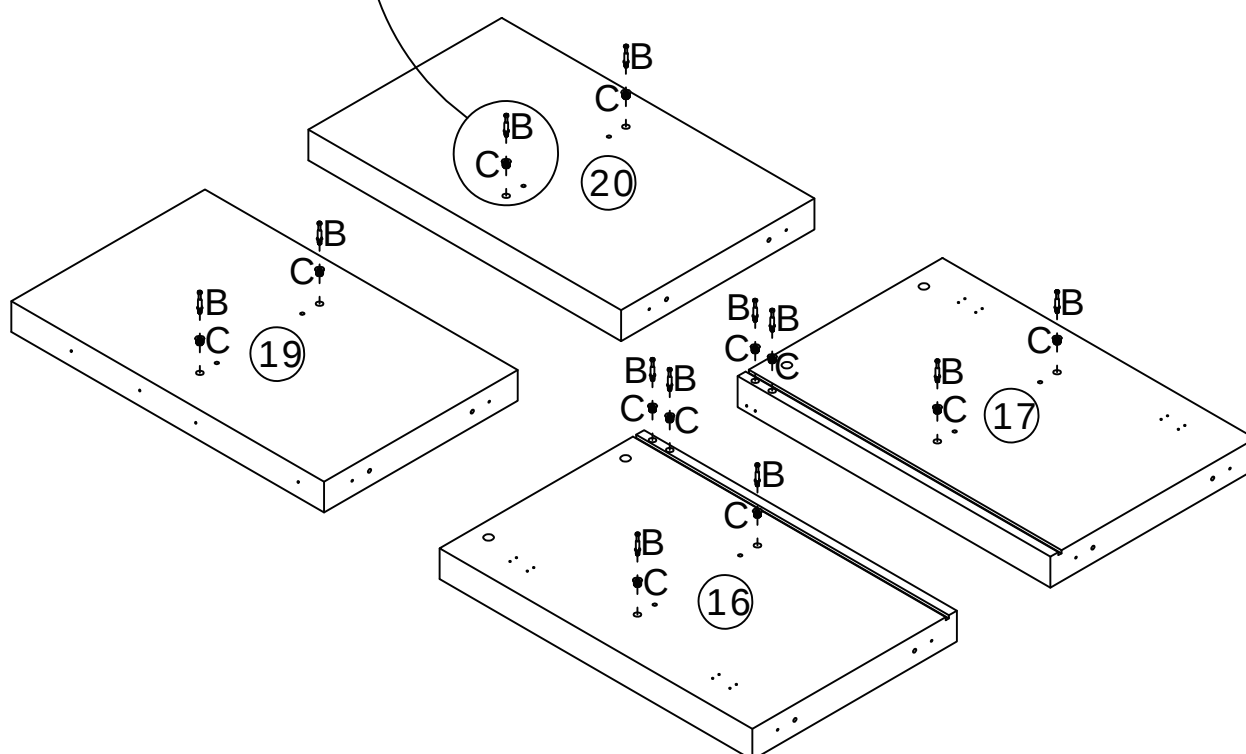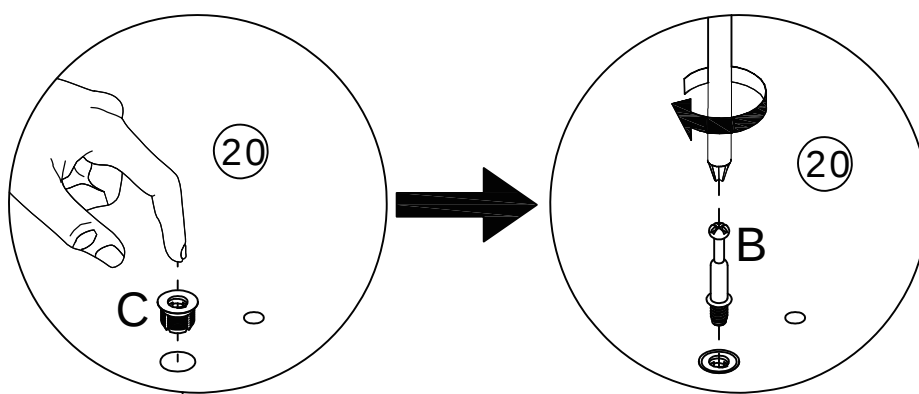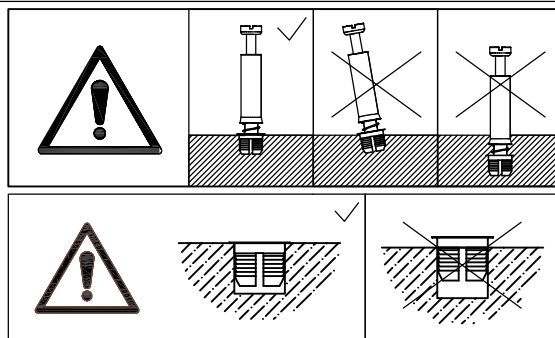

4

A x 4




CRB1595A


E x 4



 
CRF0630A



 
Connect panels 16 and 19 to panel 37 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

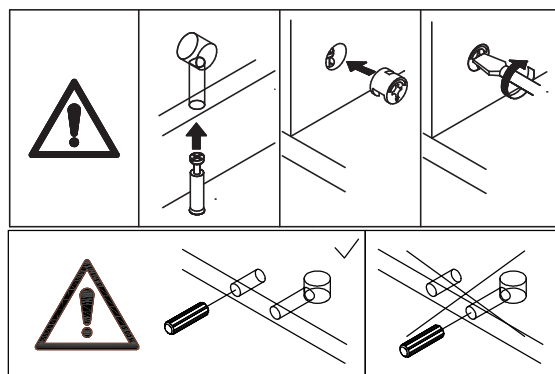

 Pay attention to hole positions and panel direction.

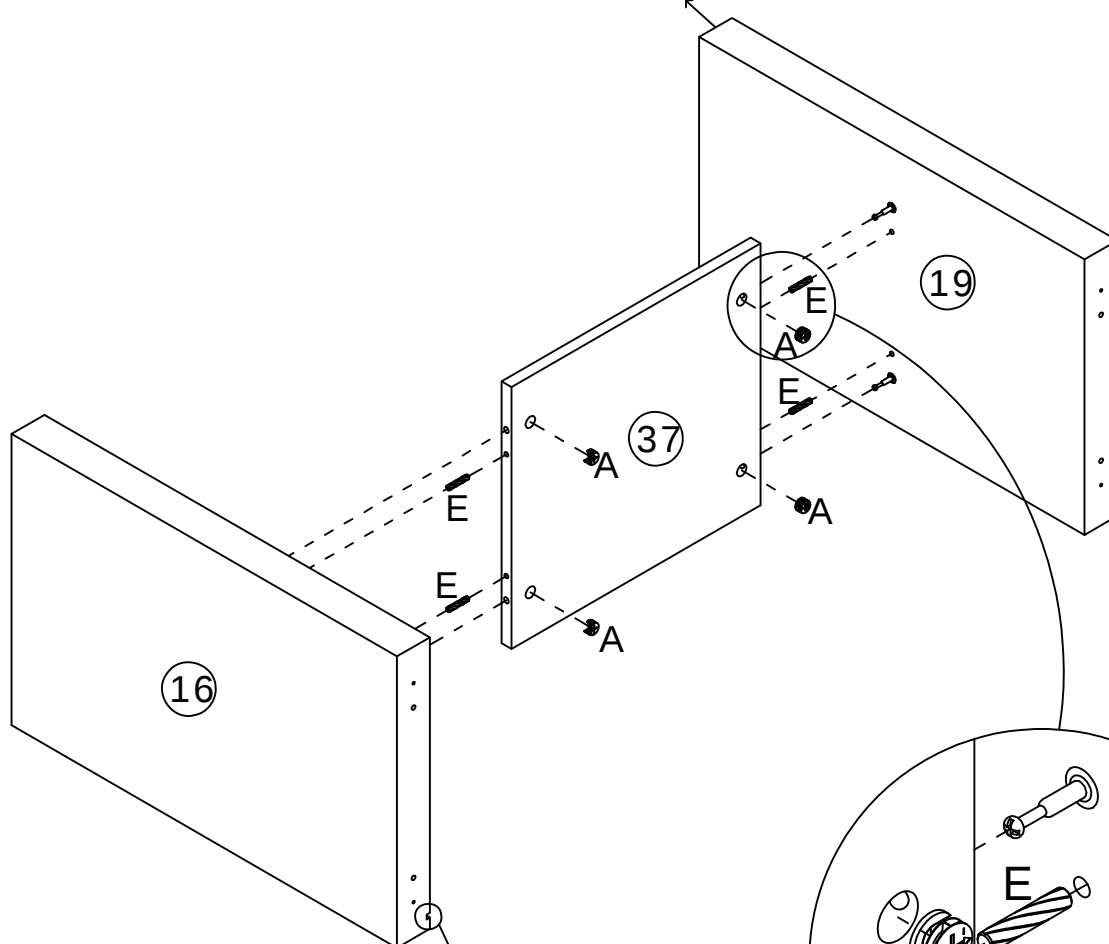

 Pay attention to holes positions and panel direction.

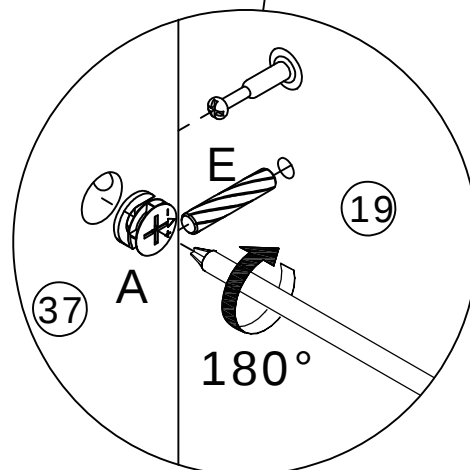

5

A x 4




CRB1595A



E x 4



 CRF0630A




  Connect panels 17 and 20 to panel 37 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

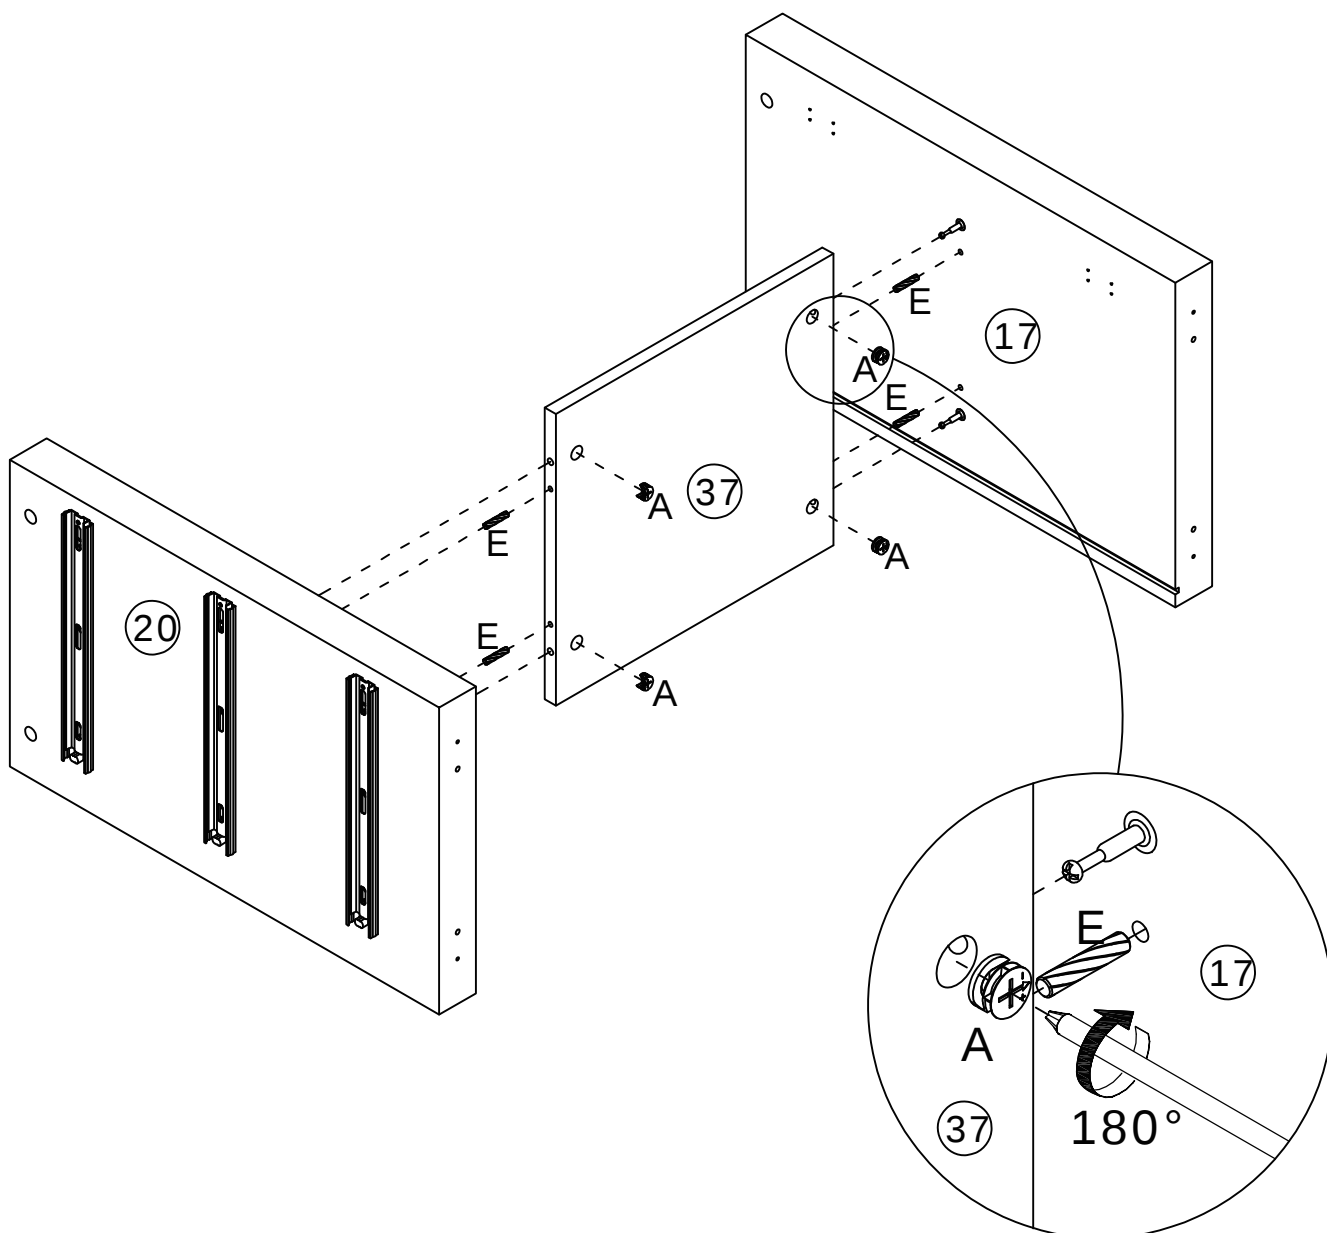
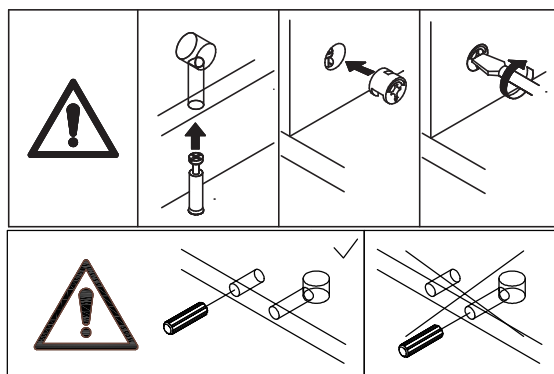



6

 Connect panels 16 and 17 to panel 22.

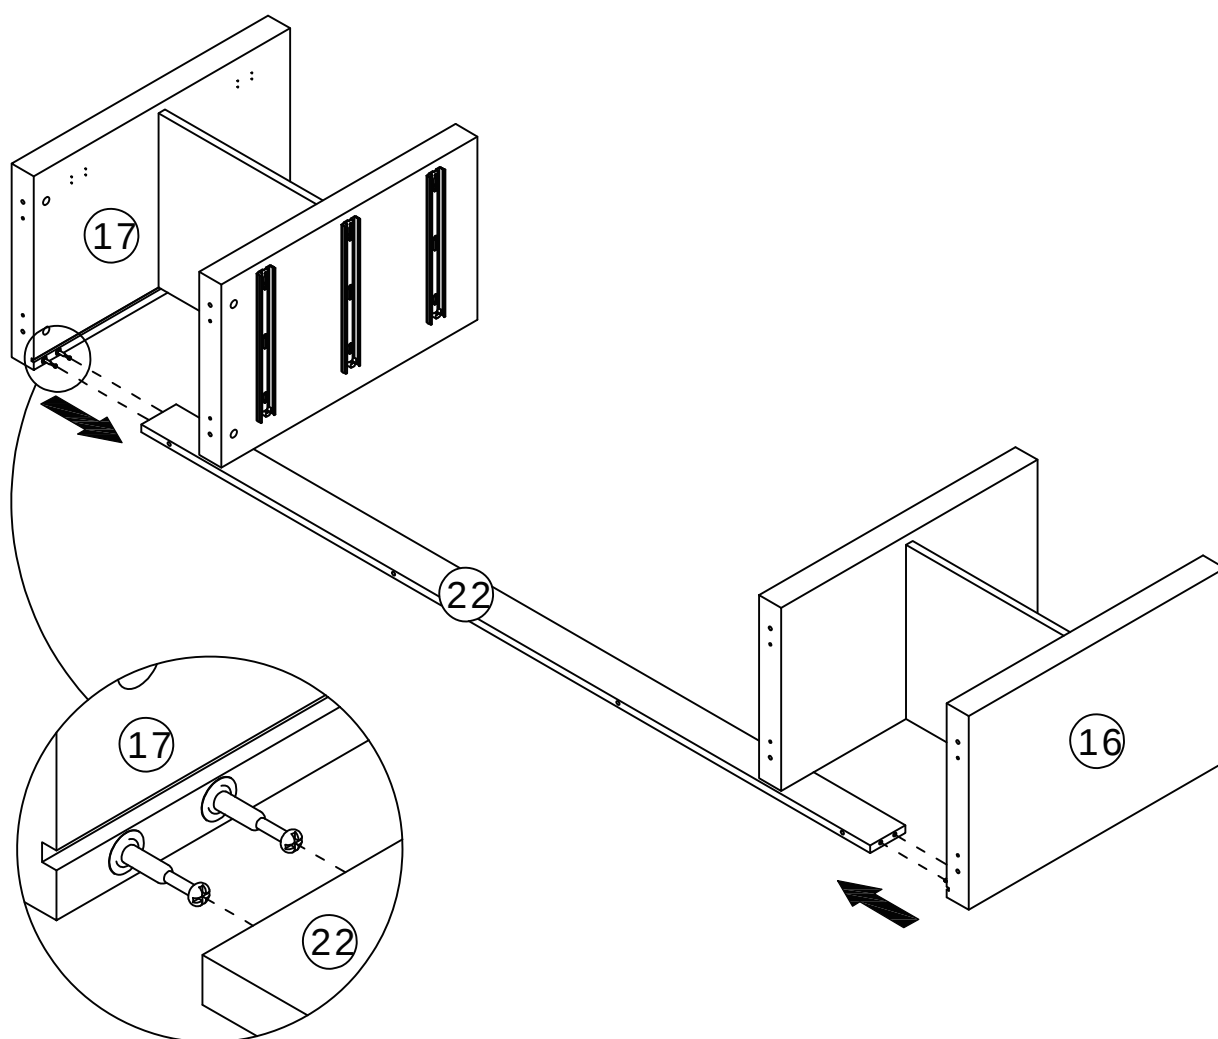


7

  D x 7  CRF0620A	DD x 10  CRD3525A	
--	--	---

 	J  CRD3520A	DD  CRD3525A
--	--	---

 Connect panel 25 to panel 29, panel 27 to panel 30 and 32 using wooden dowel (D), and secure them with screw (DD).

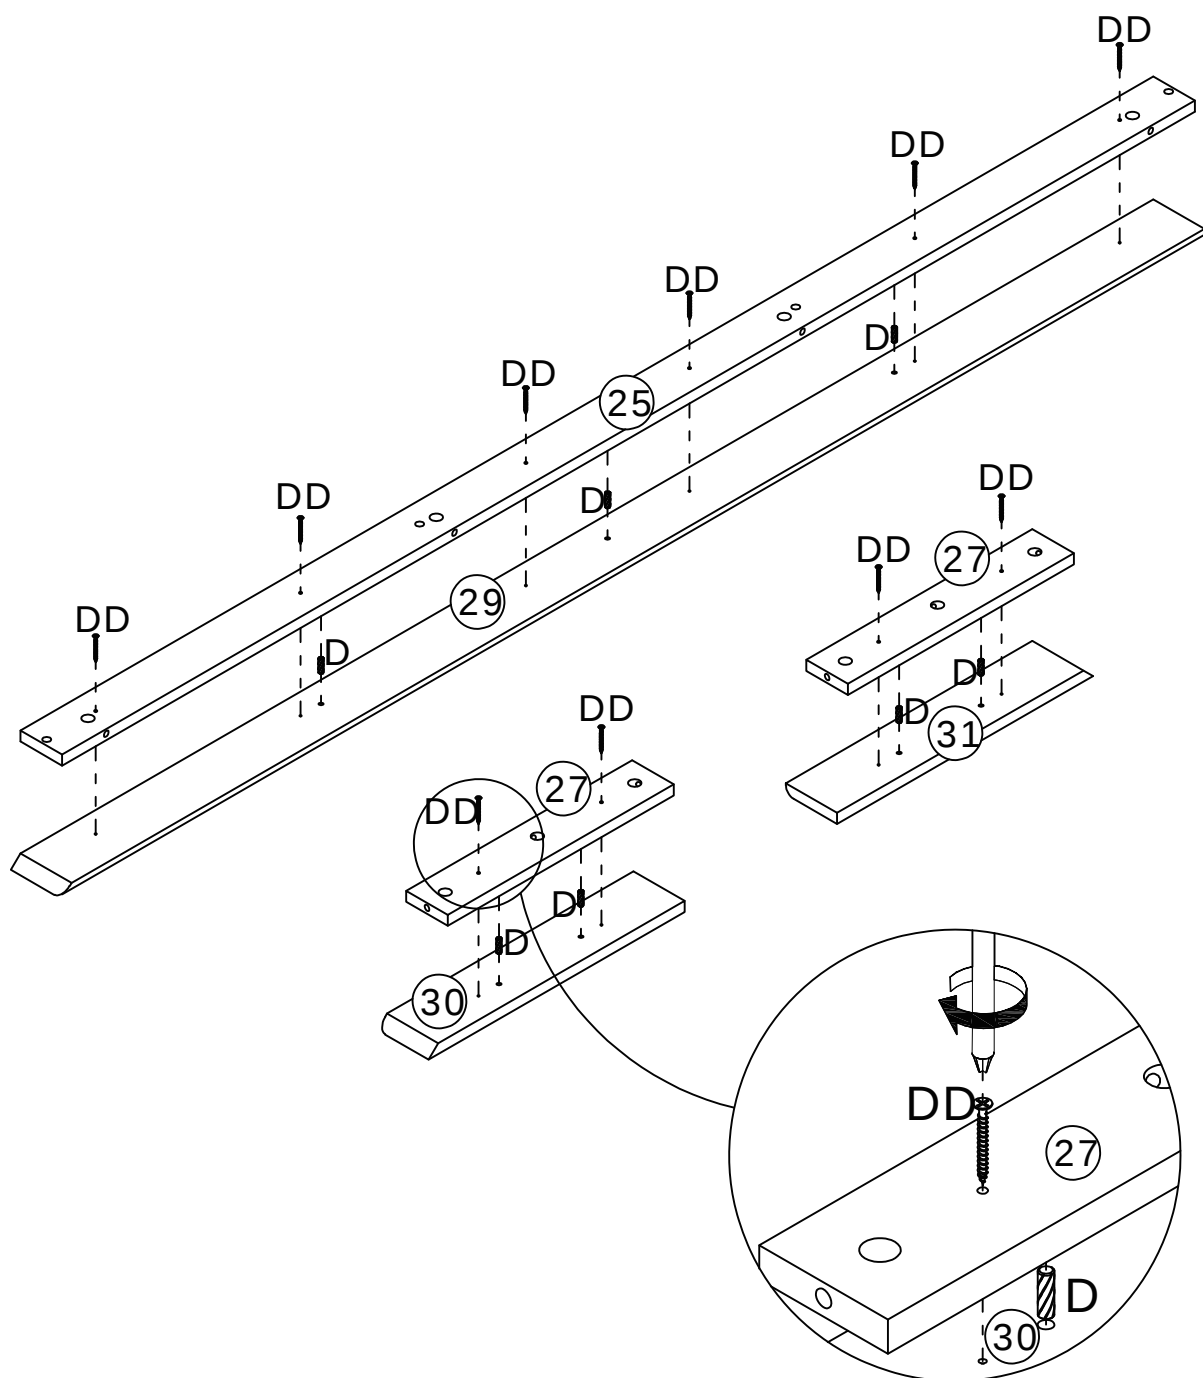




8

B x 20




CRA0635B

   C x 20

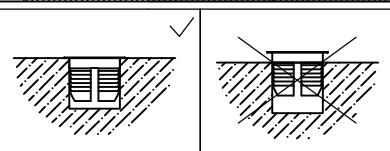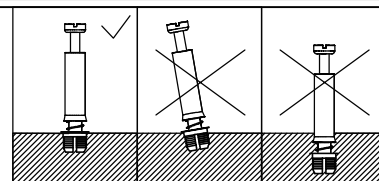



 Press plug (C) to panels 21, 25, and 26, and screw self-tapping rod (B) onto the holes.

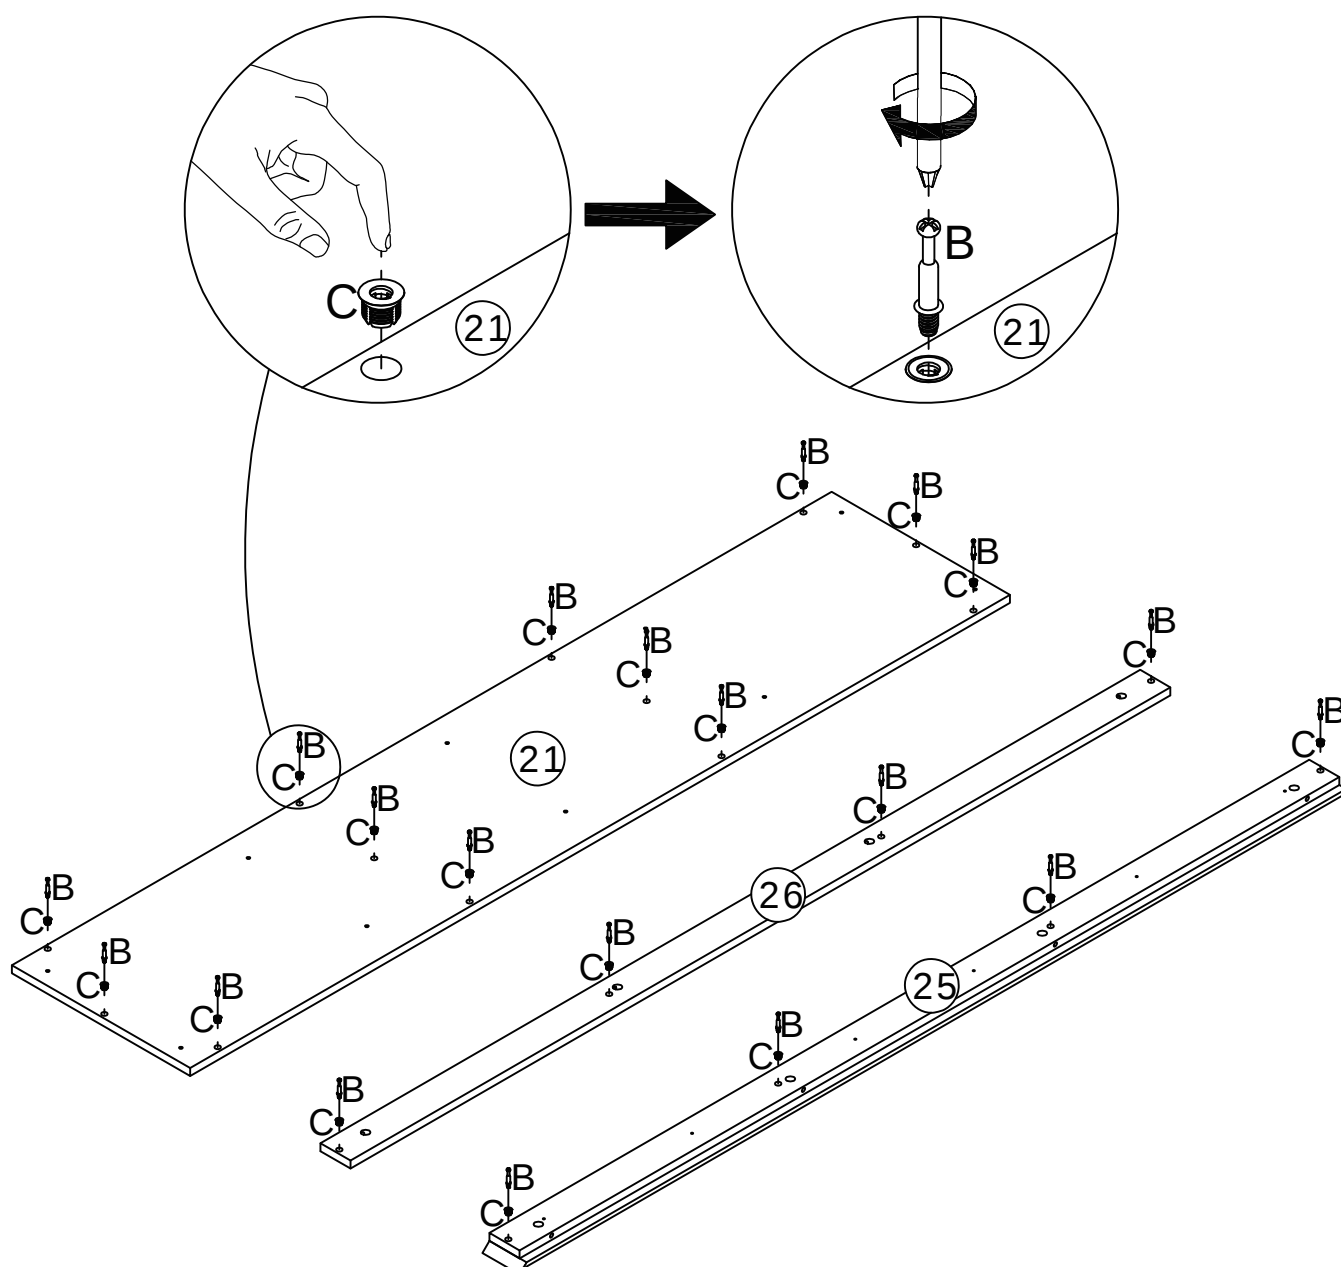


9


 
 
A x 8
CRB1595A

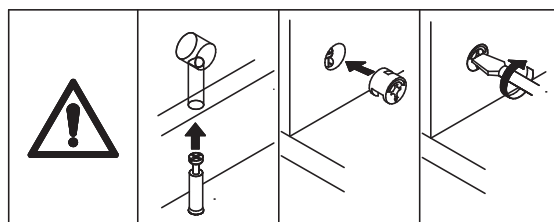

 
Connect panels 25 and 26 to panels 27 and 28, then tighten by turning eccentric wheel (A) clockwise.

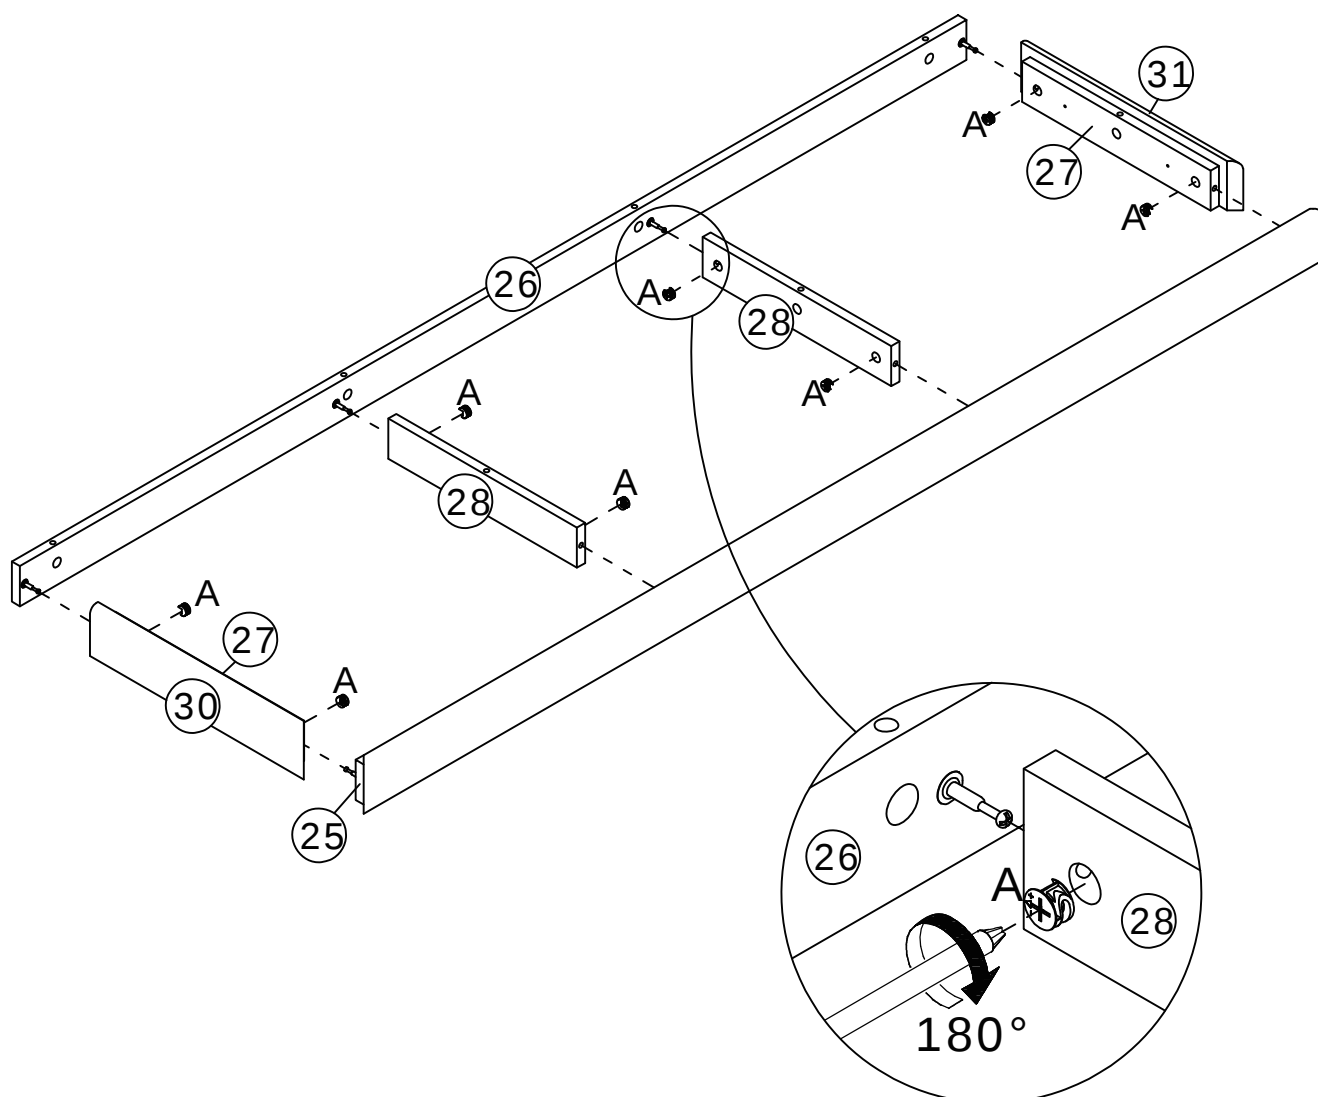



10

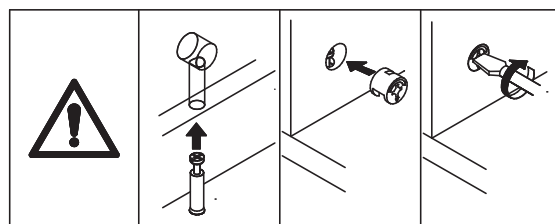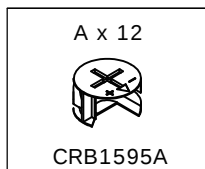   

 
Connect panels 25, 26, 27, and 28 to panel 21, then tighten by turning eccentric wheel (A) clockwise.

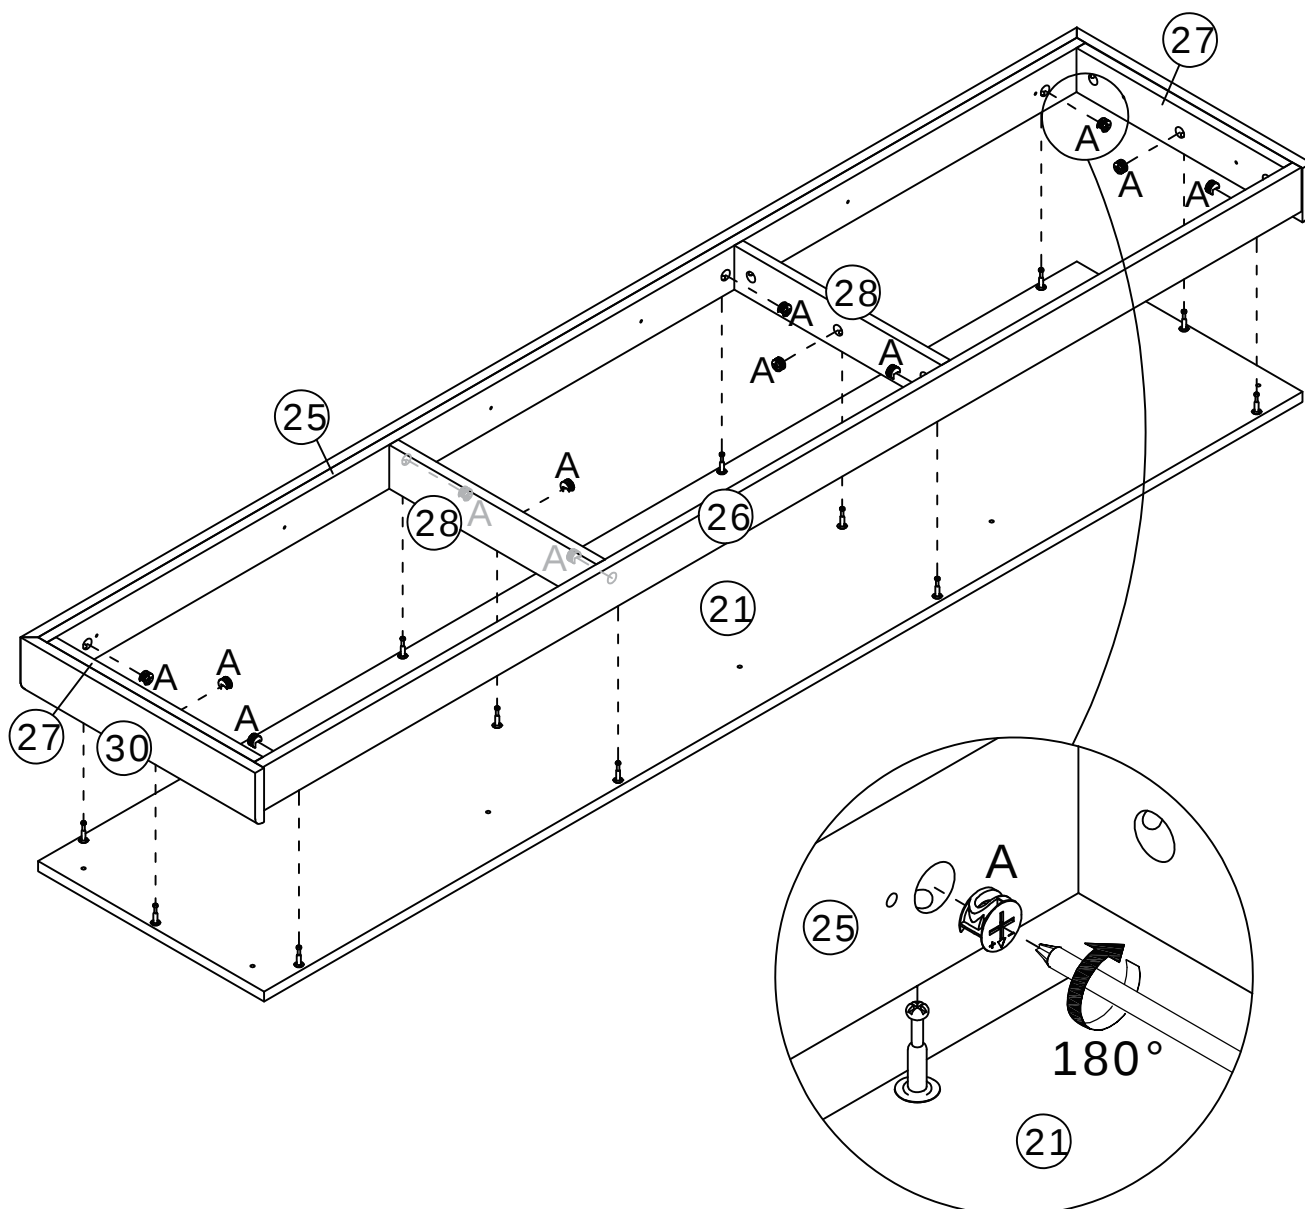




11

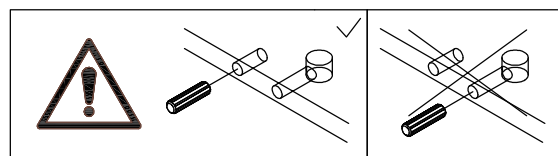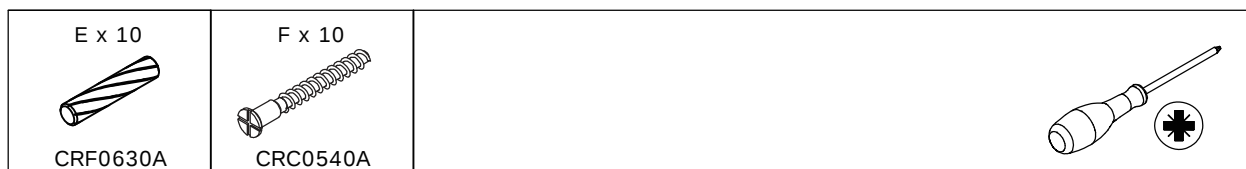  



 
Connect panel 21 to panels 16, 17, 18, 19, and 20 using wooden dowel (E), and secure them with screw (F).

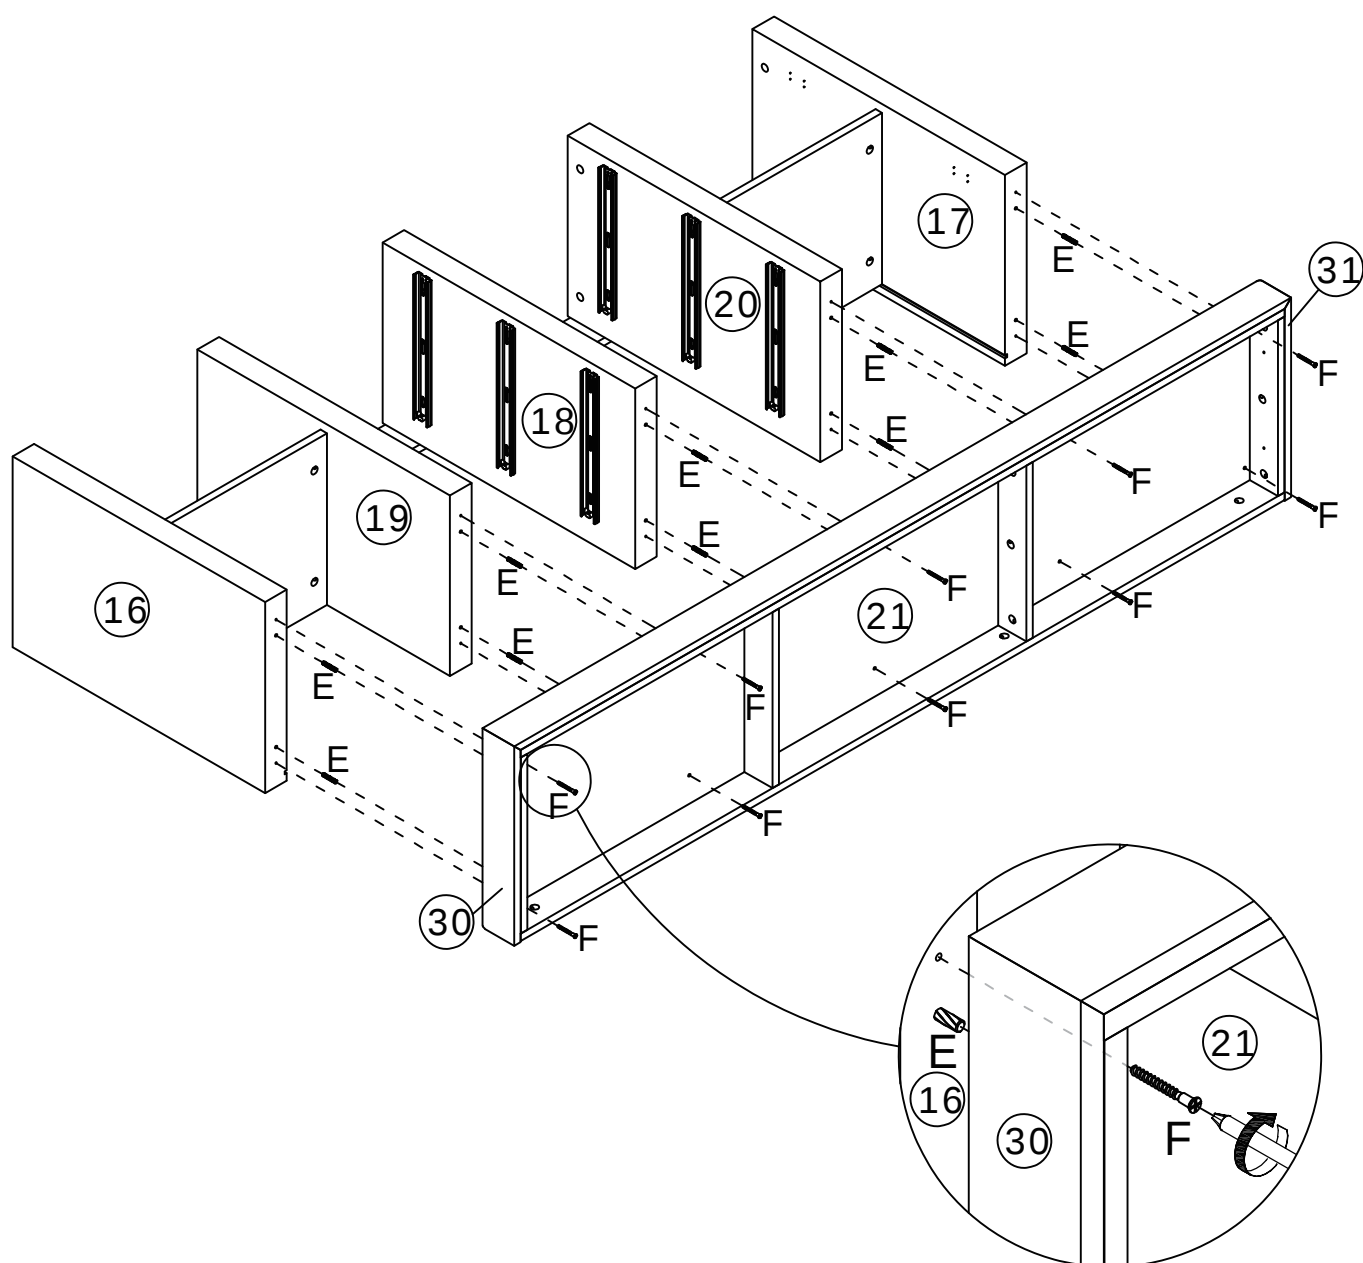

12

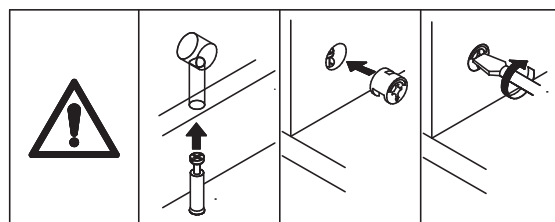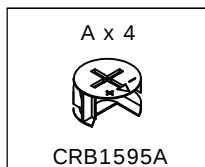   


   Turn the cabinet upside down, insert the eccentric wheel (A) into panel 22, and tighten them by turning clockwise.

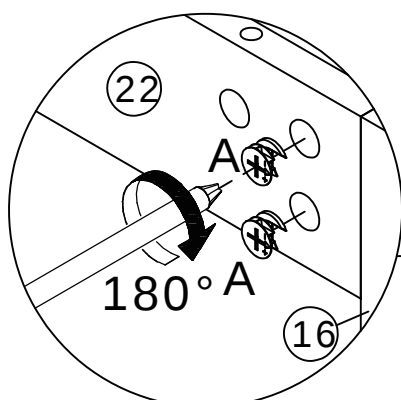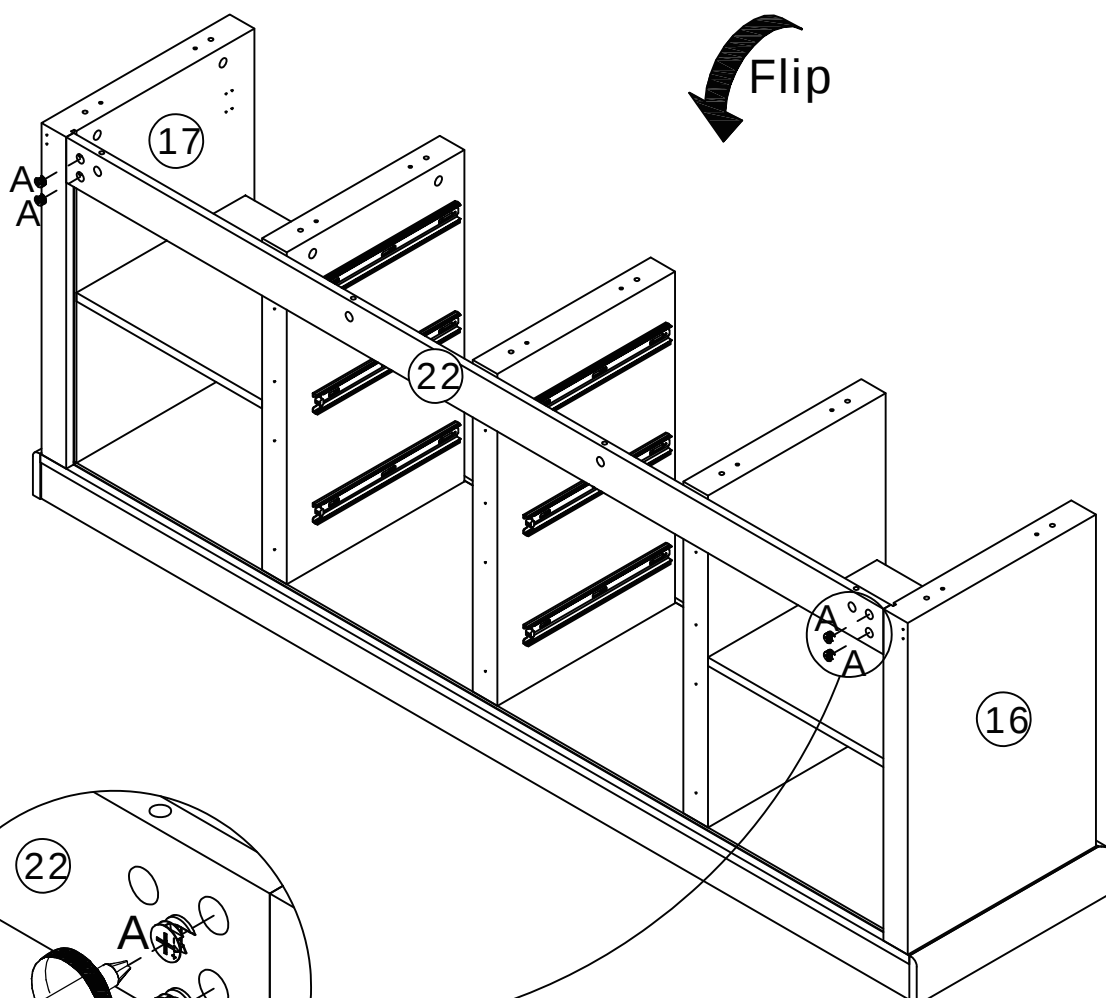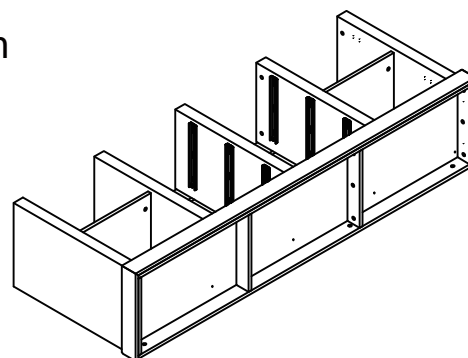


13

 
Insert panels 23 and 24 along the available slots.

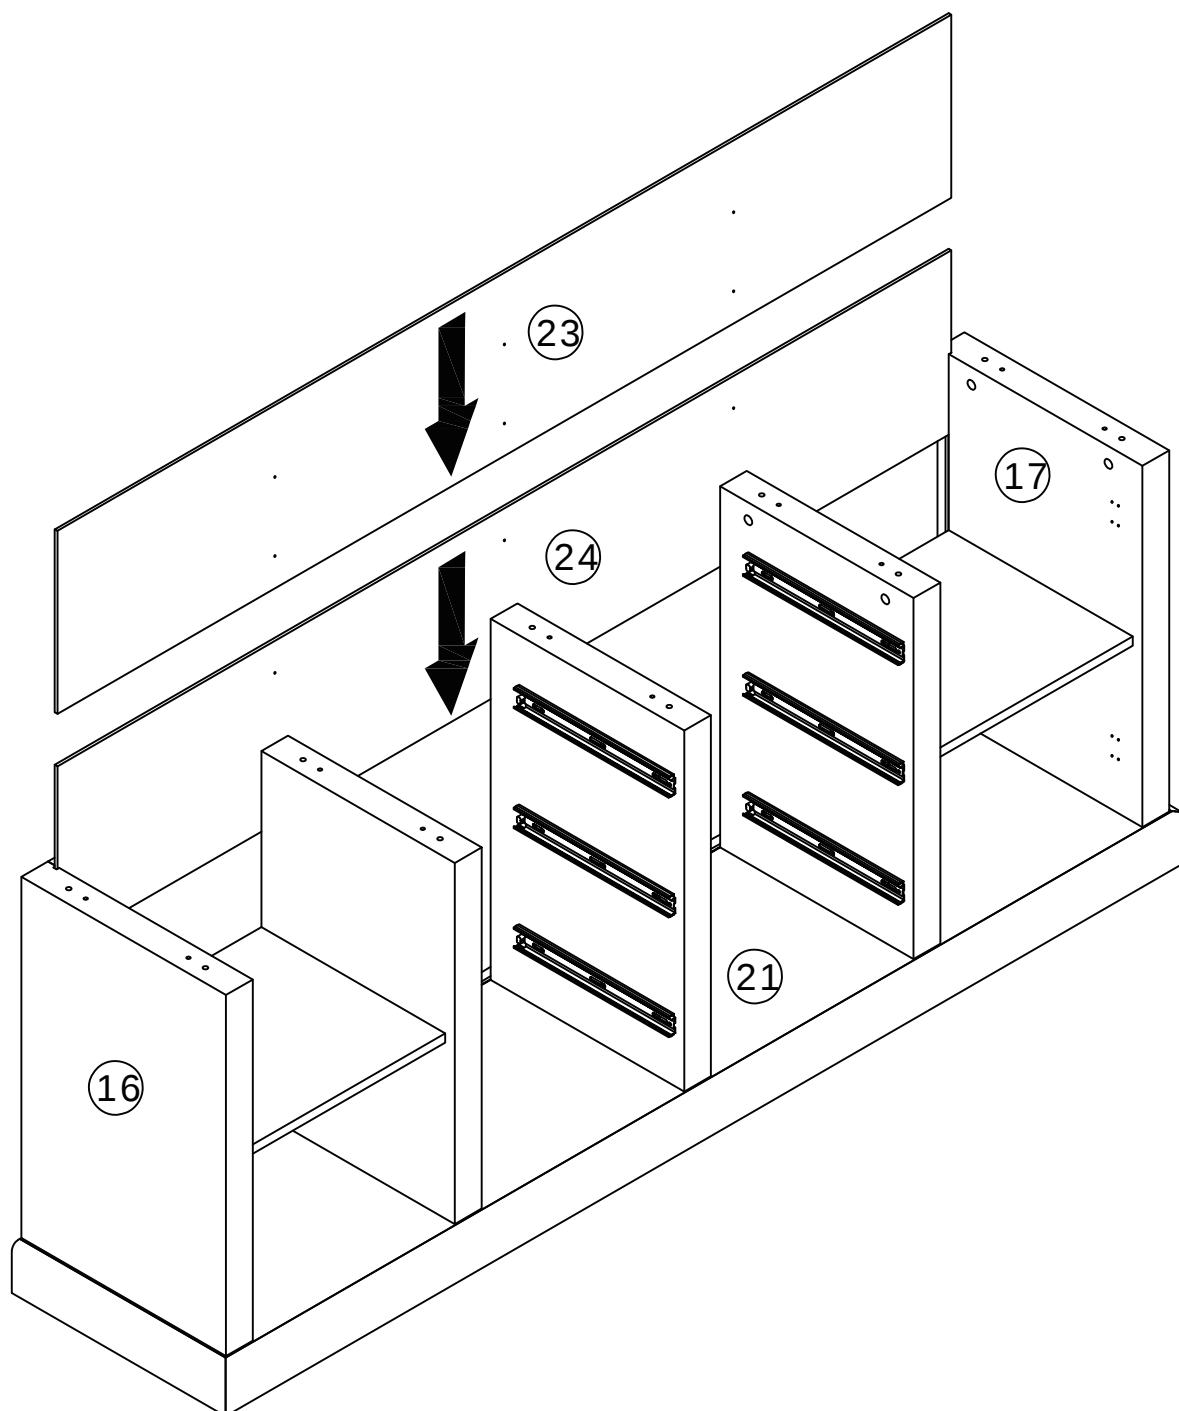



14

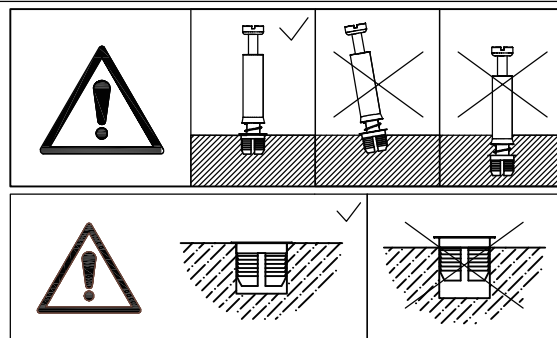 


 Press plug (C) to panel 15, and screw self-tapping rod (B) onto the holes.

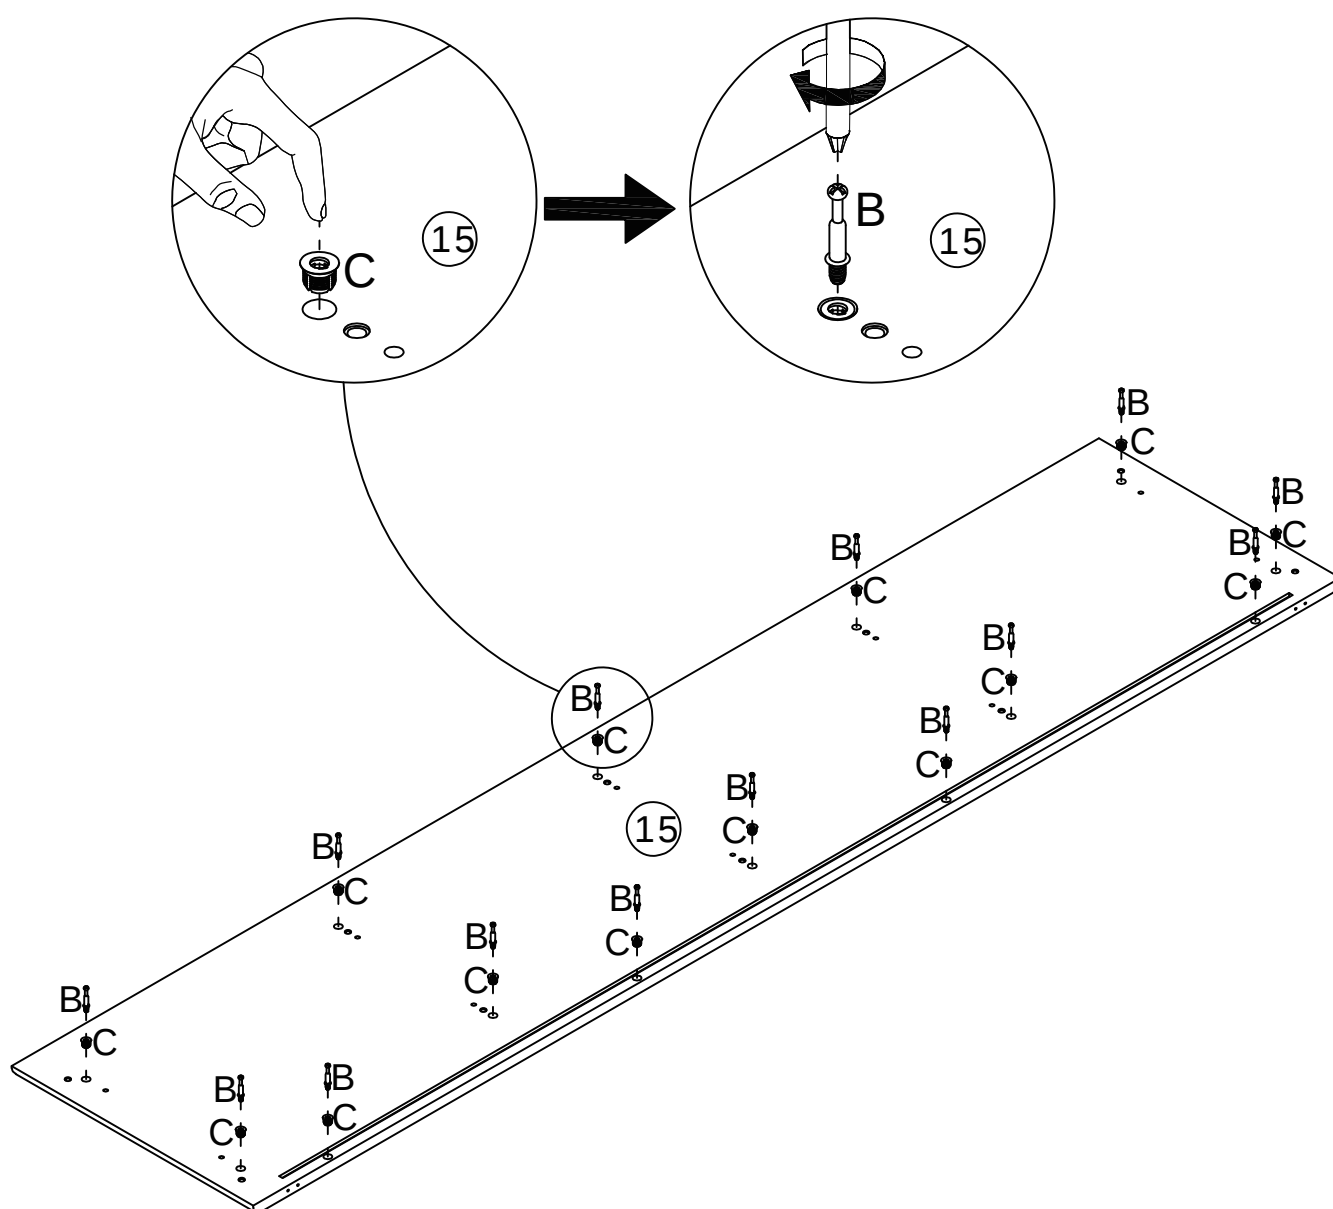


15

  
J x 6  CRD3520A	U x 2  U-1	
--	---	---

 	J  CRD3520A	DD  CRD3525A
--	--	---

 
Secure part (U-1) to panels 12 and 13 using screw (J).

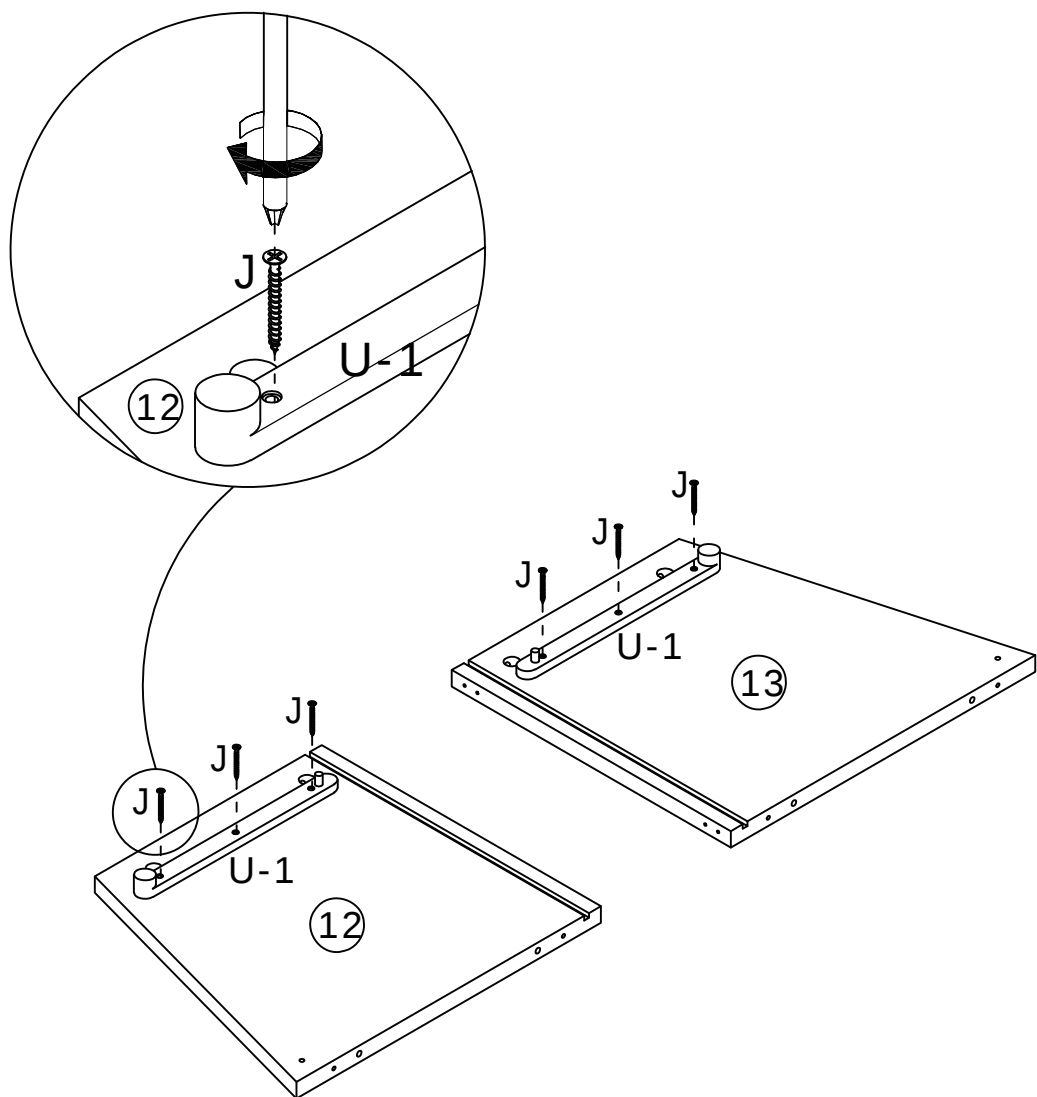


16

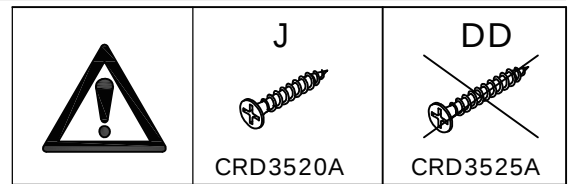 

 
Secure part (U-1) to **both sides of** panel 14 using screw (J).

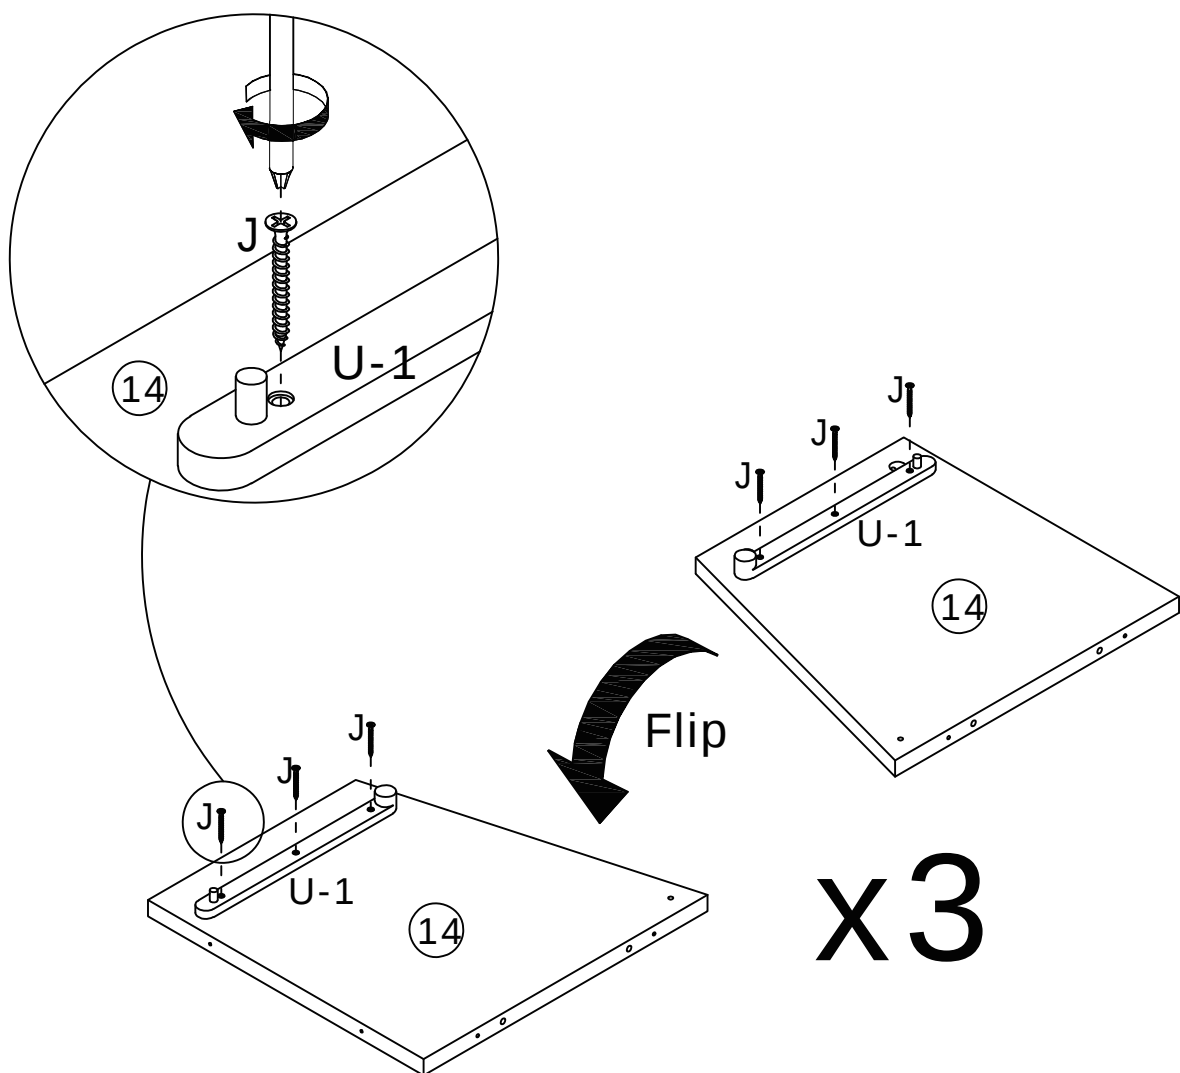




17

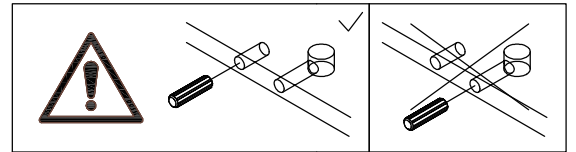 


 
Connect panel 15 to panels 12, 13, and 14 using wooden dowel (E), and secure them with screw (F).

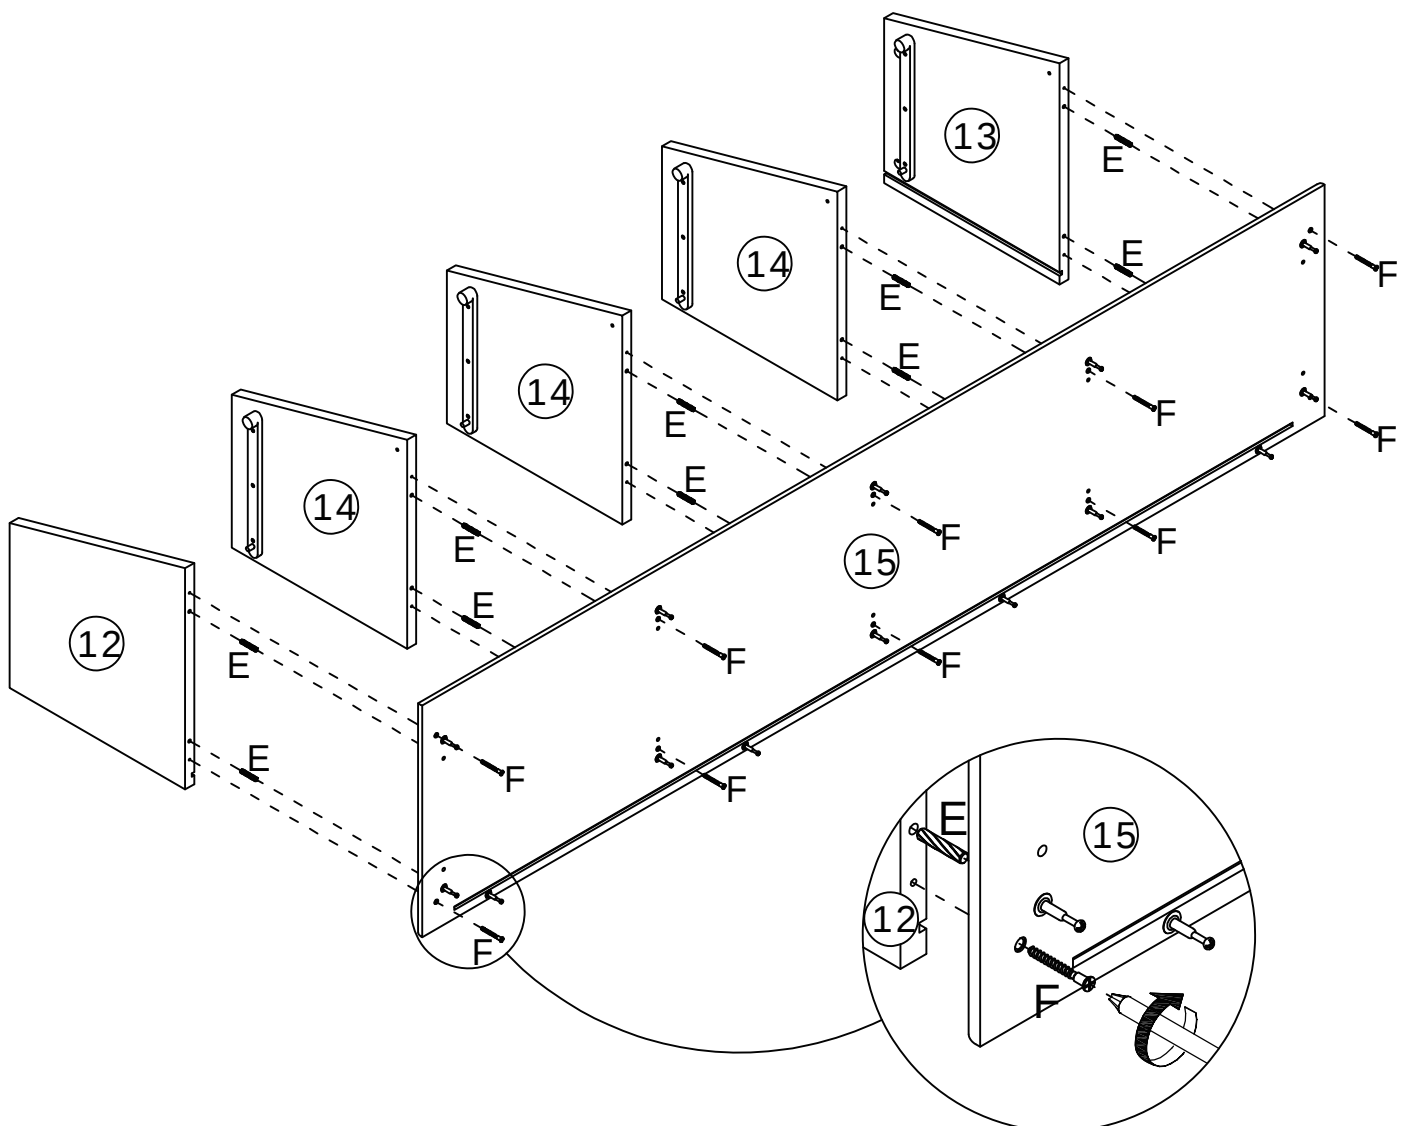


18

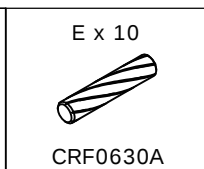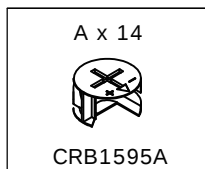   

  
Connect the two assembly units using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

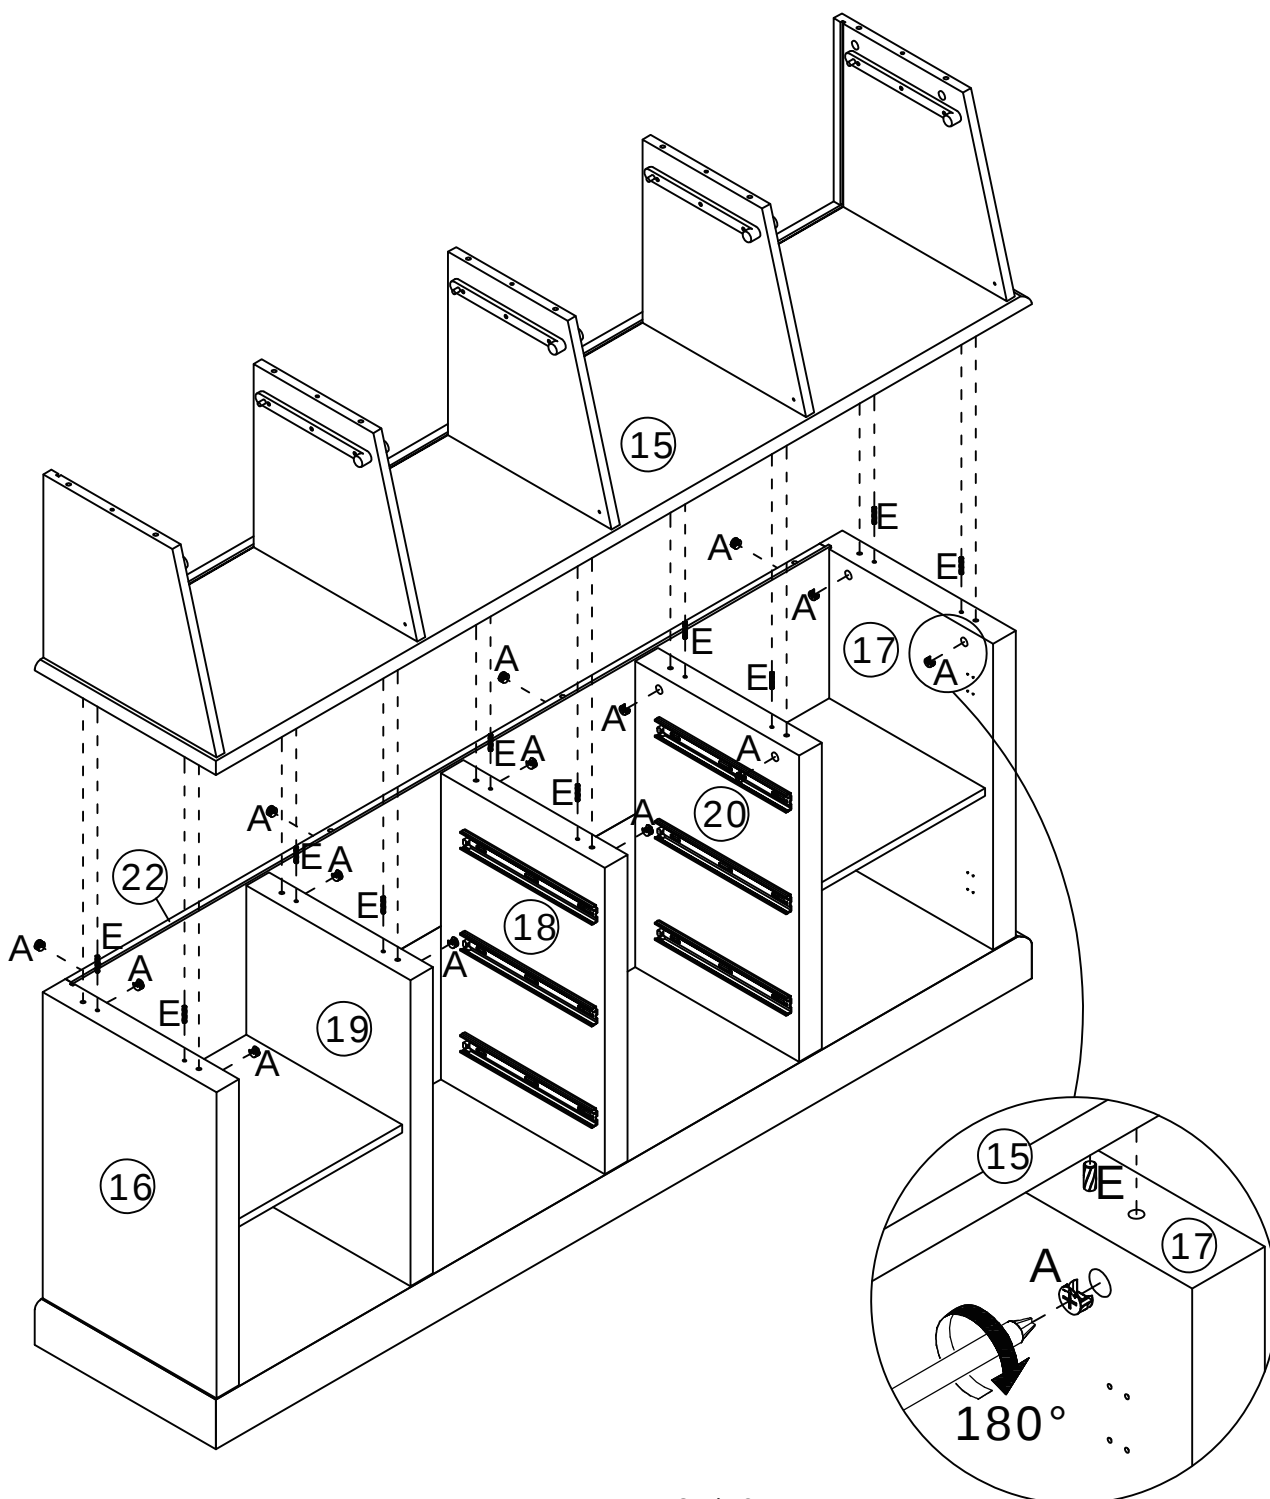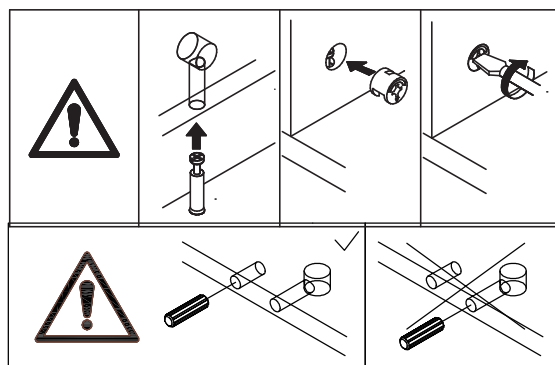

19

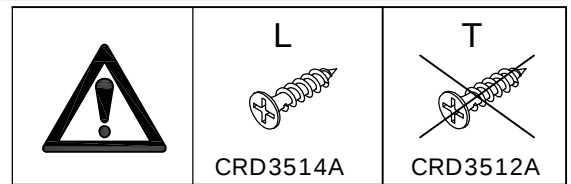 


 Secure part (V) to panels 12, 13, 15, 16, and 17 using screw (L).

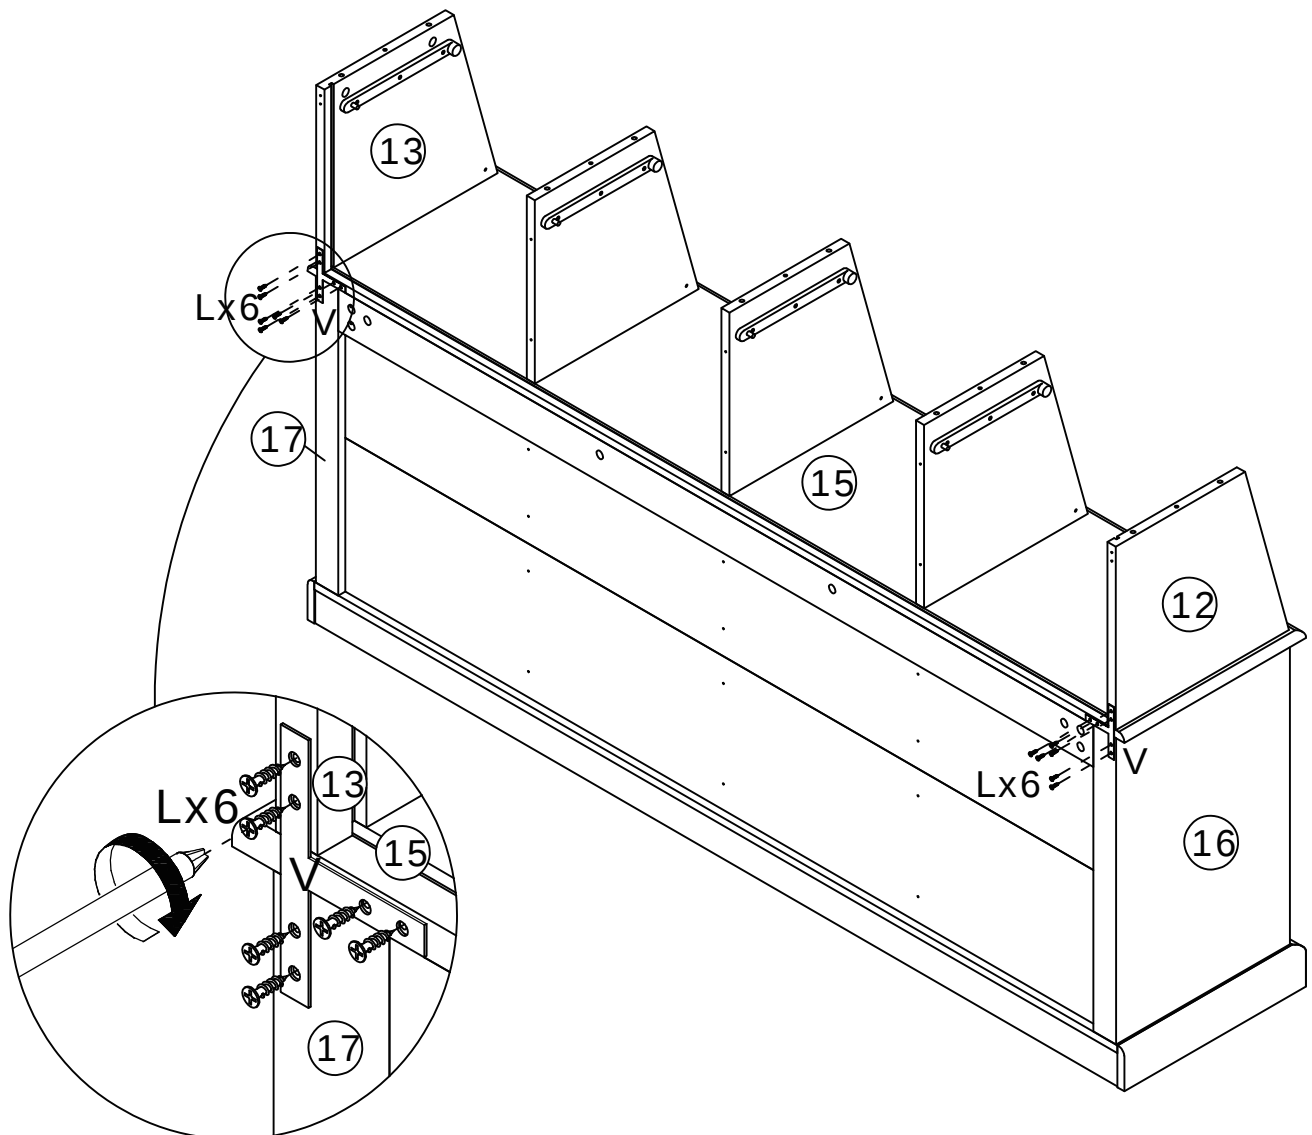


20

 
Insert panel 11 along the available slot.

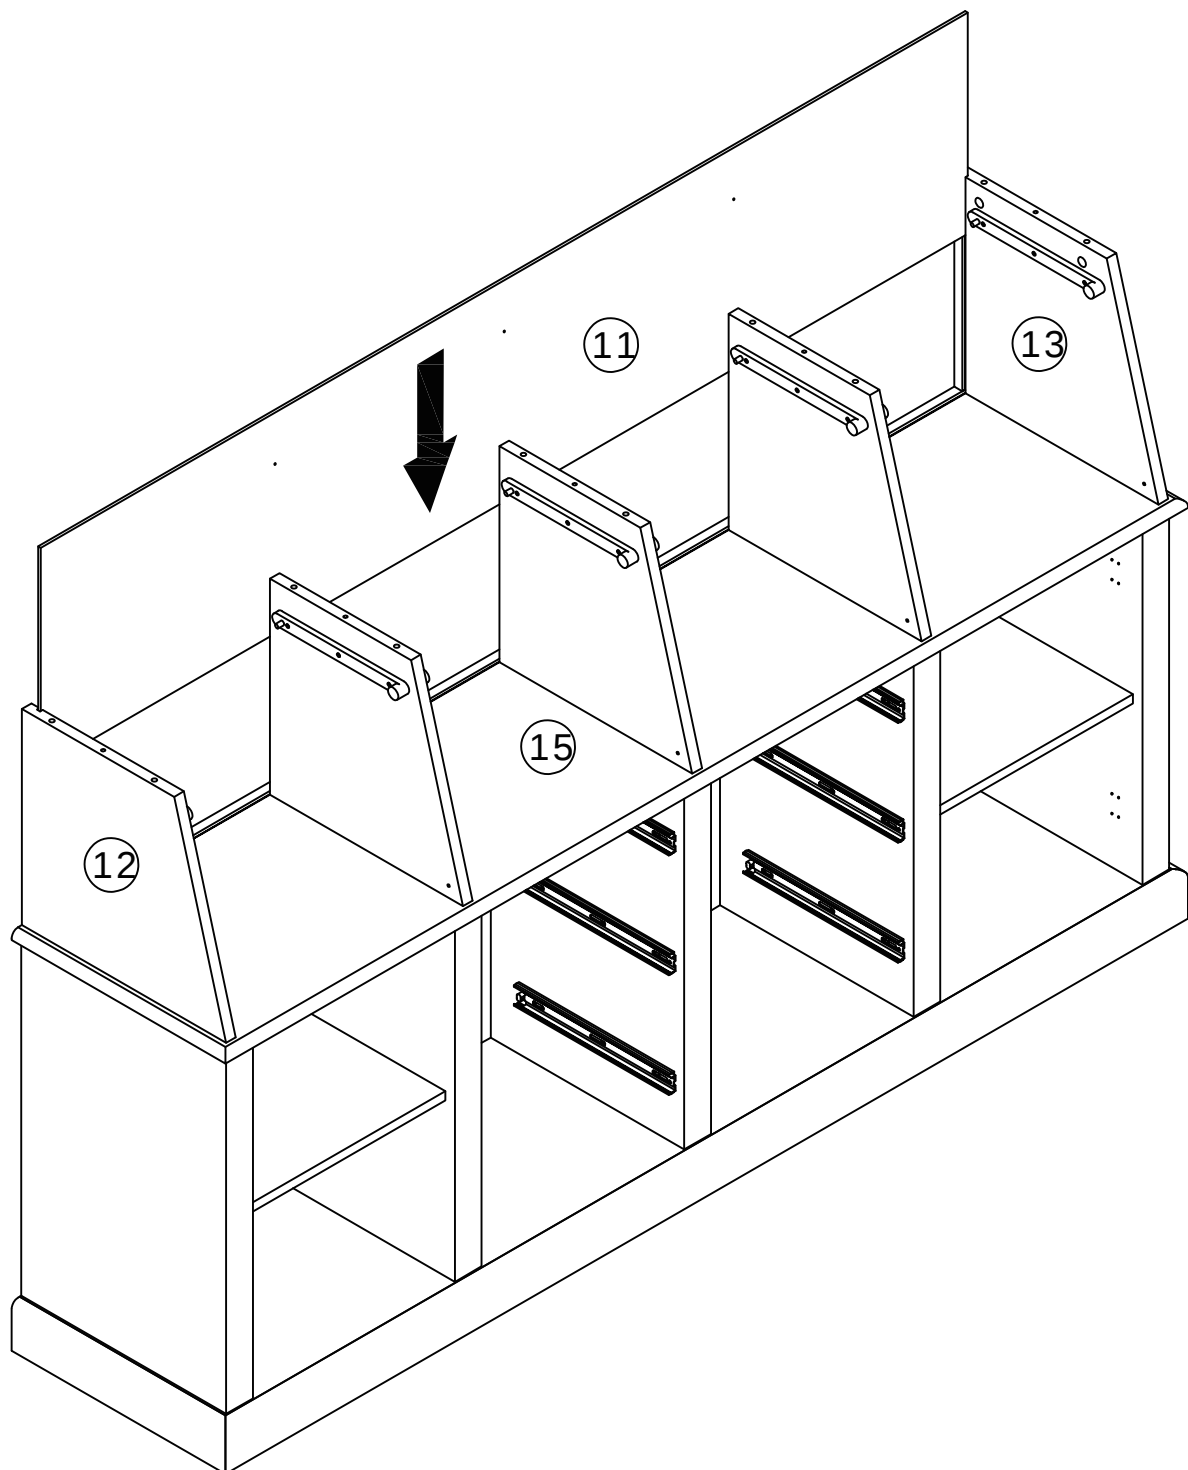


21

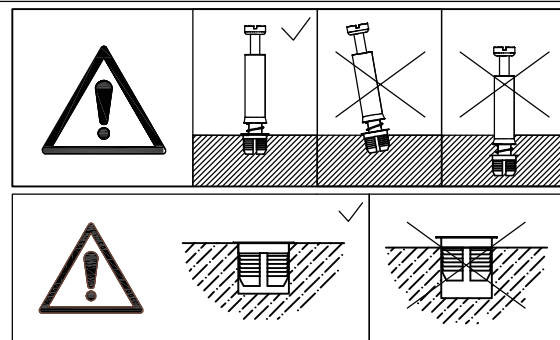 

 
Press plug (C) to panels 2 and 3, and screw self-tapping rod (B) onto the holes.

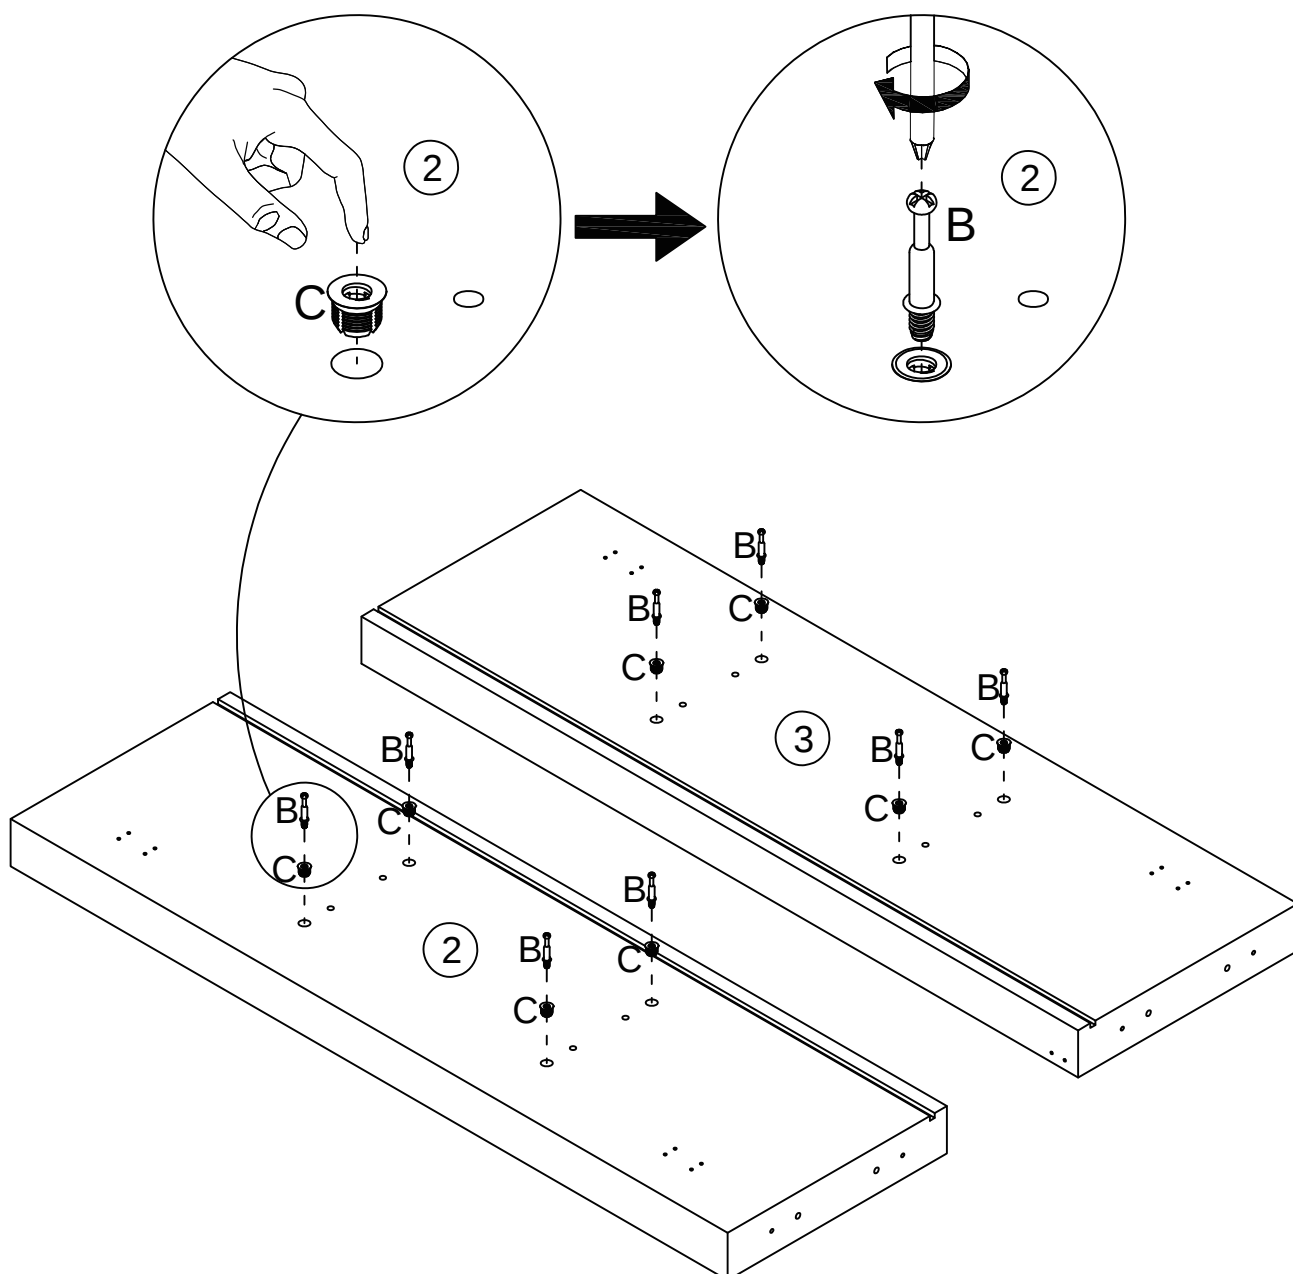


22

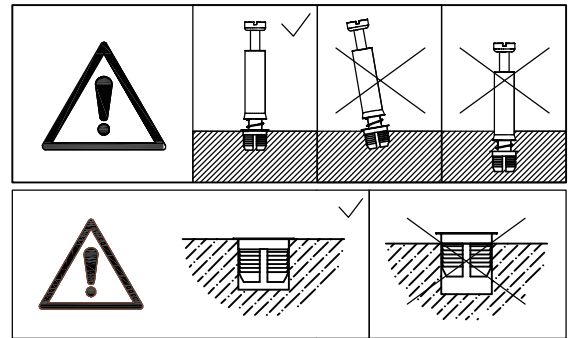 

 
Press plug (C) to **both sides of** panel 4, and screw self-tapping rod (B) onto the holes.

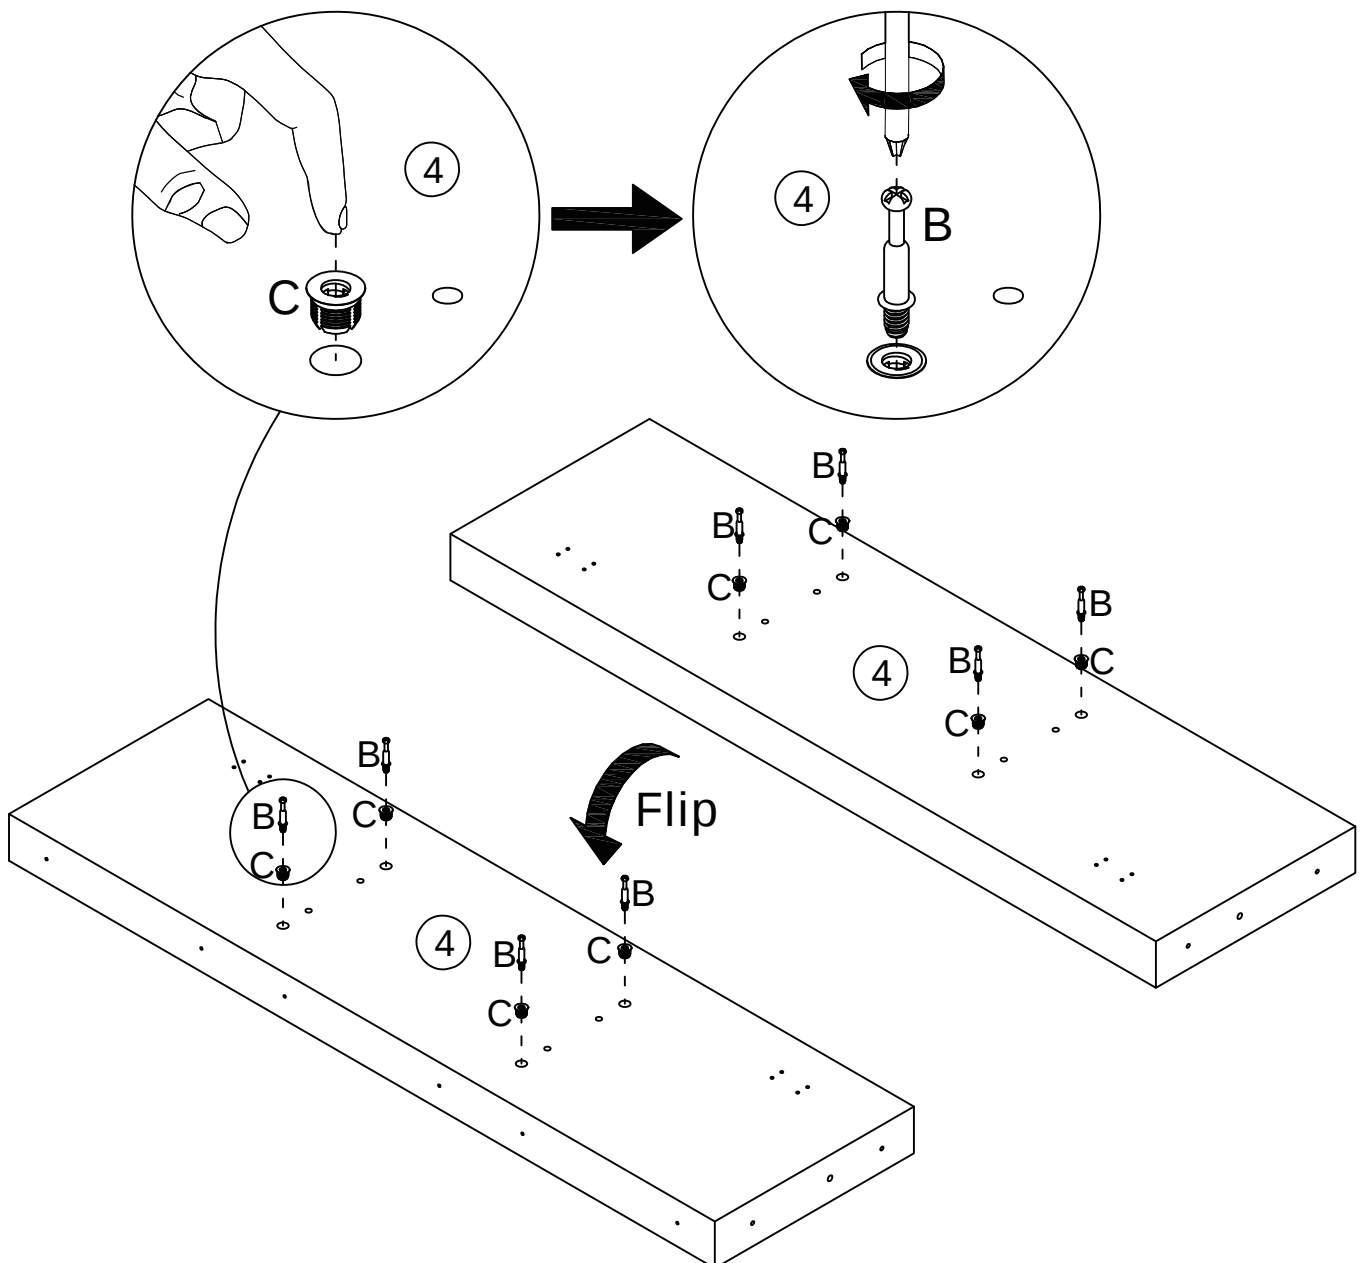

23

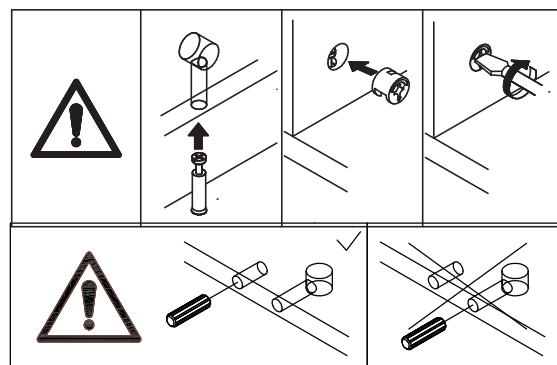 

 
Connect panel 6 to panel 2 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

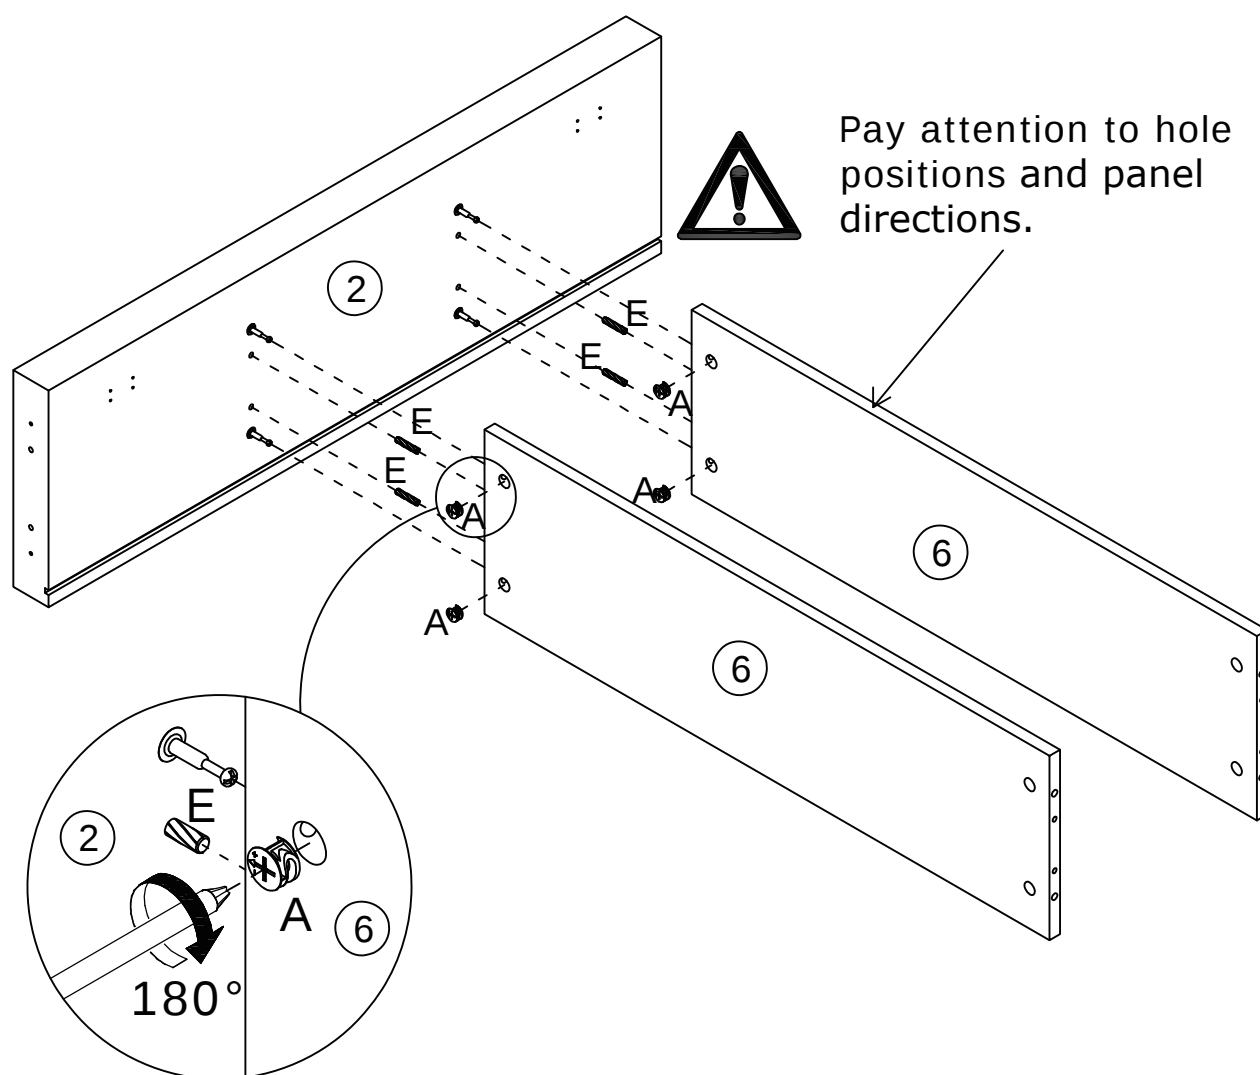


24



 
Connect panel 6 to panel 4 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

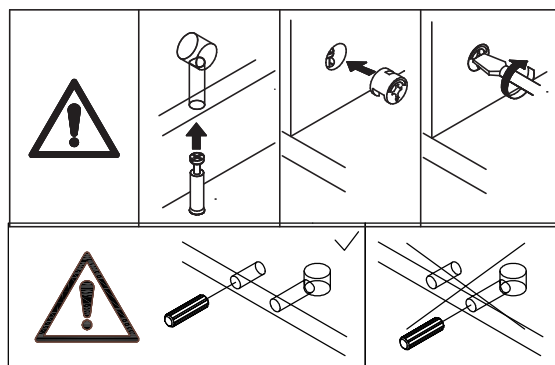

 
Pay attention to hole positions and panel directions.

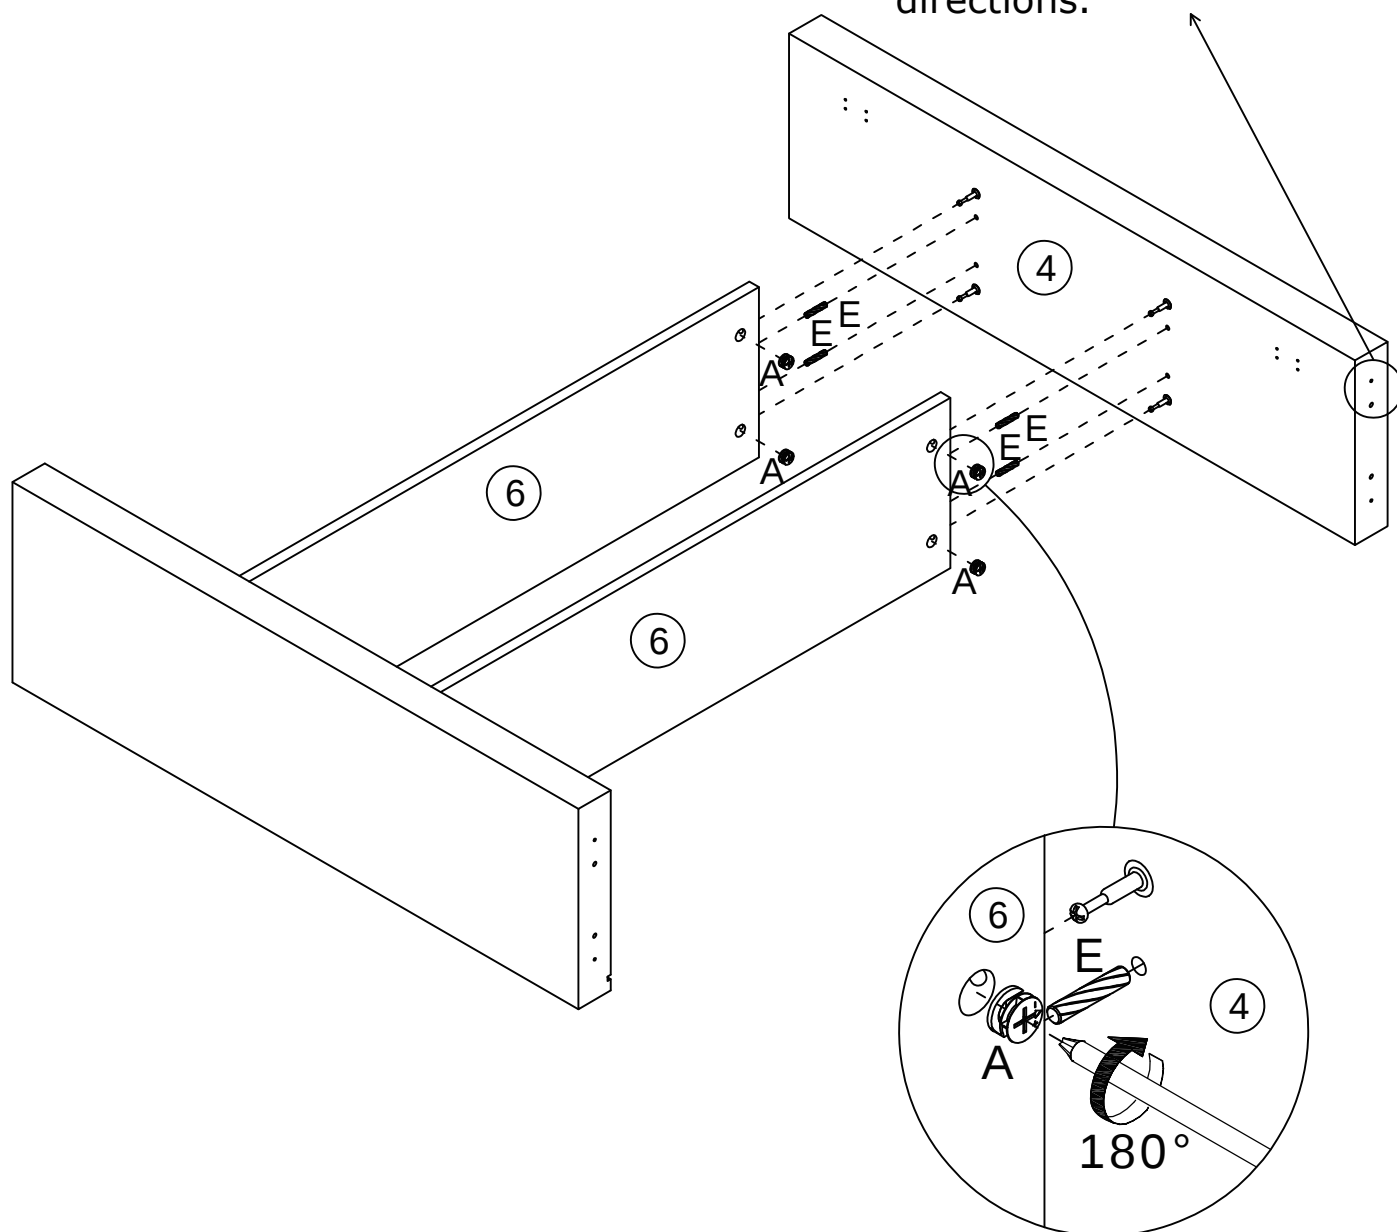


25

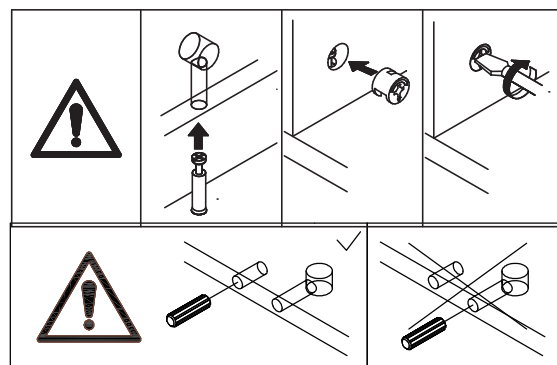 

 
Connect panel 6 to panel 4 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

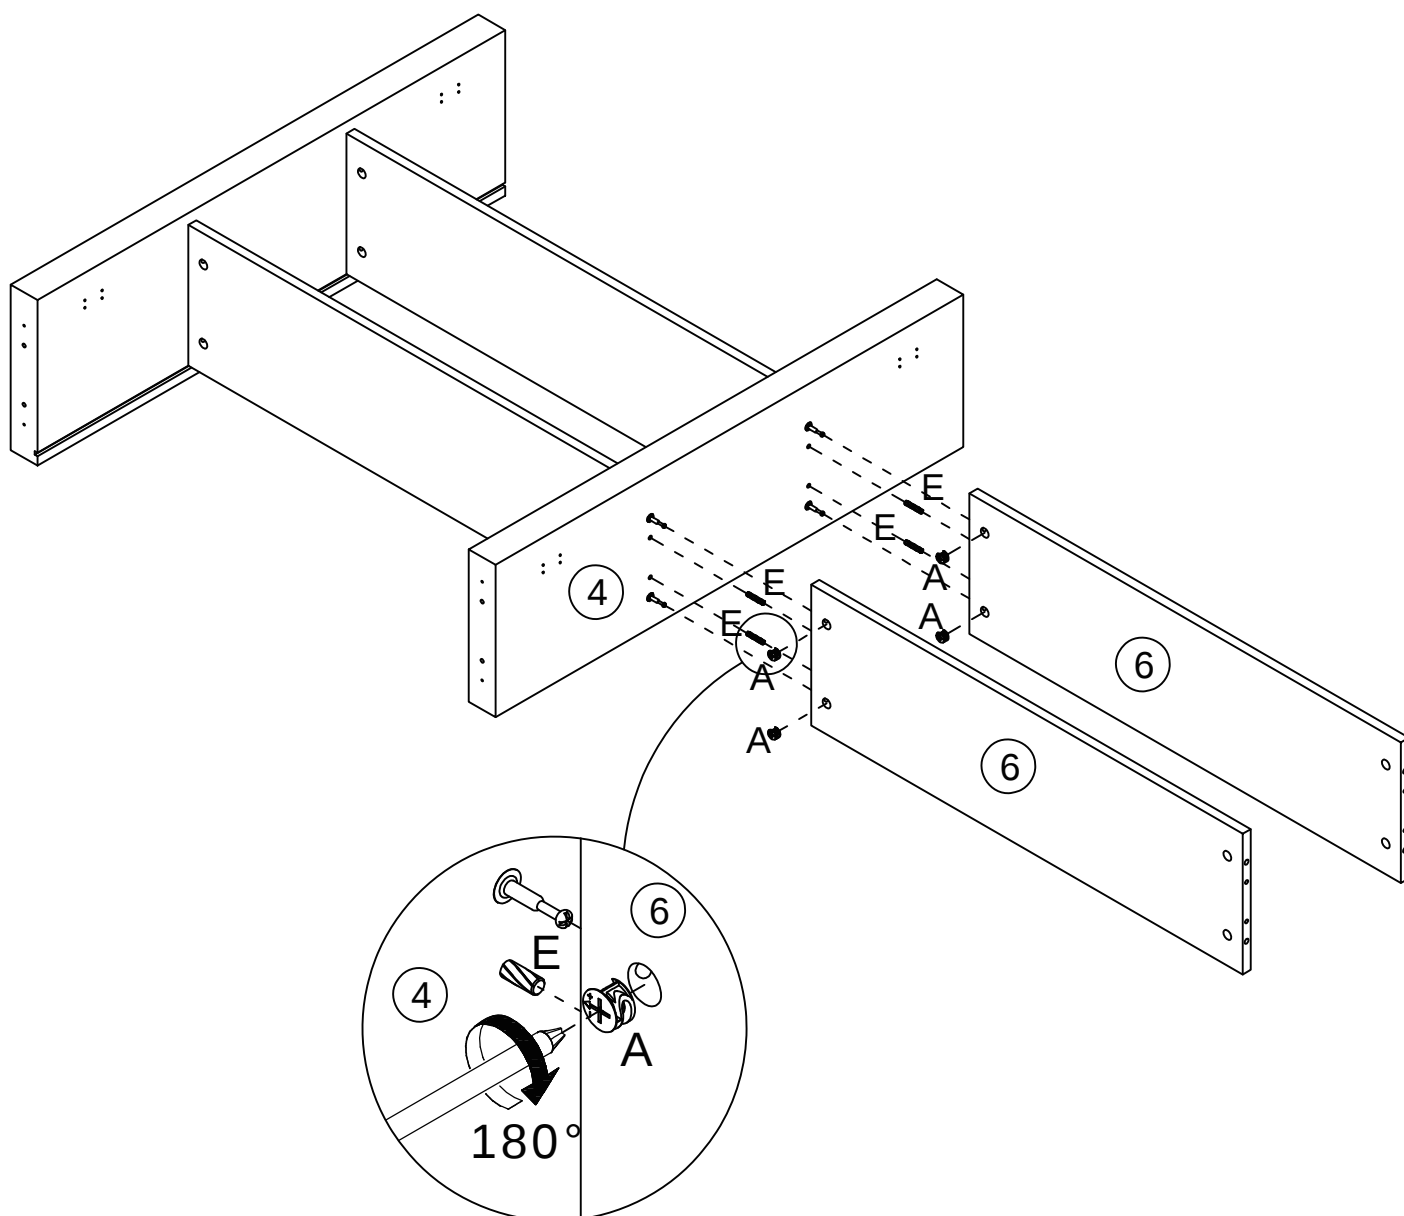


26

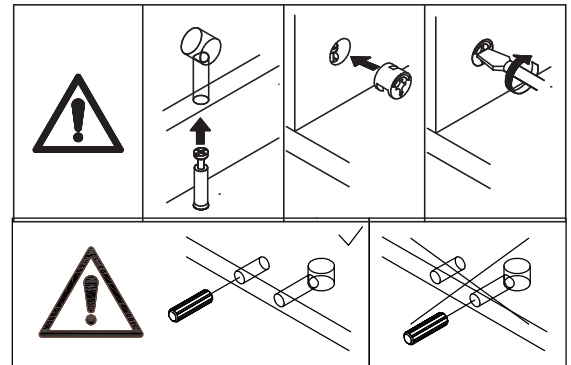 

 
Connect panel 6 to panel 3 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

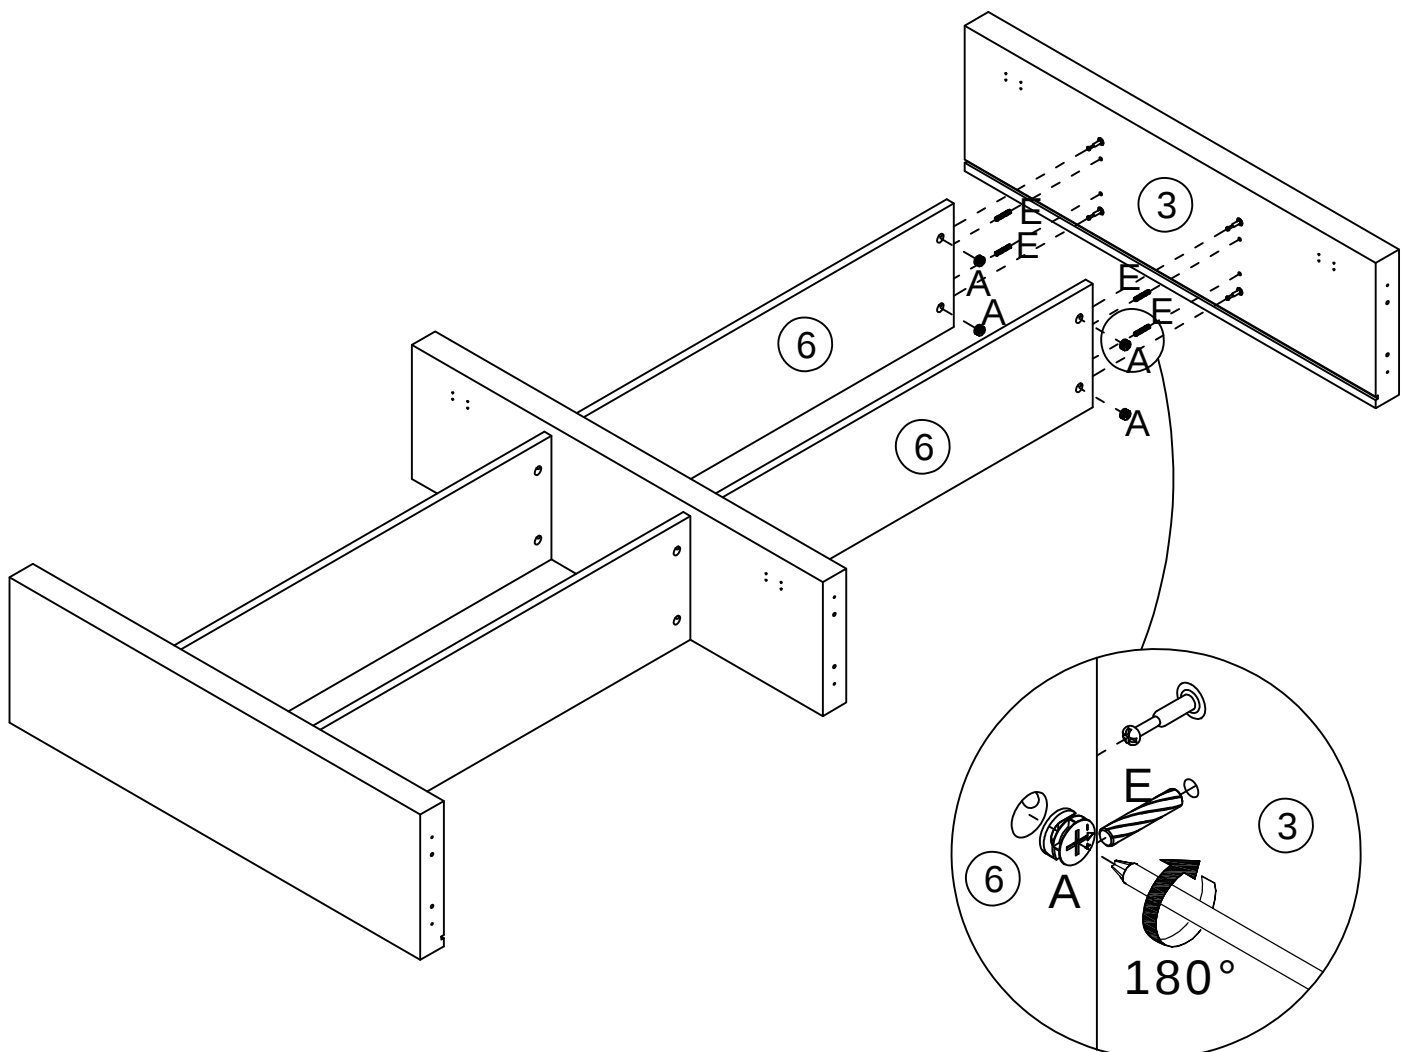


27

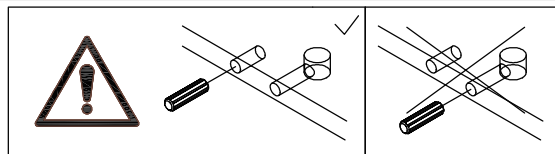 


 
Connect panel 5 to panels 2, 3, and 4 using wooden dowel (E), and secure them with screw (F).

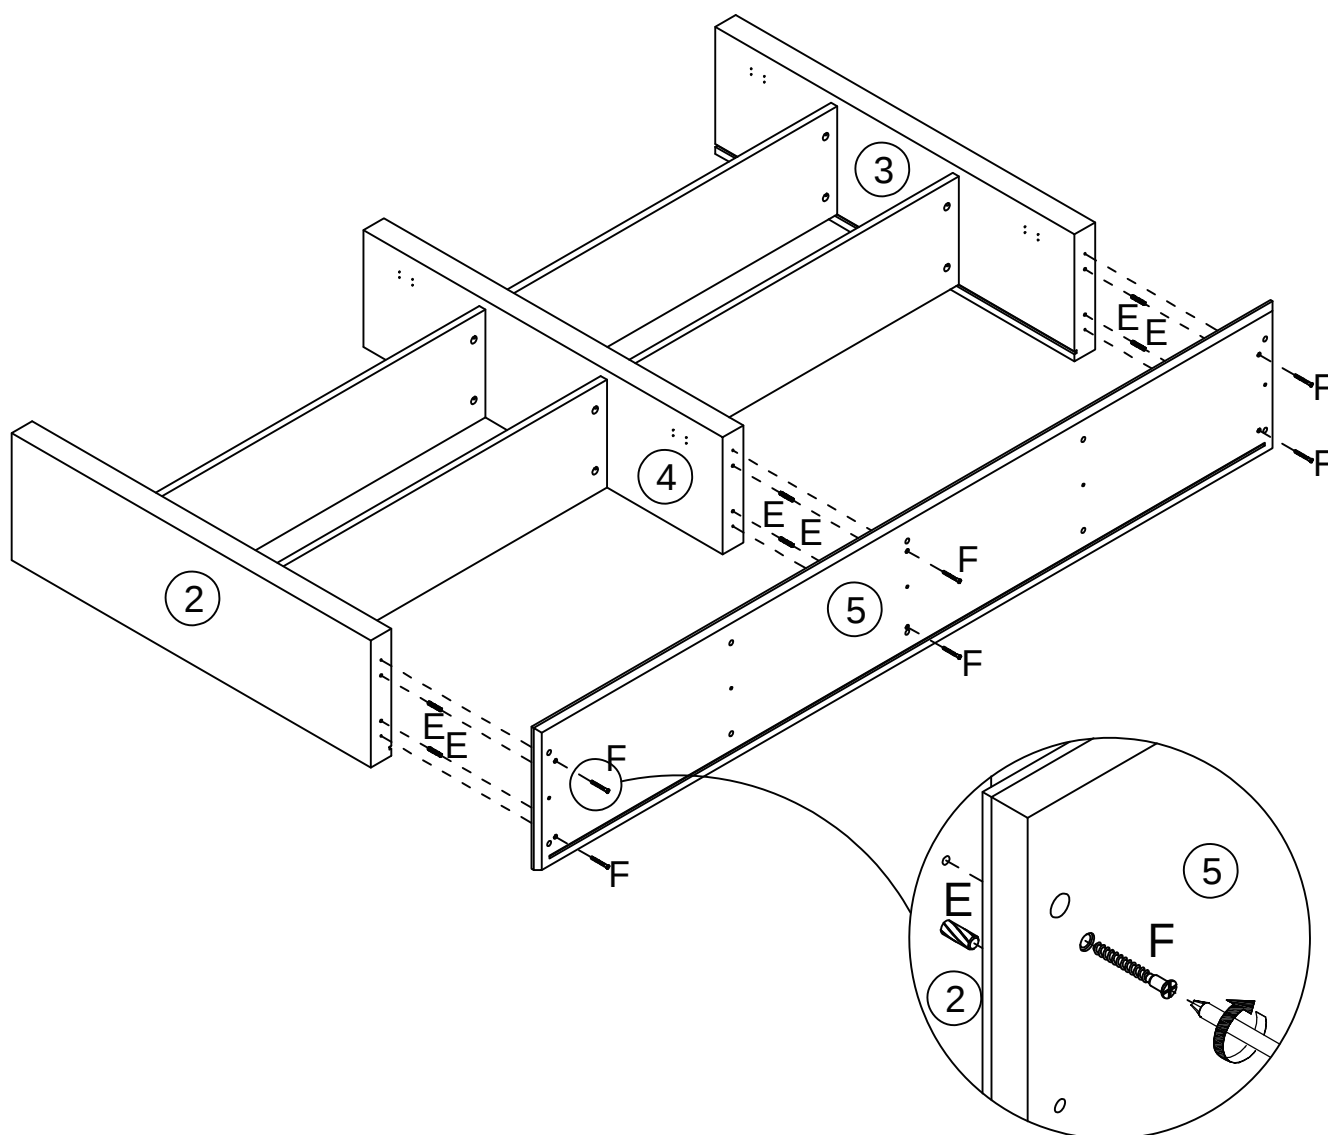


 Insert panel 7 along the available slots.

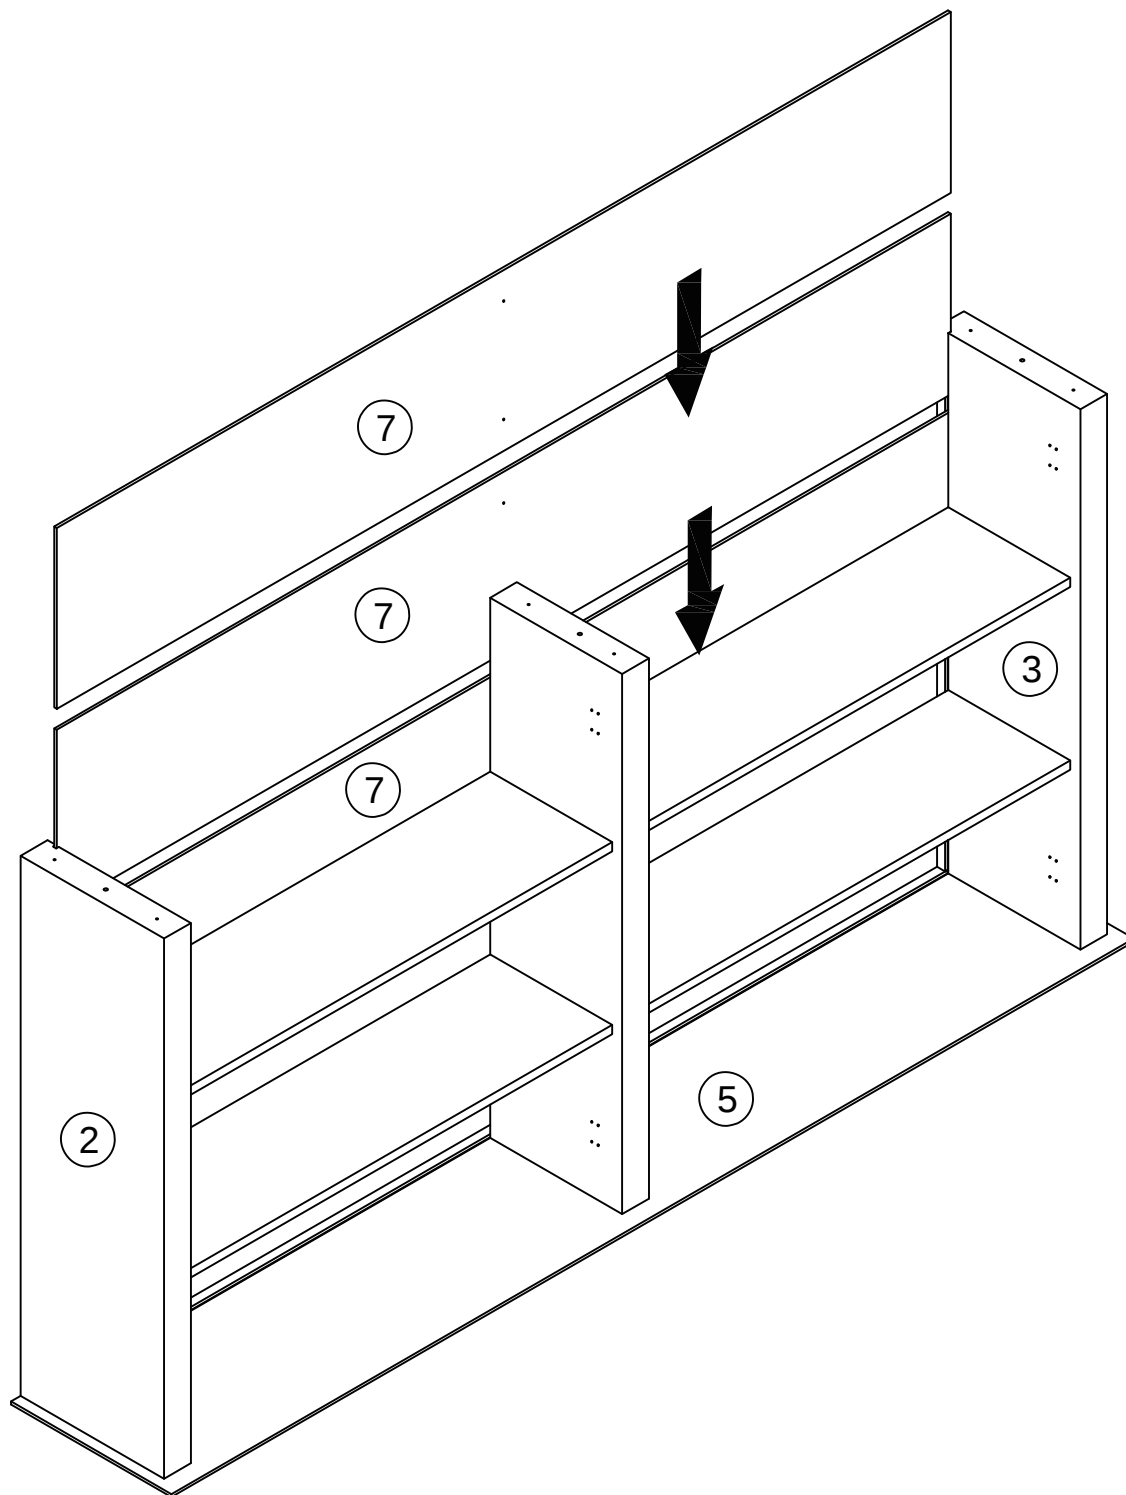


29

 
 
L x 2  CRD3514A	Y x 2 	
--	--	---

 
	L  CRD3514A	T  CRD3512A
--	--	--

 Secure part (Y) to panel 1 using screw (L).

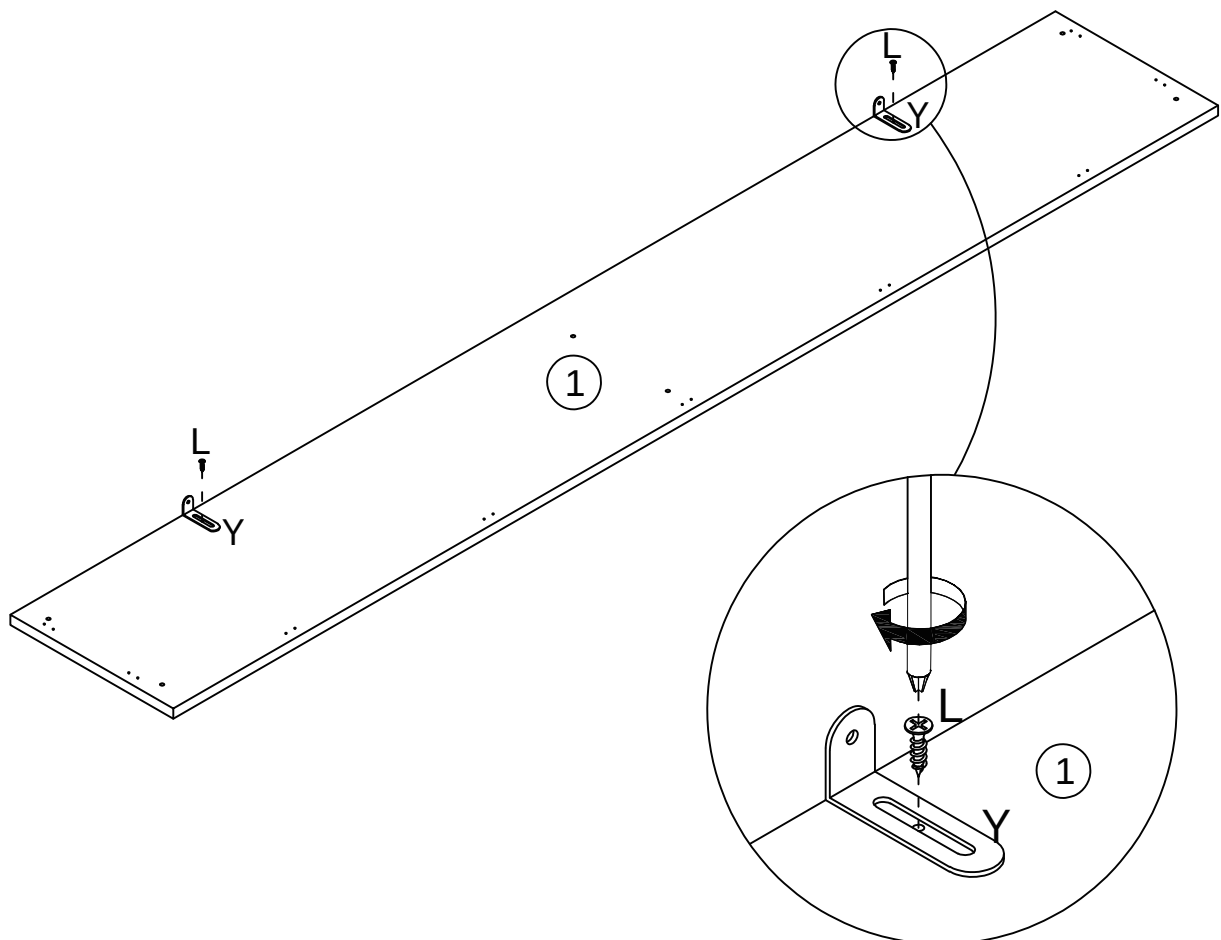


30

  
S x 9 	T x 18  CRD3512A	
--	---	---

 	L  CRD3514A	T  CRD3512A
--	--	--

 
Secure part (S) to panel 1 using screw (T).

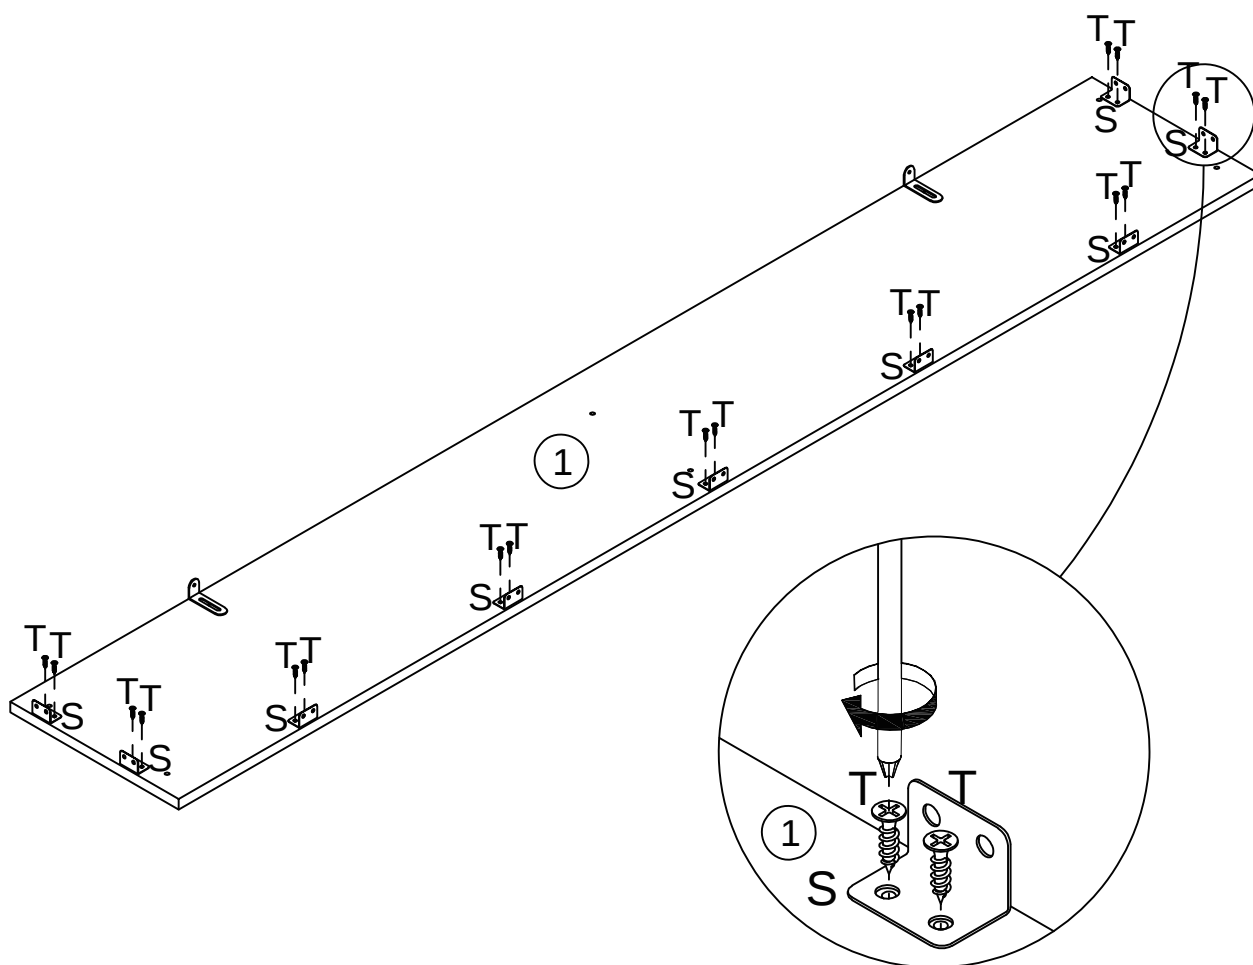

31


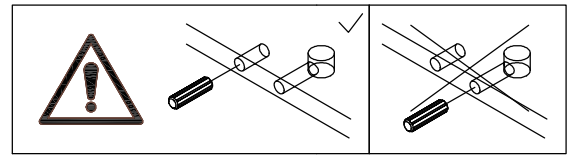 


 Connect panel 1 to panels 2, 3, and 4 using wooden dowel (E), and secure them with screw (F).

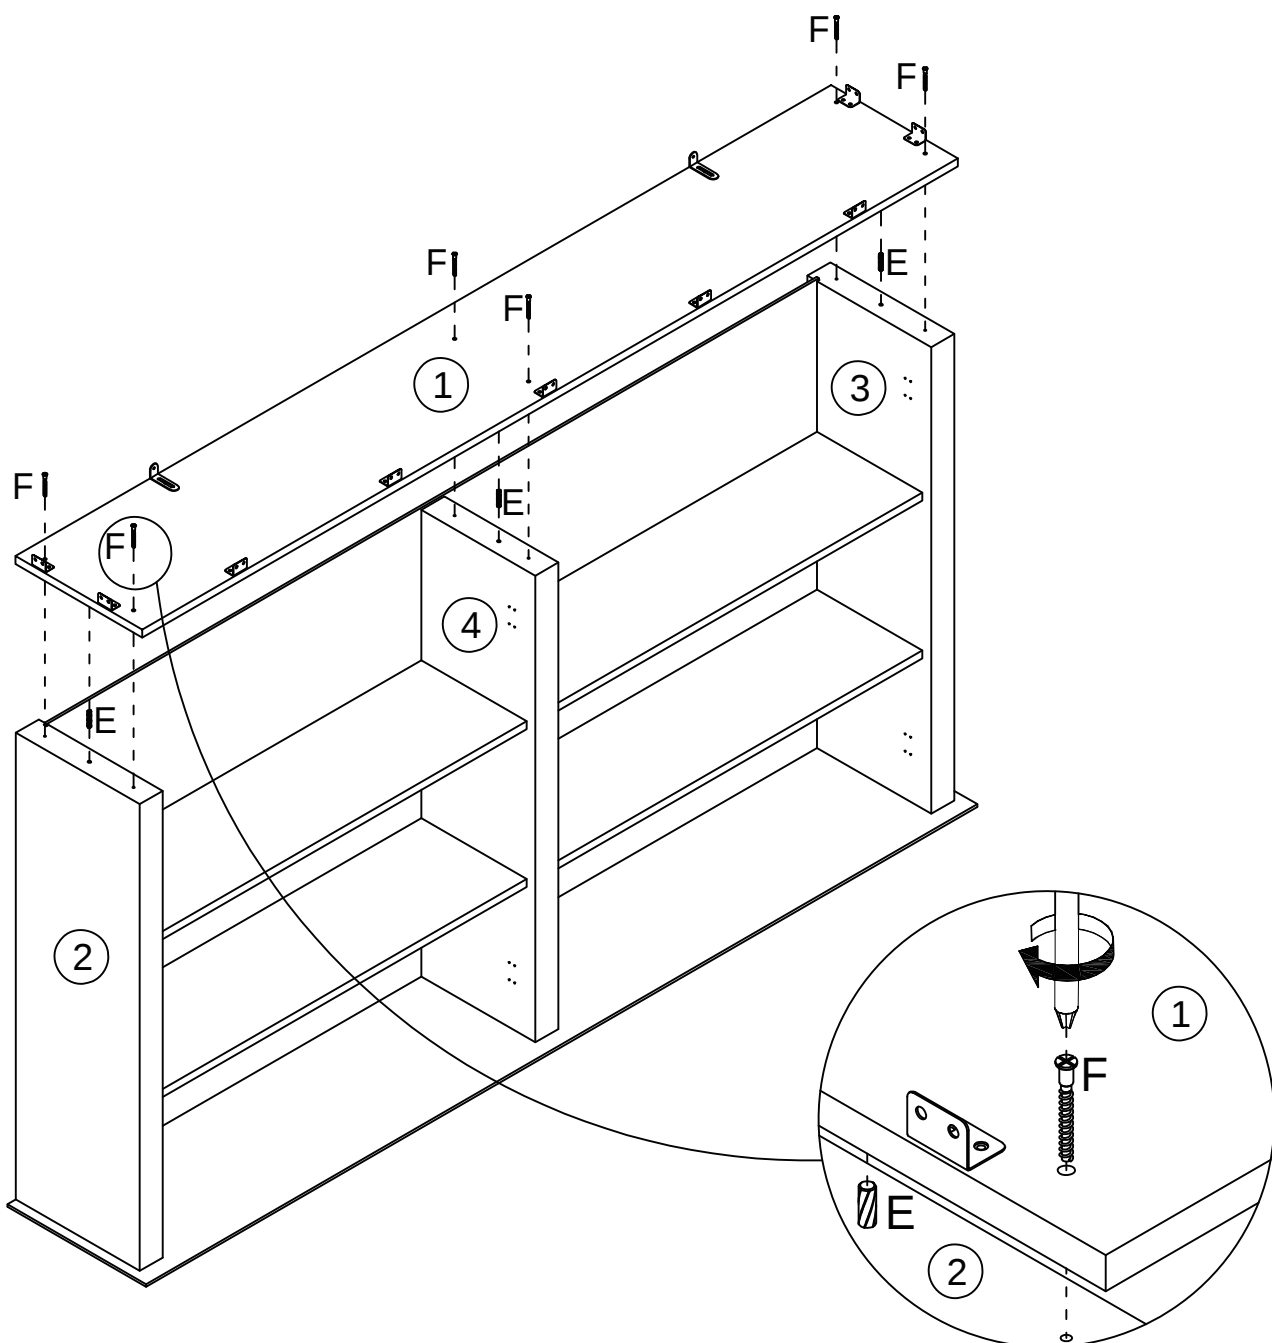


32


 
 
T x 8
CRD3512A

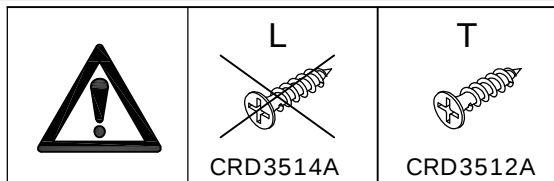

 
Secure panels 9 and 10 to panel 1 using screw (T).

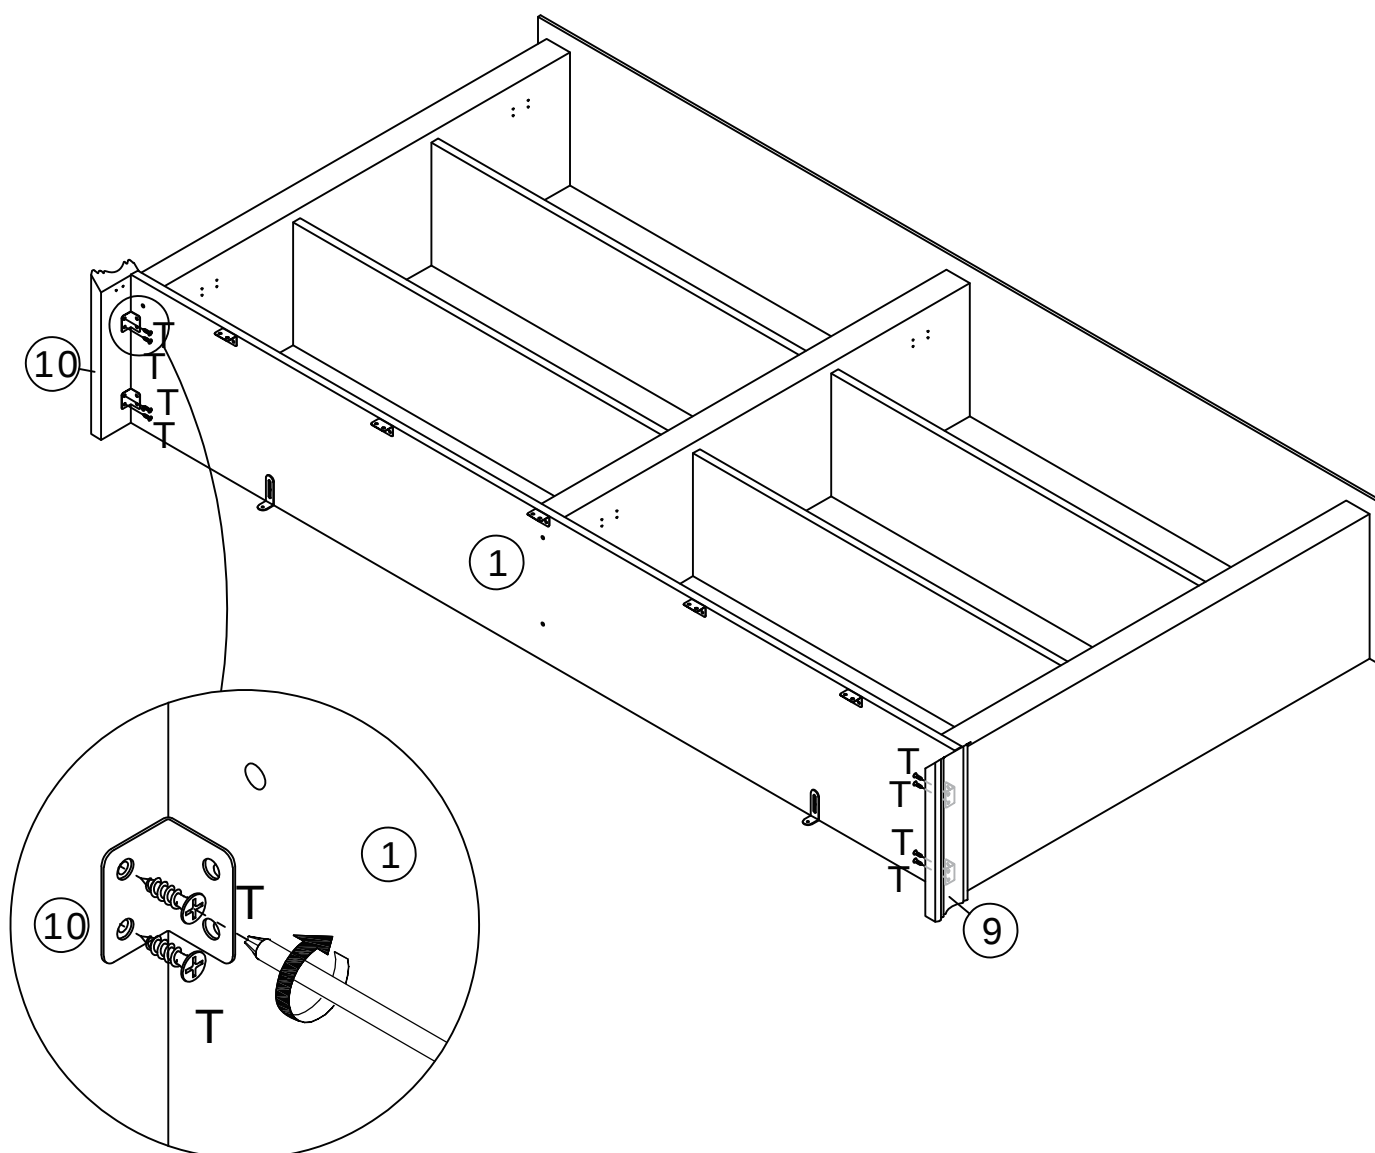


33

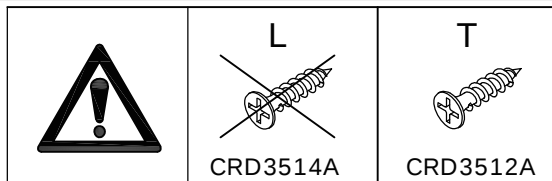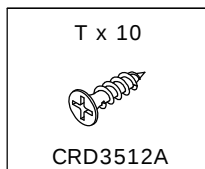   

 
Secure the brackets on panel 8 to panel 1 using screw (T).

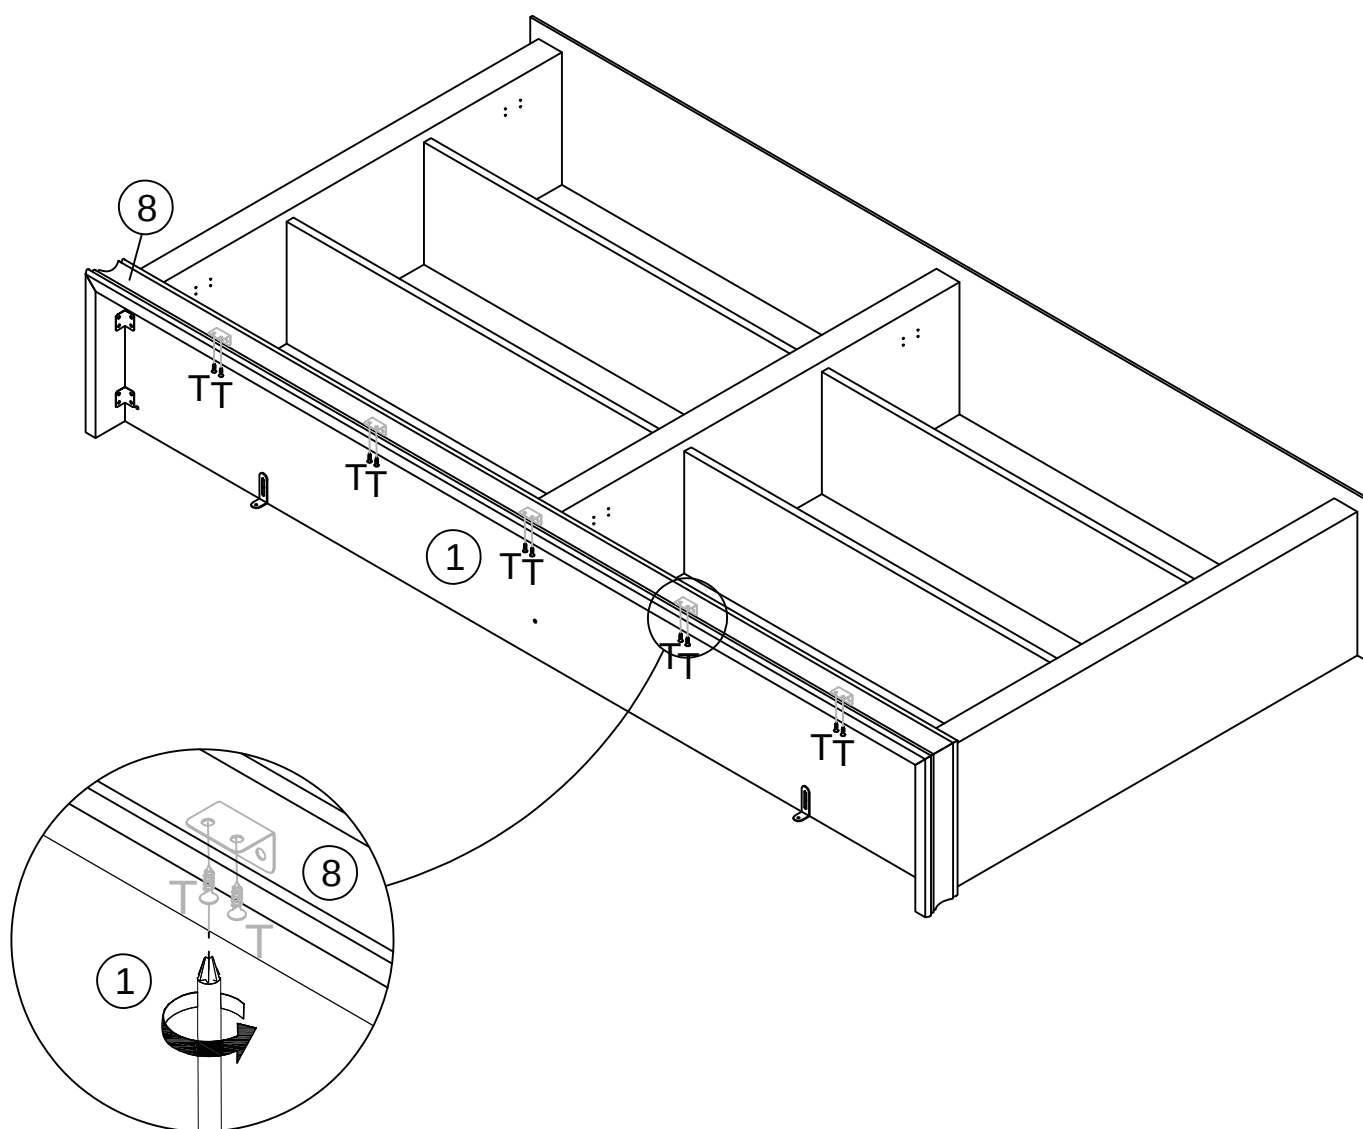




34

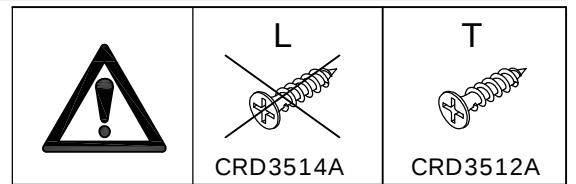 



 
Secure the brackets on panel 8 to panels 9 and 10 using screw (T).

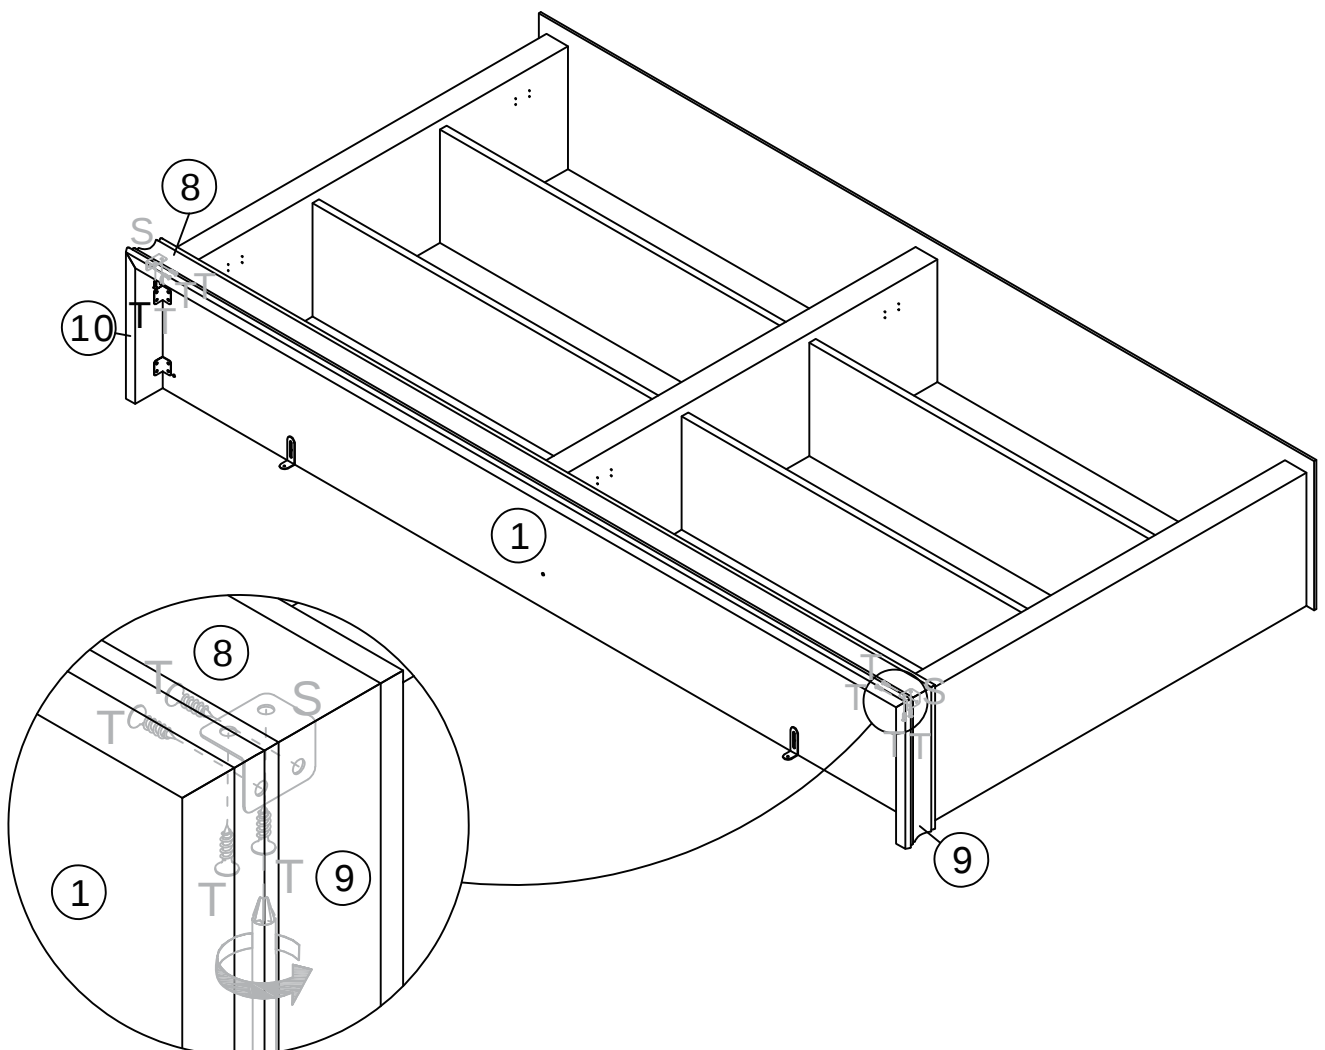




35

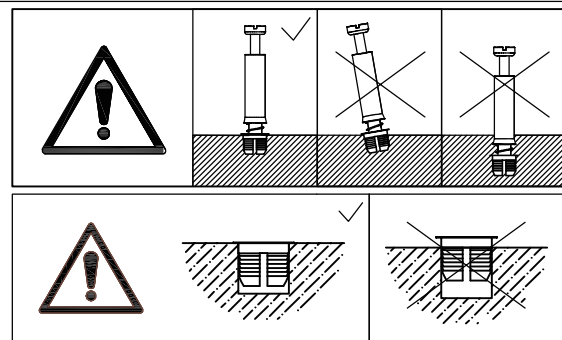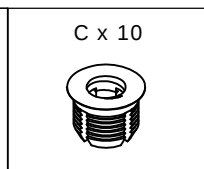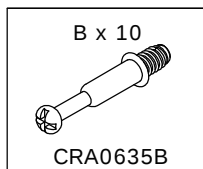   

 
 
 
Press plug (C) to panel 5, and screw self-tapping rod (B) onto the holes.

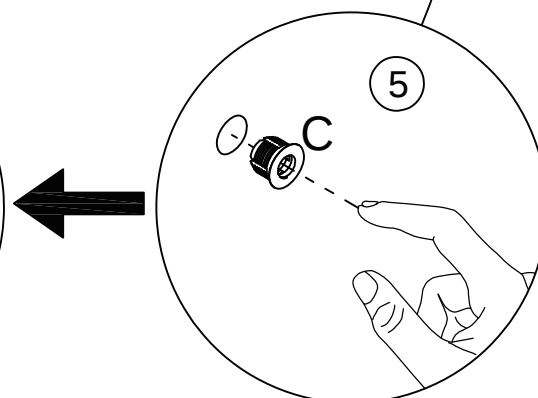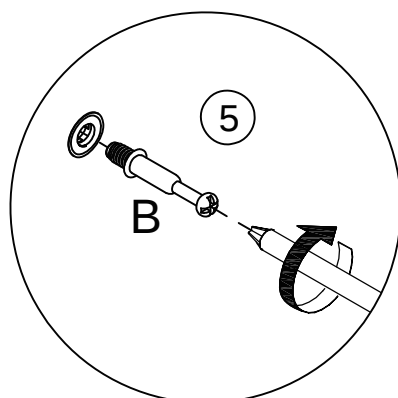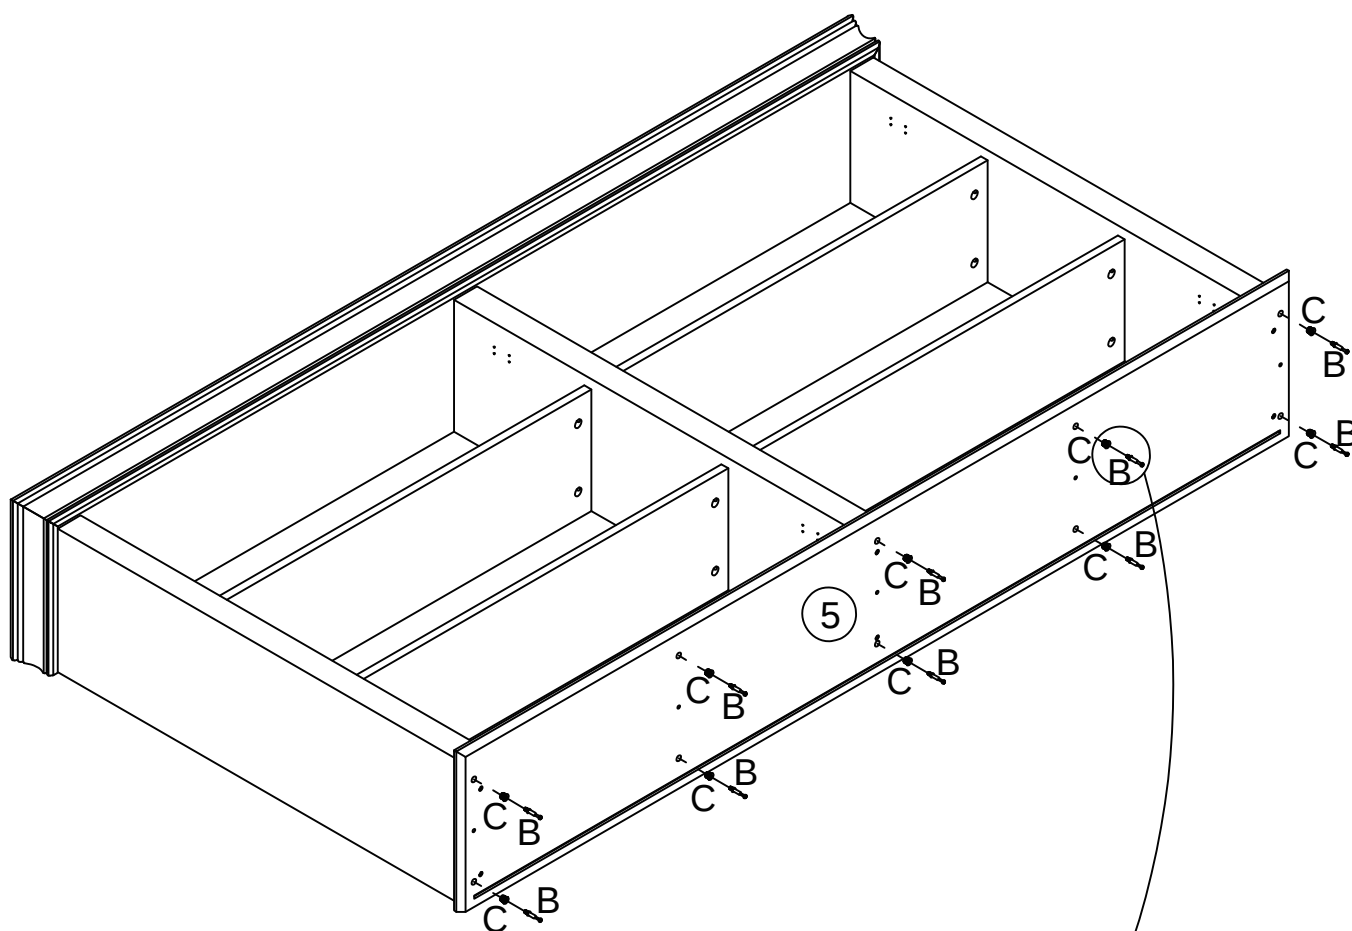


36

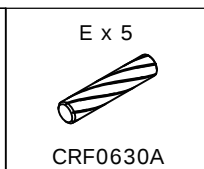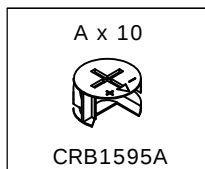   

   
Connect the two assembly unit using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

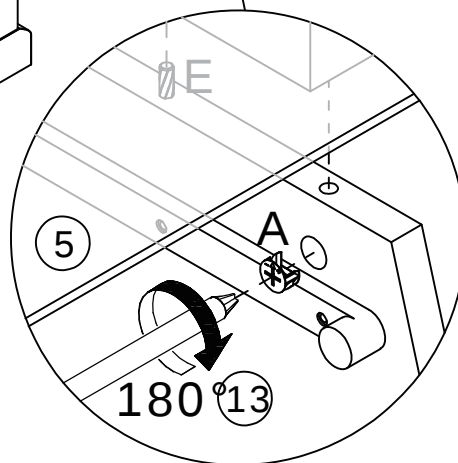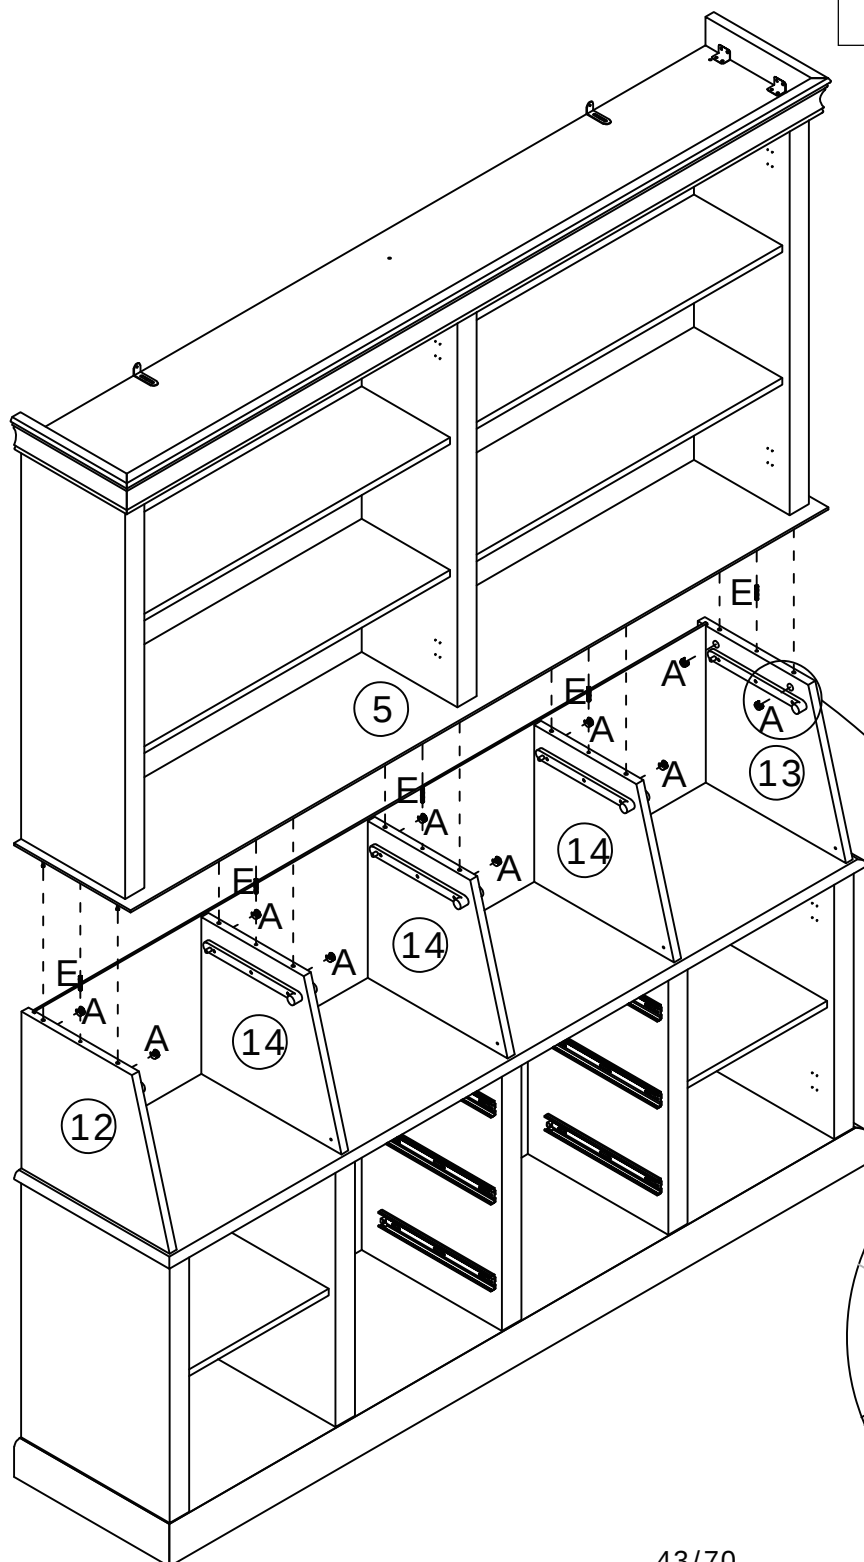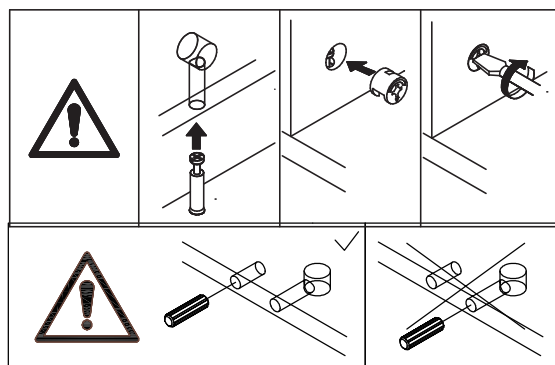




37

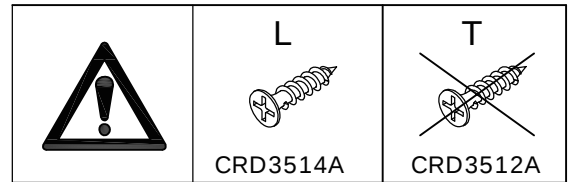 

 
Secure part (V) to panels 2, 3, 5, 12, and 13 using screw (L).

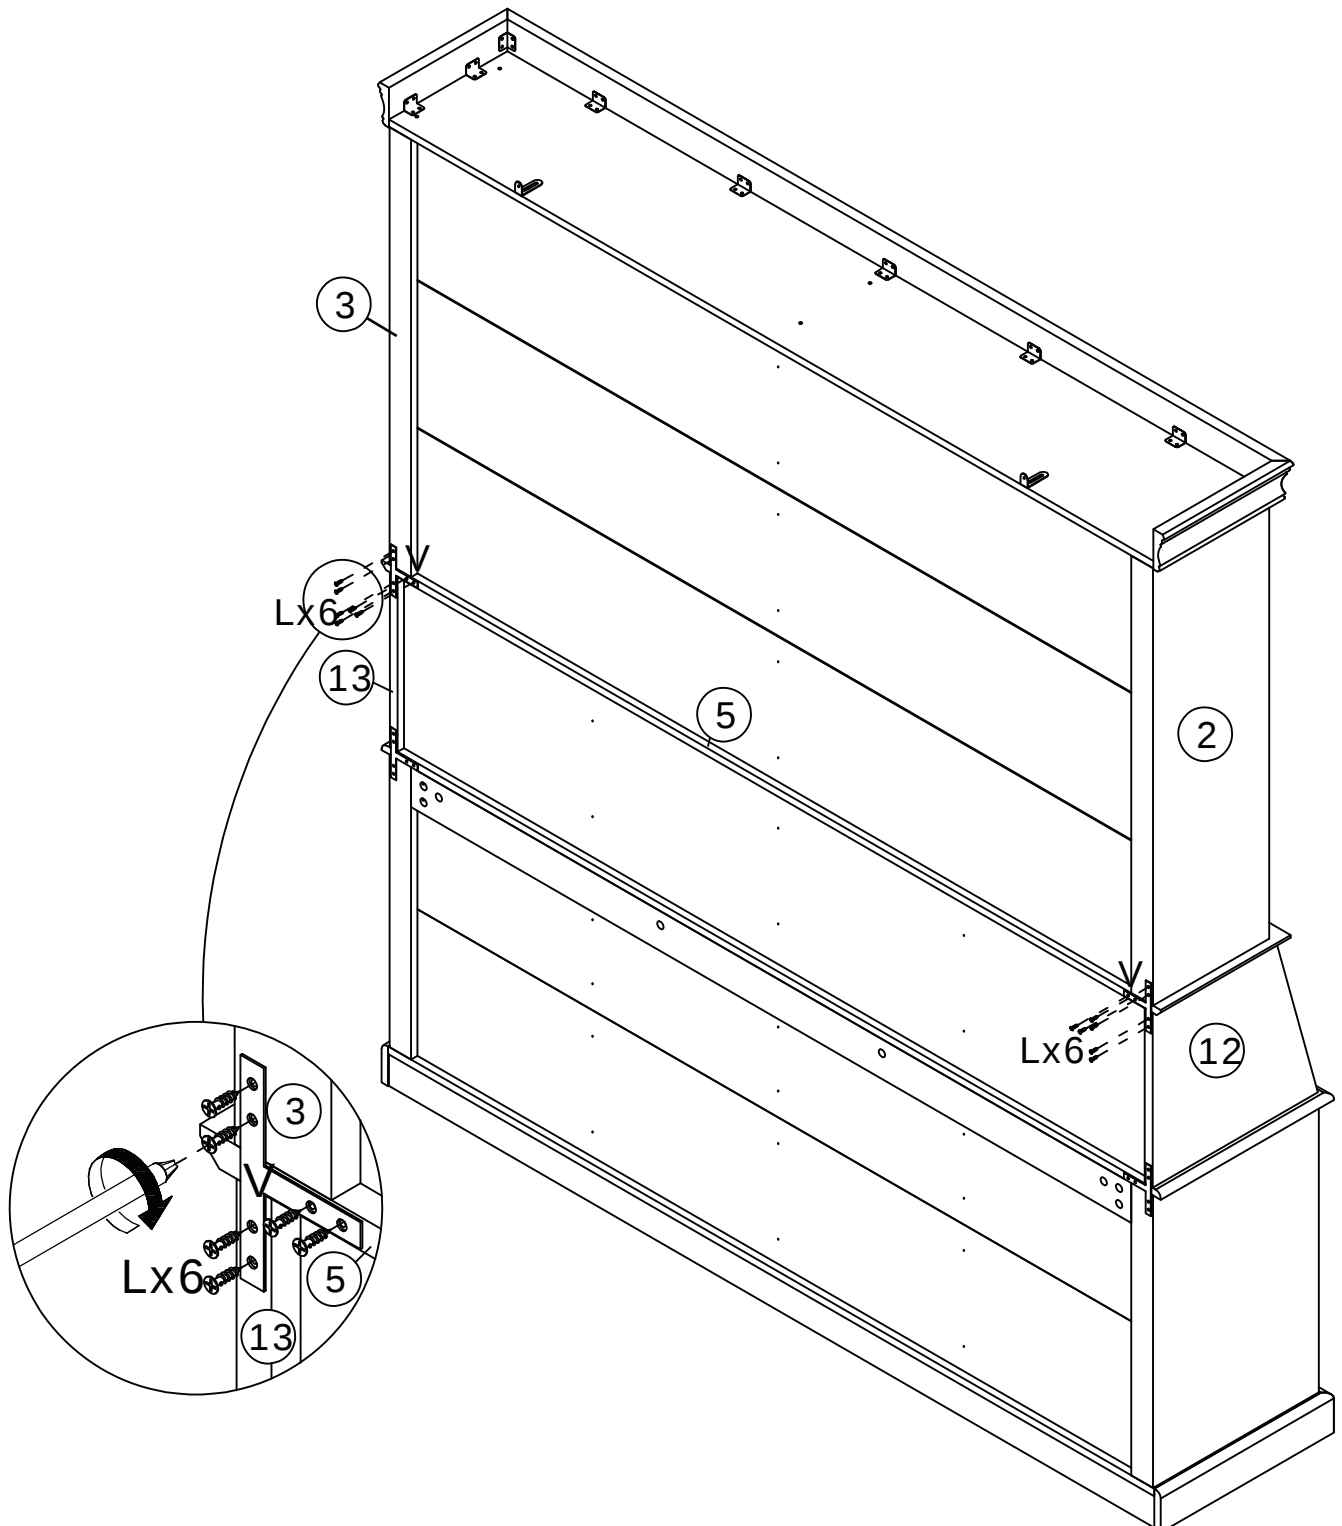

38

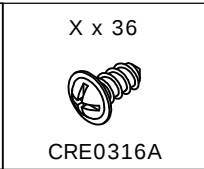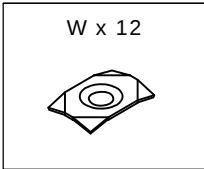   


 Secure the back panels to the unit using screw (X) and iron plate (W).

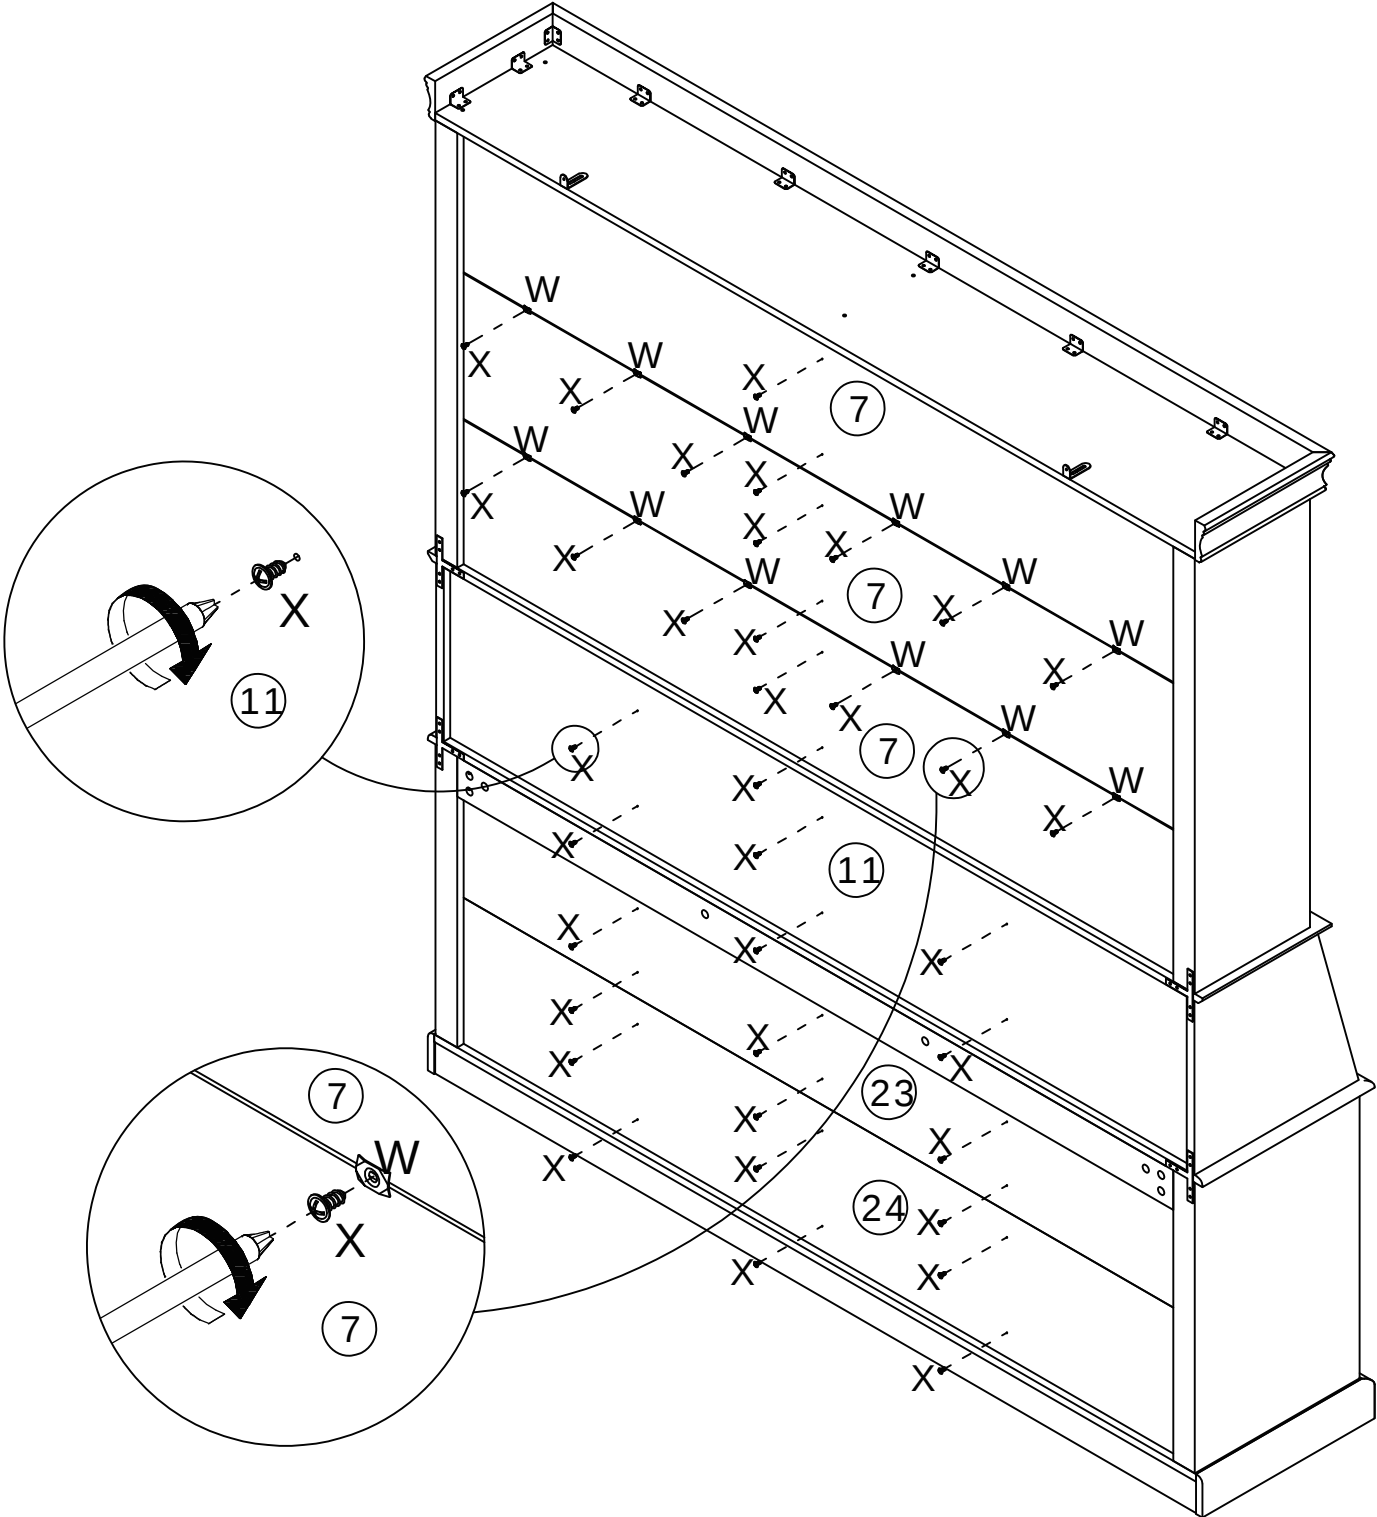

39

 
BB x 44




CC x 44



 
CRD0314A



 
Insert clip (BB) into back slots and secure them using screw (CC).

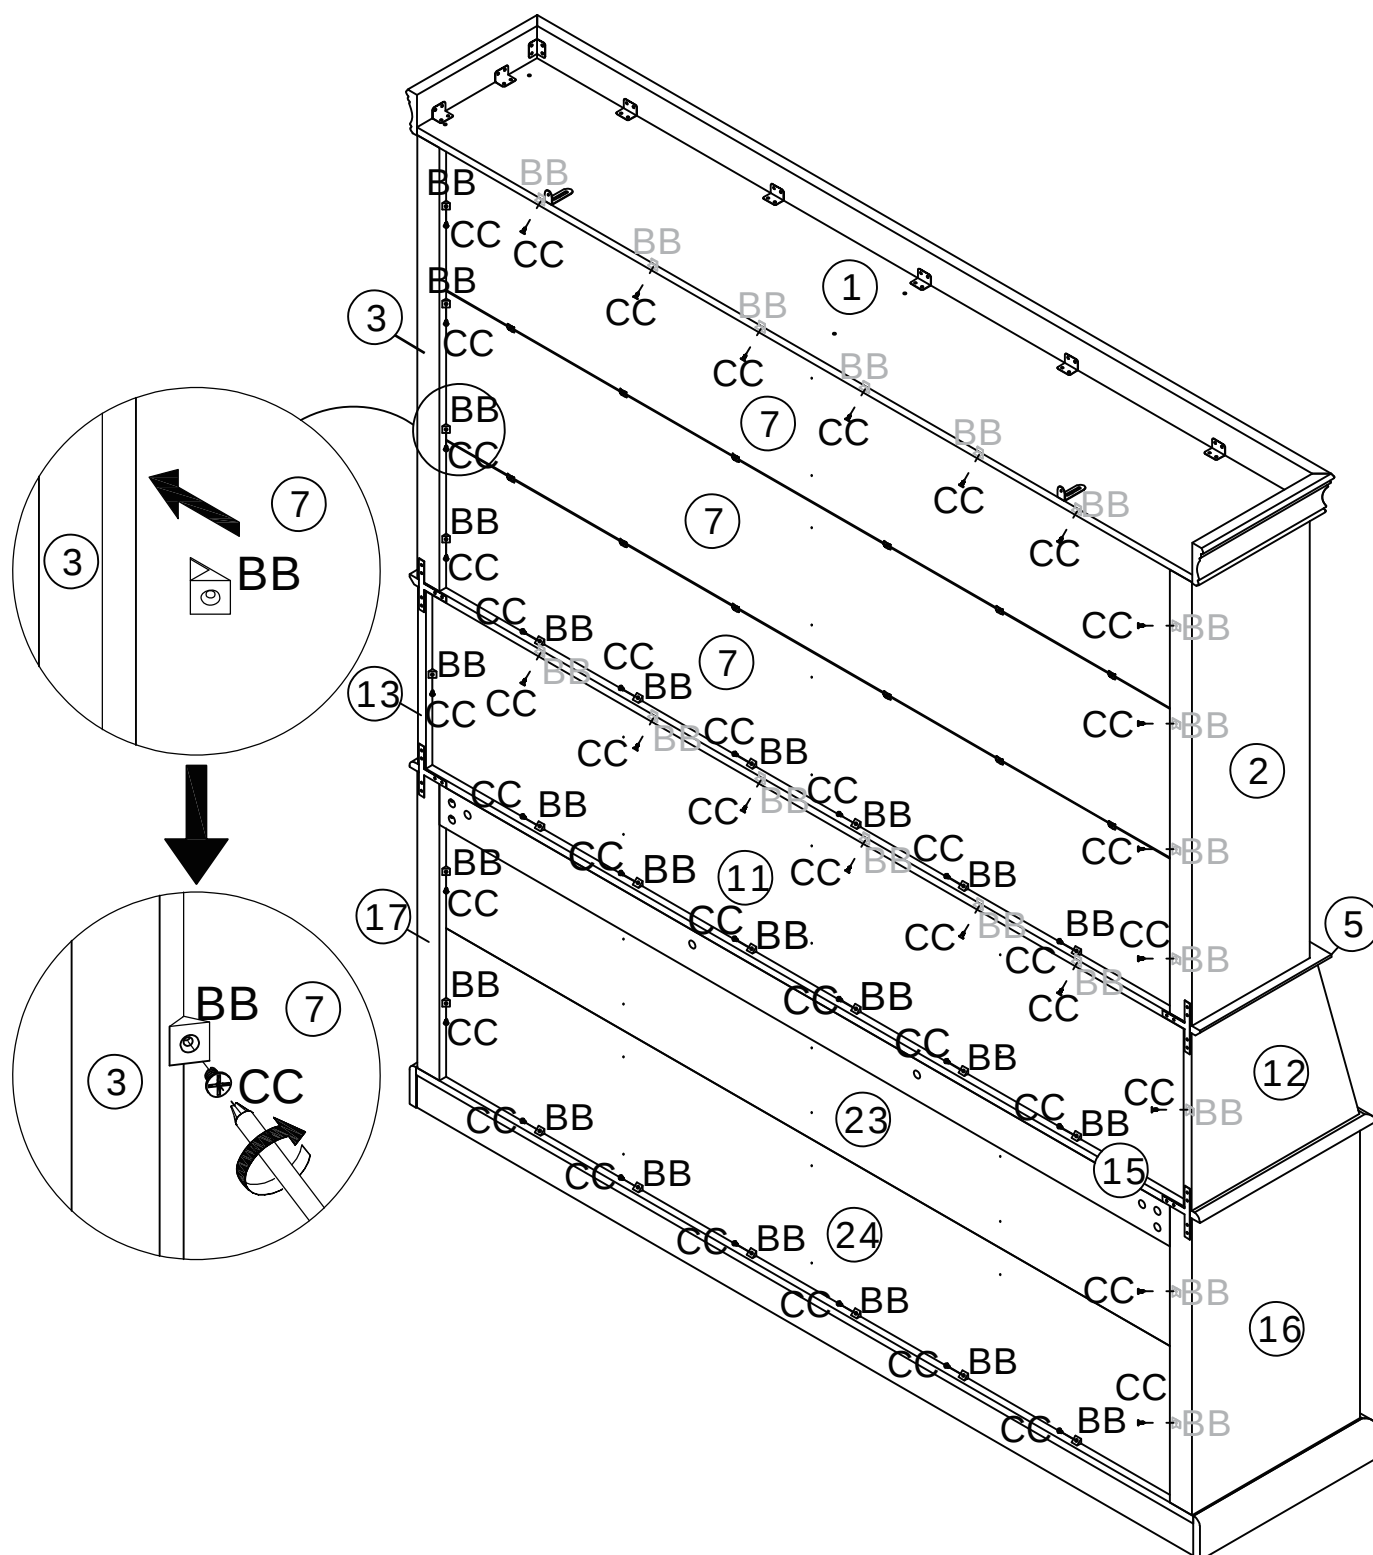


40

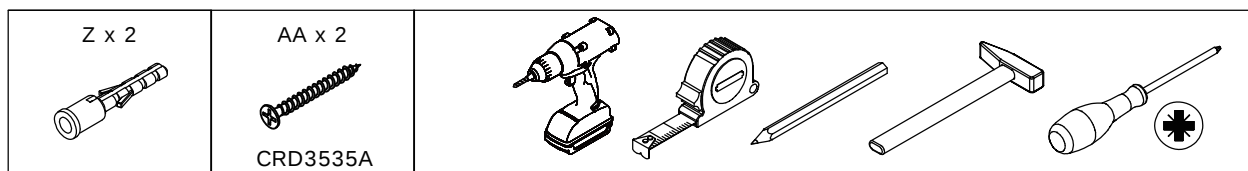 


Install the anti-tip device as shown.

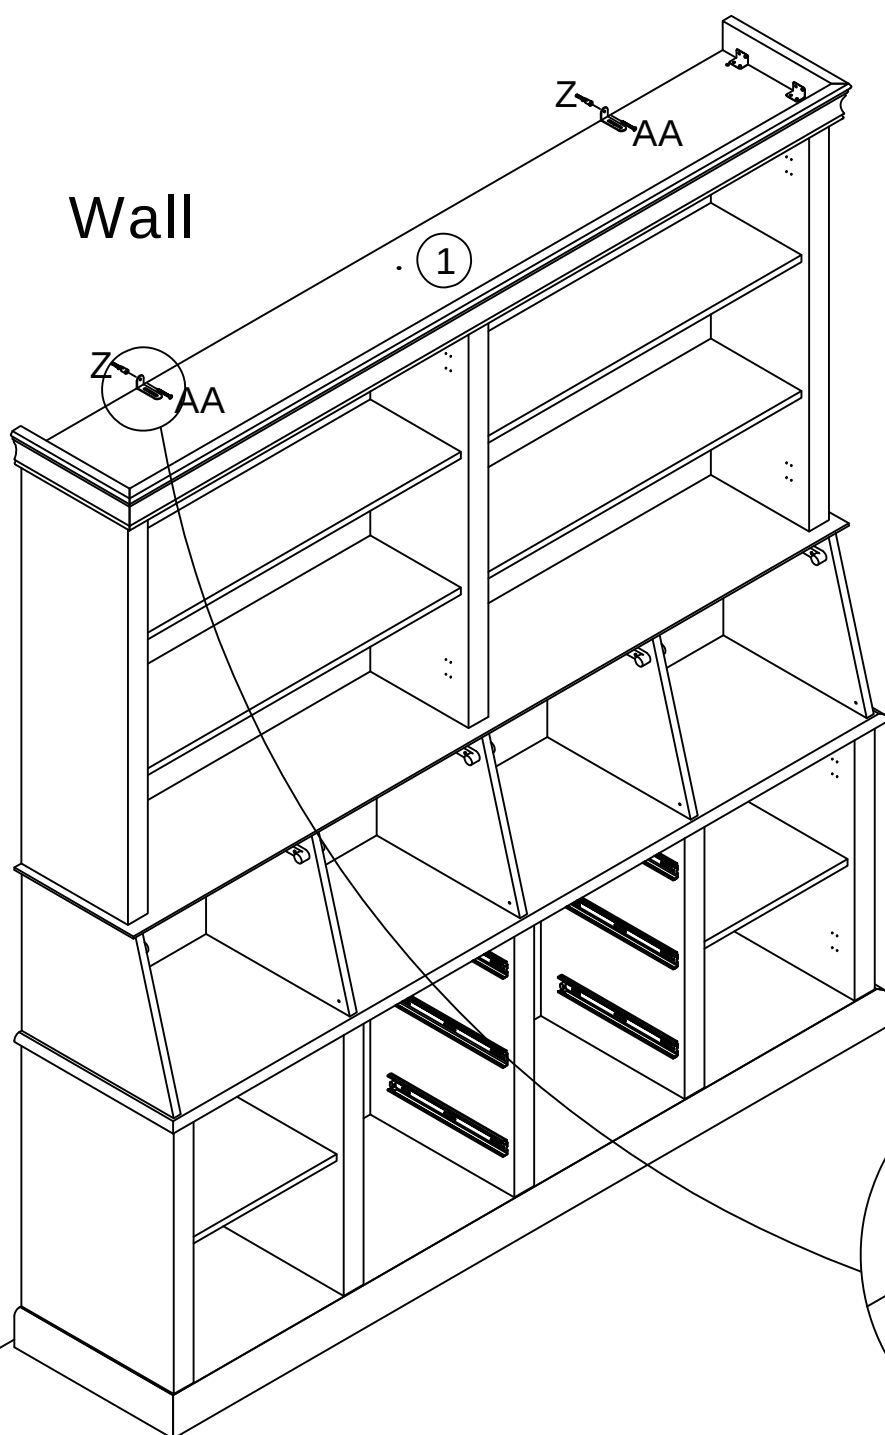 

 
1.

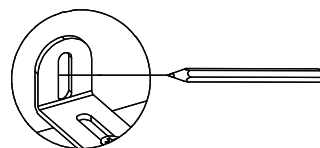


 
2.

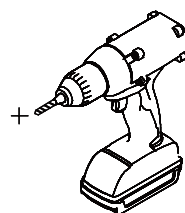

 
3.

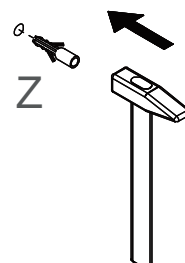


  4.

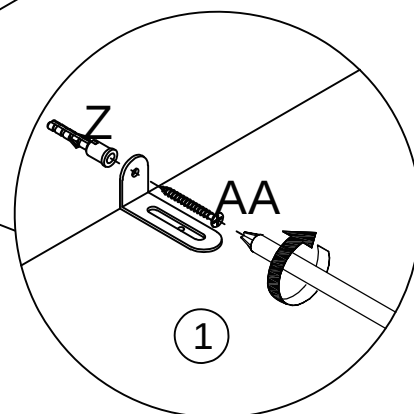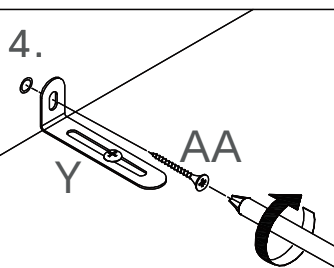


41



 
H x 8  DGA861C	L x 16  CRD3514A	
---	---	---

 	L  CRD3514A	T  CRD3512A
--	--	--

 
Secure hinge (H) to panel 38 using screw (L).

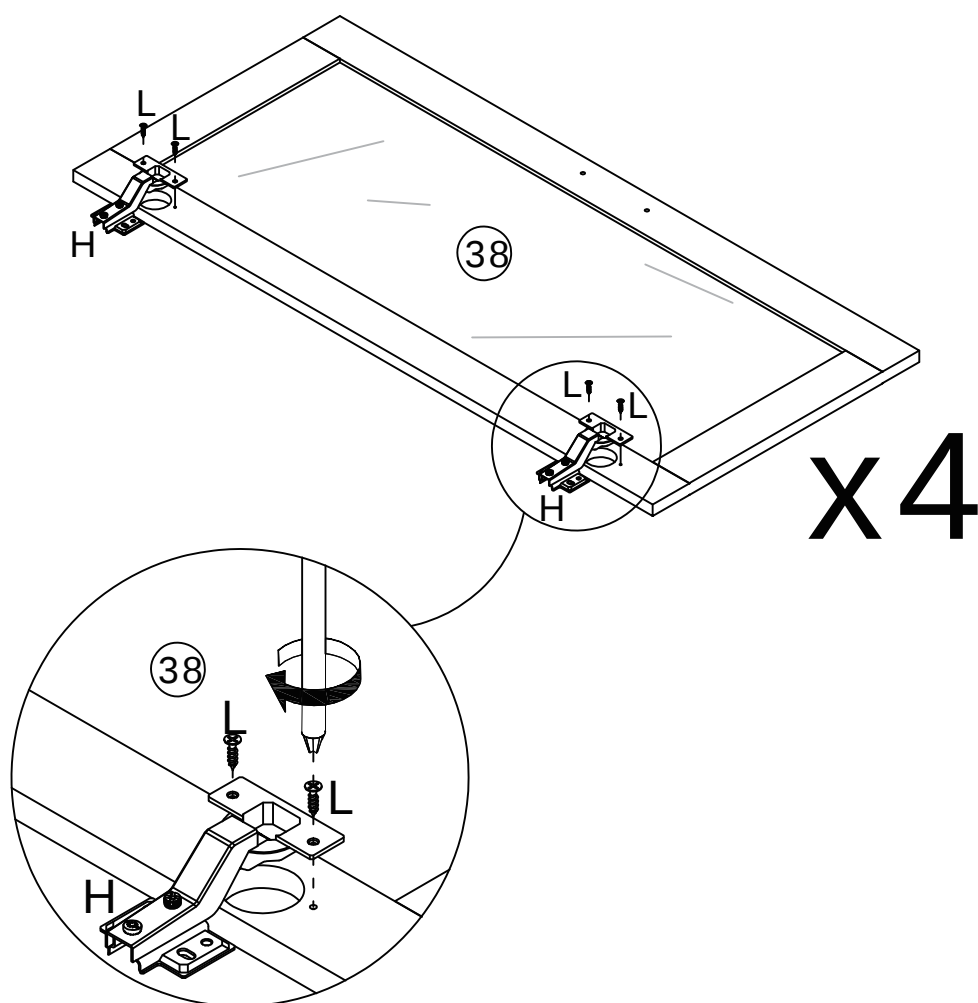

42

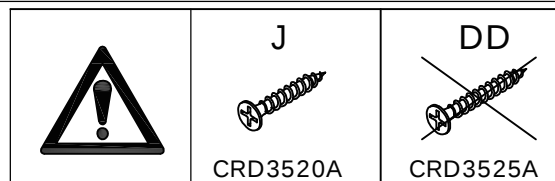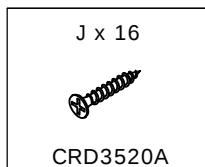   

 Secure panel 38 to panels 2 and 3 via hinges using screw (J).

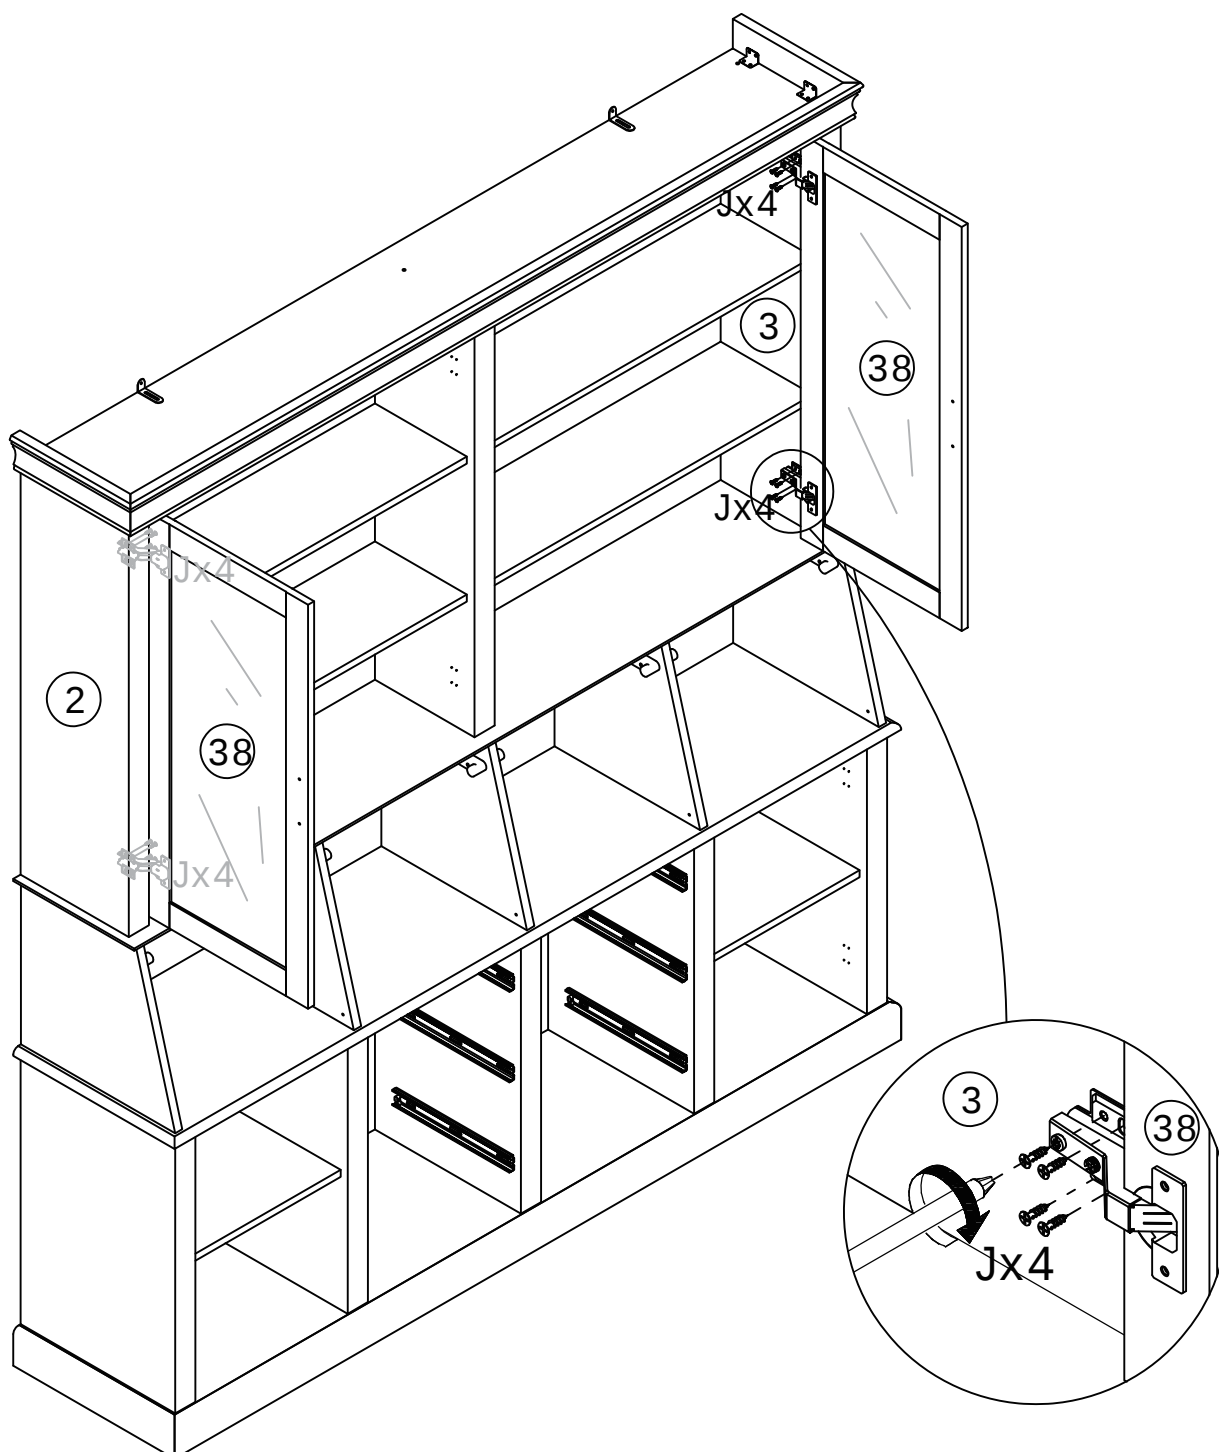

43


M x 2



P x 4



 CRE0418A




P




CRE0418A

 R






CRE0414A


 
Secure handle (M) to panel 38 using screw (P).

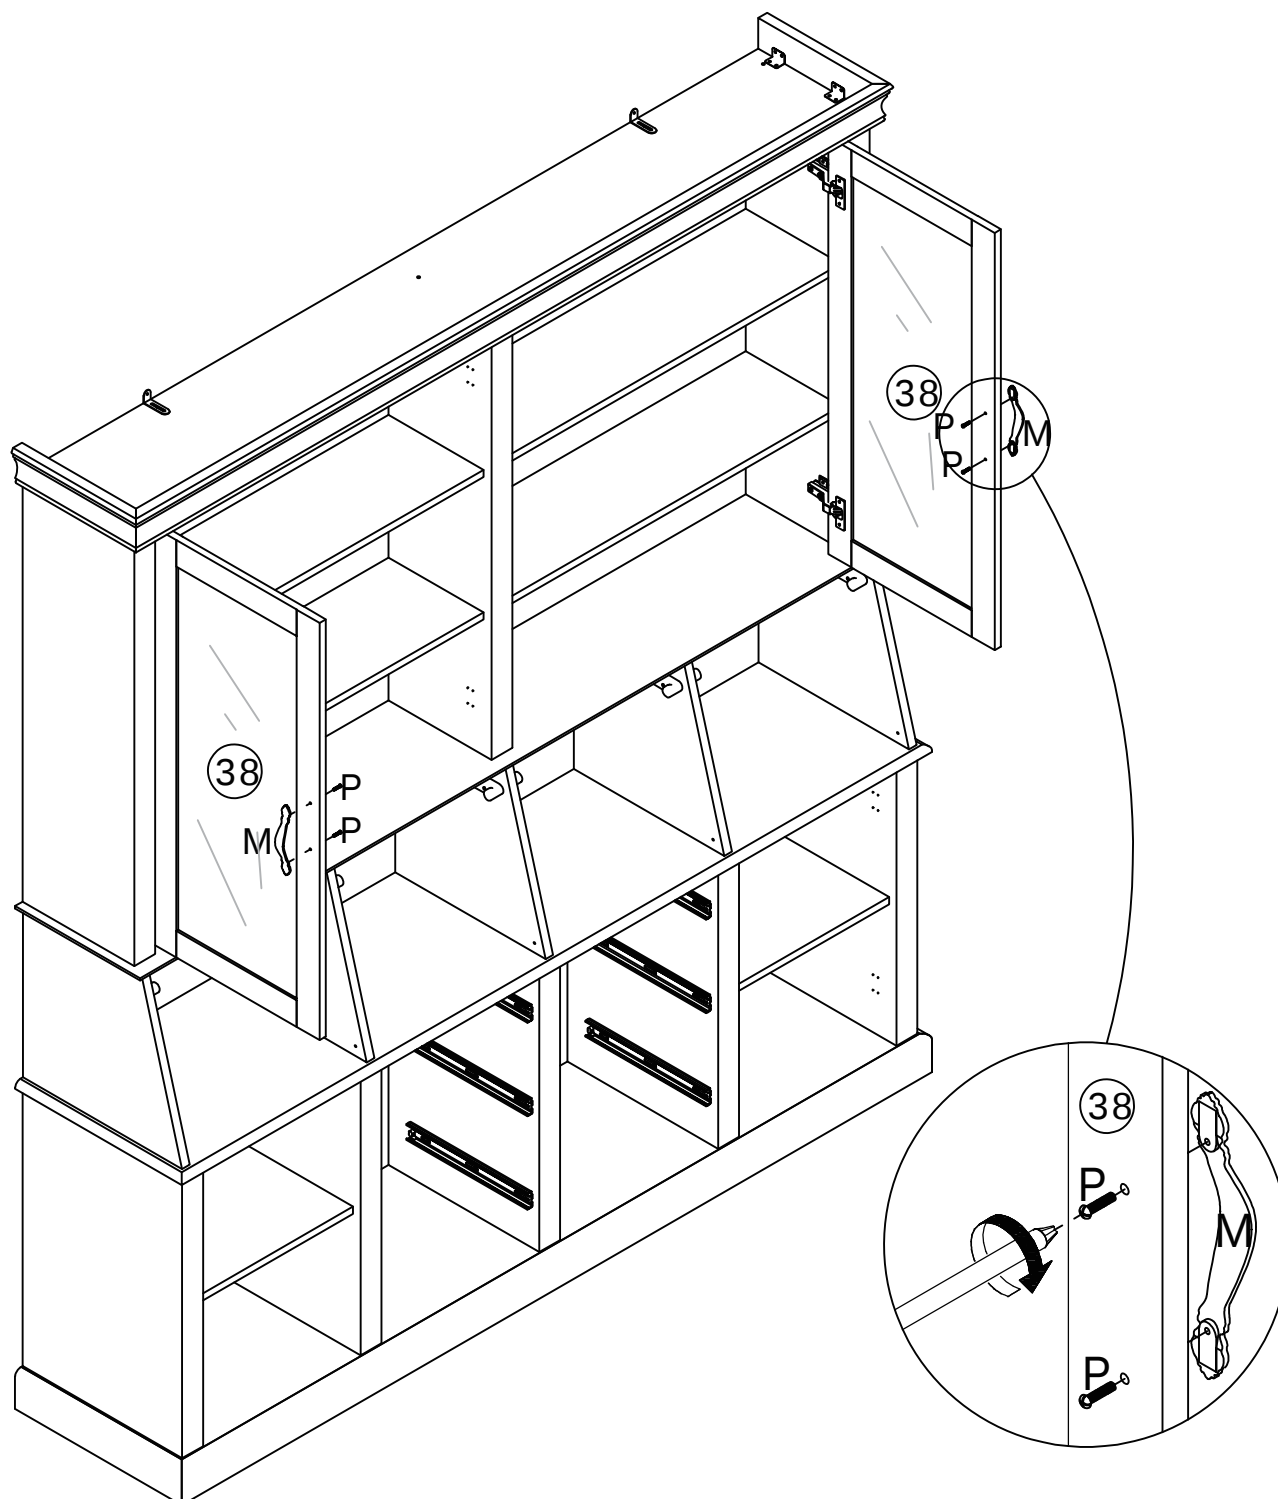

44

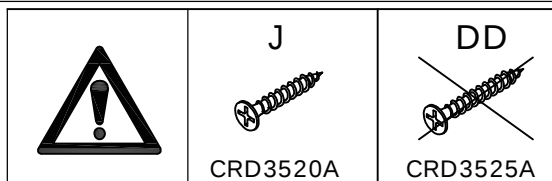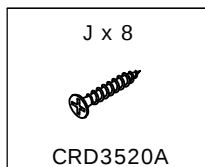   


 
 
Secure panel 38 to panel 4 via hinges using screw (J).

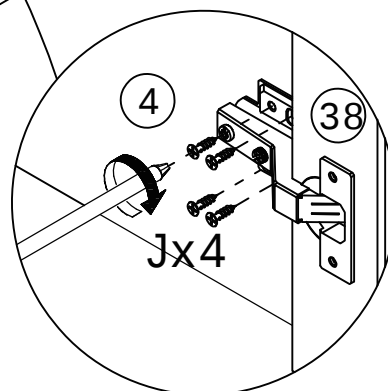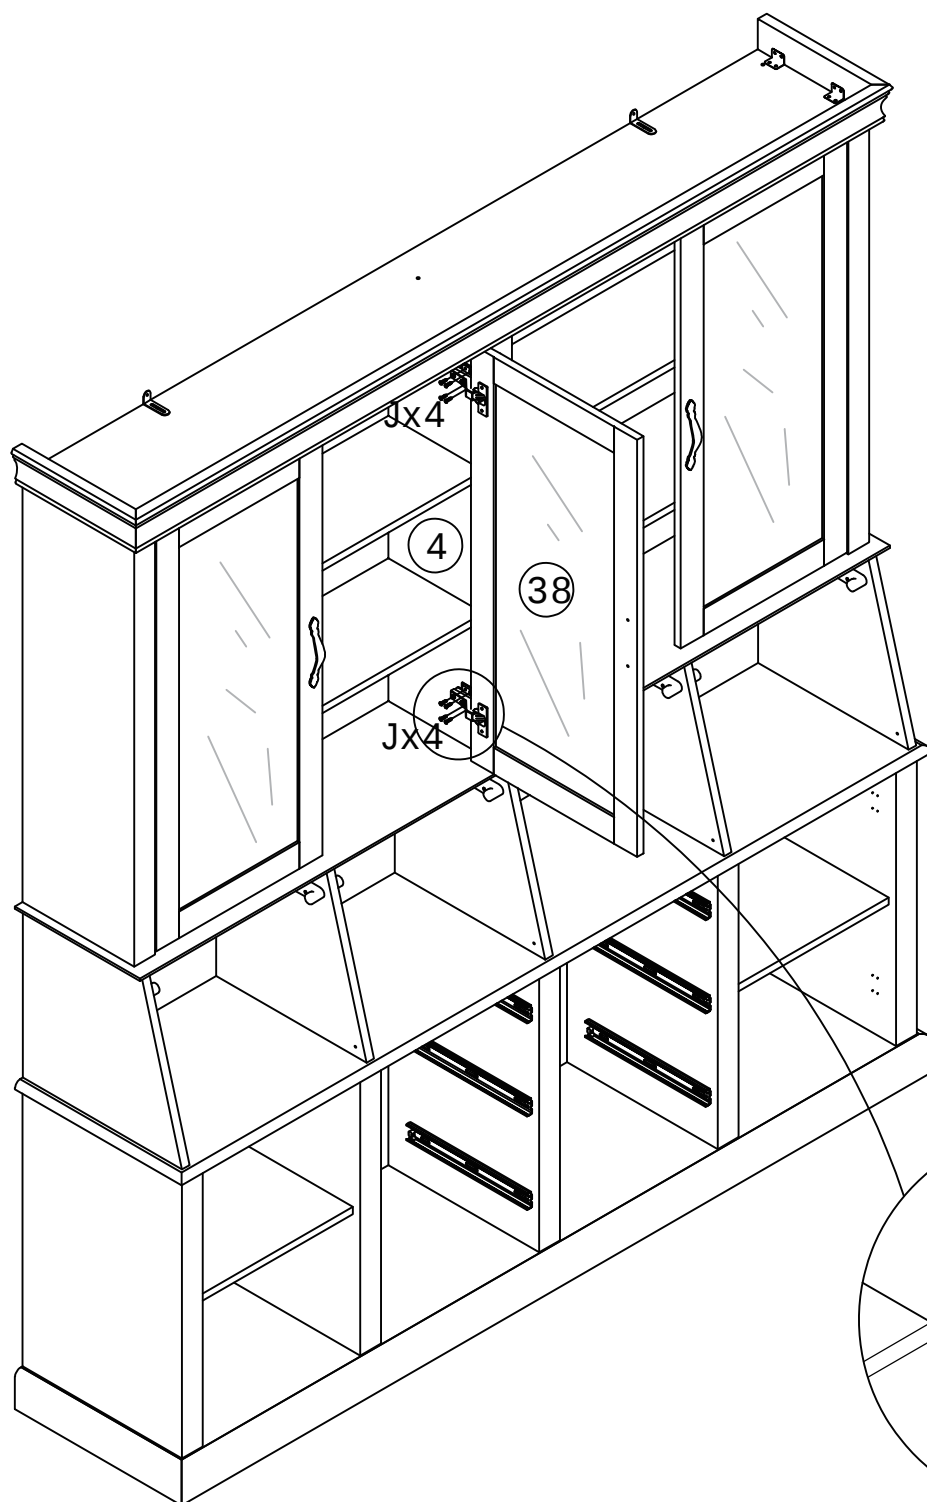




45



  
 
Secure handle (M) to panel 38 using screw (P).

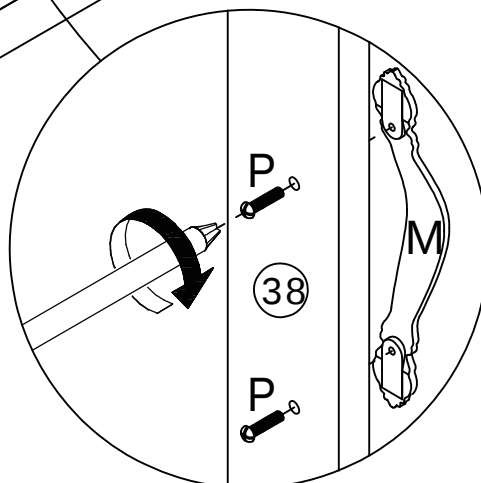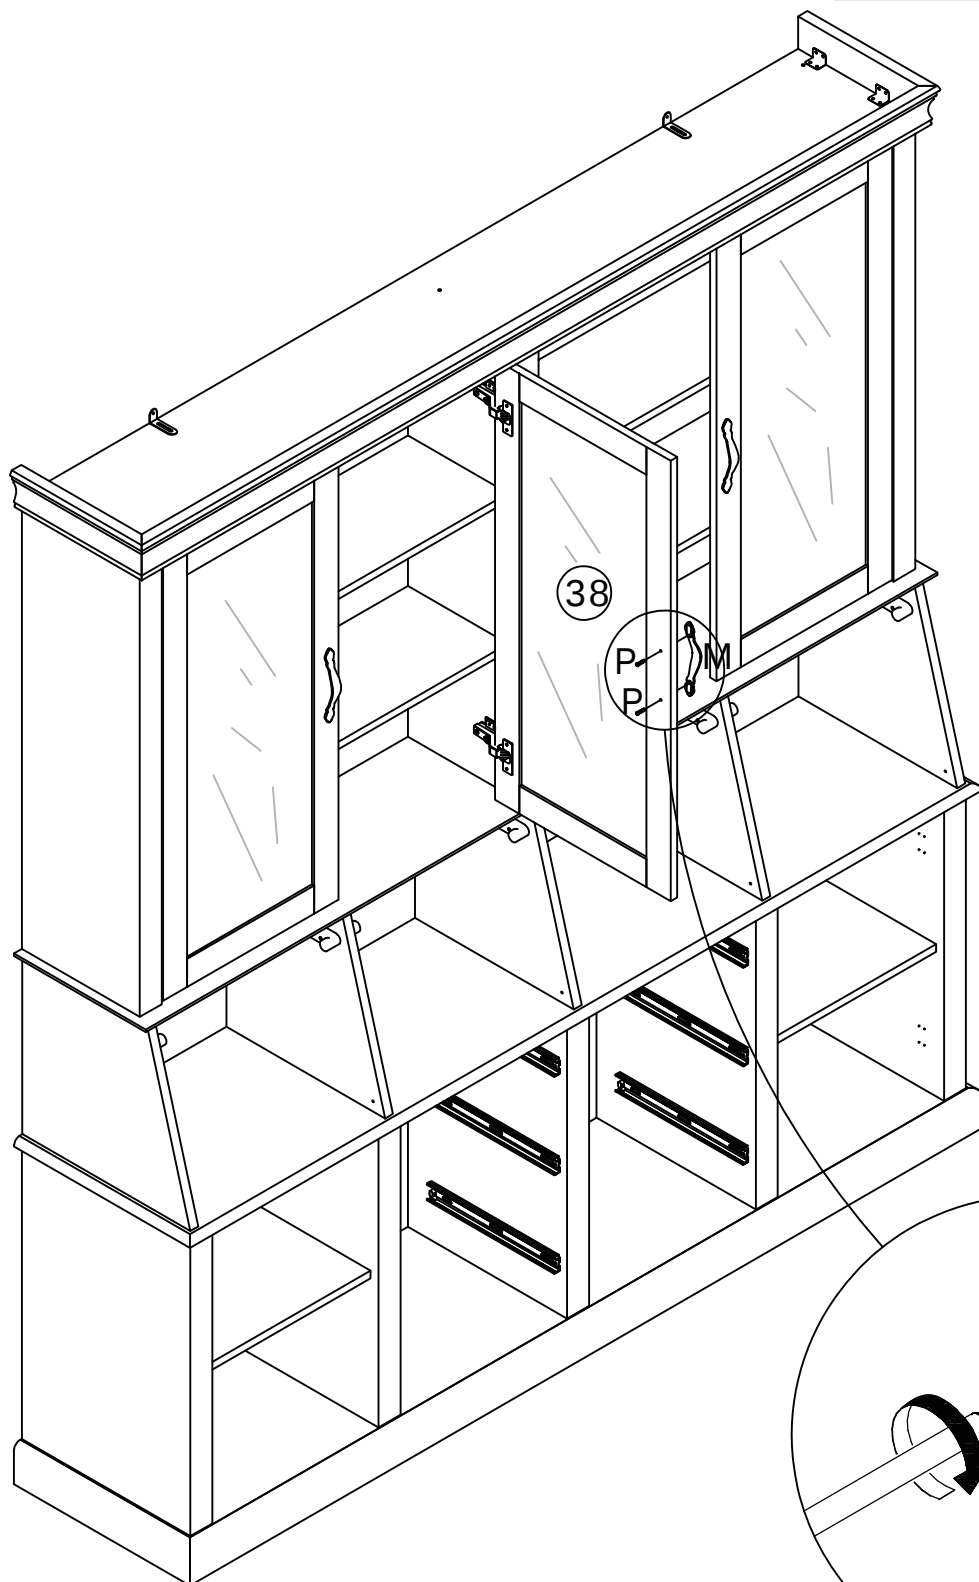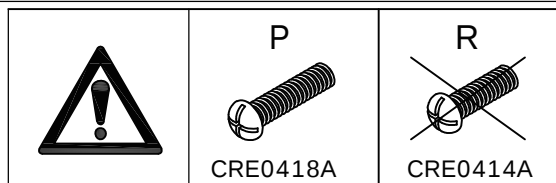


46

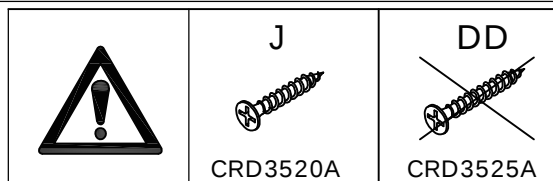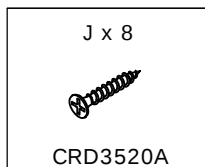   

 
 
Secure panel 38 to panel 4 via hinges using screw (J).

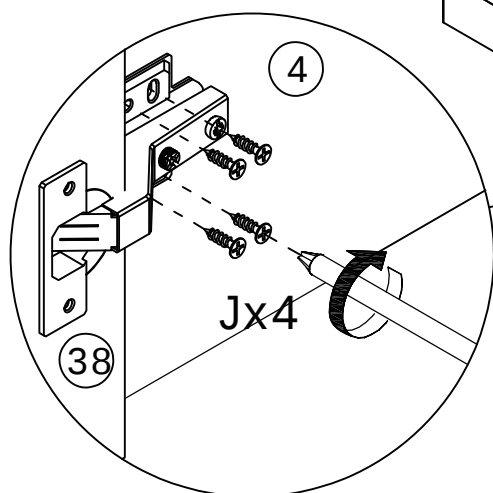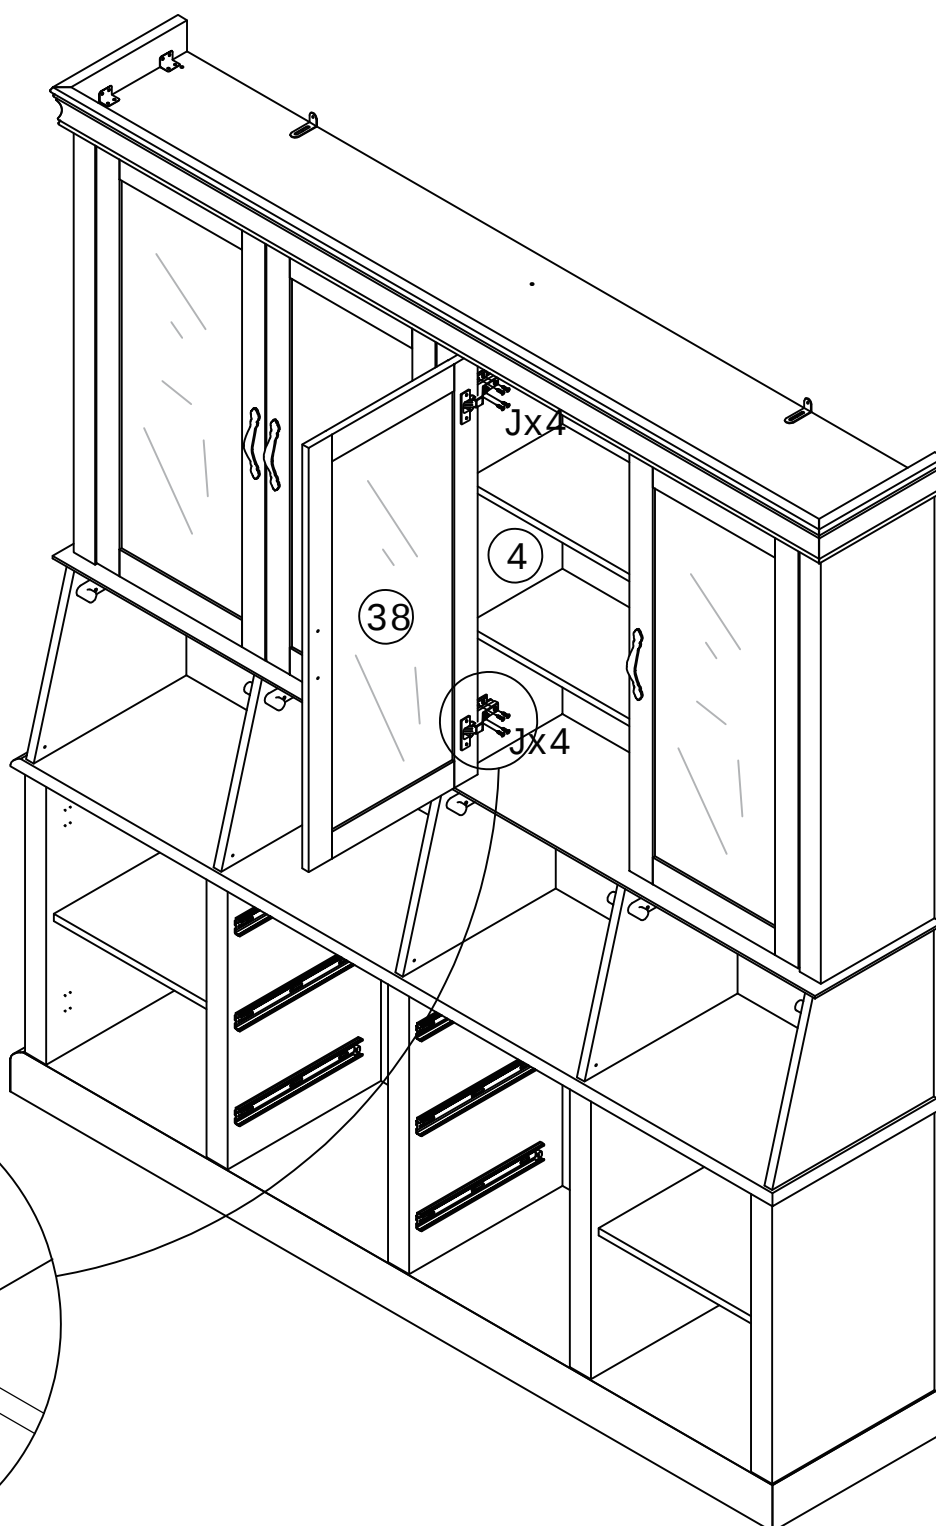

47

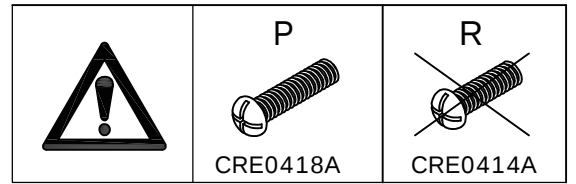 

  Secure handle (M) to panel 38 using screw (P).

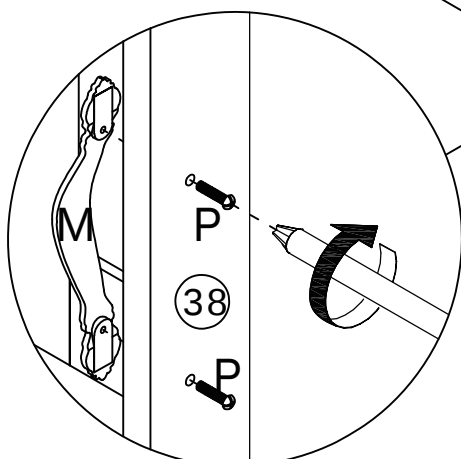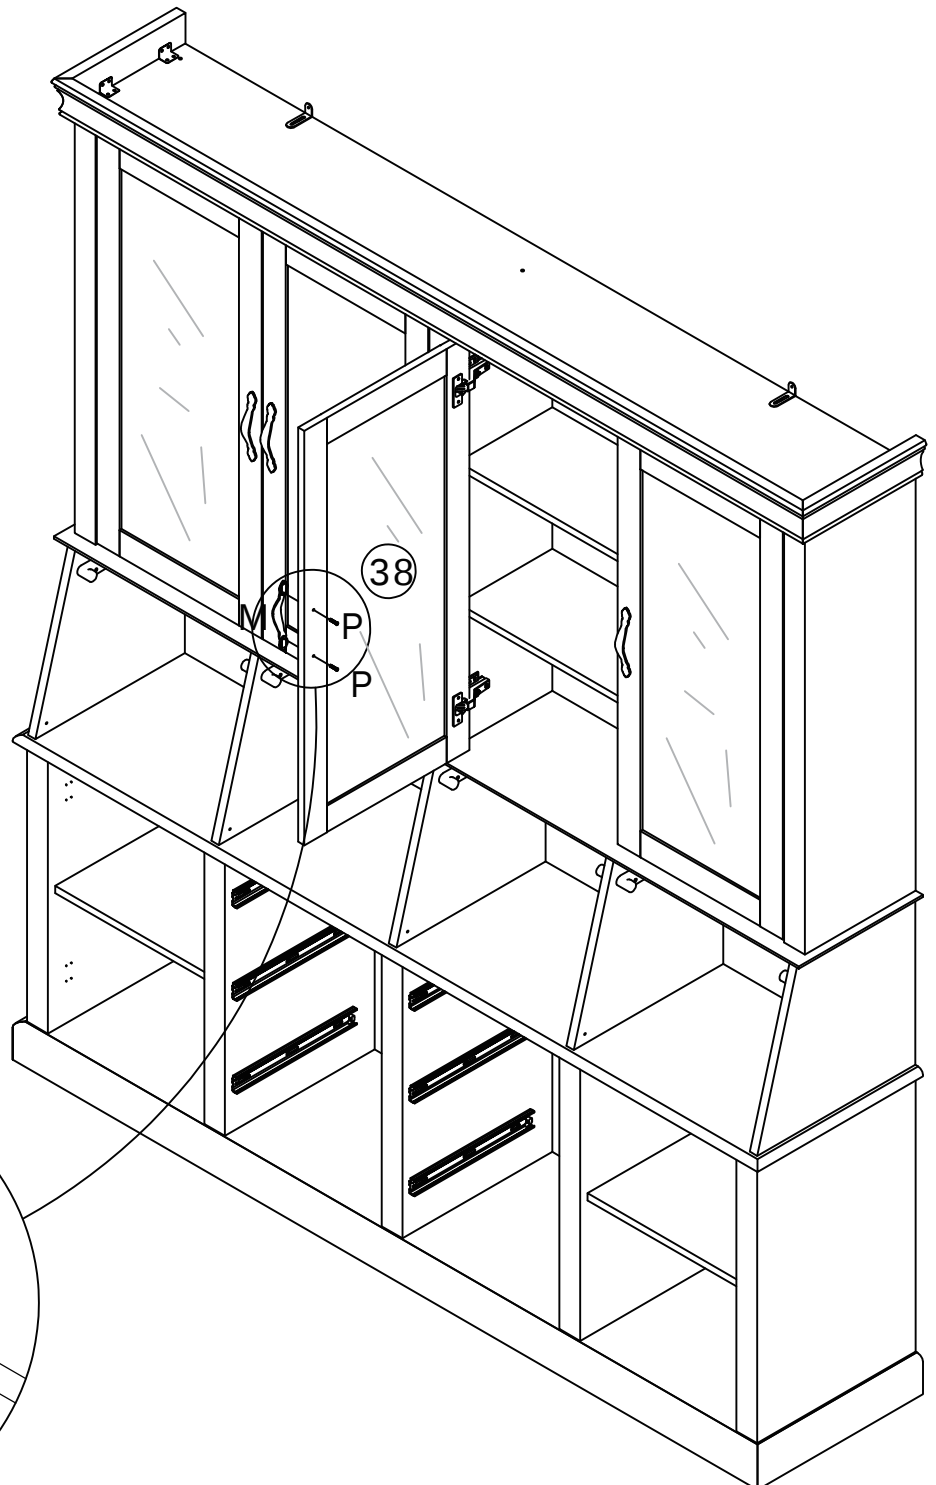


48

L x 16



 U x 8




L




CRD3514A

 T



CRD3512A

 Secure part (U-2) to panels 40 and 41 using screw (L).

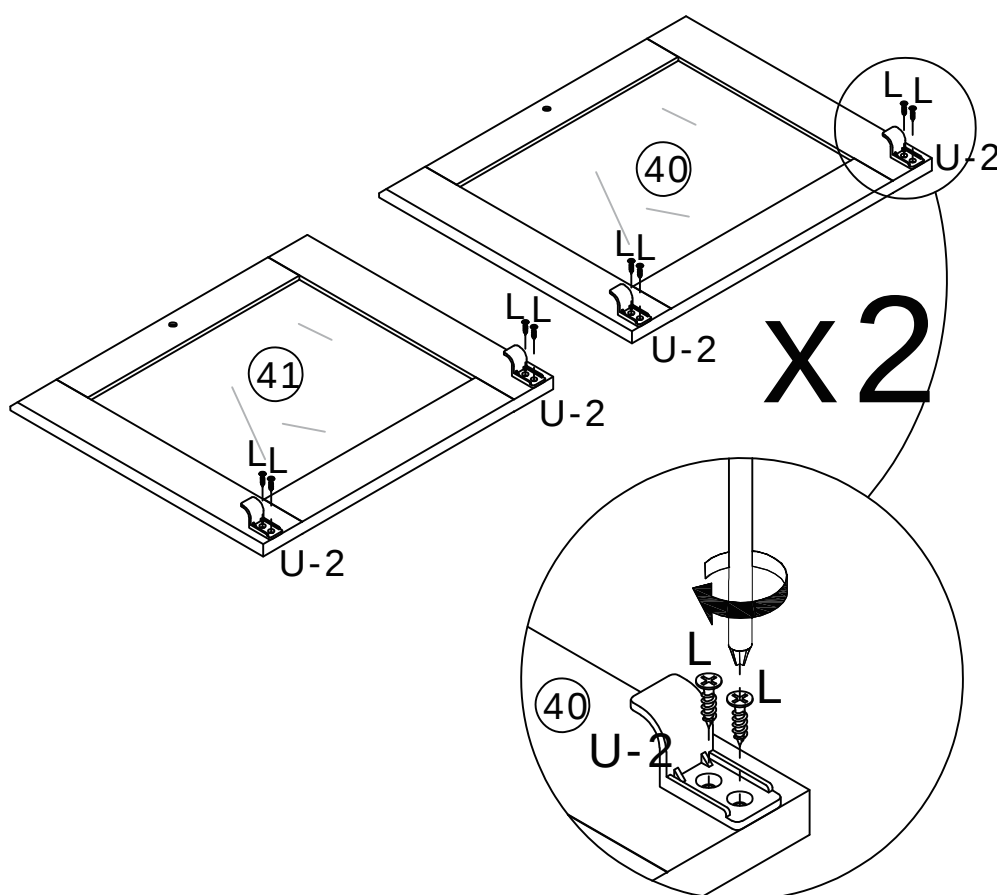


49






G x 8



 
Install pin (G) onto panels 12, 13, and 14.

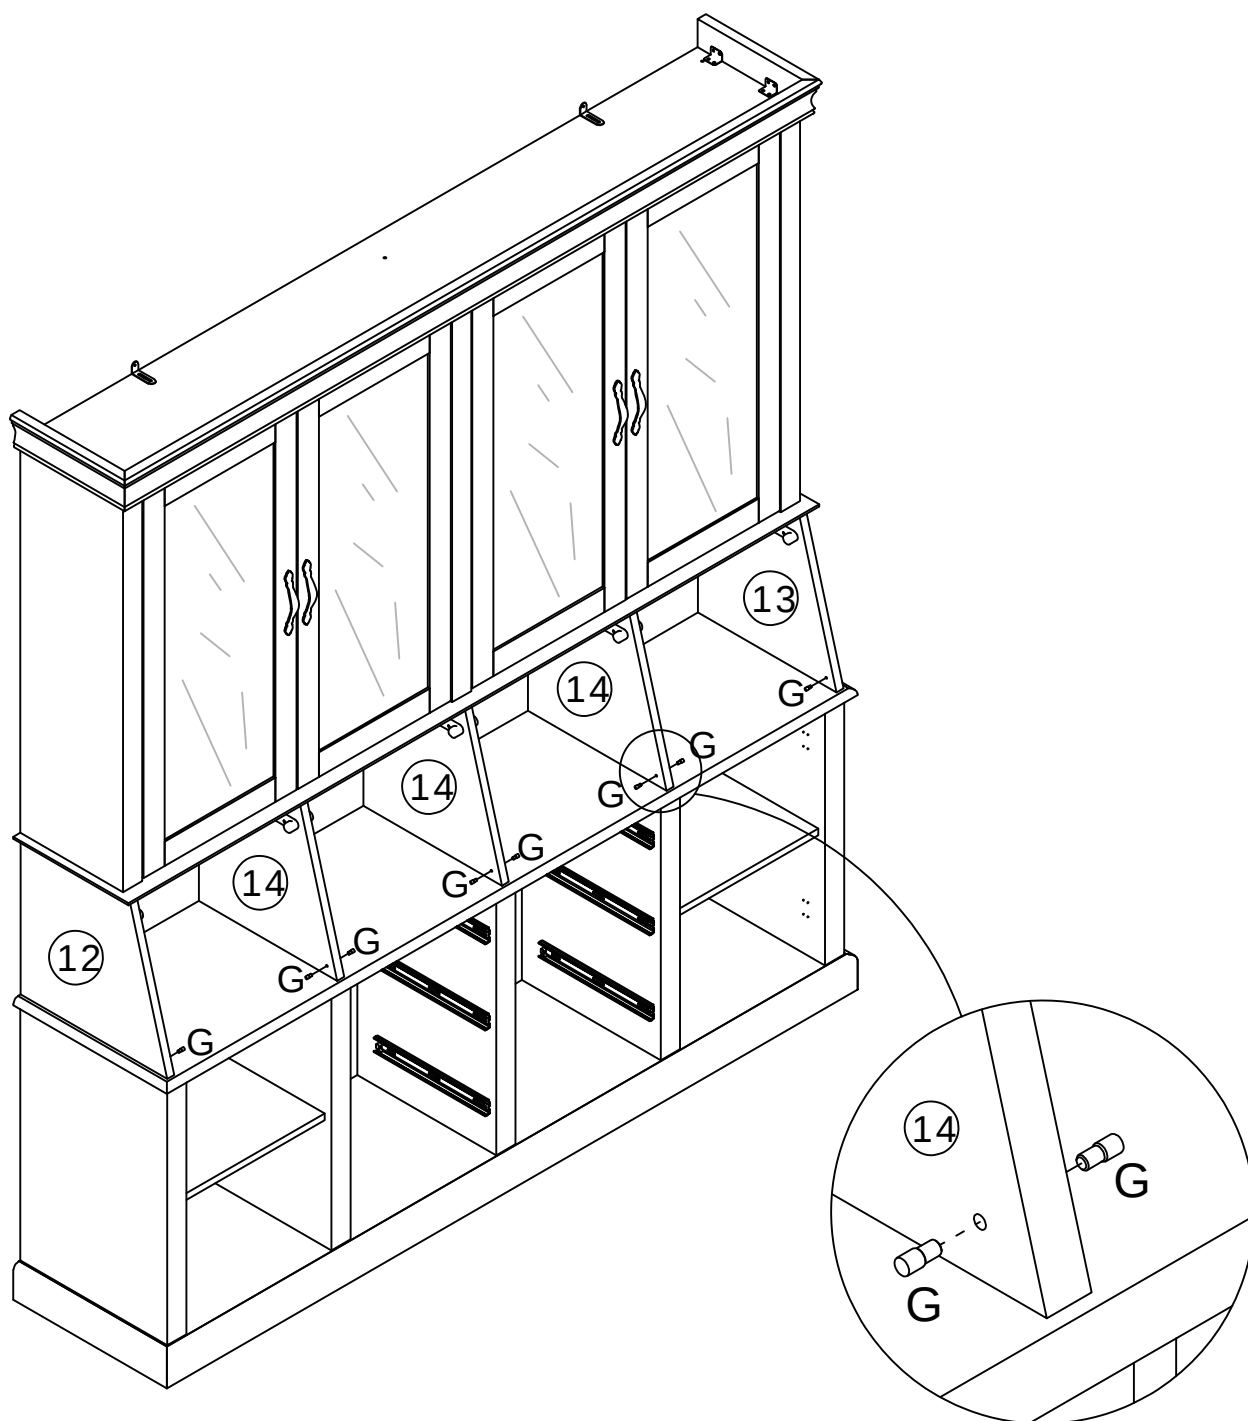

     
As shown in the figure, install panels 40 and 41.

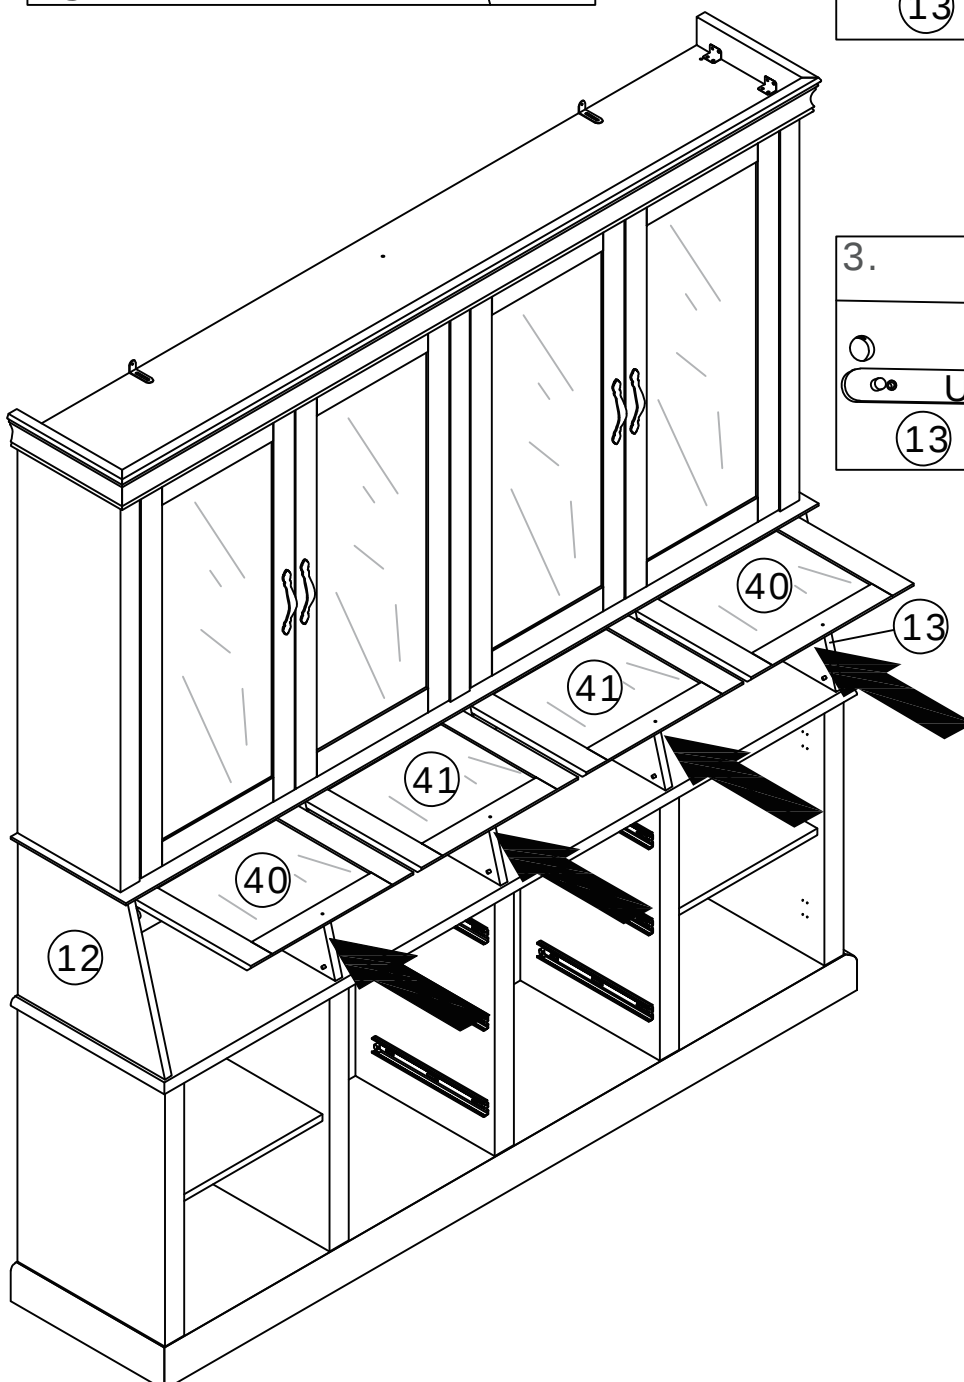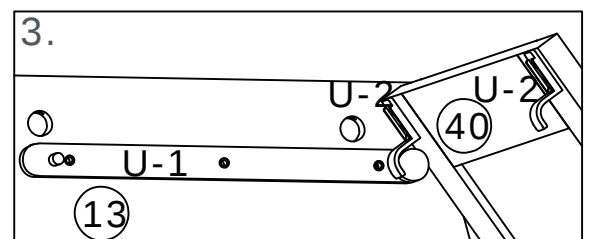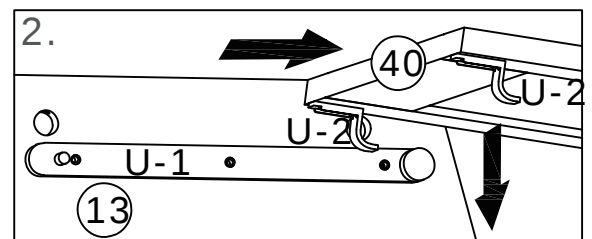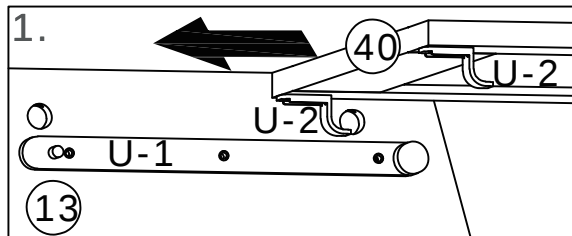





51

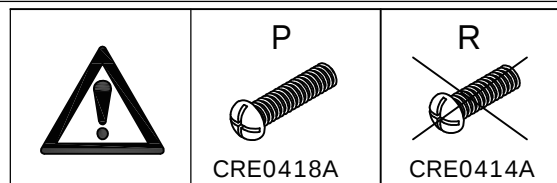 

 
Secure knob (N) to panels 40 and 41 using screw (P).

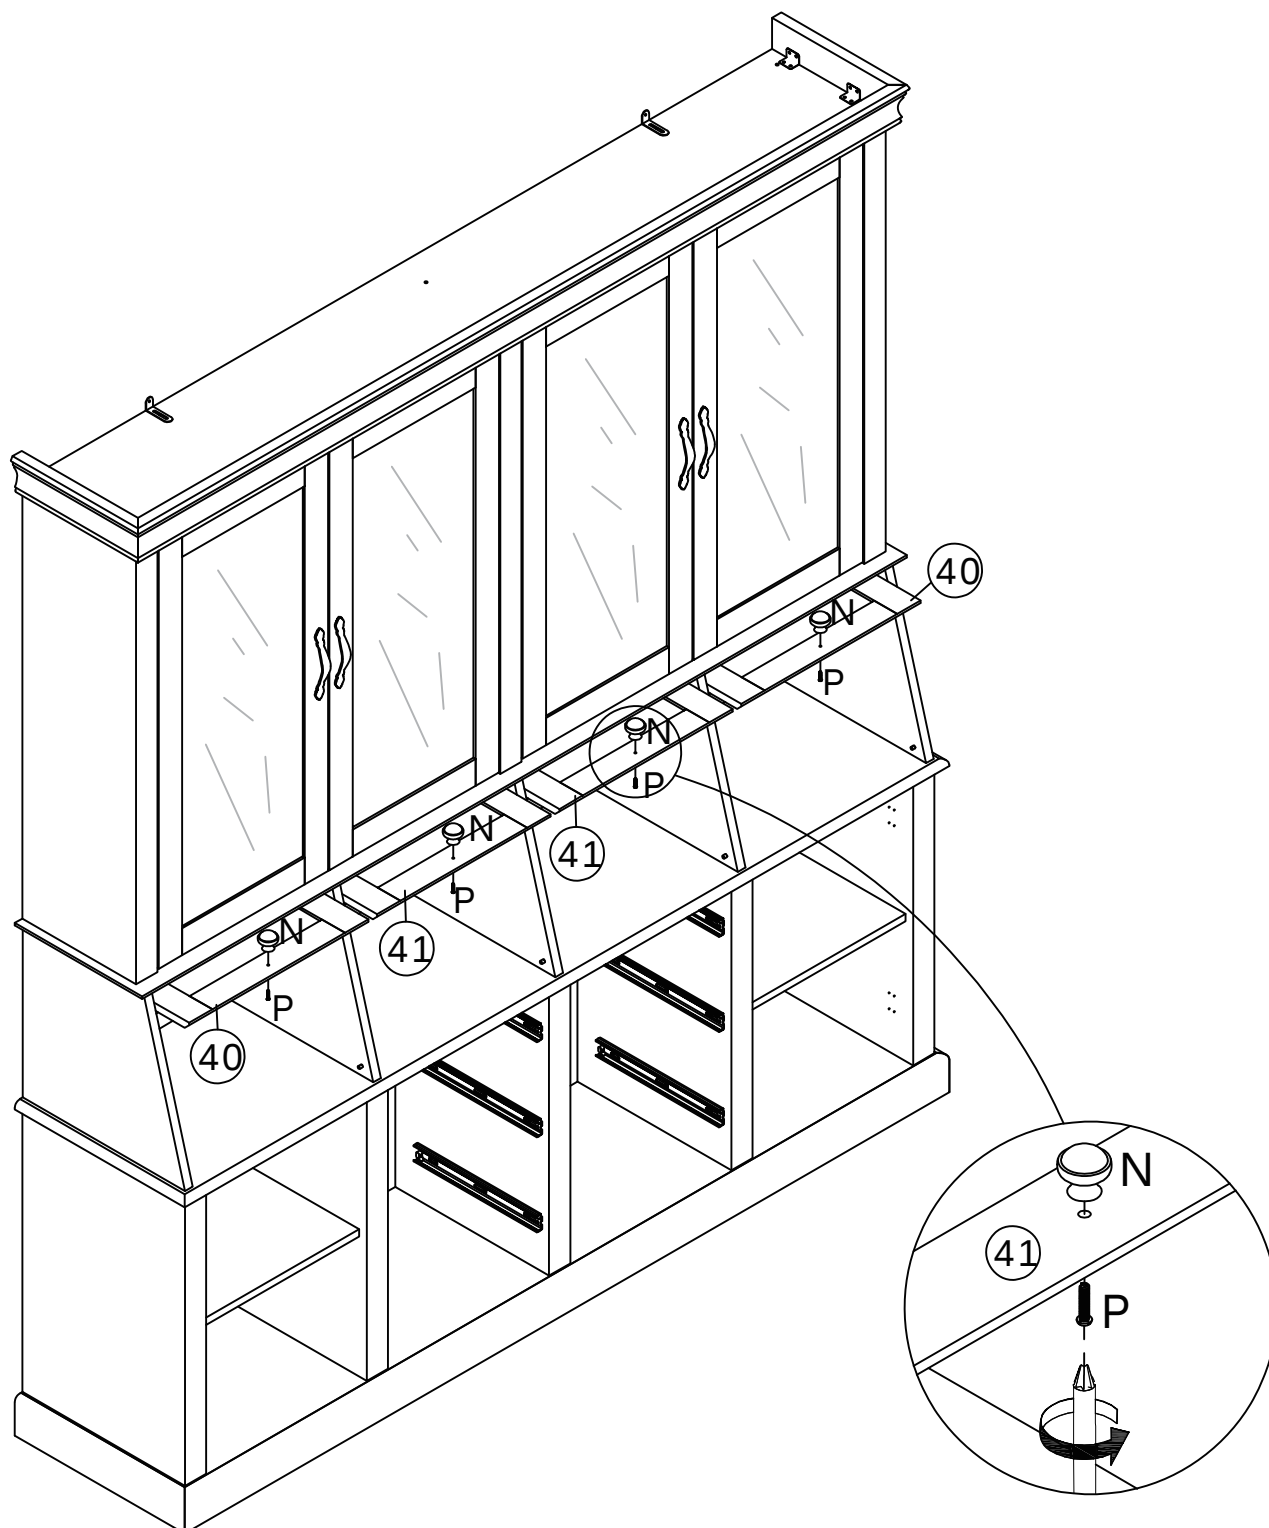


    As shown in the figure, close the door panel.

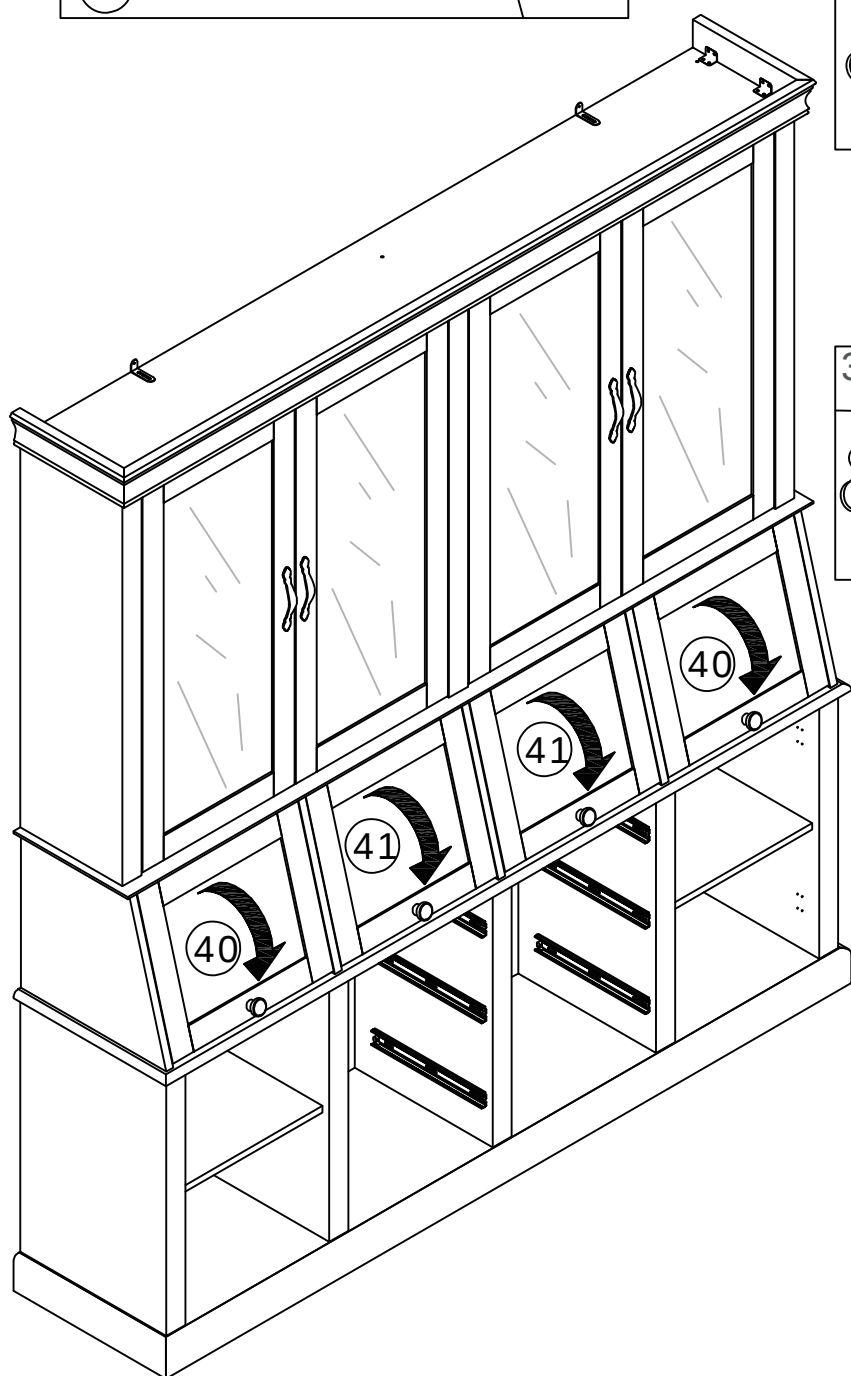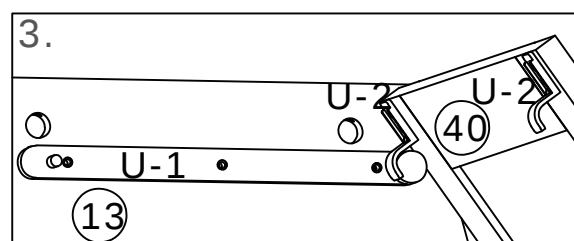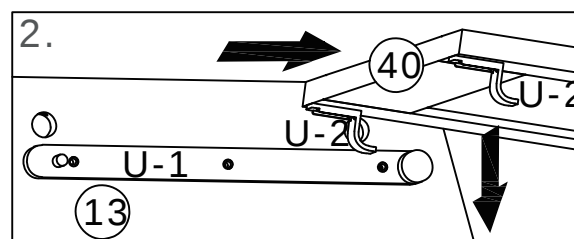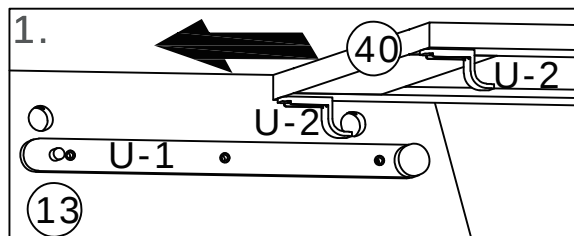


53



 
H x 4  DGA861C	L x 8  CRD3514A	
---	--	---

 	L  CRD3514A	T  CRD3512A
--	--	--

 
Secure hinge (H) to panel 39 using screw (L).

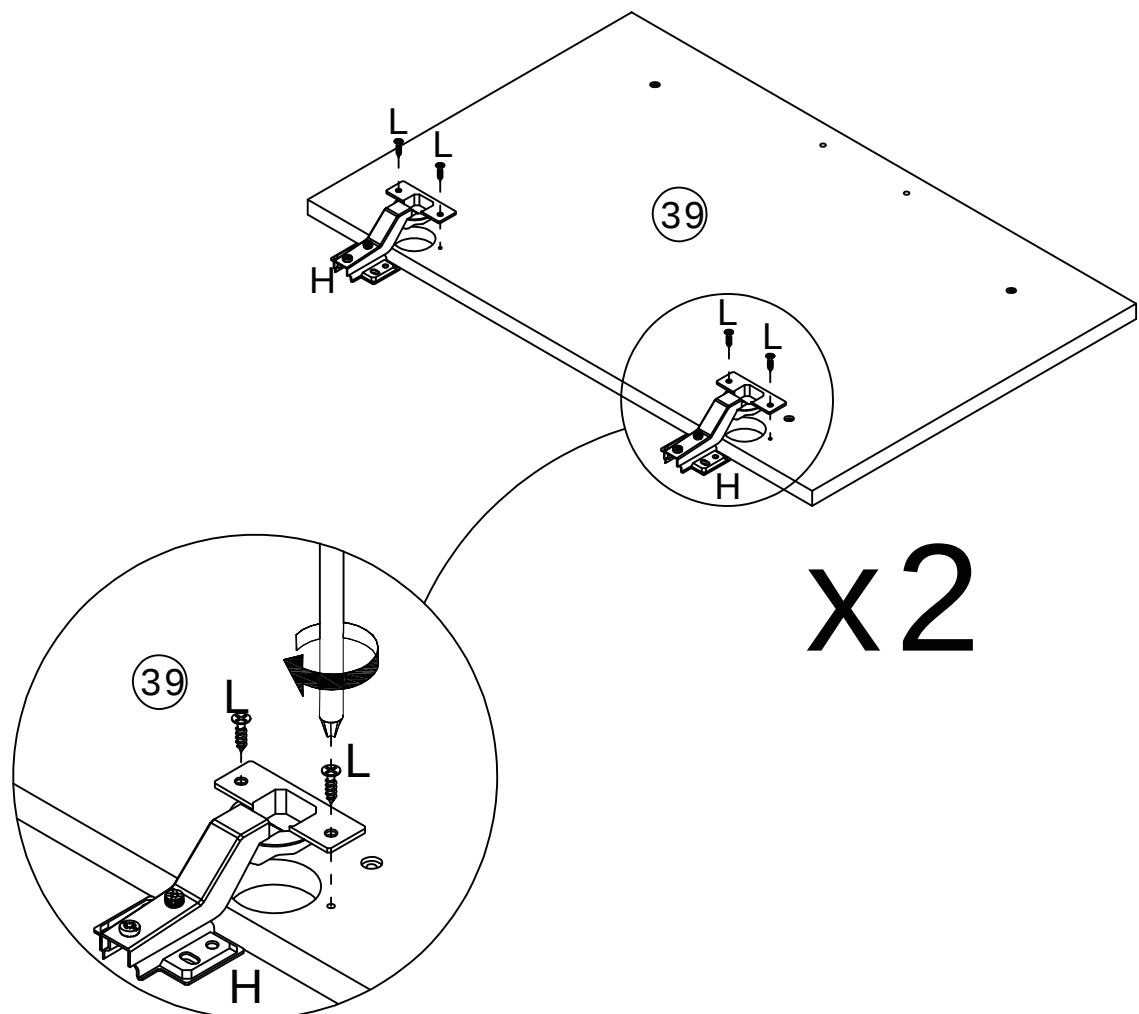


54

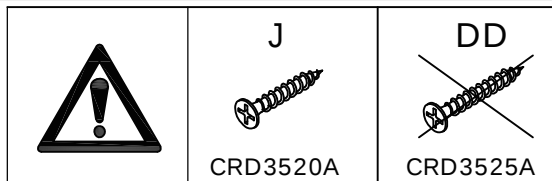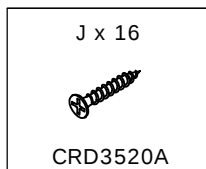   

 
Secure panel 39 to panels 16 and 17 via hinges using screw (J).

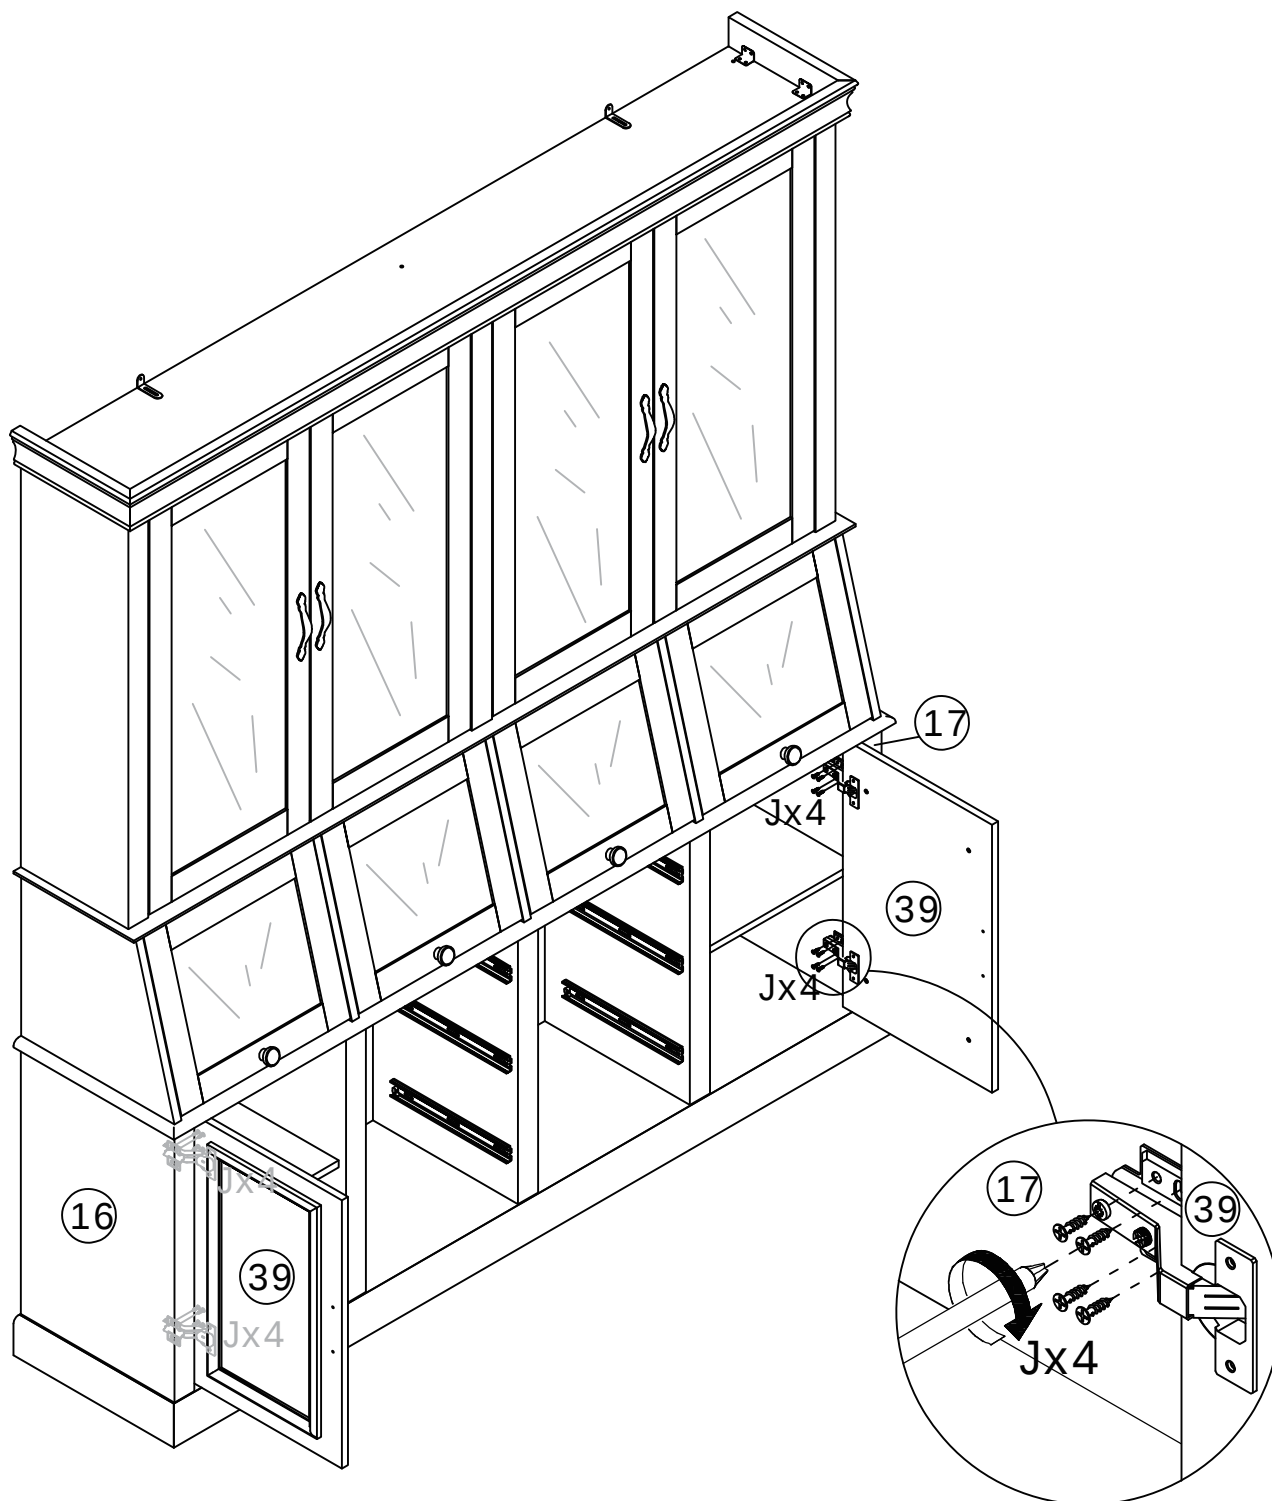


55

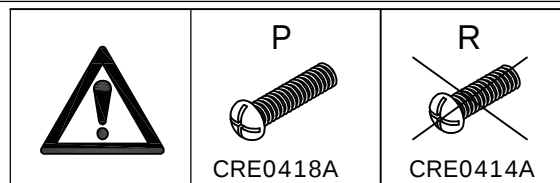 

 
Secure handle (M) to panel 39 using screw (P).

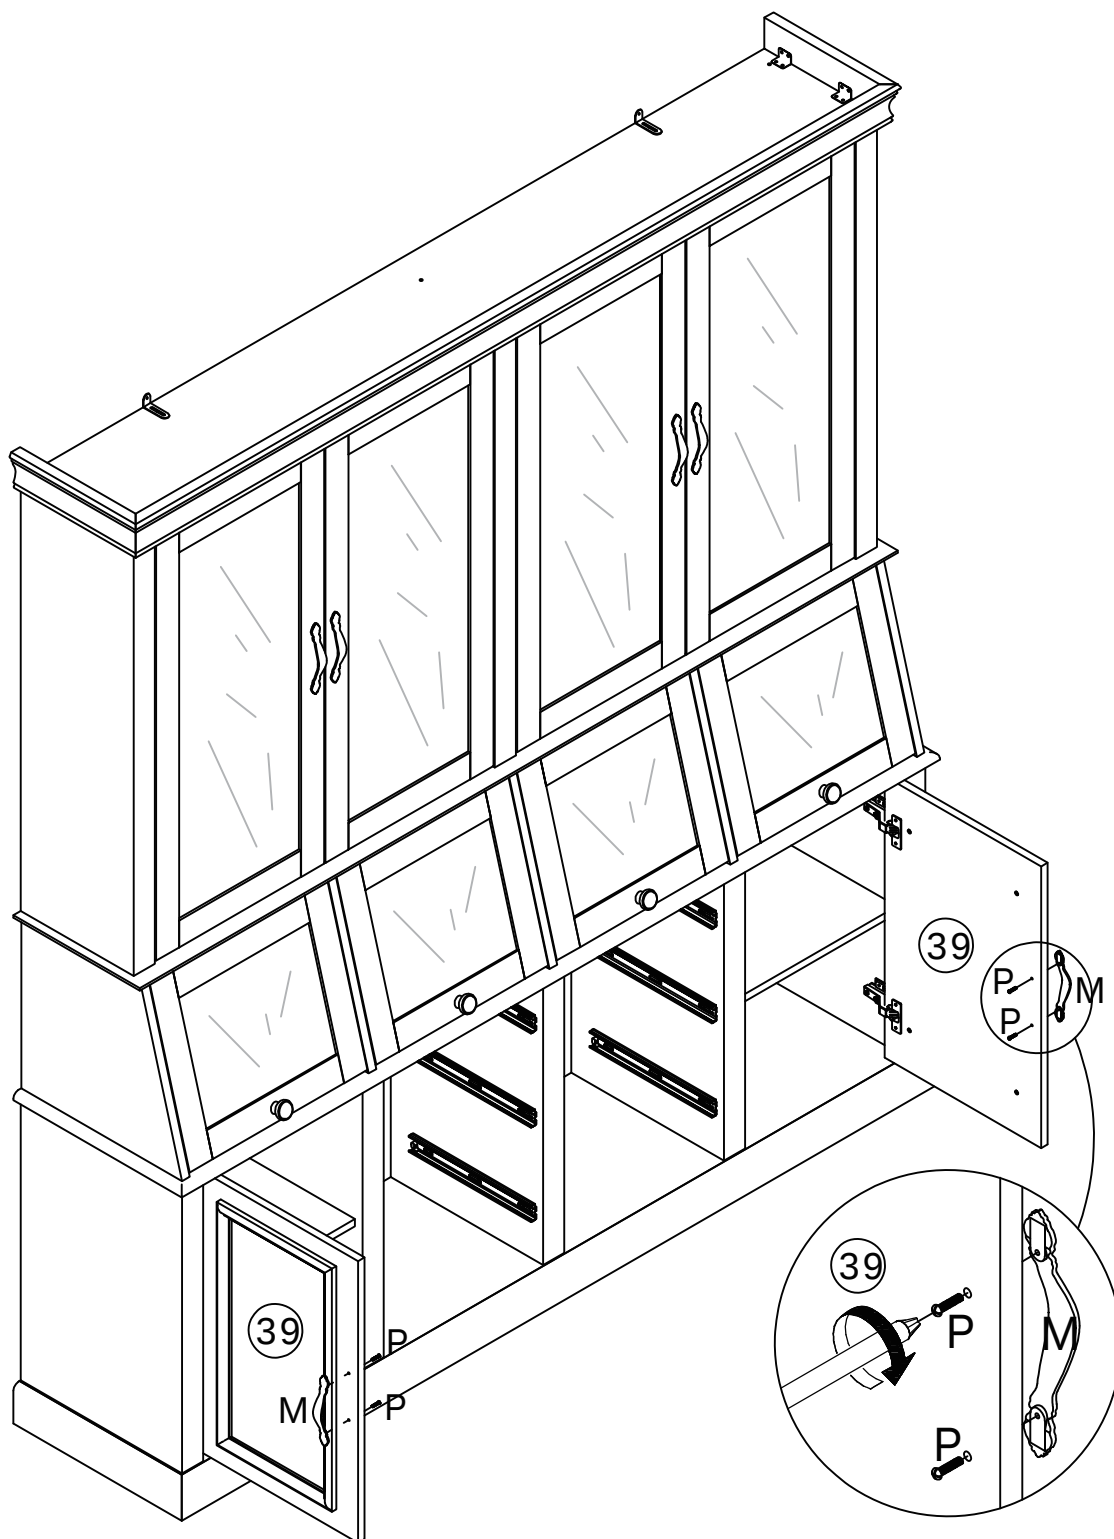



56

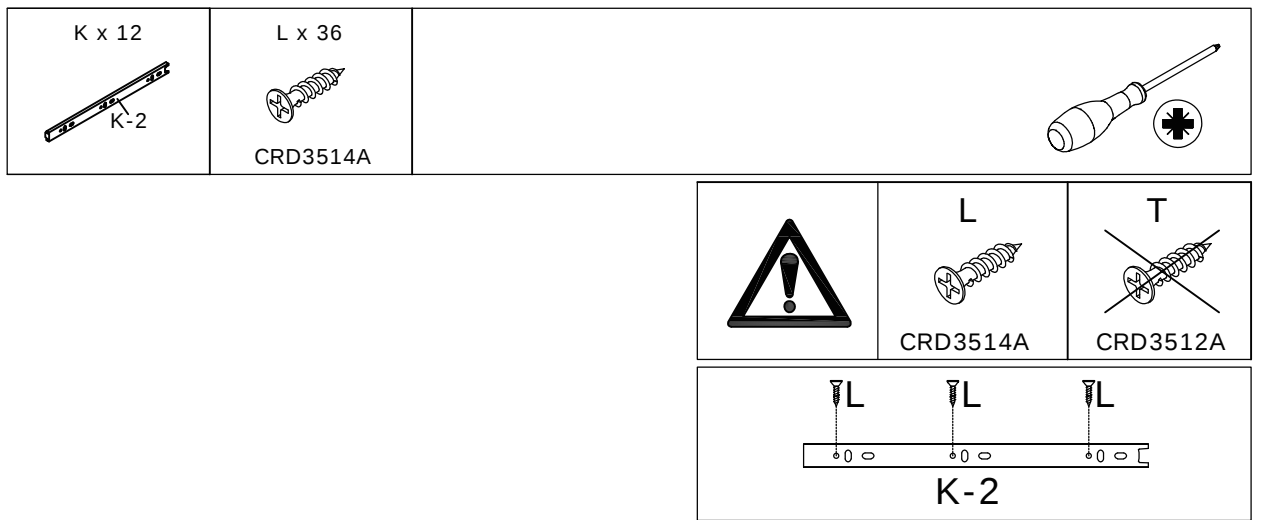 



 
Secure slide rail (K-2) to panels 33 and 34 using screw (L).

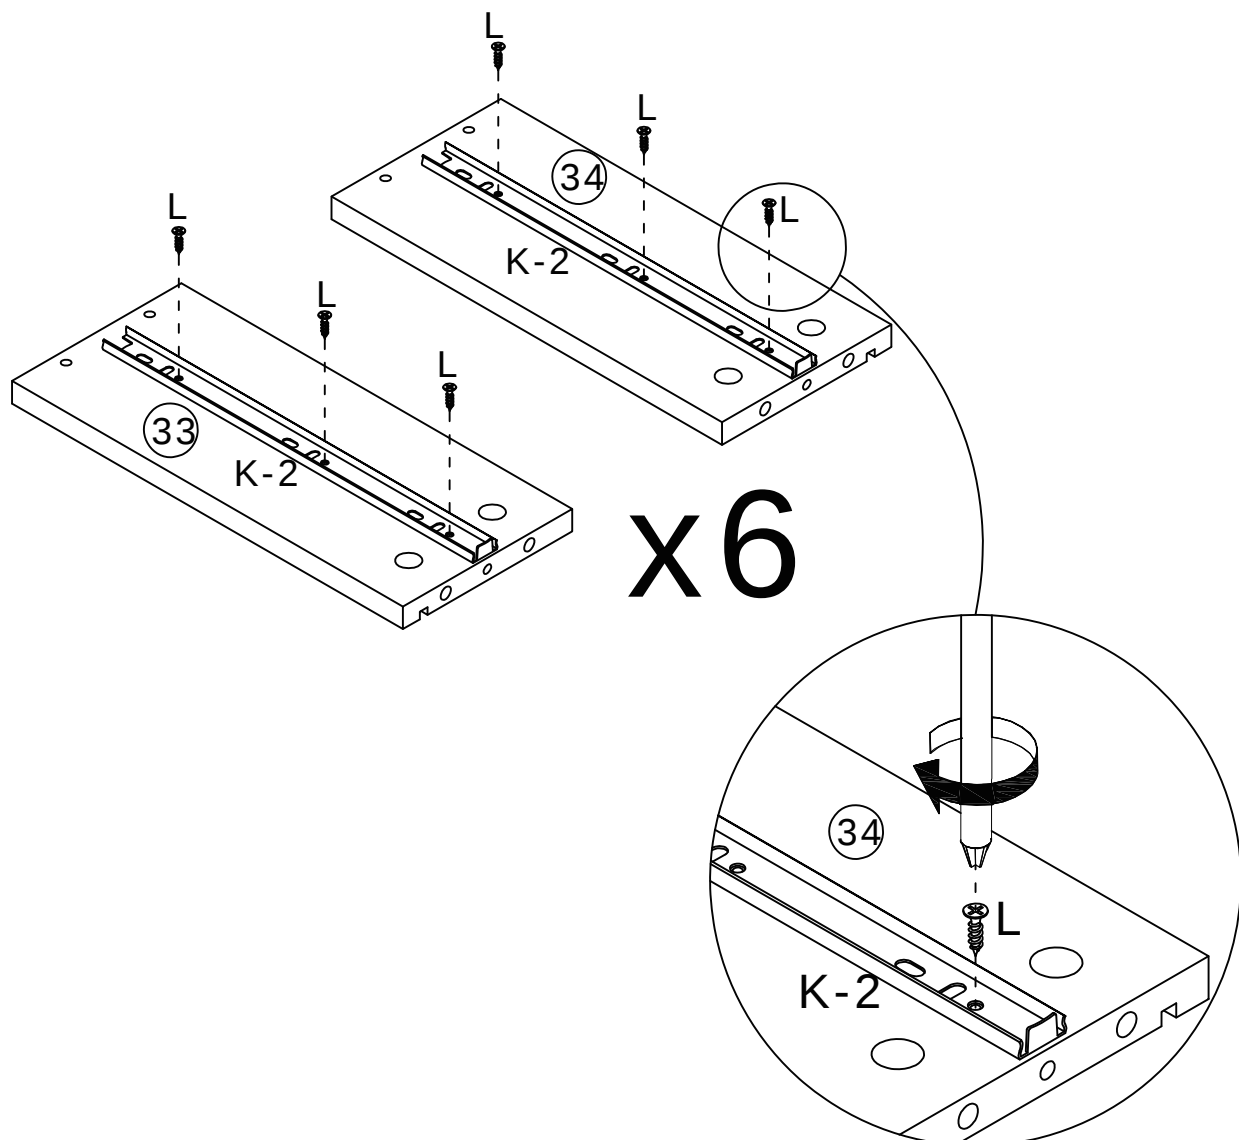


57

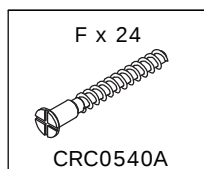  

   
Secure panels 33 and 34 to panel 35 using screw (F).
Insert panel 36 along the slots.

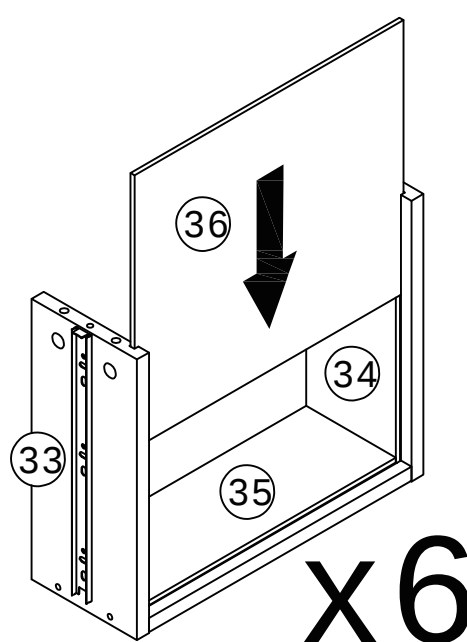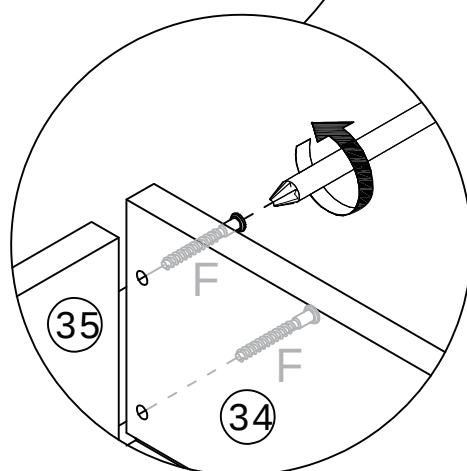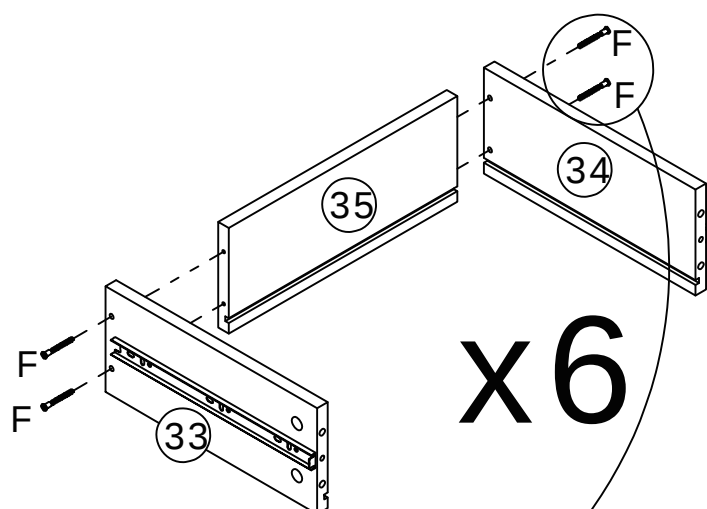


58

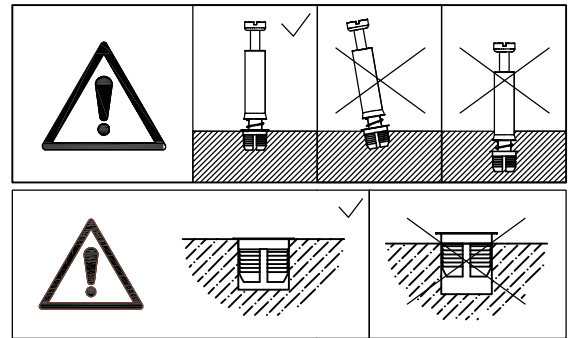 

 
Press plug (C) to panel 32, and screw self-tapping rod (B) onto the holes.

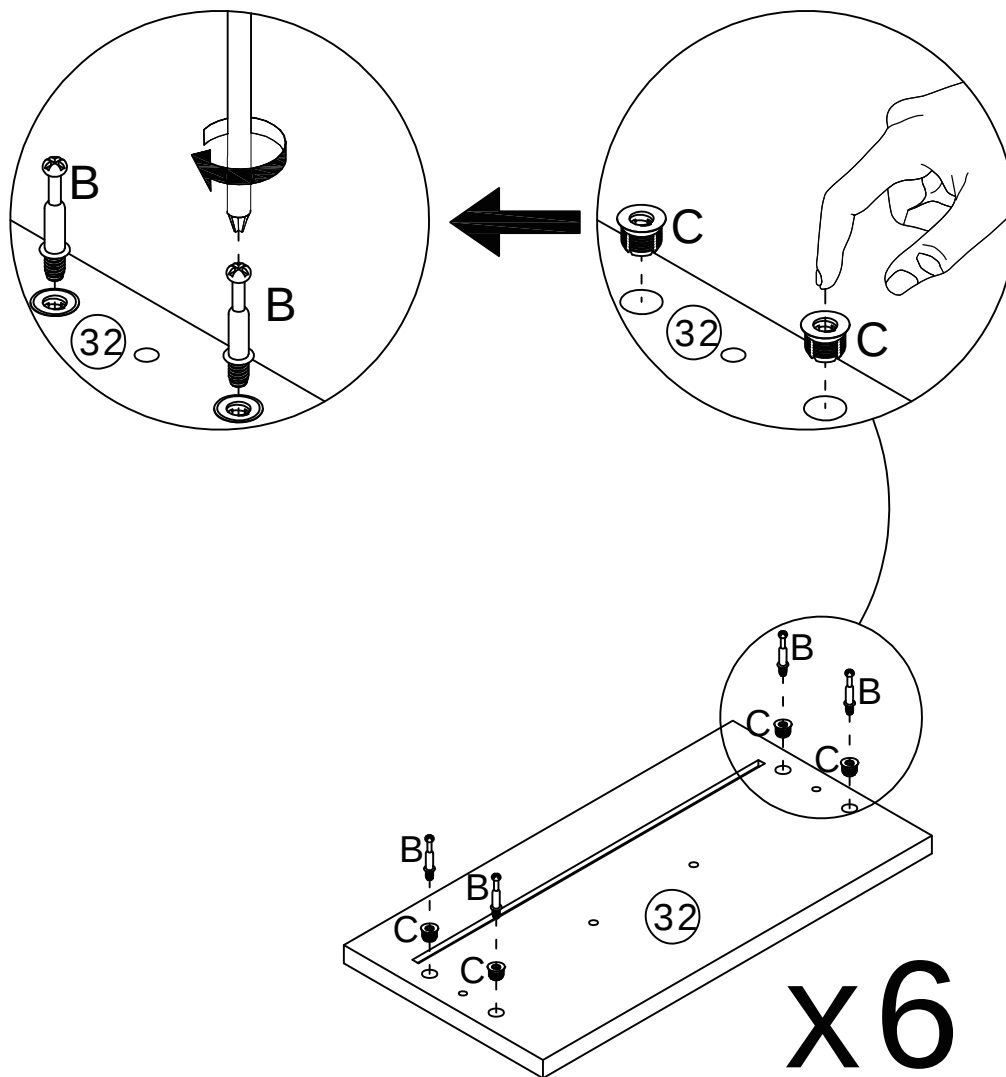







59

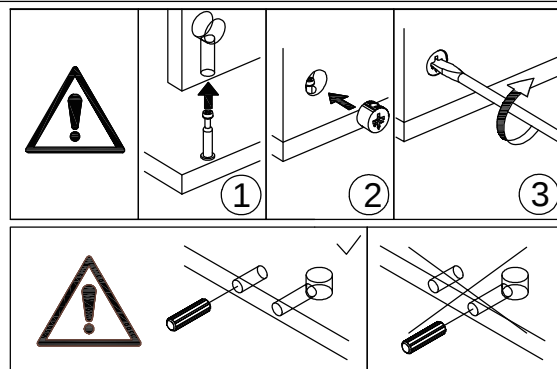 




 
Connect panel 32 to panels 33 and 34 using wooden dowel (E), then tighten by turning eccentric wheel (A) clockwise.

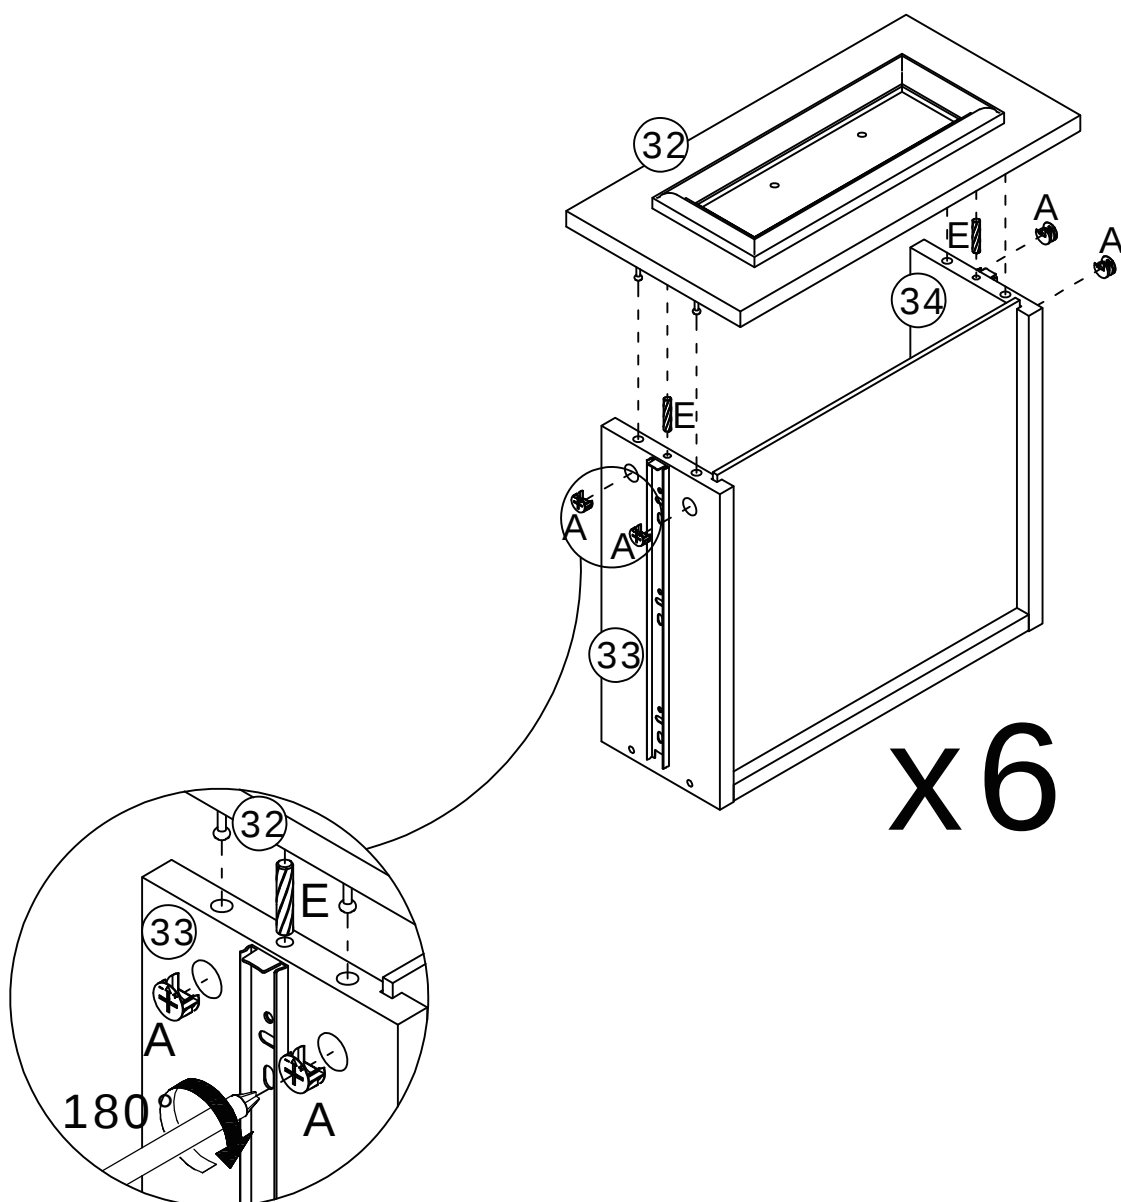

60

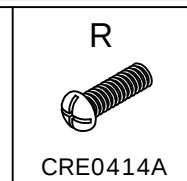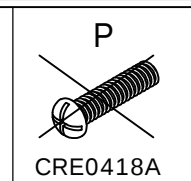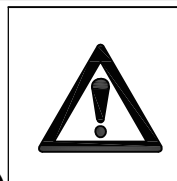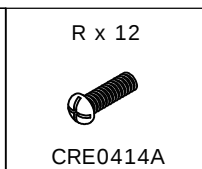     
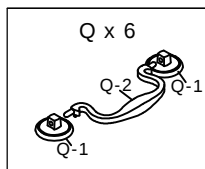 


    
Install part (Q-1) and (Q-2) first.
Secure pull (Q-1) to panel 32 using screw (R).
Pay attention to the orientation of component (Q-2).

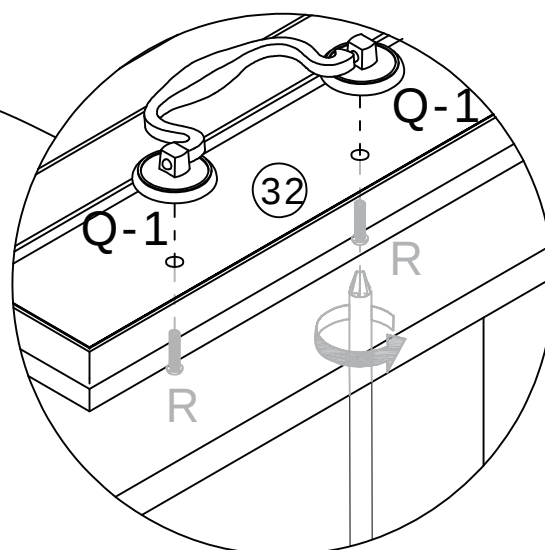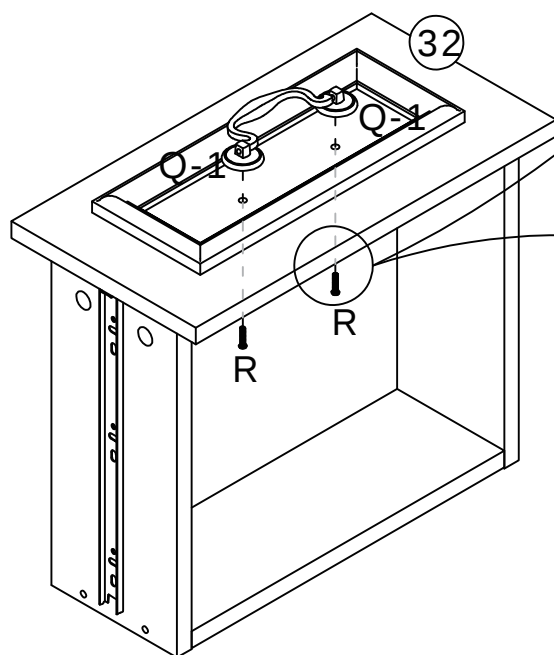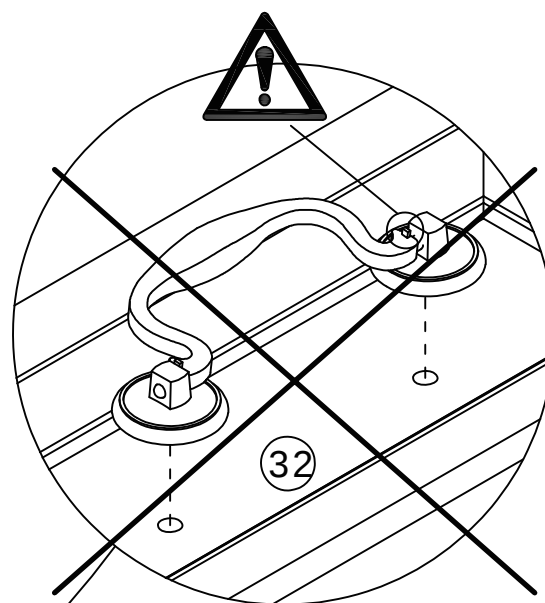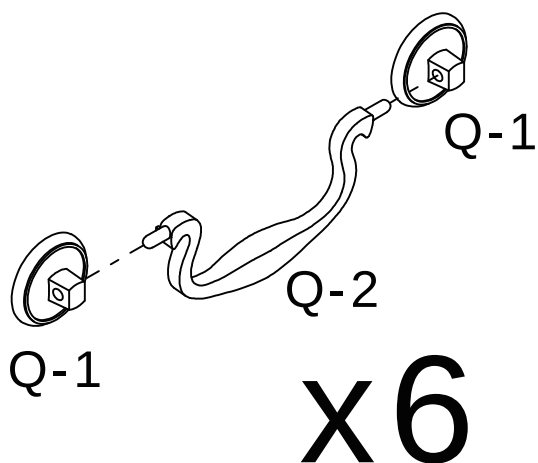


61

    Install the drawers as shown.

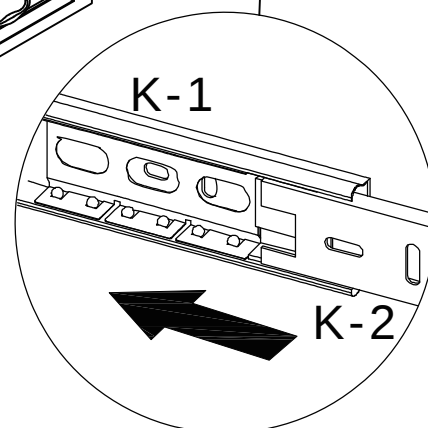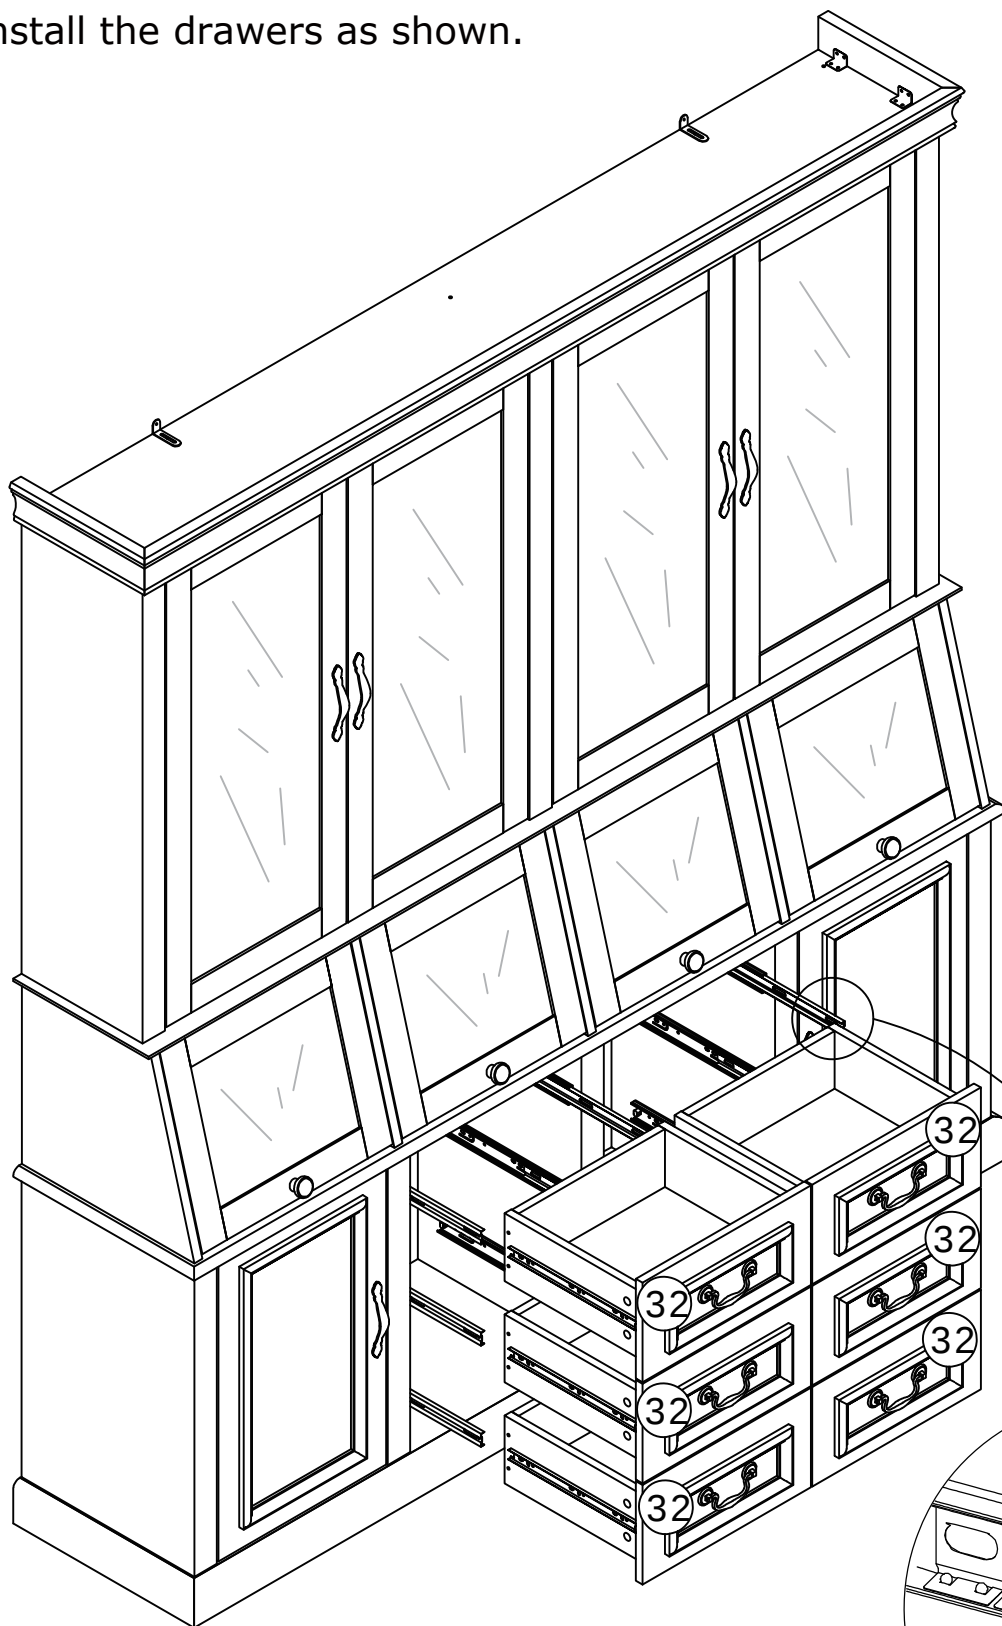


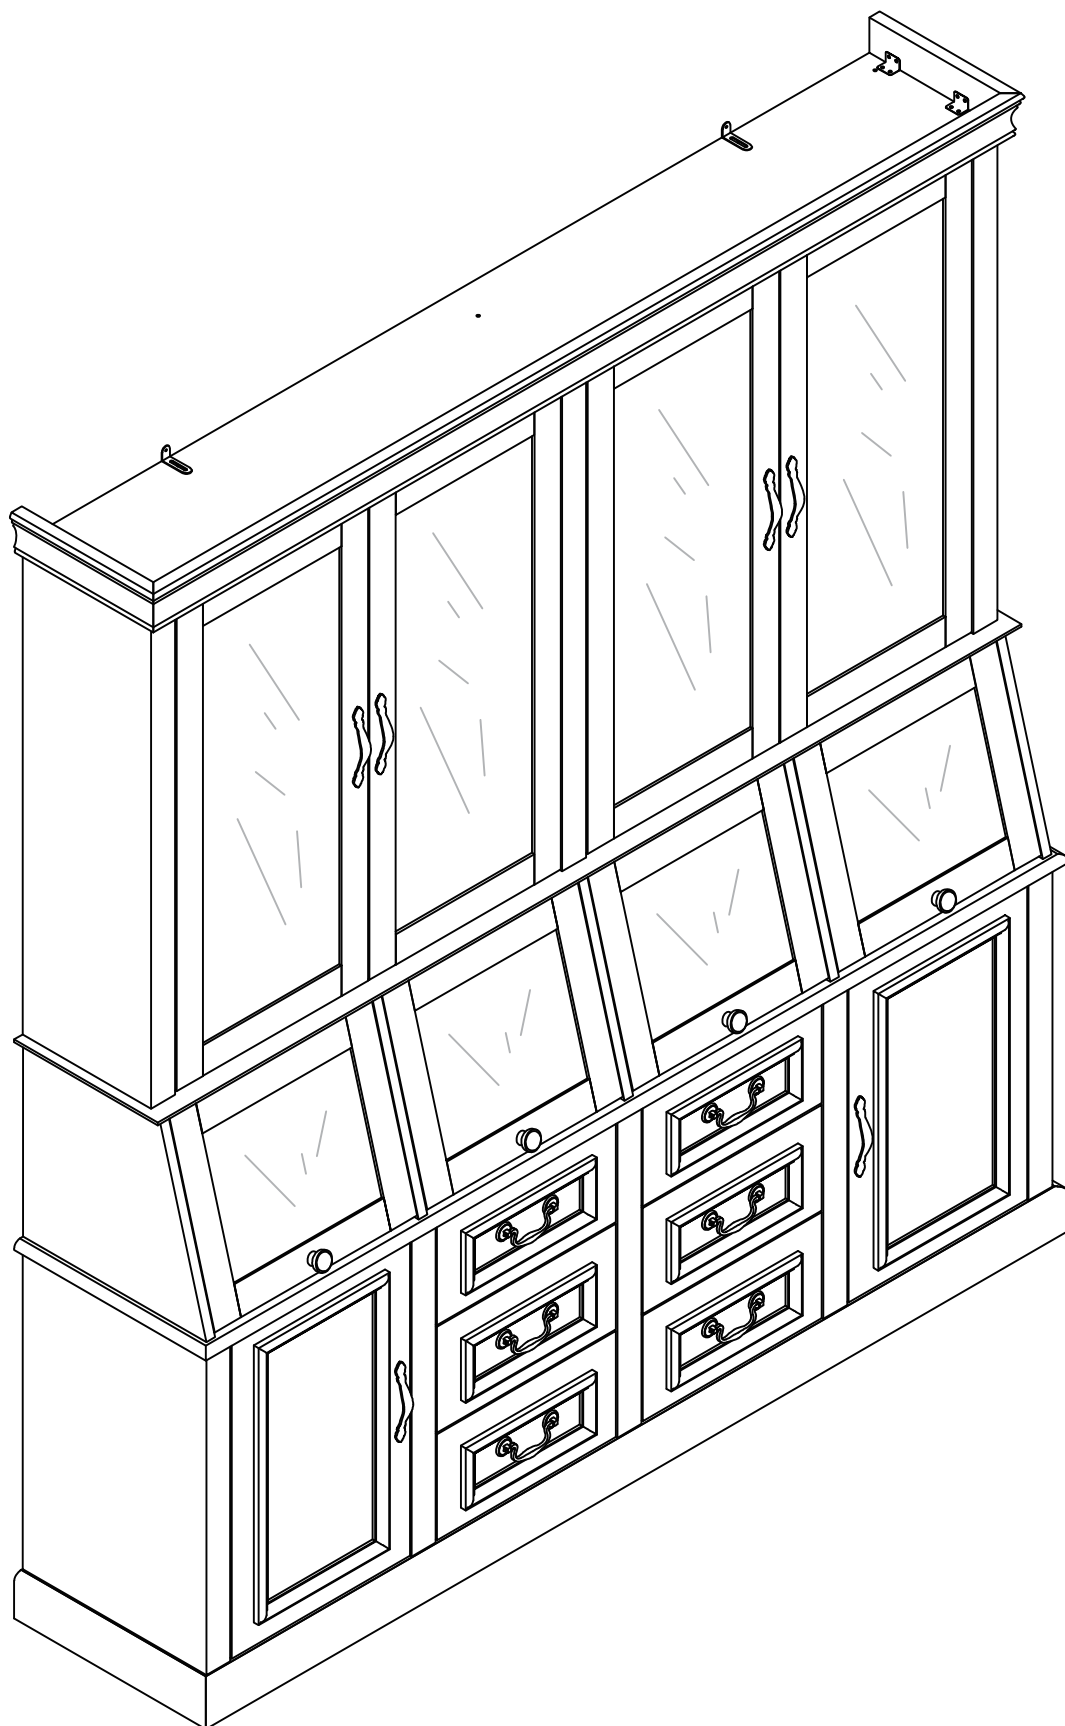





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

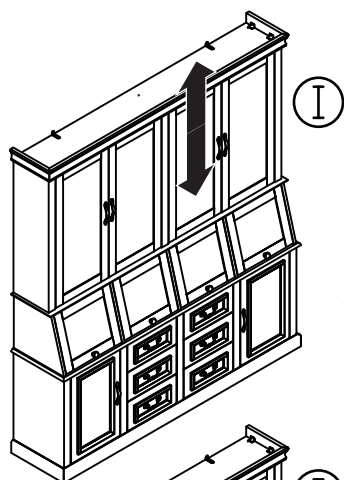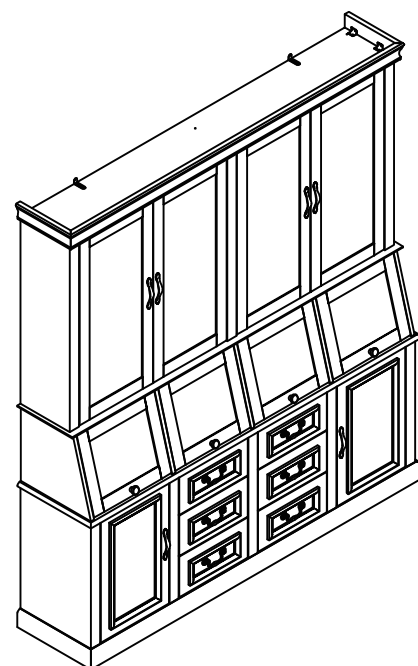


I

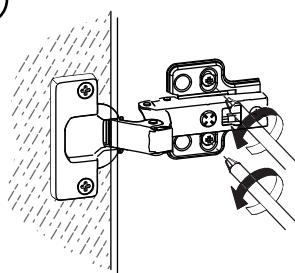 


II

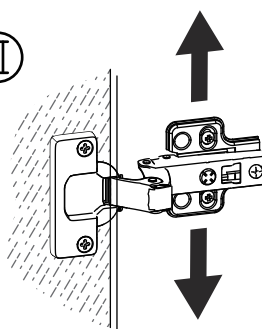 


III

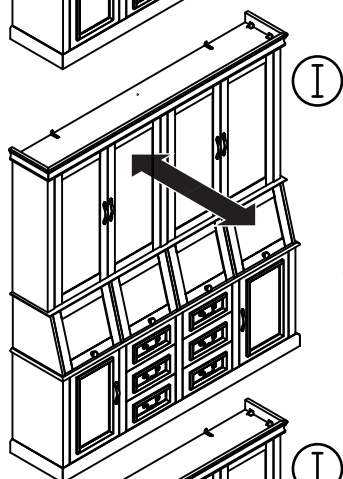 


I

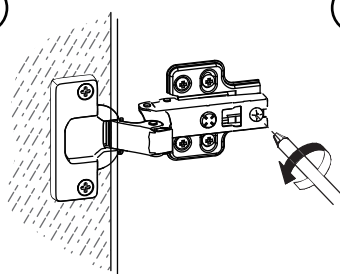 


II

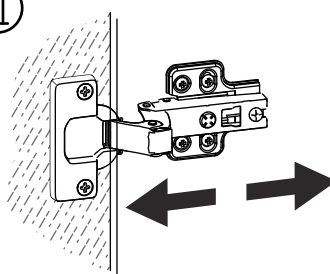 


III

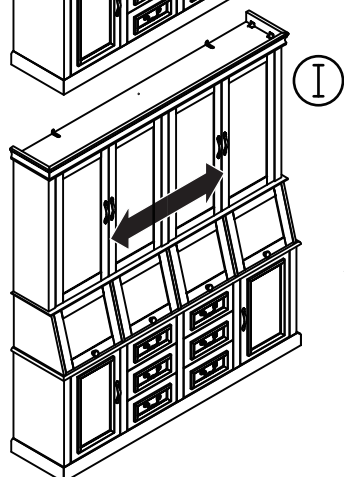 

I

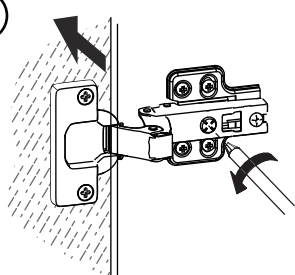 

II

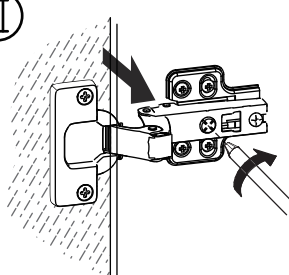 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068