

Assembly Instructions



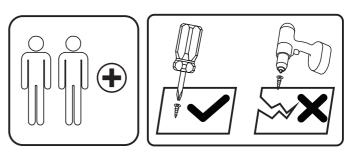

Tools Recommended

IMPORTANT NOTICE

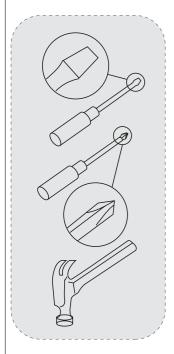

- This product contains small components, please ensure that they are kept away from small children.
- THIS INSTRUCTIONS CONTAINS IMPORTANT SAFETY INFORMATION.
 PLEASE READ BEFORE ASSEMBLY AND KEEP FOR FUTURE REFERENCE.
- Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included. Most parts are labeled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be used.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or pull your furniture(especially on carpet).

PLEASE DO NOT RETURN PRODUCT TO US IMMEDIATELY

- If any parts are missing or damaged, do not return the damaged item to your dealer, contact Customer Service, We will gladly ship you replacement parts FREE of charge!
- Need Parts or Assistance?
- Thank you for choosing our products.
- For Prompt, Reliable Customer Service, Please have your assemble instruction ready.




WARNING


(Death or serious injury may occur when children climb on audio and/or video equipment furniture.)

To reduce the risk of furniture tipover:




- NEVER attempt to move this furniture without first removing all equipment.
- NEVER placing remote control or toys on the furniture, may encourage a child to climb on the furniture and as a result the furniture may tip over onto the child.
- Please contact us using the details shown for further advice

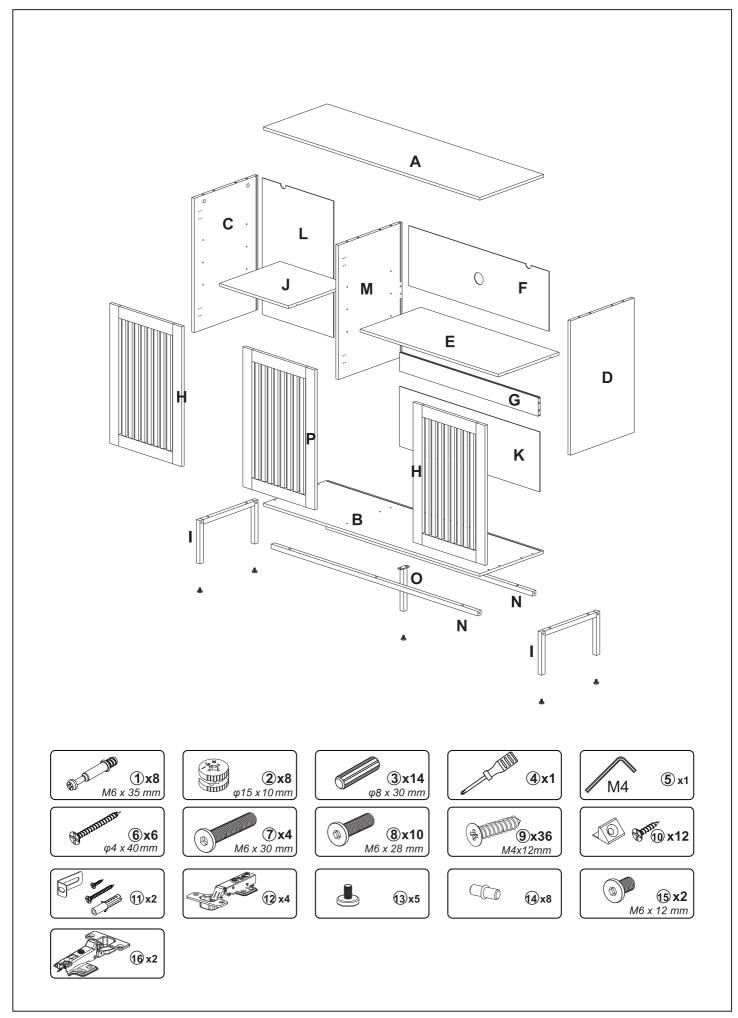

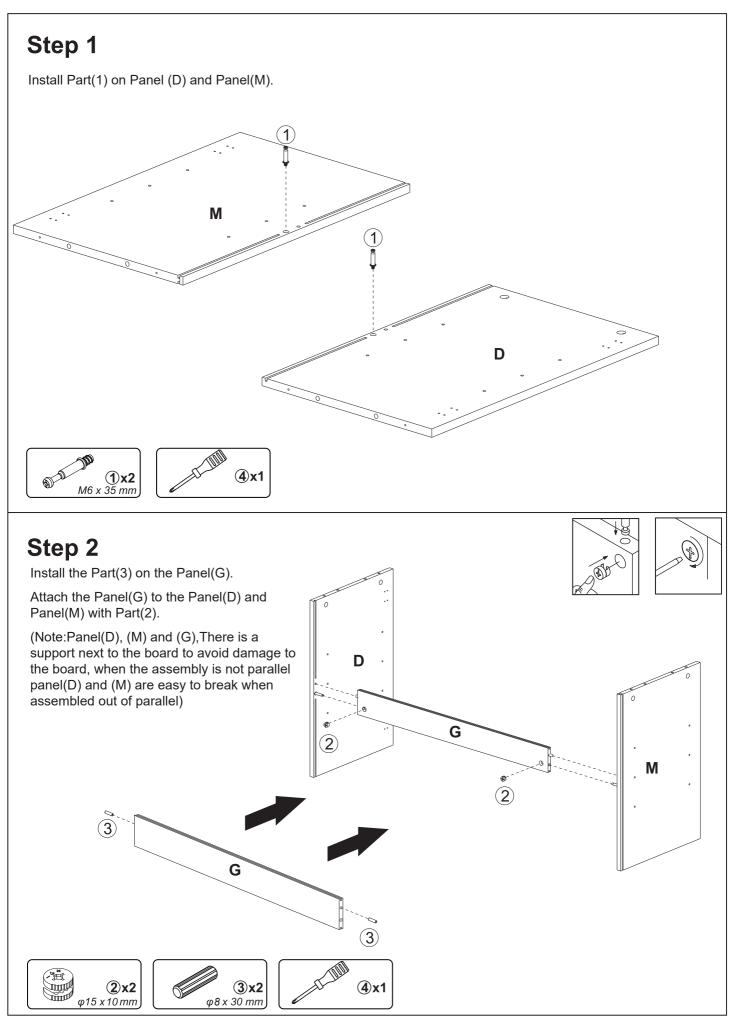


Insert panel(F) along the slot.


The position is as shown below.

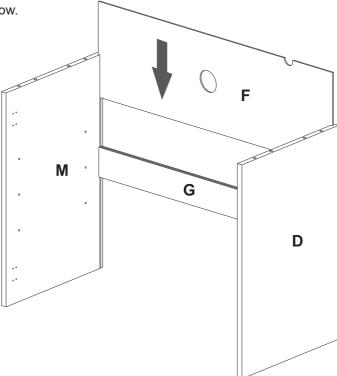

Step 4

 Install Part(1) on Panel (A).

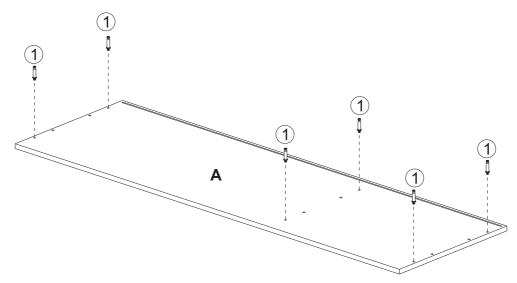






First insert the dowel part(3) into panel(M) and panel(D).


Insert panel(A)and(D)(M)(F).

  
Then put part(2)into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten. The installation position is as shown below.





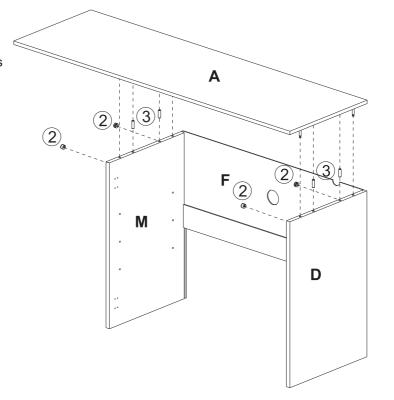





Step 6


First insert the dowel part(3) into panel(C).

 
Insert panel(A)and(C).

 
Then put part(2)into the corresponding hole and use a flat-blade screwdriver to turn it clockwise to tighten. The installation position is as shown below.





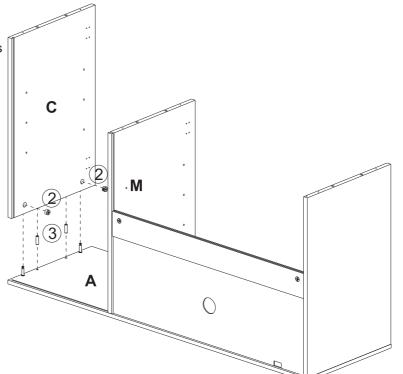






Insert panel(K) along the slot.

Insert panel(L) along the slot.


The position is as shown below.

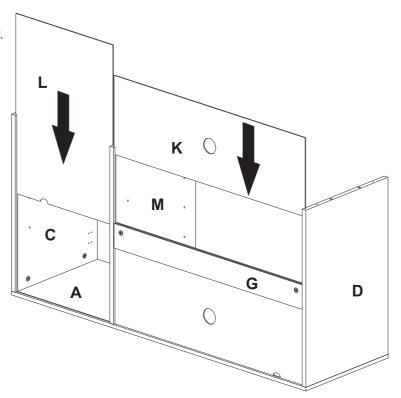



Step 8


First insert the dowel part(3) into panel(C) and panel(D) and panel(M).

 Then assemble panel(B) and panel(D)(C)(M)by using part(6).

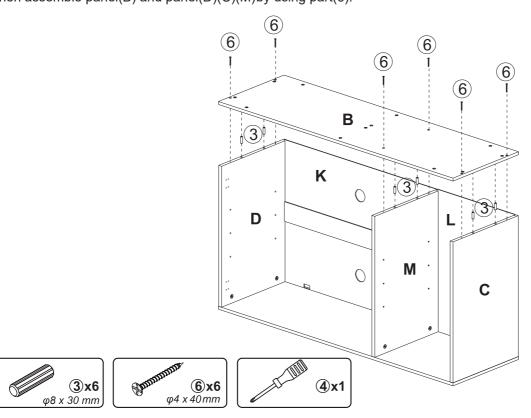

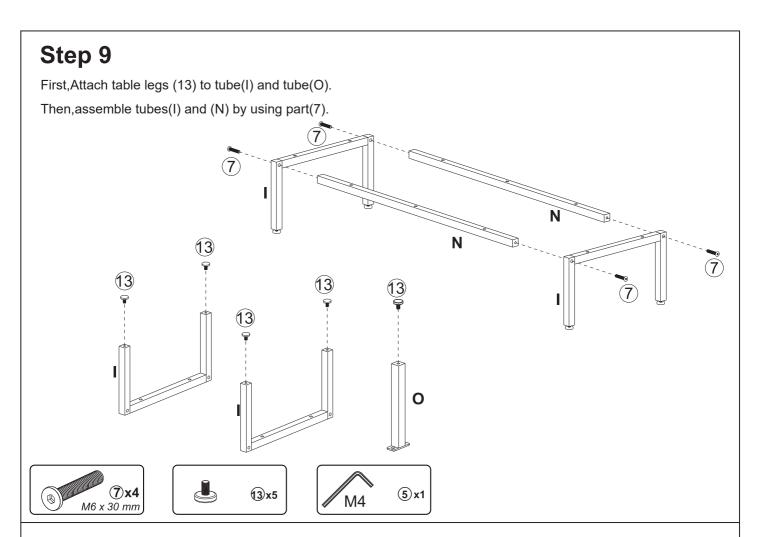




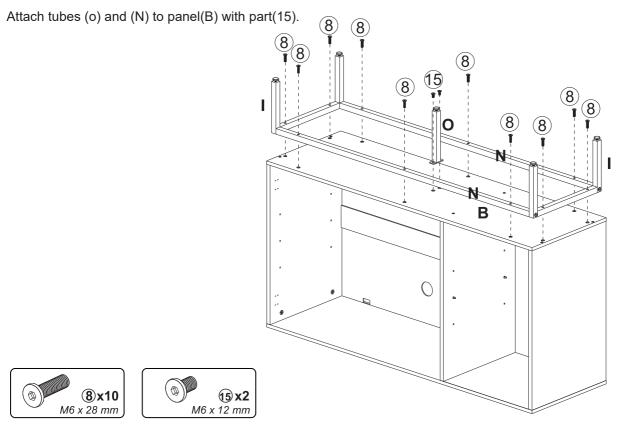

First, Place plate tray part(14) in panel(D) and (C)(M).

Then Place panel(E) and panel(J) on top of plate tray part(14).

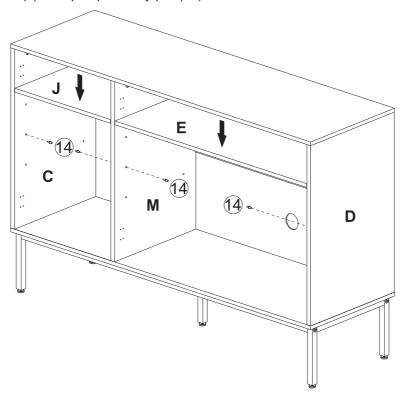


Step 12


Use screws part(9) to attach hinge part(12) to panel(H).




Use screws part(9) to attach hinge

  14)x8



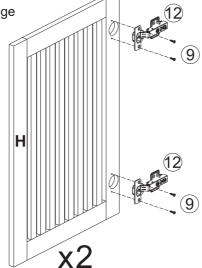










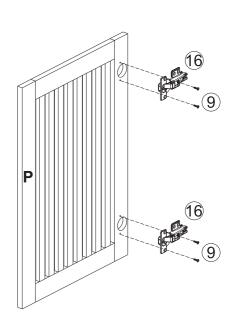

Attach door panel(H) to panel(C) using screw part(9), and attach another door panel(H) to panel(D) and attach door panel(P) to panel(M) in the same way.

The installation position is as shown below.


4x1

Step 14


Door Panel Adjustment

M4x12mm


If there is a gap between the door panel and the top of the cabinet,you could loose screw A Adjustable up and down Adjustment of the door panel Gap. A

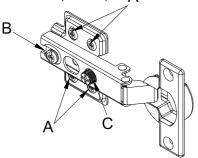


If there is a gap between the door panel and the left or right of the cabinet,you could Loose screw C Can be adjusted left or right Adjustment of the door panel Gap.

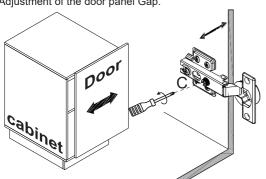



If there is a gap between the door panel and the top of the cabinet,you could loose screw A Adjustable up and down Adjustment of the door panel Gap.

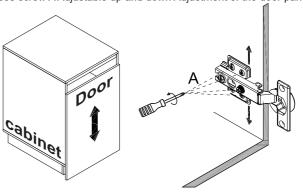


If there is a gap between the door panel and cabinet,you could Loose screw B Can be adjusted back and forth Adjustment of the door panel Gap

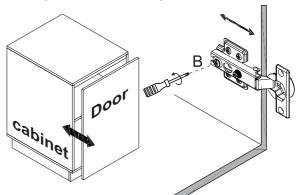

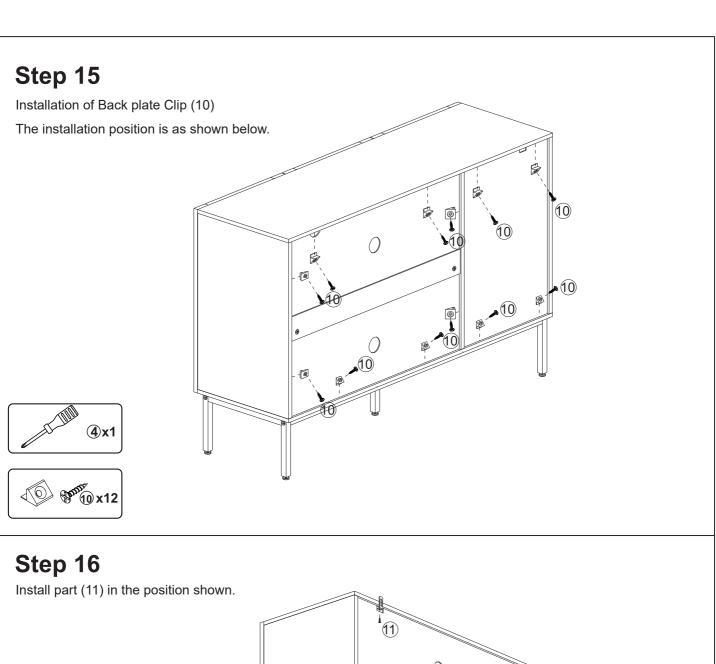

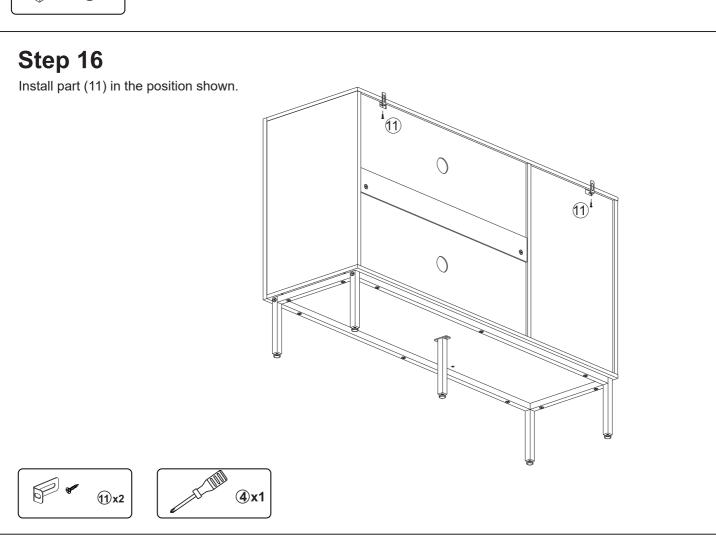

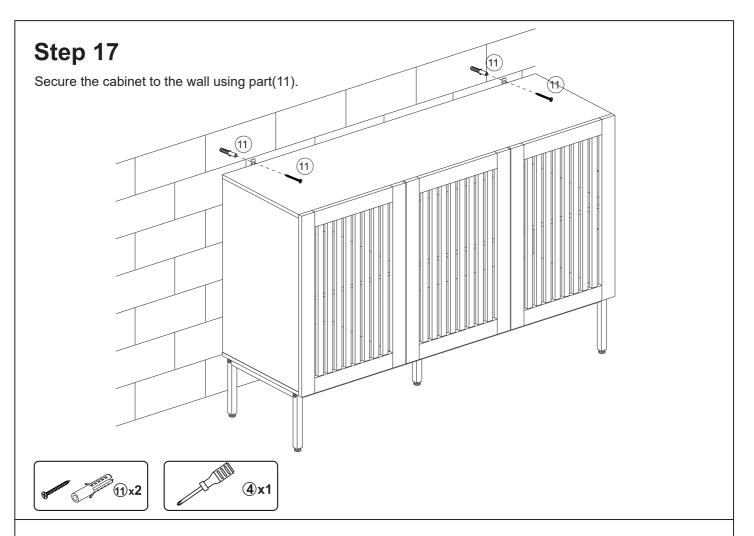

Congratulations!

You've won the perfect piece of furniture!

