


DEISS®

CAN OPENER QUICK GUIDE

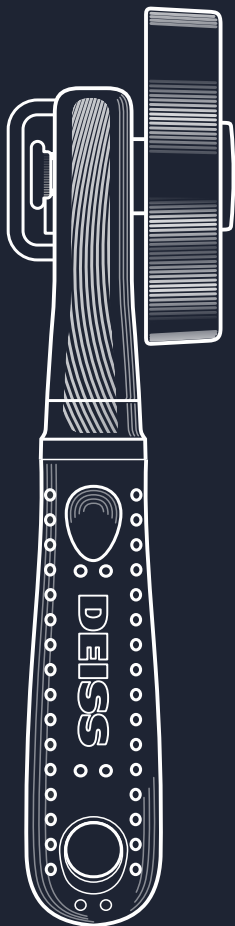



1 STEP

Rotate the knob **counterclockwise** for about **5 seconds** until the pressure roller **grips** the **edge** of the can.

Attention! Ensure that the roller has securely gripped the can's edge; if not, repeat the action once more.



2 STEP

Start **turning** the knob **clockwise**, and keep going until you've gone a **full circle** around the can.

The knob should rotate smoothly with little effort.



3 STEP

Gently lift the **lid away** using a **can opener**.

Thanks to the safe-cut design, the edges of the can and the removed lid are smooth and **free from sharp burrs**.