


Installation & Assembly

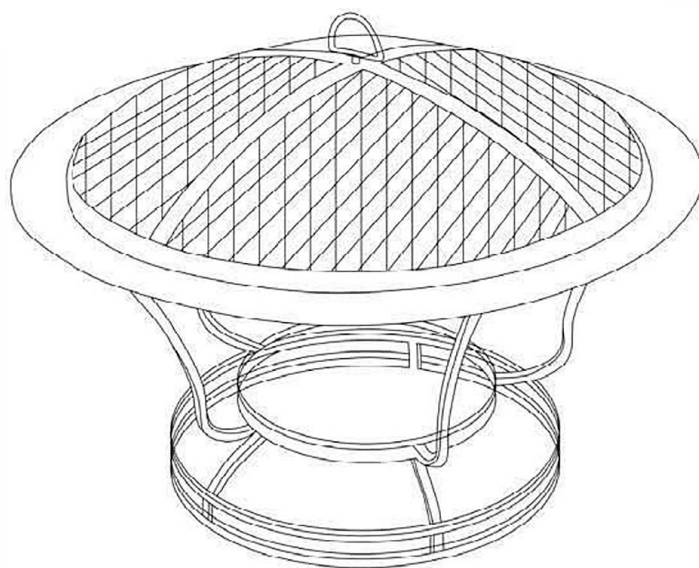

INSTRUCTION MANUAL


Assembly Instructions

WARNINGS:

- This fire bowl is intended for outdoor use only. Do not use on wooden decks.
- This fire bowl is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the fire bowl.
- Not for use by children. Keep children and pets away from the fire bowl.
- The fire bowl is hot. Use with caution. Do not touch the hot fire bowl with bare hands.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- Do not use near flammable or combustible objects or materials.
- When the fire bowl is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- DO NOT use this fire bowl as a cooking appliance. This fire bowl is not designed for grilling food.
- Check local fire regulations and municipal by-laws for safe use.

PART LIST

| NO. | DESCRIPTION | QTY. |
|-----|-------------|------|
| A | Lift handle | 1 |
| B | Mesh screen | 1 |
| C | Log grate | 1 |
| D | Fire bowl | 1 |
| E | Ring | 1 |
| F | Leg | 5 |
| G | Stand | 1 |
| H | Fire poker | 1 |

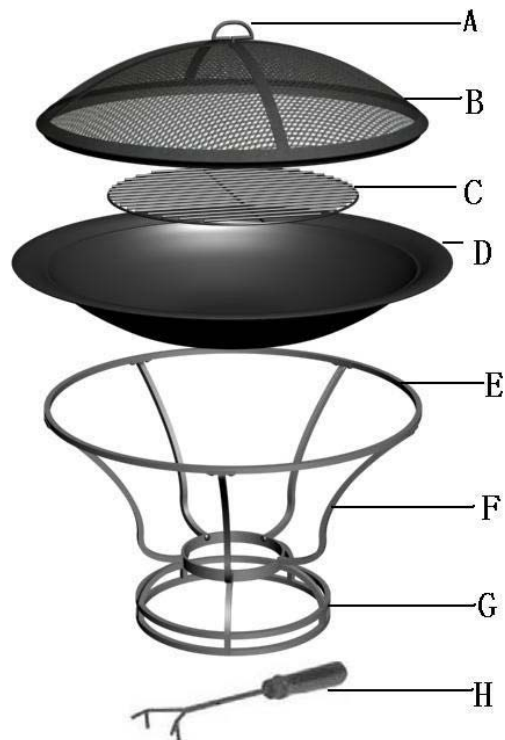


Hardware List

| No. | Hardware | Qty |
|-----|----------|-----|
| I | M6 Bolt | 15 |
| J | M6 Nut | 1 |


Note: You will need a screwdriver to help with the assembly.

Assembly step:

Step1 : Connect lift handle (A) to mesh screen (B), using the M6 nut (J).

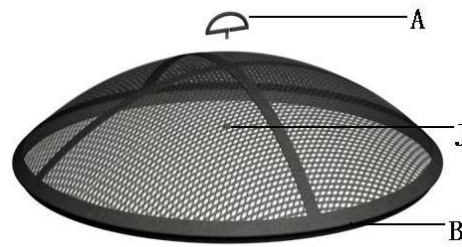

Step2: Connect four leg (F) with ring (E) and stand (G), using the M6 bolt (I).

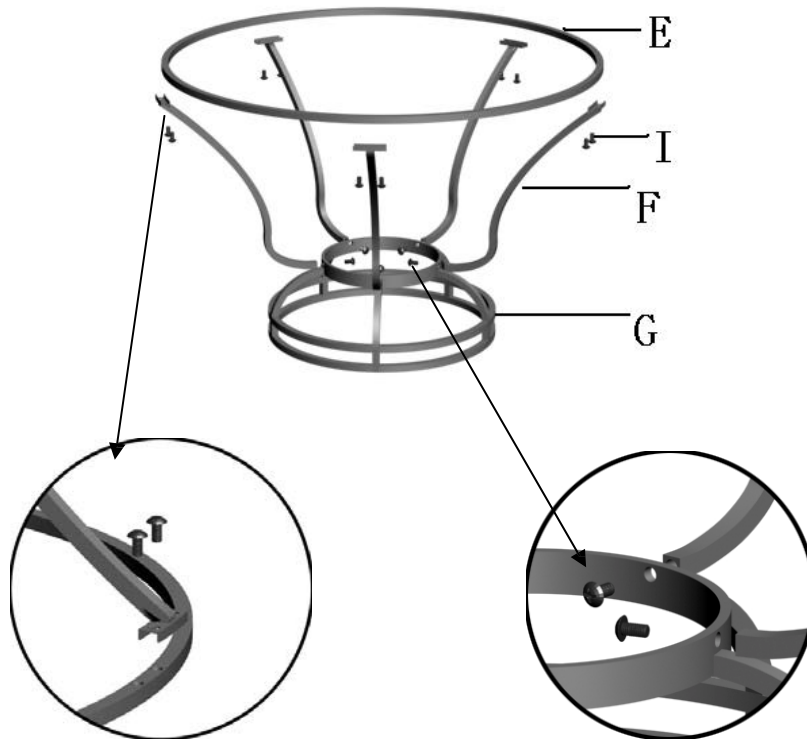

Step 3: Put the fire bowl (D), log grate (C) and mesh screen (B) on the assembled base.

