

 



# ASSEMBLY INSTRUCTION


## TURNED LEGS TABLE

### IMPORTANT NOTE :


BEFORE YOUR BEGIN, PLEASE READ AND FOLLOW THE ASSEMBLY INSTRUCTIONS CAREFULLY.

- IDENTIFY AND SEPARATE ALL PARTS BEFORE DISCARDING PACKING.
- PLACE WOODEN PARTS ON A CLEAN SOFT SURFACE TO AVOID SCRATCHING THE PARTS.
- **DO NOT USE POWER TOOL FOR ASSEMBLY.**
- AS WITH ALL FURNITURE, OCCASIONALLY CHECK TO INSURE HARDWARE IS TIGHT.

PART LIST		
A	TABLE TOP	1 PC
B	TABLE LEGS	4 PCS
HARDWARE LIST		
C	 JCB BOLT (LONG)	8 PCS
D	 FLAT WASHER	8 PCS
E	 ALLEN KEY	1 PC
F	 SPRING WASHER	8 PCS

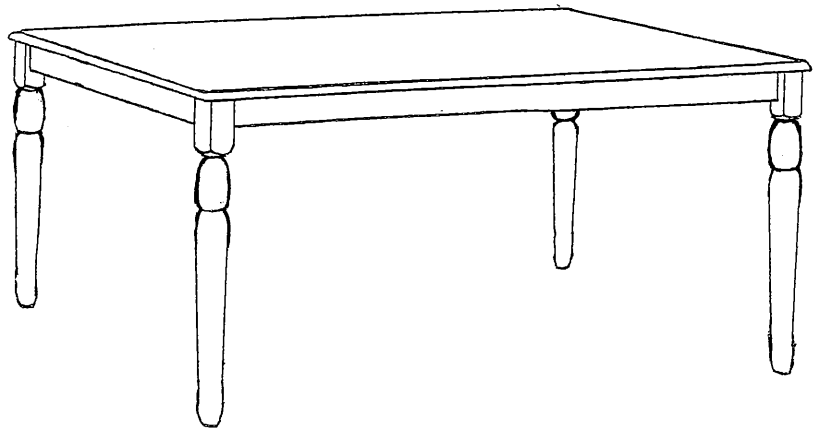

ATTACH THE TABLE LEGS (B) TO THE CORNER BLOCK WITH HEX SCREW (C) SPRING WASHER (F) AND FLAT WASHER (D). TIGHTEN THE HEX SCREW (C) BY USING THE HEX WRENCH (E).

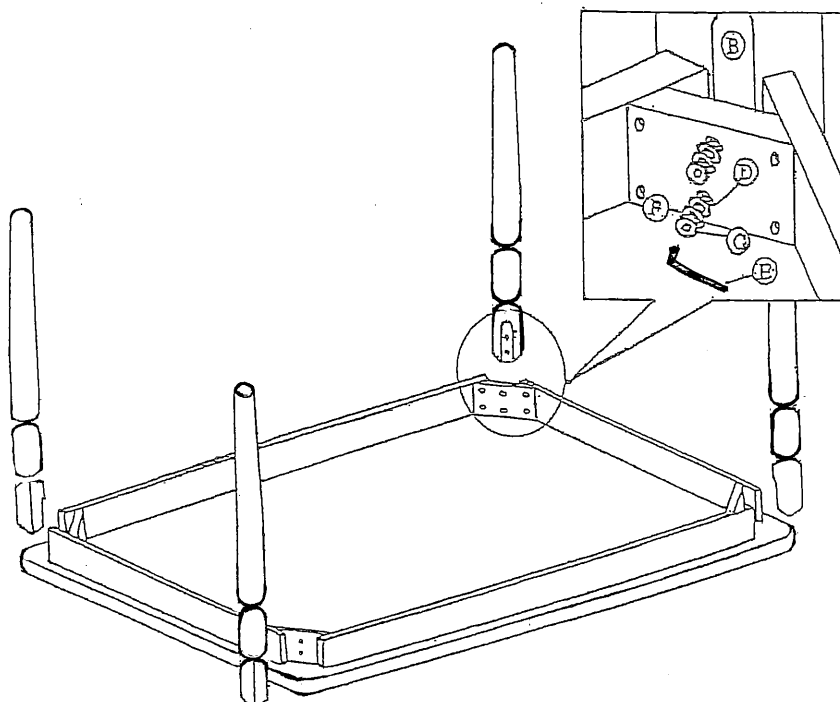

Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware. Replacements for missing or damaged parts or hardware are normally shipped within 2 to 3 days.

We appreciate your business!

# ASSEMBLY INSTRUCTIONS

## CROSSBACK DINING CHAIR


### **IMPORTANT NOTE:**


Please read and follow the Assembly Instructions carefully.

- Identify and separate all parts before discarding packaging.
- Place wooden parts on clean soft surface to avoid scratching.
- Do not completely tighten screws until, after final assembly.
- Do not use a power tool for assembly.
- As with all assembled furniture, occasionally check to insure hardware is tight.

### **TOOL REQUIRED (NOT PROVIDED) PHILIPS SCREWDRIVER**

NO	PART LIST	QTY
1	CHAIR BACK	1PC
2	SIDE RAIL (L/R)	2PCS
3	STRETCHER (L/R)	2PCS
4	FRONT LEG	1PC
5	WOODEN SEAT	1PC

NO	HARDWARE LIST	QTY
A	CSK SCREW M4 x 32mm 	3PCS
B	CSK SCREW M4 x 38mm 	4PCS
C	JCBC SCREW M6 x 50mm 	8PCS
D	SPRING WASHER 	8PCS
E	ALLEN KEY 	1PC

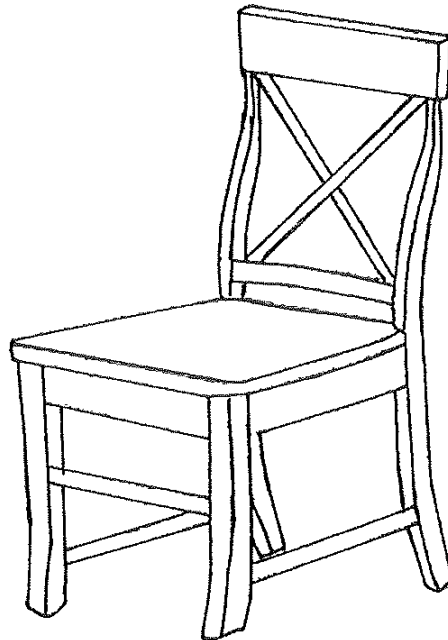


**Thank you for purchasing our product!**

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware. Replacements for missing or damaged parts or hardware are normally shipped within 2 to 3 days.

We appreciate your business!


### **STEP 1**

LOOSELY ATTACH (L/R) SIDE RAIL TO FRONT LEG USING BOLT (C) AND SPRING WASHER (D).

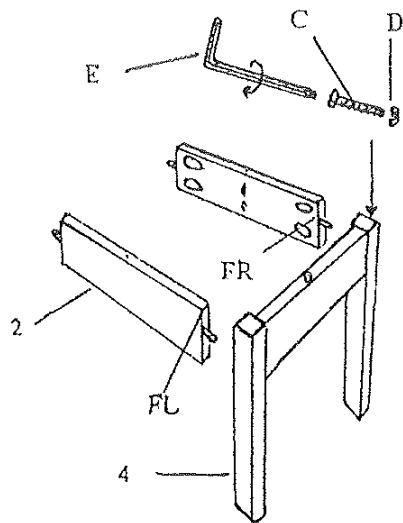


### **STEP 2**

LAY CHAIR BACK OF FLAT SURFACE AND LOOSELY ATTACH (L/R) SIDE RAIL TO CHAIR BACK USING BOLT (C) AND SPRING WASHER (D)

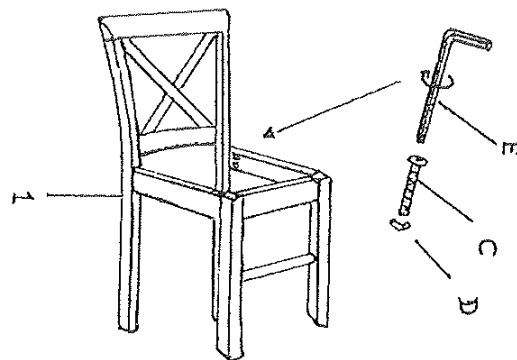


### **STEP 3**

PLACE TWO STRETCHERS IN THE HOLES IN CHAIR BACK ALIGN AND FRAME UP CHAIR USING HAND PRESSURE TO GET STRECHERS IN PLACE. COMPLETELY TIGHTEN ALL SCREWS

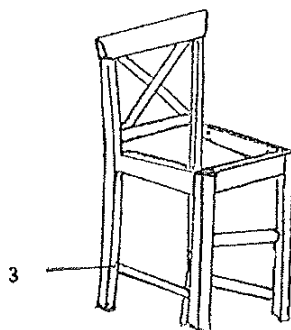

### **STEP 4**

TURN STRETCHERS SO THE PREDRILLED HOLES FACE DOWNWARD AND SECURE USING 38mm SCREWS (B). ATTACH WOODEN SEAT USING 32mm SCREWS (A).

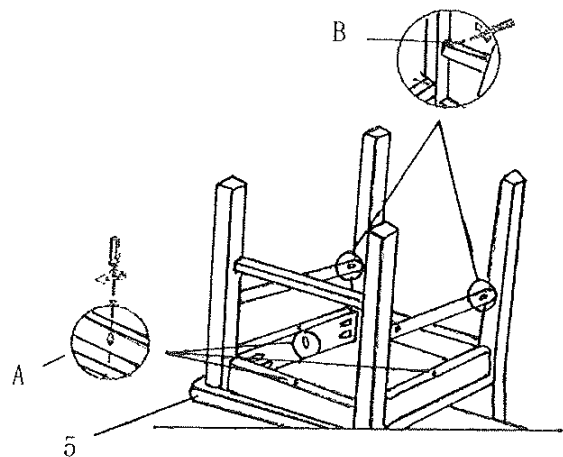

There are no pre-drilled holes to attach the seat