

Convenient Handheld Steam Iron

Instruction Manual

Returning Policy

If the item needs to be returned, please contact our Customer Service Team. We will provide a prepaid returning label.

NOTE: We are not responsible for any costs incurred if the buyer returns the item themselves.

Matters Need Attention

1. Please read this manual carefully before use.
2. Before using, Please check whether the voltage required by this product is consistent with that in your home.
3. Do not use this product beyond the specified scope.
4. This product is not allowed to be used by the following people (including children), physically or mentally defective or lack of relevance operation experience and knowledge, unless there is a person responsible for their safety to supervise and instruct their use of this product manual.
5. Do not let children play with this product.
6. Users are not allowed to leave while the product is powered on.
7. When the temperature of the product is not cooled, It should not be placed on the place where children can reach, Please take good care of the children.
8. The product must be used and placed on a smooth surface.
9. Do not pour vinegar or other dirt cleaners into the water storage tank.
10. Prohibit the use of chemical additives, flavors or detergents.
11. Please pull out the power cord from the socket before adding water or pouring out the residual water
12. When stop ironing, please pull out the power plug.
13. Please do not pull the power cord violently, cut of Please do not use the product again if it has fallen or has visible damage or water leakage.
14. Do not immerse this product in water or other liquids.
It is not allowed to touch this product with water on hand.
15. Do not expose the product to rain or sun, If touching the trigger hot plate, Hot water or steam may cause scald, Please be careful when using this product. The part of water tank should be protect from hot water scald when upside down.

Matters Needing Attention

1. The steam temperature of this product is high. In order to avoid scalding, Please do not direct the steam to human body
2. Never hang the power cord around the table or touch any heating surface.
3. When the product is damaged, Please do not continue to use, and do not disassemble it by yourself unload. Inccorred assembly may cause leakage in use.
4. In order to avoid circuit overload, Please do not use other high-power electrical appliances at the same time.
5. Please keep this manual properly.
6. When using the appliance, pay attention to prevent the danger of steam splashing.
7. When filling and cleaning, The power plug should be pulled out.


COZY TIPS

After use, pull out the water tank and continue to electrify for about 10 seconds until it doesn't steam, After that, turn off the power and cool down to room temperature

Technical Parameter

Product name	Handheld Steam Iron
Product model number	RX-2406
Rated voltage	220-240 V~
Rated frequency	50/60 Hz
Rated power	1000W

Part name

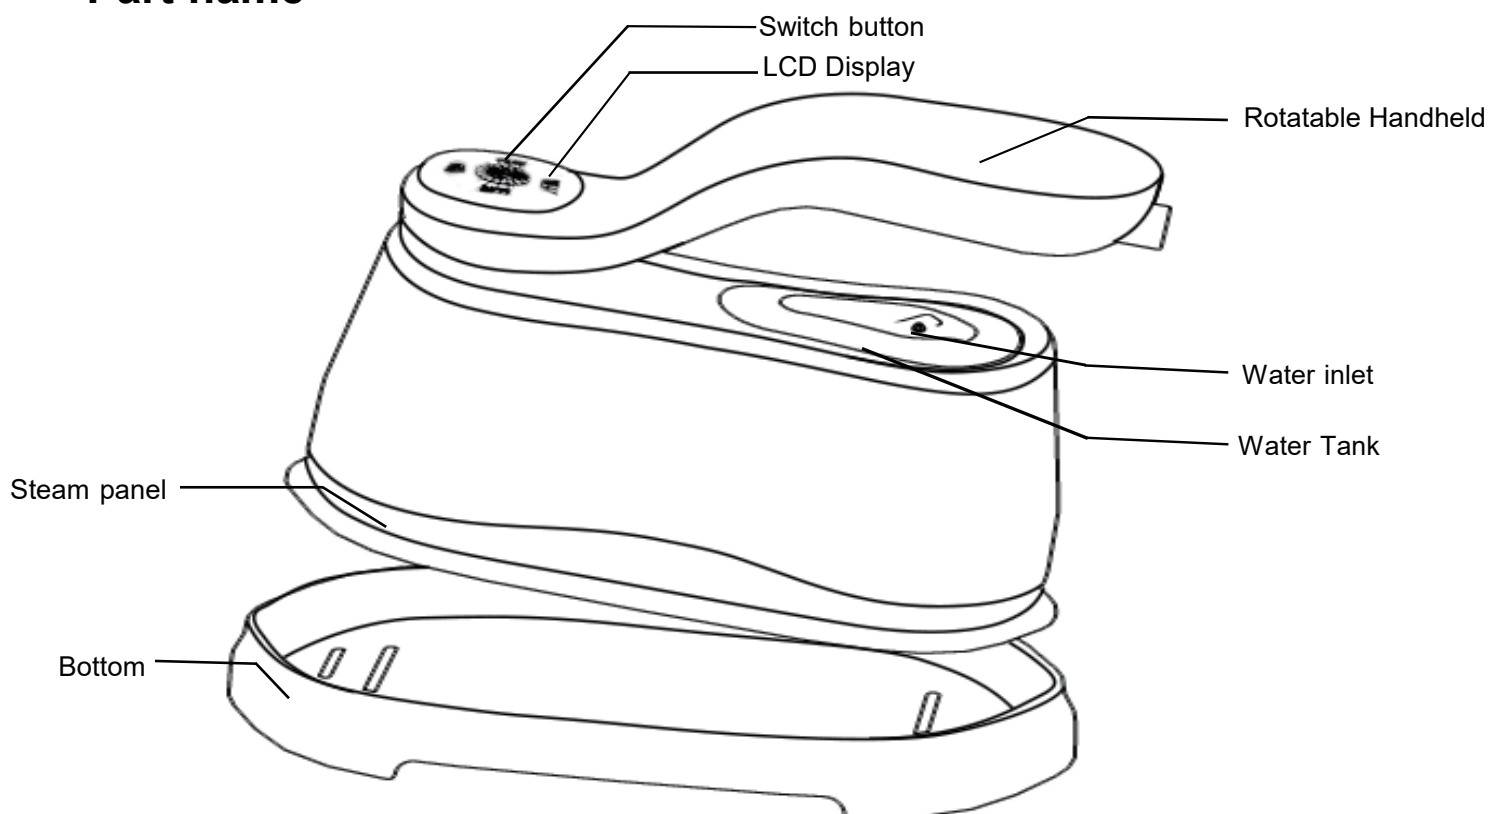


Product before use


- 1.Remove any labels or protective covers on the steam head, straighten and sort the wires before use, when using for the first time, please steam it for a few minutes to remove any impurities and odors that may be left in manufacture.
- 2.Do not use the same socket circuit with other electrical appliances in case of circuit overload.
- 3.Please check the list of all items and parts you receive in the package in case of missing parts


Gear

This product has 4 gears.








The first gear is "  " for dry ironing.

The second gear: the LCD display bright "  ", and the machine sprays a small amount of steam.

The third gear: the LCD display bright "  " and the machine sprays a middle amount of steam.

The fourth gear: the LCD display bright "  " and the machine sprays a large amount of steam.


Product use

- 1.Take out the product from the box.
- 2.Use a measuring cup to take up to 80ml of water to fill the water tank.
- 3.When this product is connected to a power source, the LCD display will blink in "  " and the steam panel will begin to heat up. At this moment, pressing the steam button will not result in any response. Once the temperature is fully heated, the LCD display will remain on "  " steadily, and the product will enter a dry ironing mode
- 4.After LCD display remain on "  " steadily, press the switch button, at this time it is the second gear, the LCD display bright "  ", and small steam will be generated.
- 5.Press the switch button again, the LCD display bright "  ", steam will be bigger than the second gear.
- 6.Press the switch button again, the LCD display bright "  ", which will produce a lot of steam, steam will be bigger than the third gear.
- 7.Press the switch button again, and the LCD display will show "  ", which means back to the first gear. The four gears are rotated in turn.
- 8.During the steam state, press the steam switch button for 2 seconds, all the lights flicker once, the pump stops working, and the machine enters the dry ironing mode.

In case of water shortage, the water pump will automatically shut down after 50 seconds of operation, and at this time all the modes will blink alternately.

8. When stop using, please pull out the power plug from the power socket;

9. Pour out the water in the water tank, and put the iron flat in the base equipped with the product, waiting for the product to cool down and store.

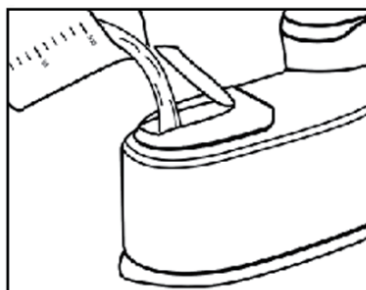

Scale treatment

- 1.Remove the plug.Wipe the panel and other parts with a soft cloth after it has cooled sufficiently
- 2.If there's some serious contamination,please wipe with a soft cloth dipped in neutral detergent
- 3.Scale removal:due to the high mineral content of water sources in many areas,sediment accumulation is a common question,The residue of mineral causes the steam to eject intermittently,even can't eject steam

The following methods can effectively reduce sediment accumulation,if you are not using mineral free water or distilled water,we recommended that you clean up the sediment according to the following steps every month:

- 1.Add 50% vinegar and 50% water mixture into the water tank.
- 2.Turn on the power supply,press the steam switch,Let the mixture enter the heating body,then pull off the plug waiting for about 40 minutes.
- 3.Pour out the remaining mixture from the water tank and add clean water.
- 4.Turn on the power and press the steam switch to let the water enter the heating body.
- 5.Repeat several times until the sour taste is removed.

Trouble shooting

Phenomenon	Reason	Processing Method
Not working at all	Is the power plug plugged in Is the switch burnt out	Check the plug
Not steam is produced	Insufficient heating The water level in the tank is too low The steam switch was not pressed	Don't use until the power indicatorf is of add water to the tank Press the steam switch fully
Water drips from the nozzle	The product may not used vertically	Make sure the water does not exceed the maximum water level,Keep the steamer upright according to the manual
Water from water tank	The water tank valve is not installed properly	check the water tank
Spray yellow water	There is residual water in the body after use	After use,pull out the water tank and continue heating for 10 seconds Until there is no steam

The above are common fault analysis and troubleshooting methods,Please take carefully before using.