CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use. Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

* Please make sure that you have all parts indicated before you begin assembly of this item

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Frame Back		1X
В	Frame Side		2X
С	Frame Seat		1X
D	Cushion back		2X
Е	Cushion Seat		1X
F	Bolt	M8x70 mm	2X
G	Bolt	(0) M8x50 mm	2X
Н	Screws	0 M7x70 mm	2X
I	Washer	Ø8.5x20x2mm	2X
К	Allen key	LG4	1X

Weight Capacity : 600 Ibs Warning : Do not stand on chair Warning : Do not over torque bolts / screws



Product Dimensions: 30.51" W x 51.57" D x 32.67" H

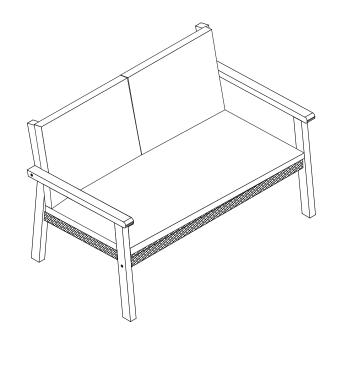

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

2 1 F (\mathbf{H}) Step 1 Step 2 Attach Frame Side (B) to Frame back (A) and Frame seat (C), use allen

key (K) to tighten Bolt (F) and Screw (H).

Attach Frame back (A) to Frame Seat (C), use allen key (K) to tighten Bolt (G) and Washer (I).

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

3 4 D D E Step 3

Attach Ensure all screws are fully locked into position. Place Seat Cushion (E), Back Cushion (D) into the Chair. The Chair is ready to be used.

