

LEG ASSEMBLY

Four (4) legs
Twelve (12) screws



WARNING: Do not use this heater with missing, damaged, or broken legs.

Tools required: Phillips Screwdriver

Lay stove upside down on a padded surface to avoid scratches to the surface of your stove.

Line up holes in the leg with holes in the underside of the stove body. With the use of the screwdriver secure leg with the screws provided (3 screws per leg) as shown in the figure below.



LOCATING YOUR ELECTRIC FIREPLACE

Your new freestanding electric fireplace may be installed virtually anywhere indoors in your home. However, when choosing a location for your new electric fireplace, ensure that the general instructions and warnings from pages 3 and 4 are followed. For best results, install the electric fireplace out of direct sunlight.

- If you are placing the heater in an alcove, make sure that there is at least 6 inches of space on all sides to ensure good air circulation.
- The fireplace heater must not be located over a fixed electrical socket. The socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance.
- Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the heater where it may fall into a bathtub or other water container. Do not use your heater outdoors. Do not use near sinks, swimming pools or other damp areas such as flooded basements, garages, etc or anyplace where the heater could come in contact with water.

