WLSFB INSTRUCTION MANUAL

(record your personal 3-8 digit security code)

(Wall Safe Serial Number)

COMPLETE & SUBMIT REGISTRATION CARD TO VERIFY OWNERSHIP KEEP THIS MANUAL AND SALES RECEIPT FOR FUTURE REFERENCE

If you experience a problem or have questions, visit http://www.buffalotools.com or call Customer Service at 1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time. A copy of the sales receipt is required.





You will use the key to open the safe for the first time. Insert the key and turn it counter clockwise. Then turn the knob clockwise.

Install 4 (four) AA (1.5V) batteries. IMPORTANT: You must reprogram your 3-8 digit security code after you change batteries.

The factory set security code is: 1, 5, 9, #.

(You should change the code as soon as possible after opening the safe to insure proper security.)

After you have entered the factory code, you will need to **turn the handle clockwise to open the door**. You will have 5 seconds to turn the handle before the locking mechanism is reactivated.

SECURITY NOTE: If you enter the wrong combination 3 times, the safe will automatically lock. You will then have to use the emergency key to open the unit and disable the Beeping Alarm. (Remove the battery to disable the beeping alarm.

ENTERING YOUR SECURITY CODE

To enter your own personal security code, follow the steps listed below.

- 1. After opening the electronic safe door (with the preset factory code of 1, 5, 9, #), locate the small red button on the inside of the door near the hinge.
- Press the red button and then release it. You will hear a beep. The yellow light on the faceplate
 will be activated and will stay on for a period of time that should allow you to enter your code.
 DO NOT SHUT THE DOOR UNTIL YOU HAVE CONFIRMED THAT THE NEW SECURITY
 CODE HAS BEEN ENTERED CORRECTLY.

If the code fails, follow steps 1 and 2 again. If the code works successfully, record your combination number on the front of this form or somewhere in your records, then you should lock the safe. When you open the safe in the future, enter the security code you have set followed by the "#" symbol. If the incorrect security code is entered 3 times, you will have an automatic lockout for 20 seconds before you can try your code again. If the incorrect security code is entered 3 additional times, there will be a 5-minute lockout before the code can be retried.

BATTERY INSTALLATION

Note: When changing the battery, always hold the battery connecting cap while disconnecting or attaching the battery. Do not pull on the wires. Doing this could cause the power supply to become disconnected from the lock.

This lock requires 4 AA batteries. Under normal use, batteries will last about 1 year. When the battery is low and you press a button on the keypad, a red light will come on warning you that the battery is low.

To test the battery, enter your security code. If the batteries are low the red light will come on momentarily. To replace the battery, remove the cover by pressing the tab and turning the cover as shown in the illustration below. Replace the old batter and screw the cover back in place.

TROUBLE KEY/OVERRIDE KEY

A "Trouble Key or Override Key" has been included in the event that you have forgotten or lost your security code. Please record the number of your key in a safe location in the event the key needs to be replaced in the future. To open the safe using the trouble key, follow the steps below:

- 1. Remove the cover by turning the cover as shown in the illustration. The lock can hang by the connecting cable while unlocking the safe.
- 2. Insert the key in the key hole and turn clockwise 1/4 turn (until stopped) in order to unlock the safe.
- 3. Keep the door open until you have entered a new security code. Before entering your new security code remove the key and screw the cover back in place.
- 4. Enter your new security code.

REPLACEMENT TROUBLE KEY/OVERRIDE KEY

Verification of ownership is required in order to receive replacement key. Contact Customer Service at **1-888-287-6981** to verify registration, then complete the Replacement Form, along with required Service Fees. The Replacement Form must include the Serial Number and Lock number, and be notarized by a non-family member.