 
 



INSTALLATION GUIDS

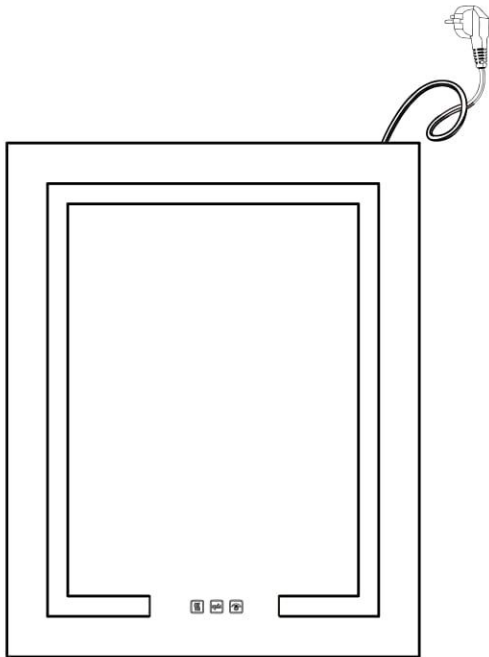


24"X36"

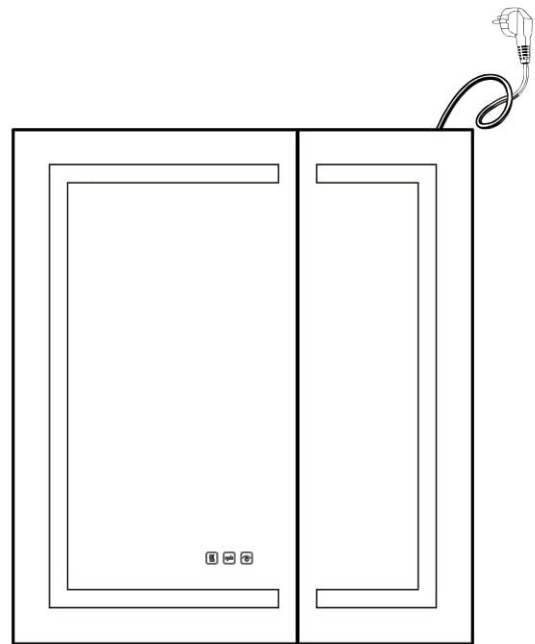

 30"X36"

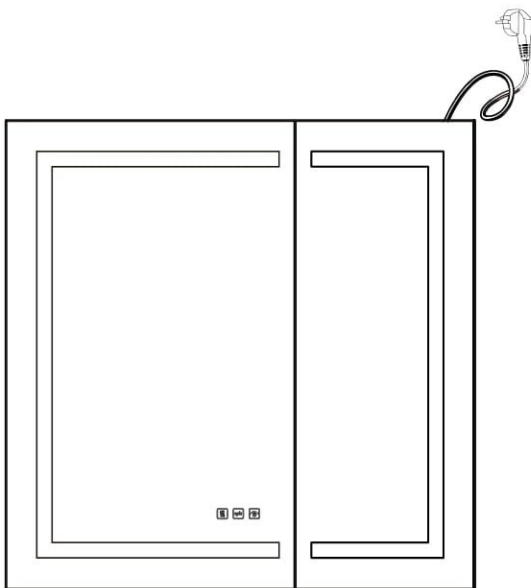

36"X36"

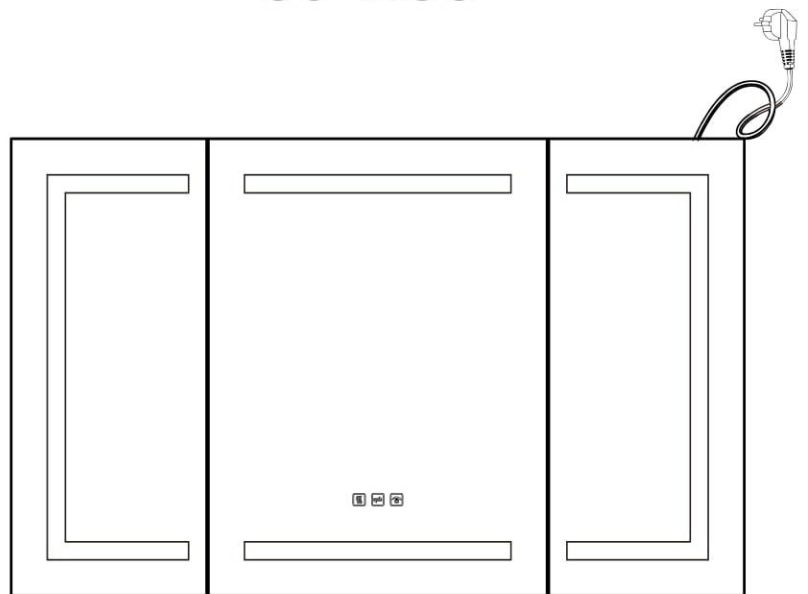 

48"X36"

flushbonading
wall-hung type



Risk of personal injury. To avoid possible situations. power to the circuit breaker or fuse box must be turned off before attempting any installation procedure


What you need to do before you start

- Check for shipping damage or missing parts immediately upon receipt of the product.
- Handle the product carefully to prevent all sides and edges of the glass from being struck.
- Make sure you have all the tools you need to get the job done.
- Make sure there are no hidden pipes or cables in the walls before drilling.
- If drilling into a tile, use a piece of masking tape on the tile to prevent the bit from slipping.

Installation preparation

- Clean with a soft cloth only after closing.
- Do not use cleaning agents or abrasives.
- Keep moisture away from the lamp.

TOOLS USE

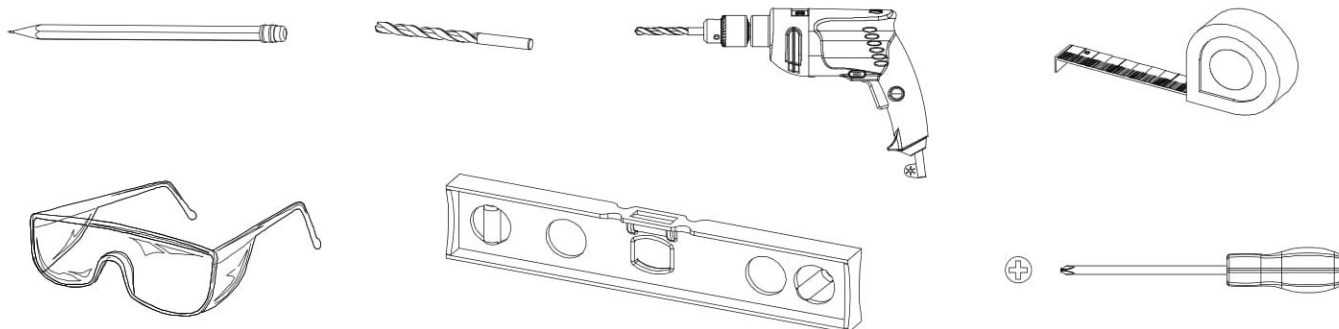

LED stripe Midel	2835 3 colors 192LED
Color stripe Midel	3000/4000/6000
Input	100-240V AC
Output	24V DC


ALL SIZE FOR YOUR CHICE!

SIZE	Input cuttent	Output cuttent	Outut voltage	Power wattage	ANTI-FOG	THREE TEMPERATURE	DIMMING	POWER PLUG	WALL SWITCH CONTROL	LIGHT MEMORY	BOTTEN NUMBER
24*36	100-240v	2.5A	24v	60w	✓	✓	✓	✓	✓	✓	3
30*36	100-240v	2.5A	24v	60w	✓	✓	✓	✓	✓	✓	3
36*36	100-240v	3.33A	24v	80w	✓	✓	✓	✓	✓	✓	3
48*36	100-240v	3.33A	24v	80w	✓	✓	✓	✓	✓	✓	3


Main product functions



 ANTI FOG

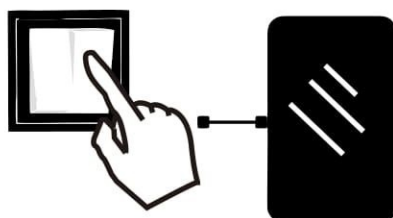

SUPPORT BY WALL SWITCH

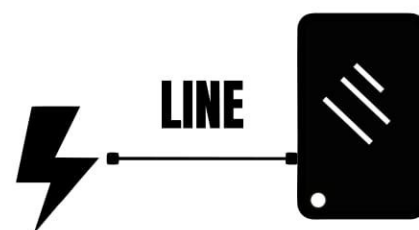 

SUPPORT BY LINE

 
White White

3000K 4500K 6000K




long press to light or dark


TEMPERATURE CHANGING

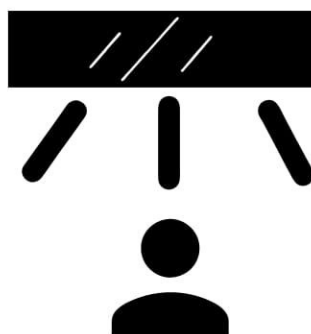


Front Light

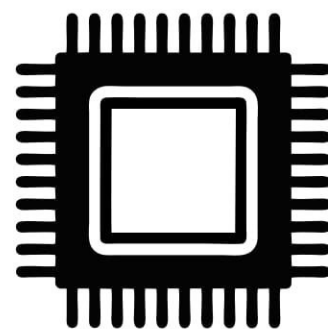 


BRIGHTNESS MEMORY




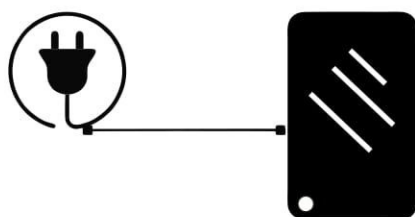 


SUPPORT BY CHARGER

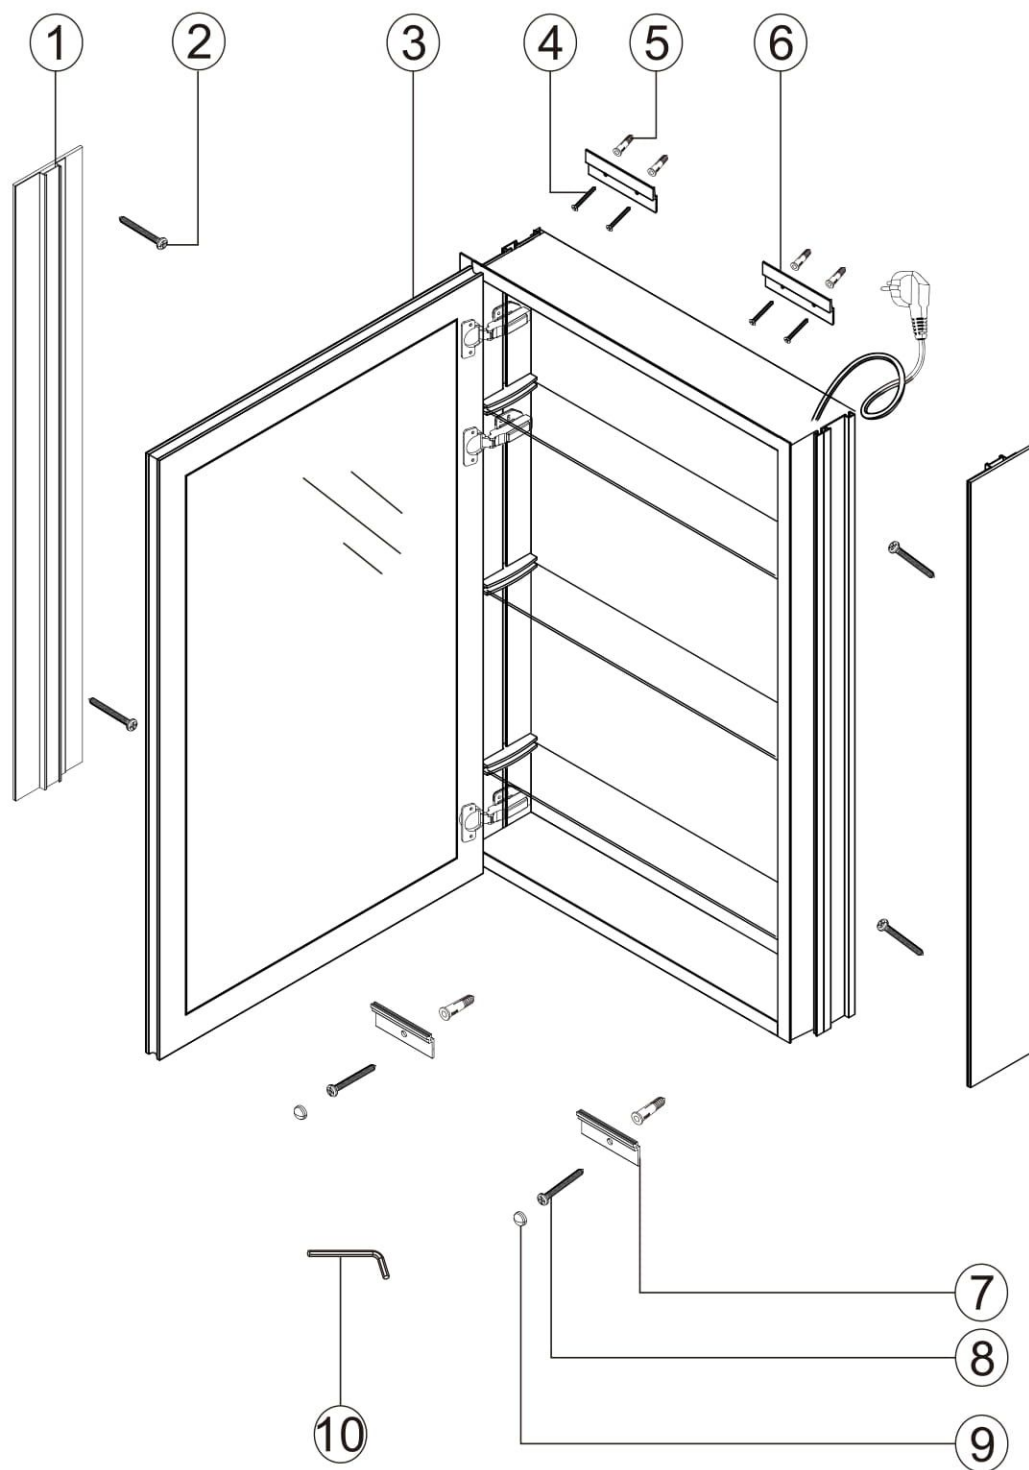 

 
1	 ×2	2	 ×4 PA4*6	3	 ×1
4	 ×4 KA4*40	5	 ×6	6	 ×2
7	 ×2	8	 ×2 PA4*40	9	 ×2
10	 ×1 2mm				

    flushbonading

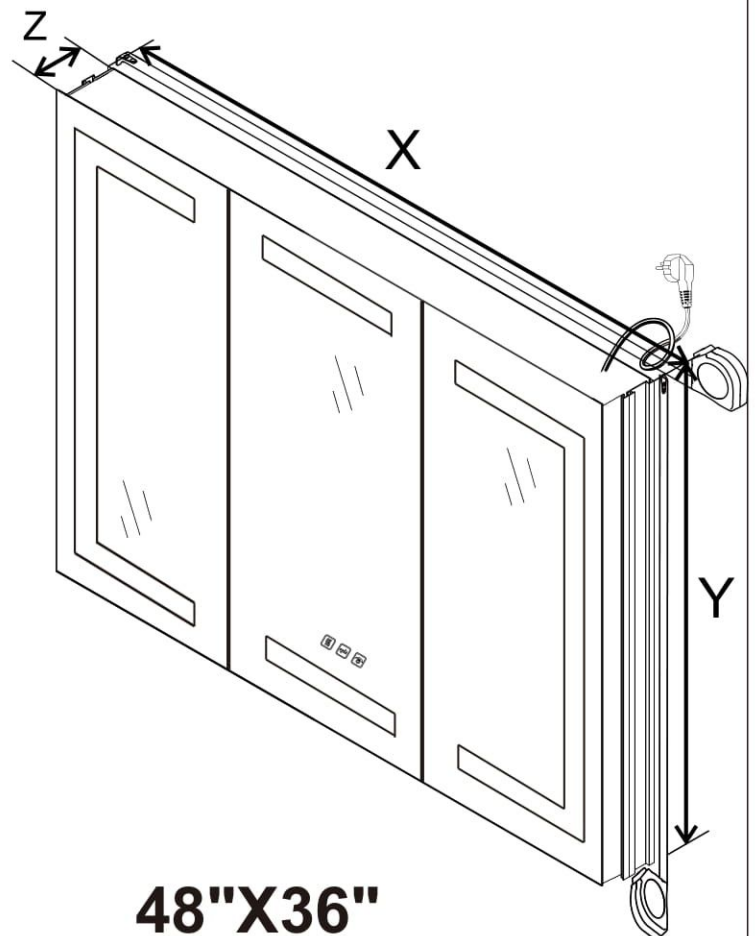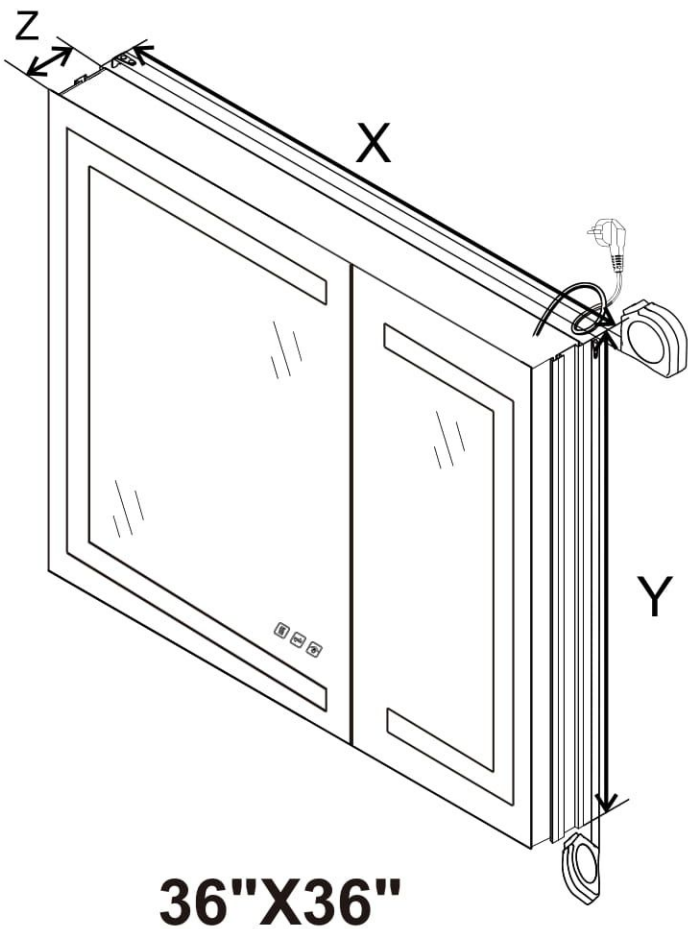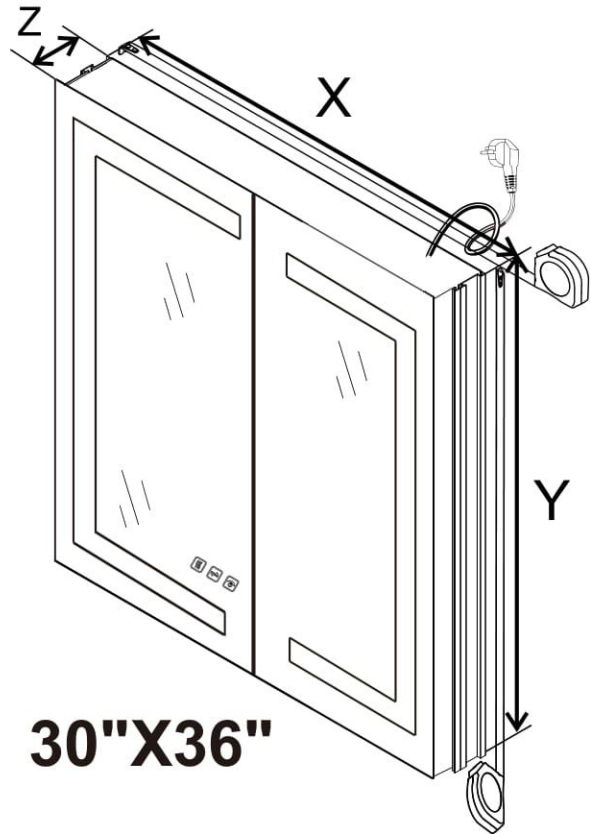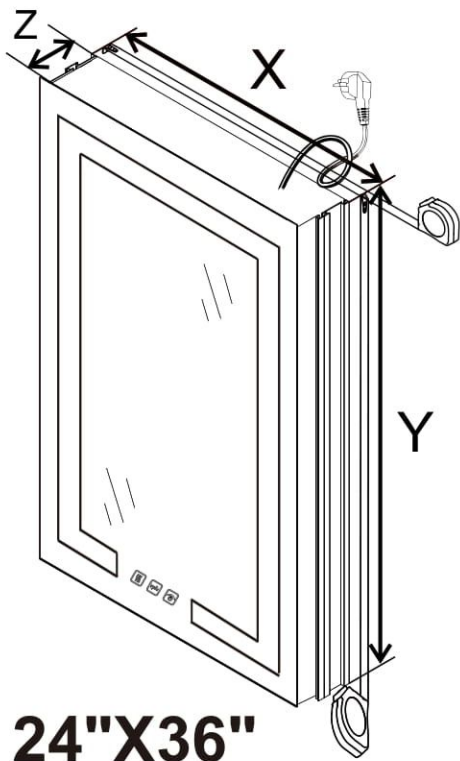


Measure product length and width

 
1

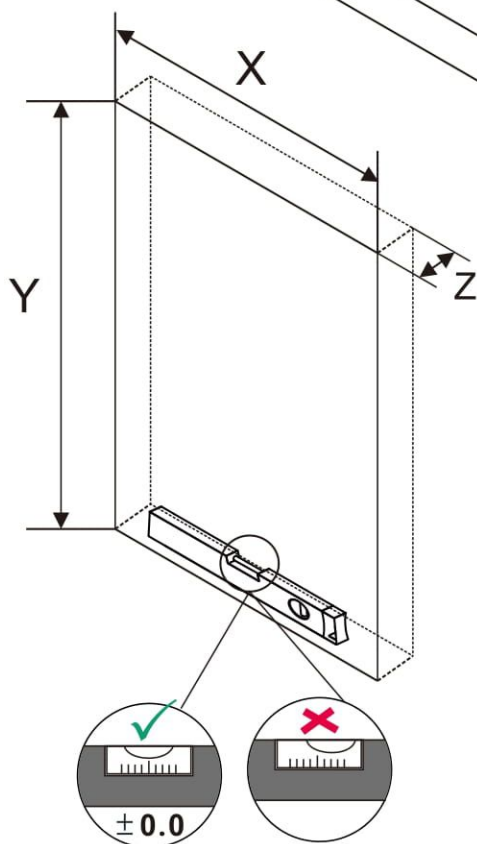


2

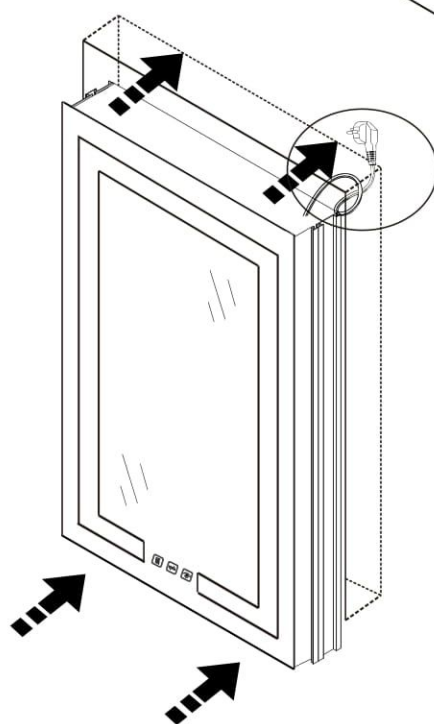 


Connect wires

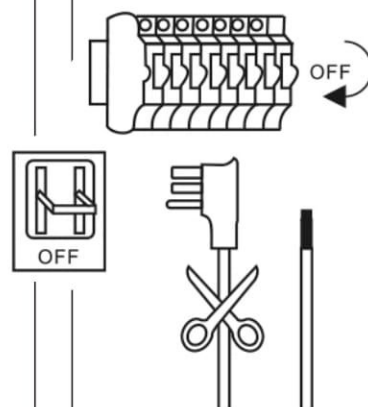 


3

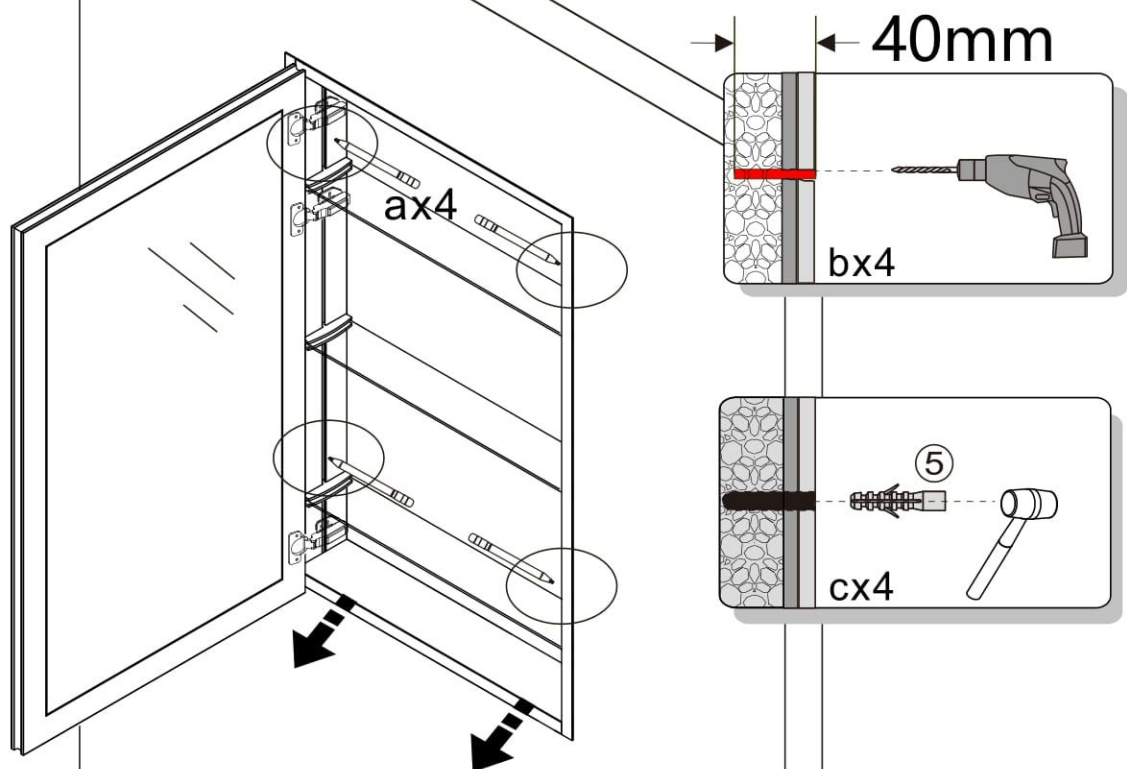 


4

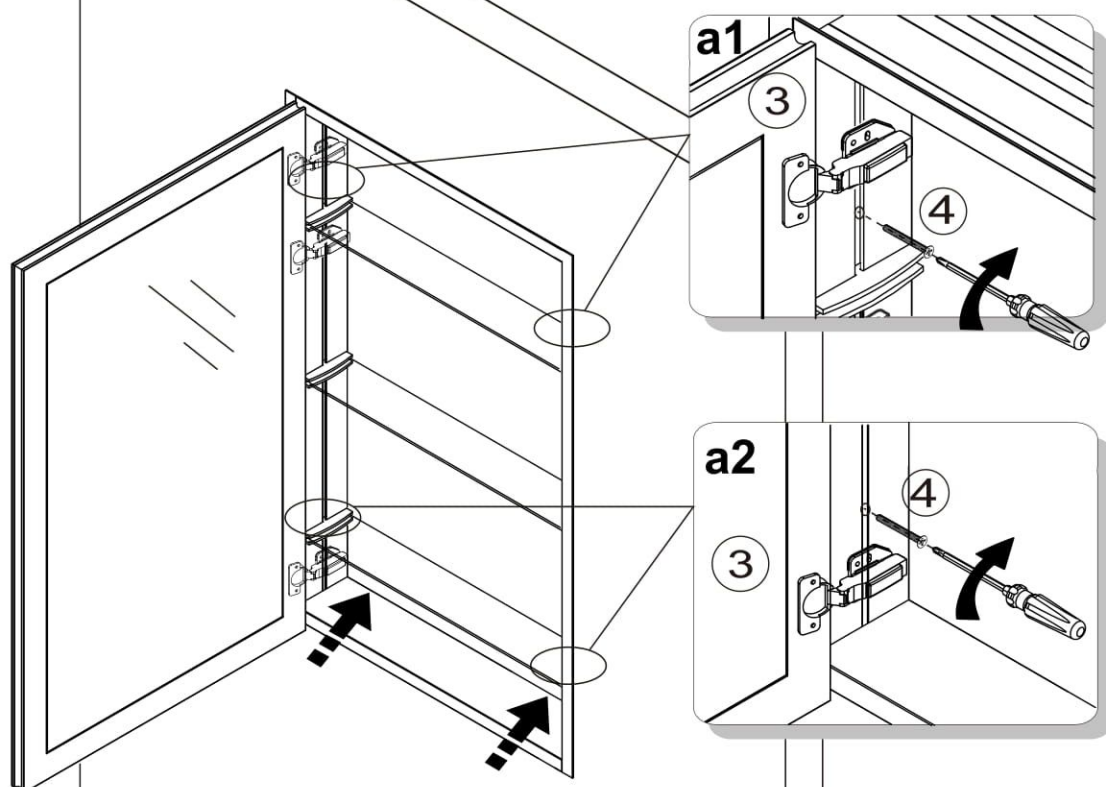 


5

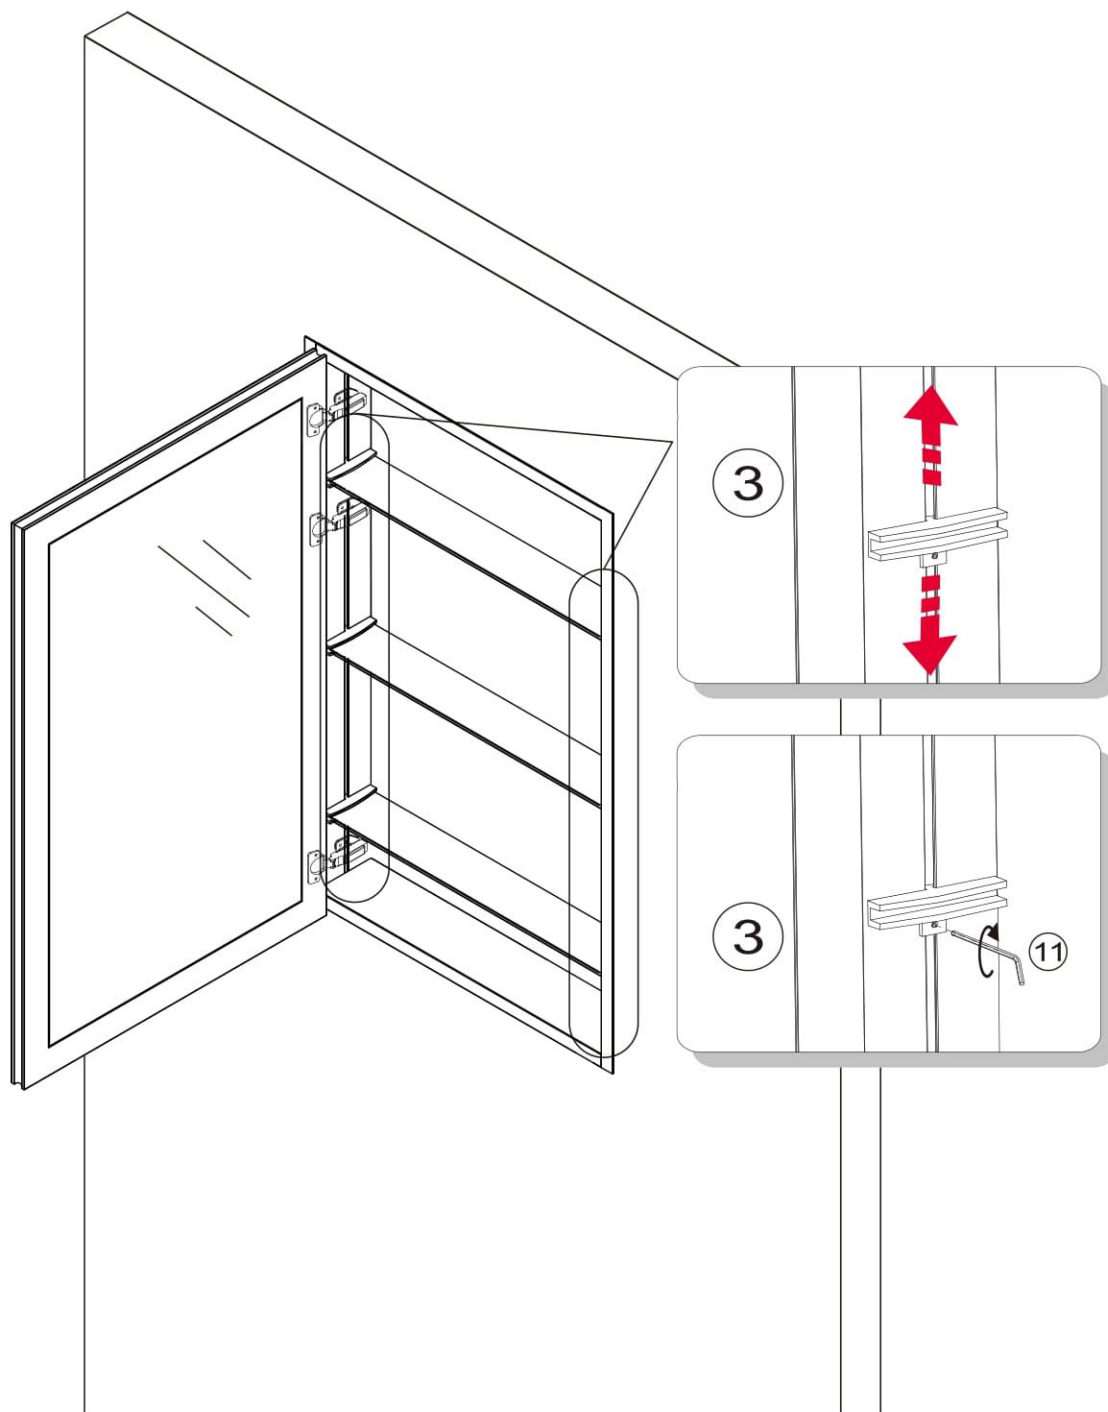 

6

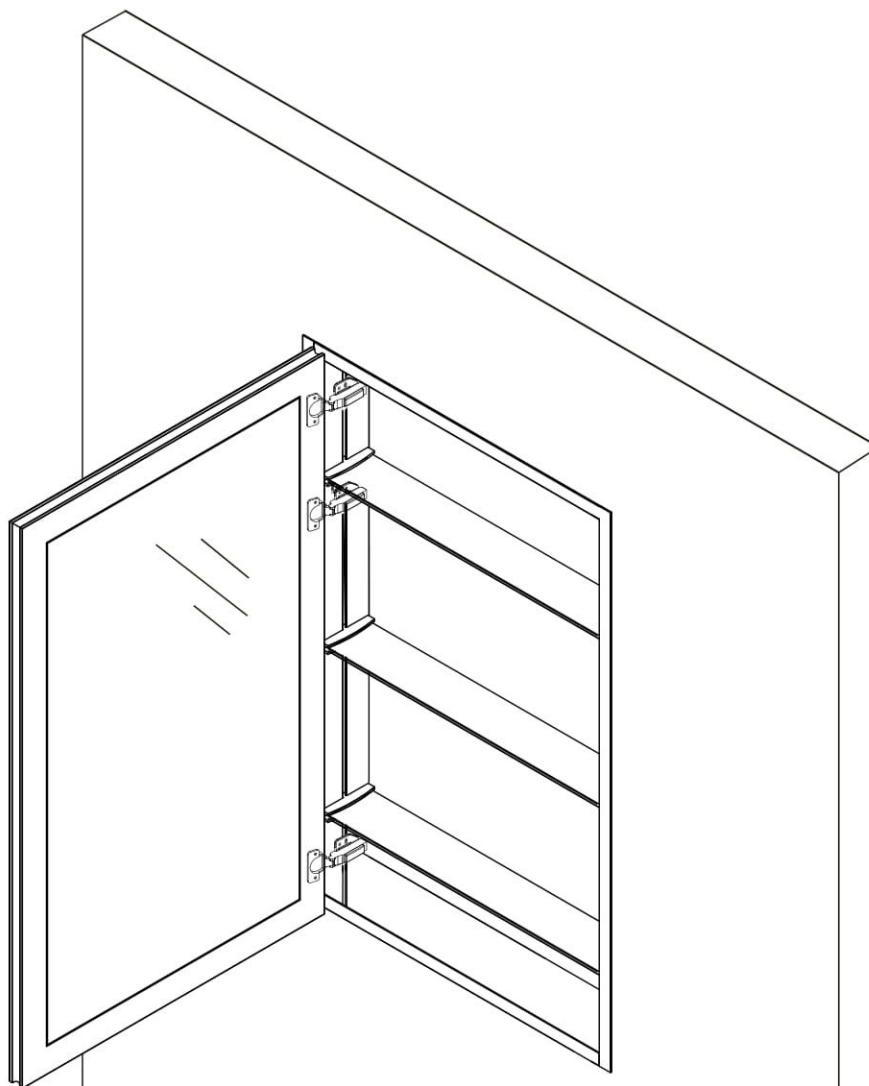 


a

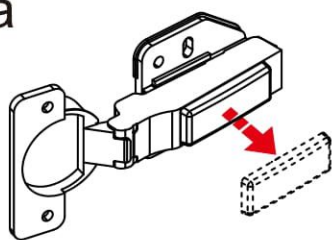 


Remove the lid

 
b

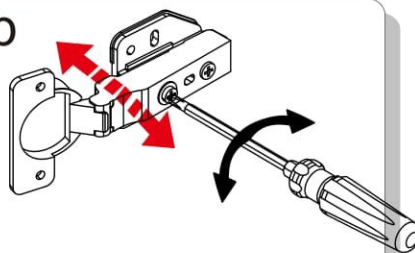


c

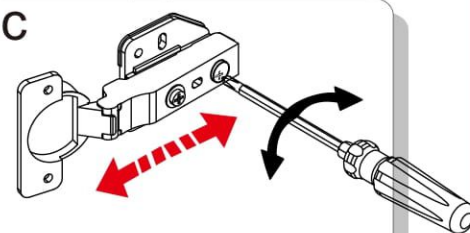 

d

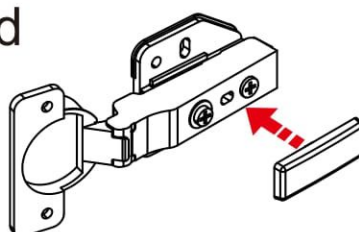 


wall-hung type

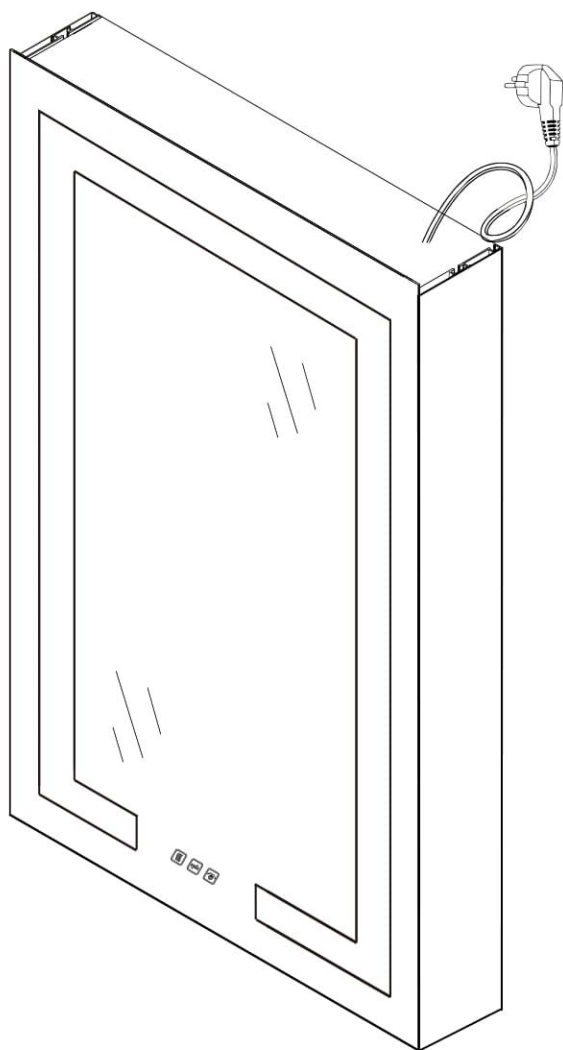 


1

④	 KA4*40	4
⑤		4
⑥		2





size	L
24"X36"	20.5"
30"X36"	24.5"
36"X36"	28.5"
48"X36"	36.2"

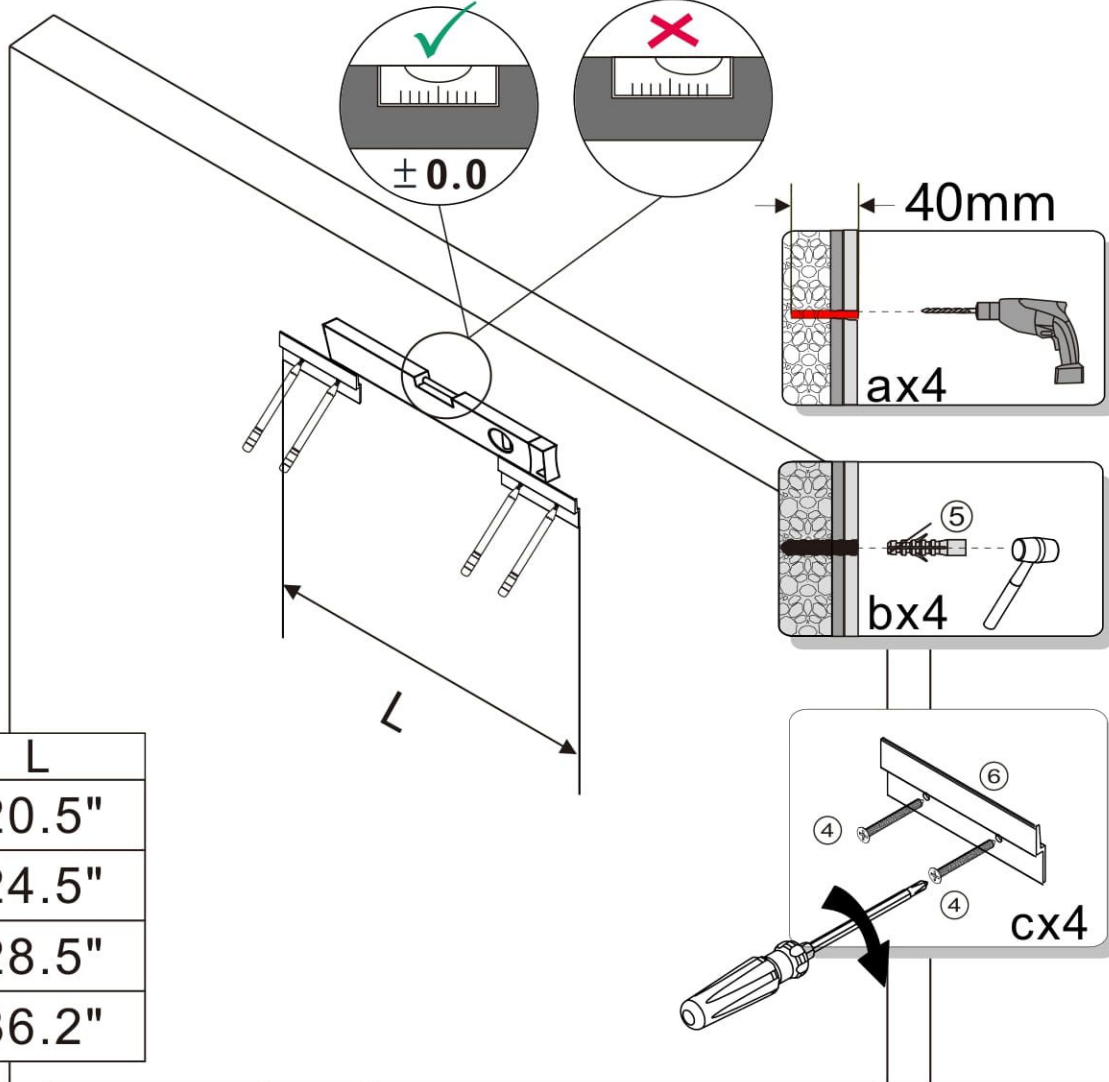 


2

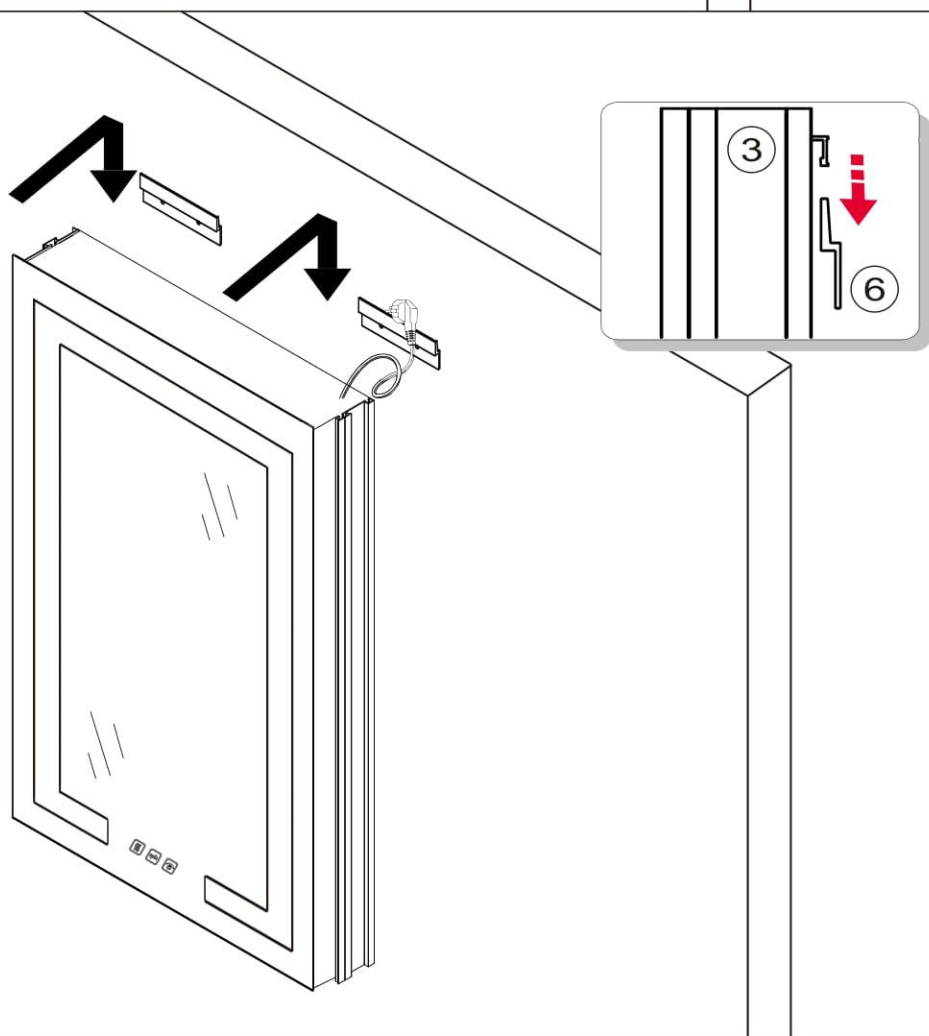 


3

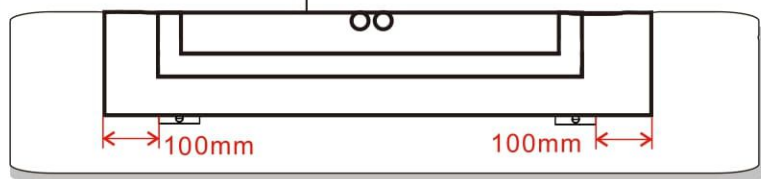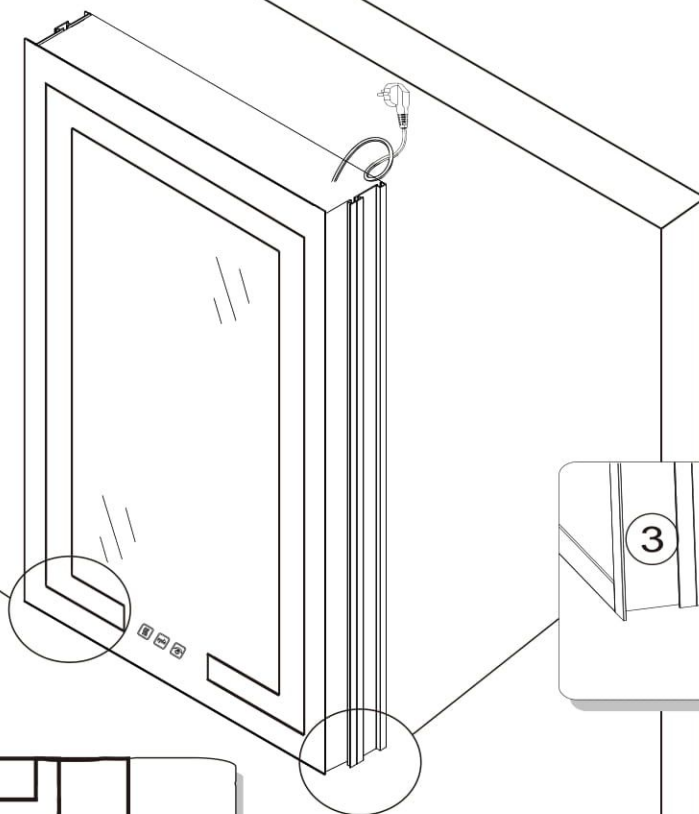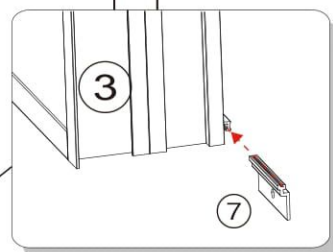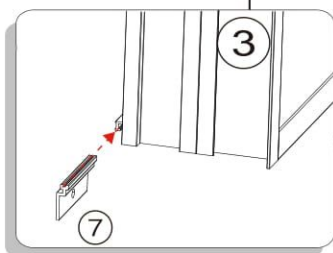    


4

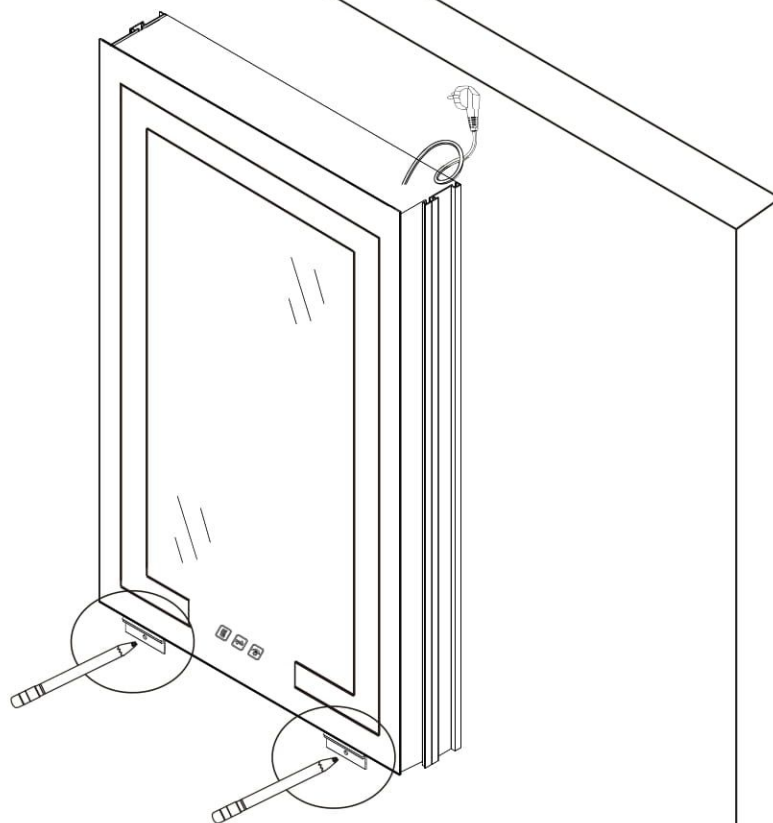 



5

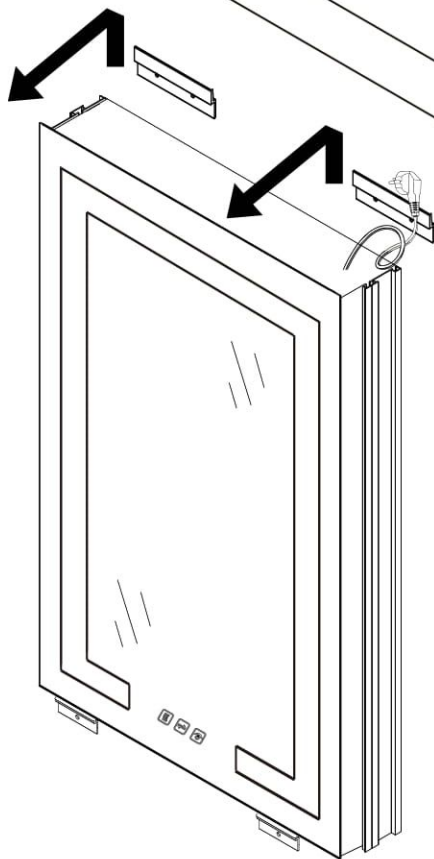 


6

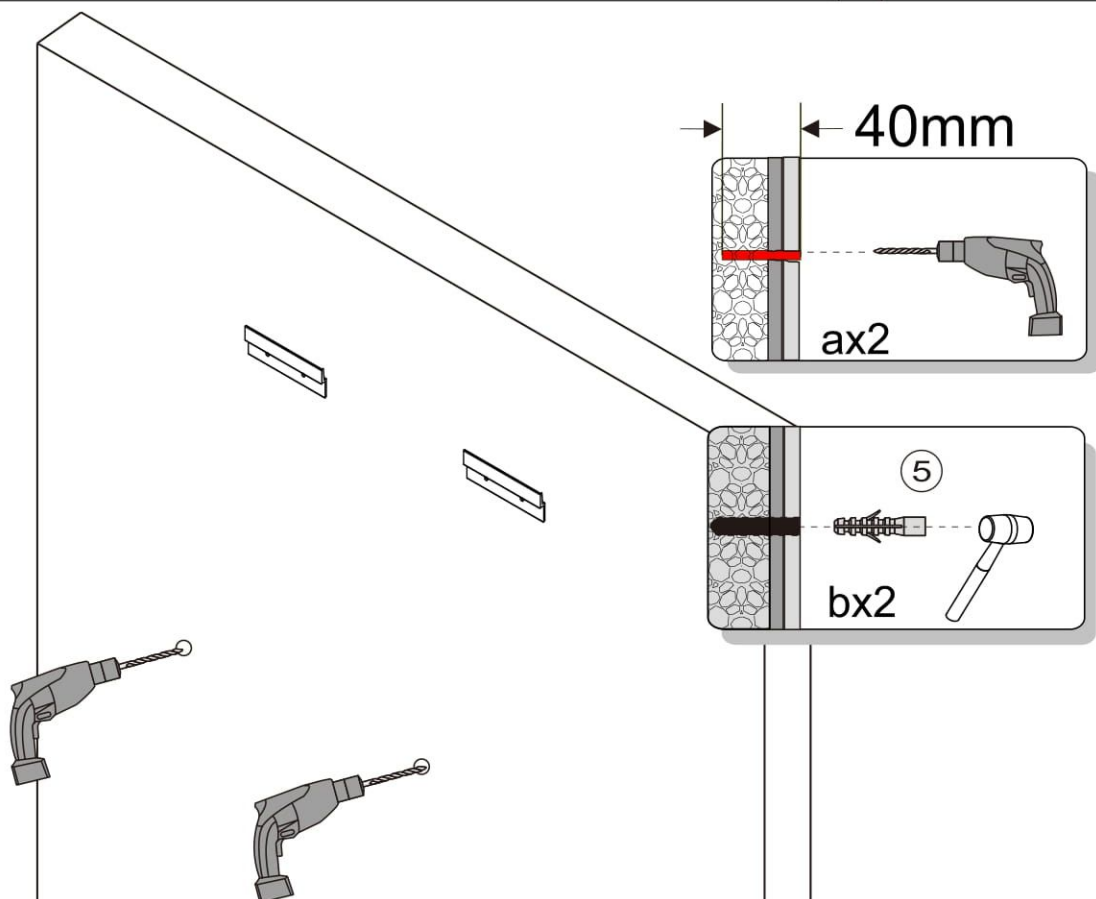 


7

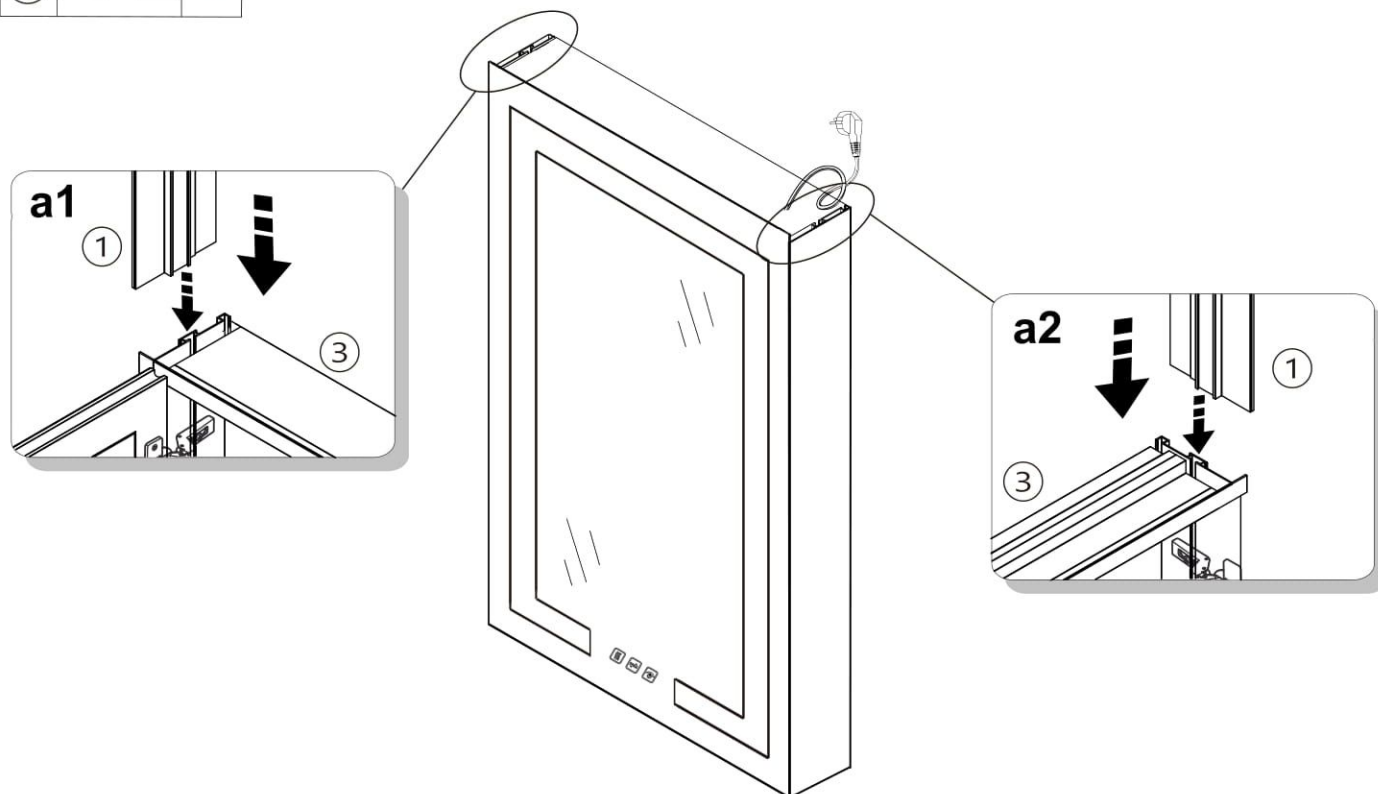  

8



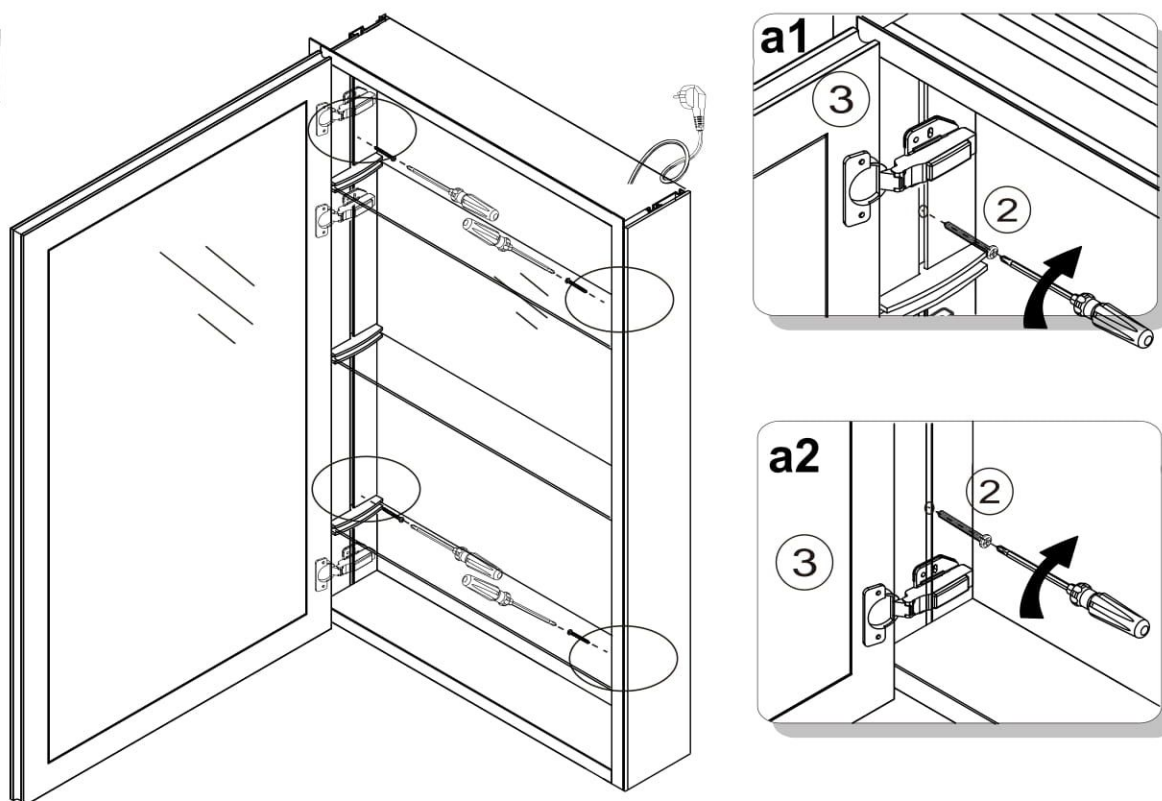 


9




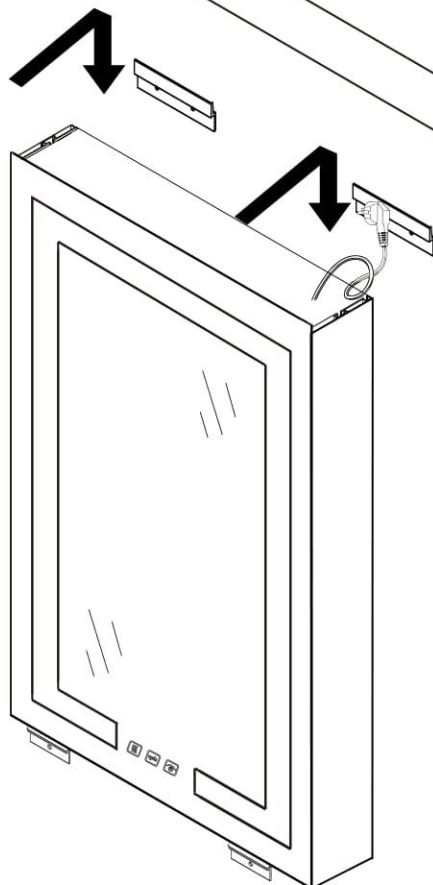 




10

8	 PA4*40	2
9		2

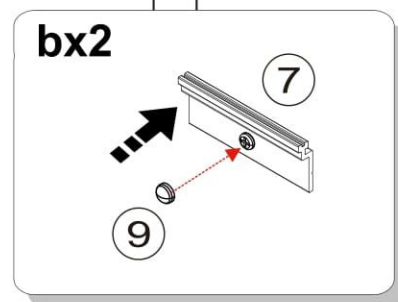 
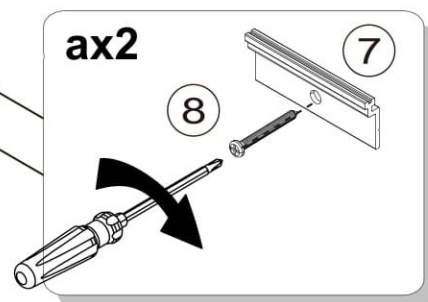 
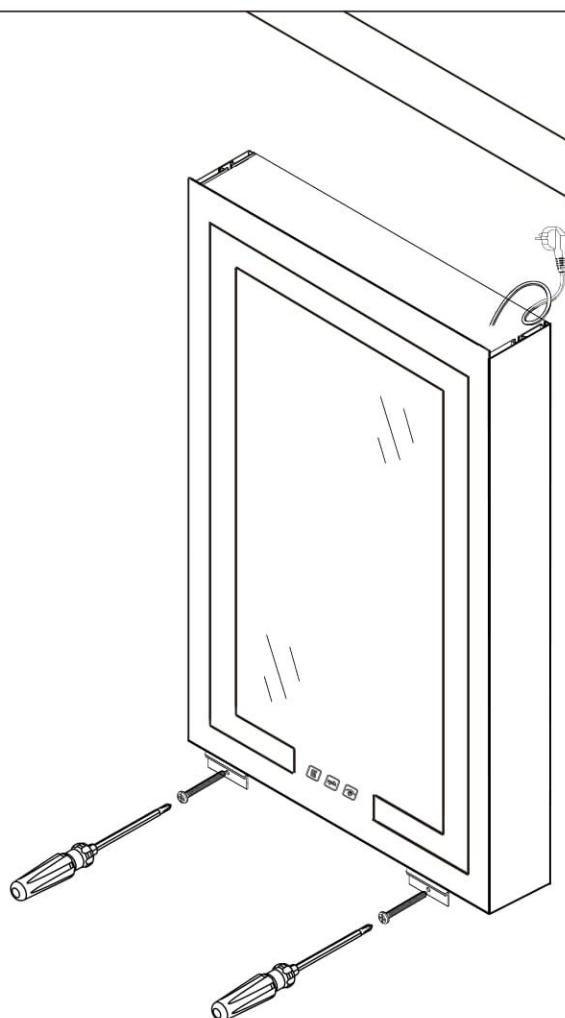 



11

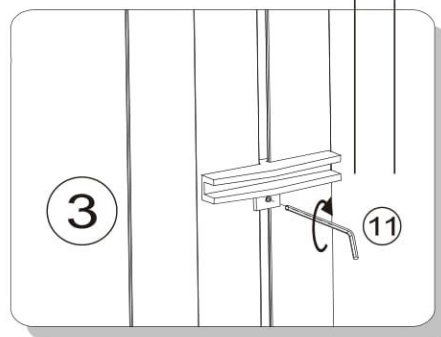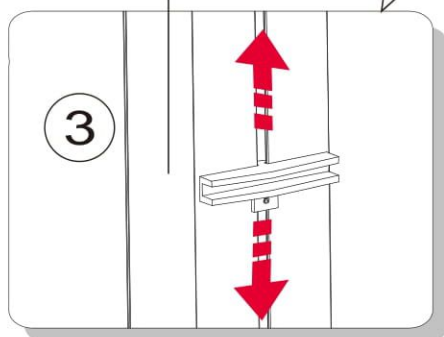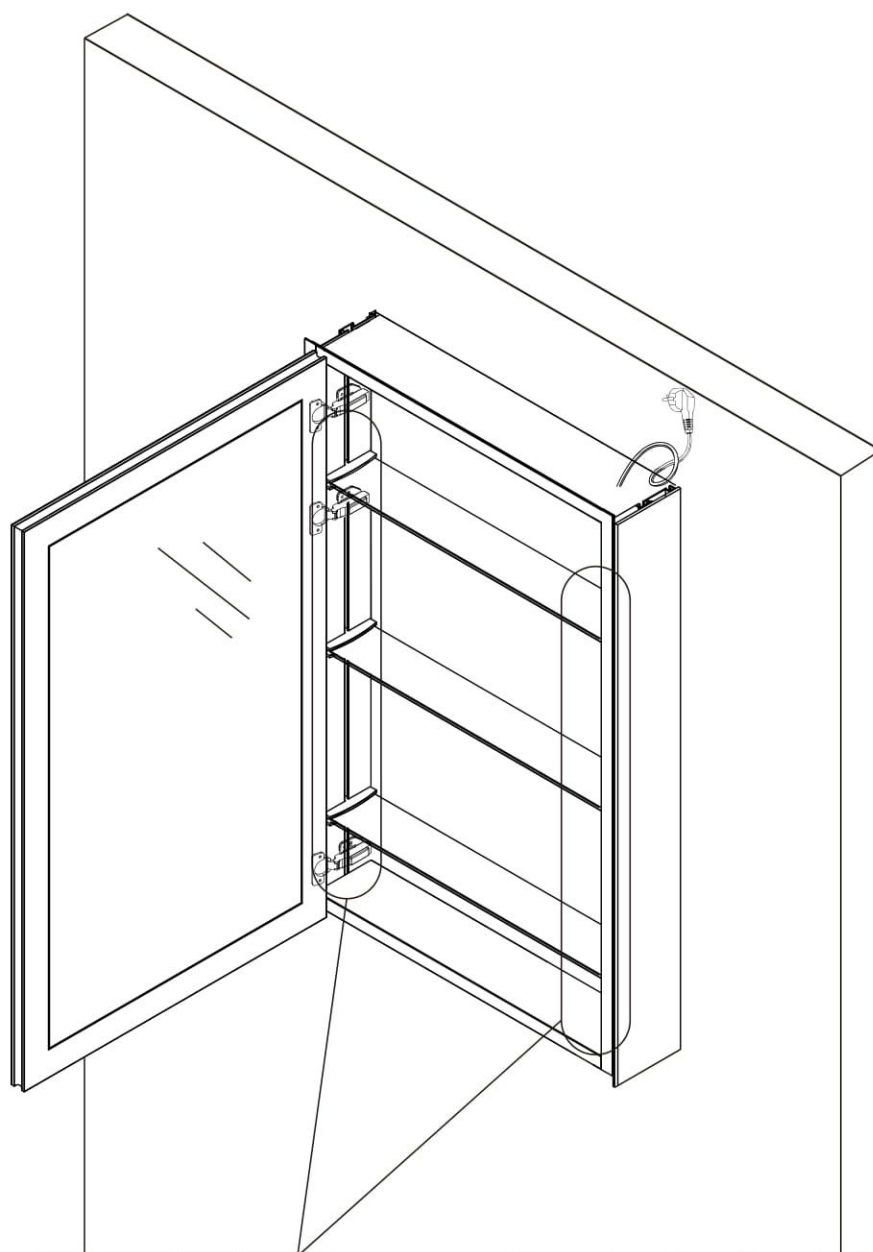    

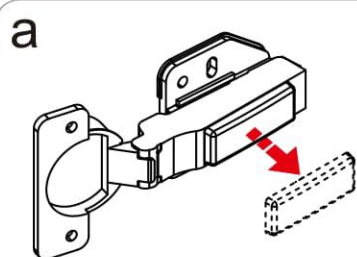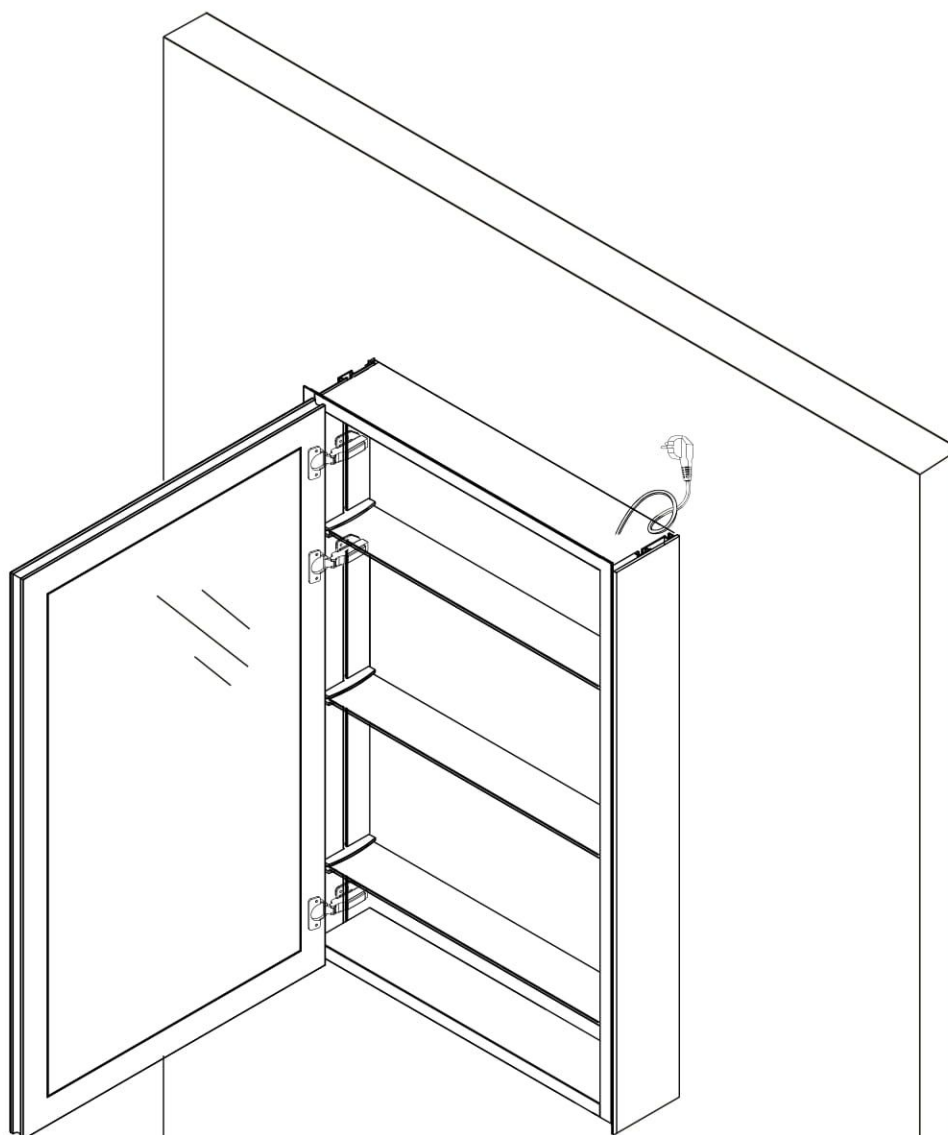  


Remove the lid

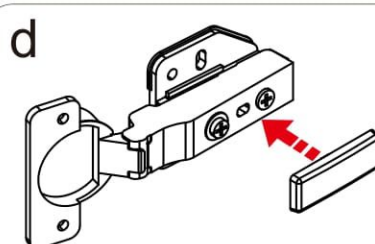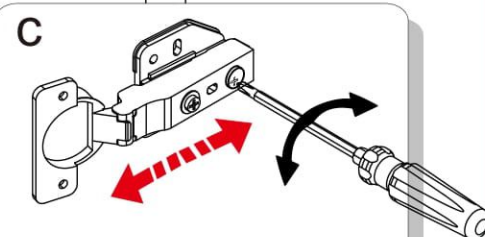  
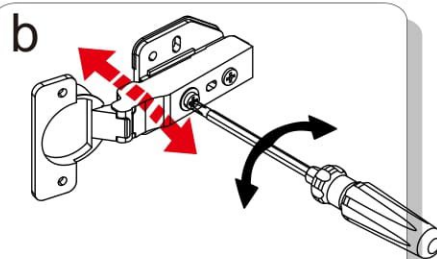 


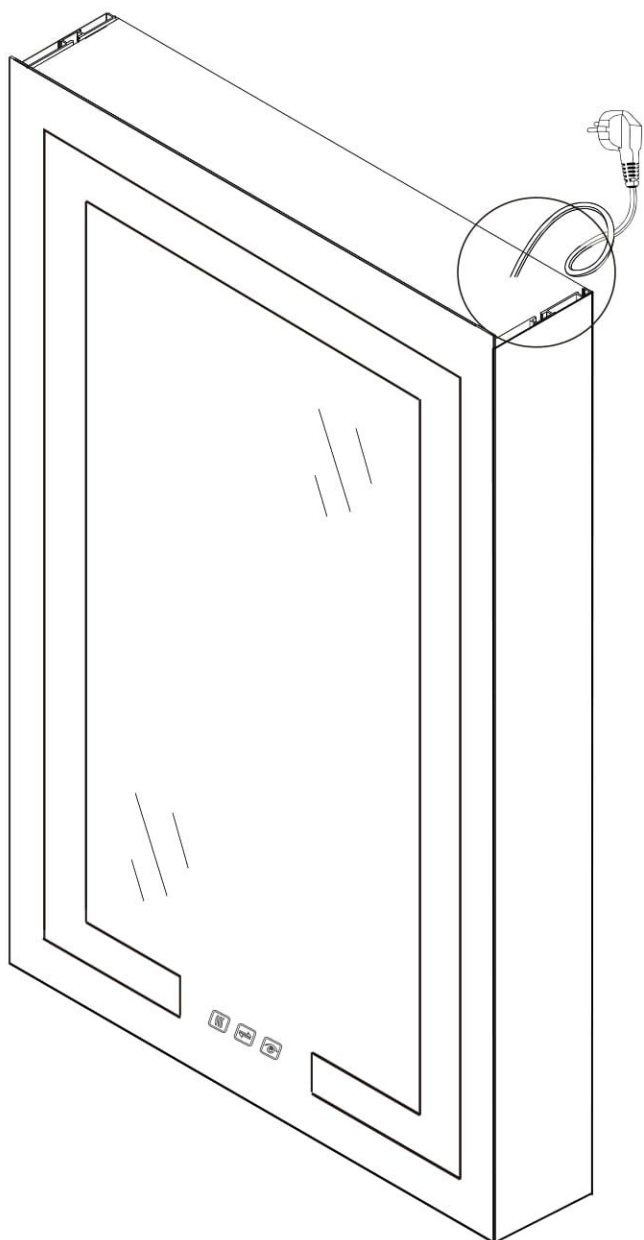 


1 STEP: Turn OFF power

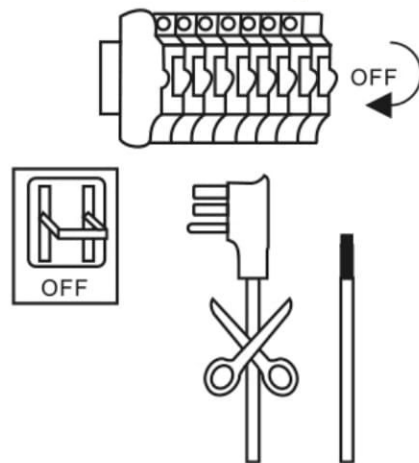 


2 STEP: Cut off the charger and wire.

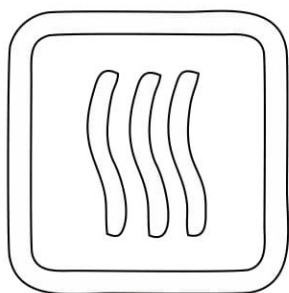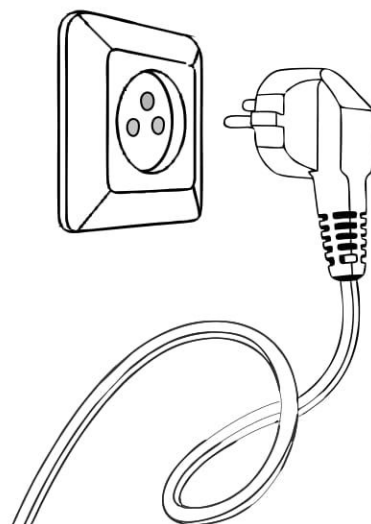  

Demister key

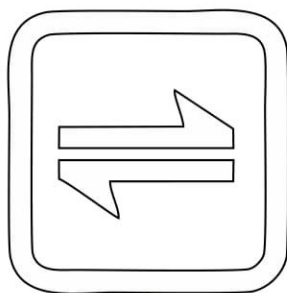 


Adjust color

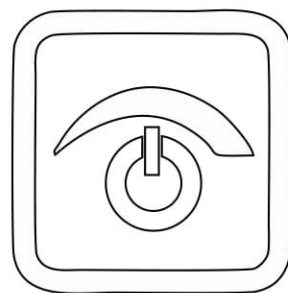 


Switch

 
ANTI-FOG ON/OFF(<1S)

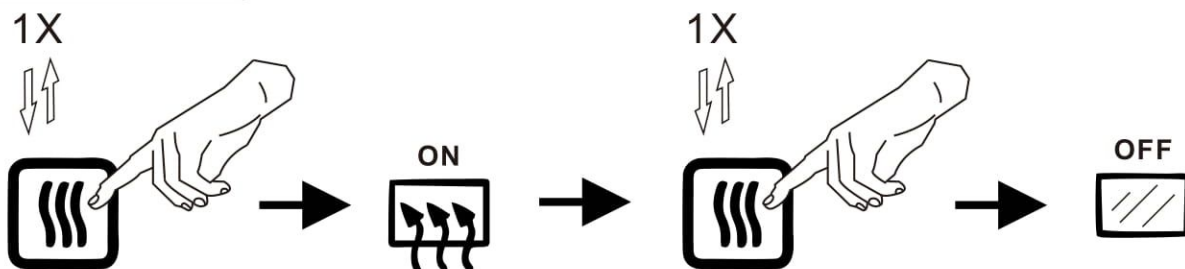

COLOR TEMPERATURE ADJUSTABLE

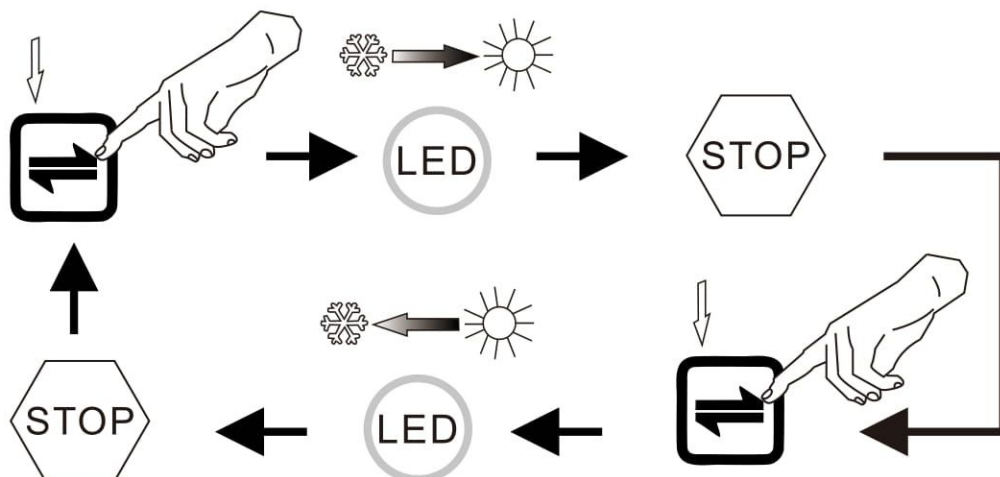 

DIMMABLE(Long touch>3s)

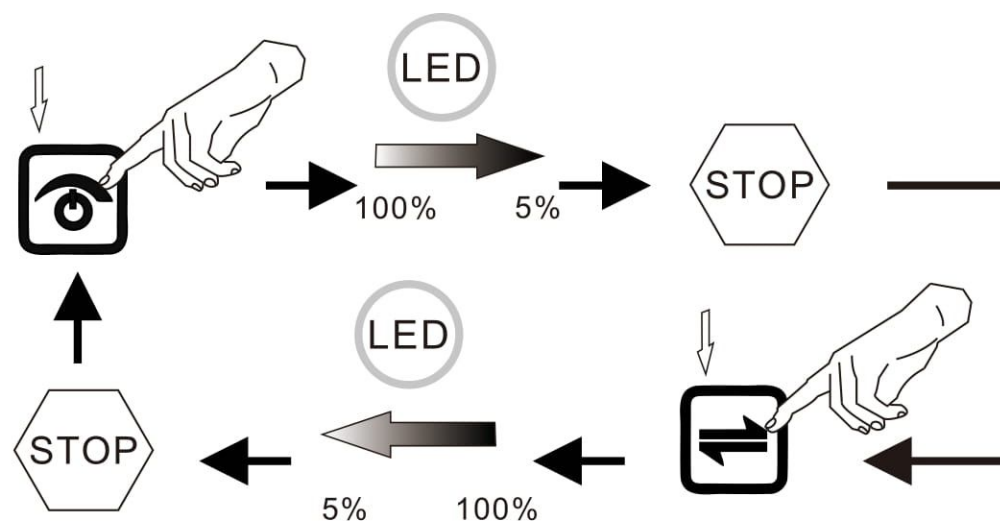 

POWER ON/OFF(<1S)

