 




 
CASASELECCIÓN®

123745,123746 INSTRUCCIONES DE MONTAJE

 
1

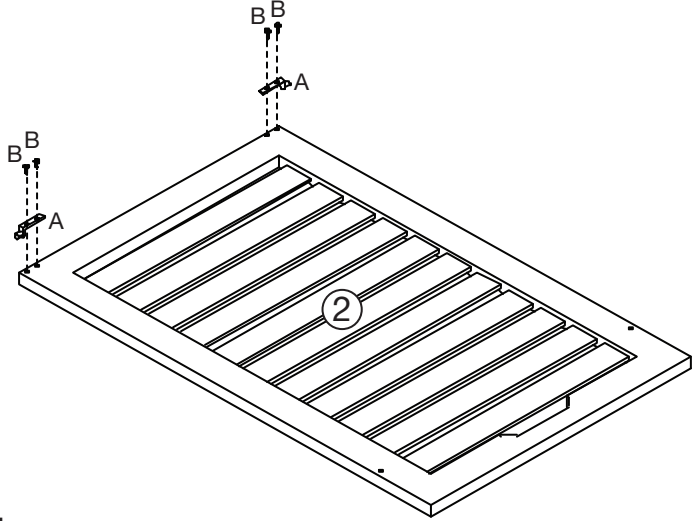

 
2

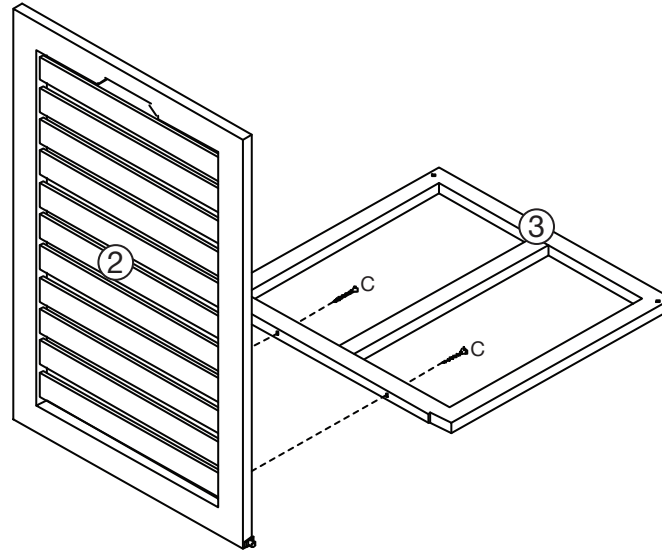

 
3

 
 
 
 
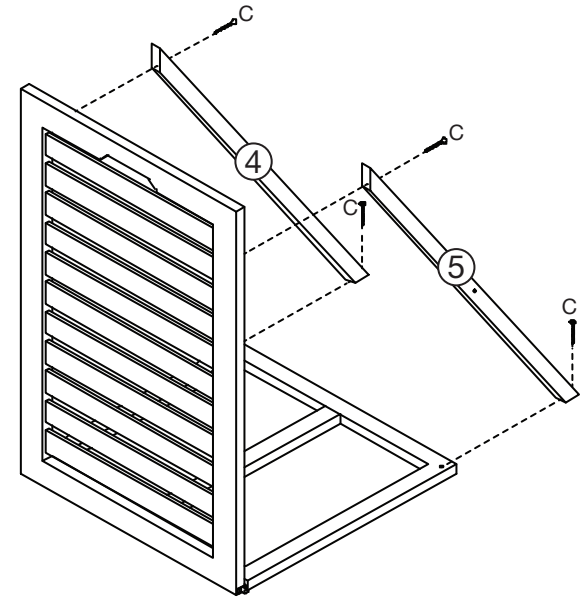 


4

 
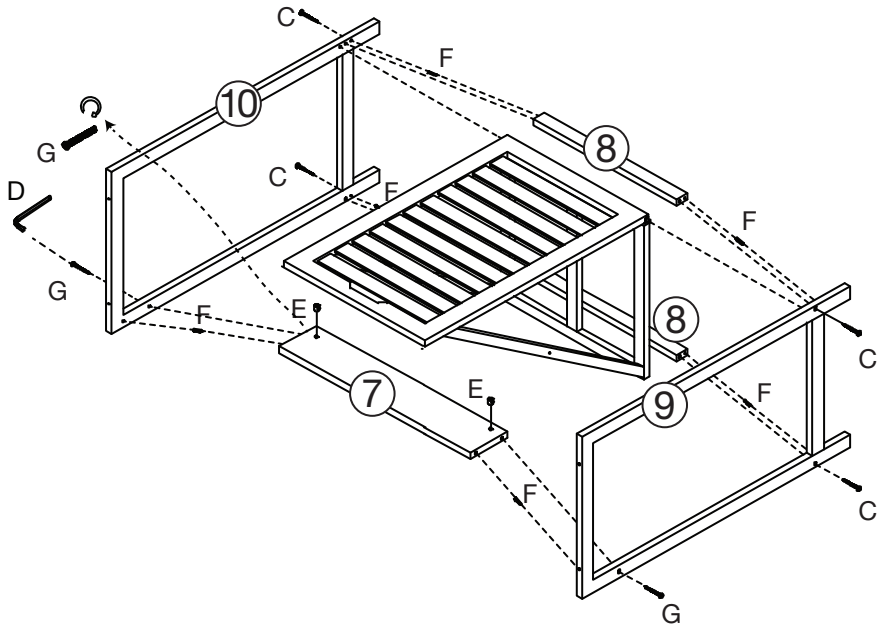 


 

 


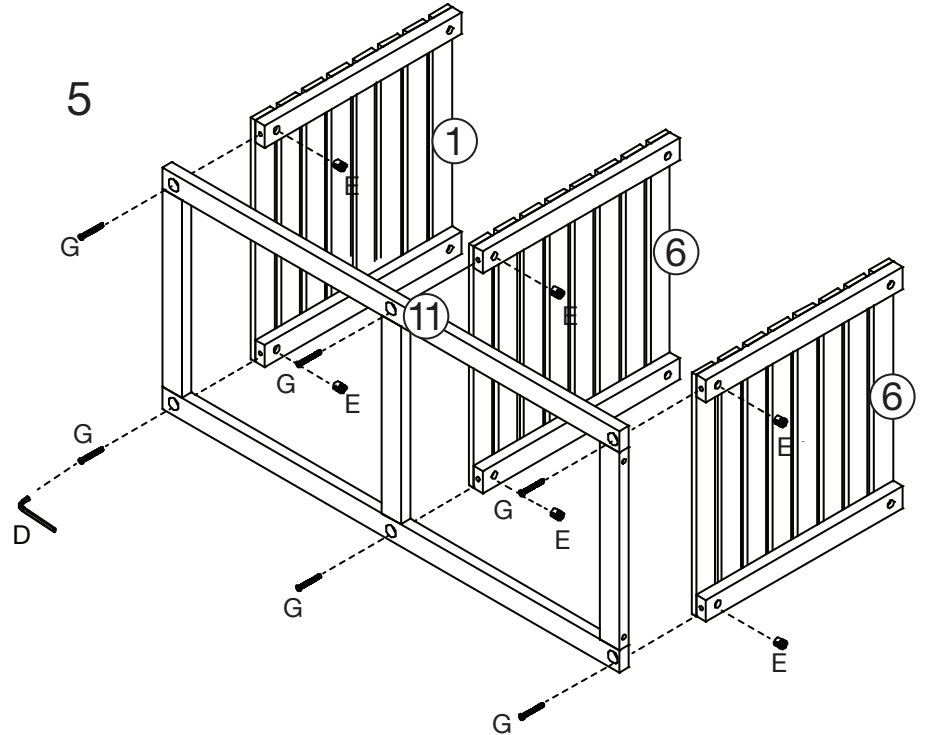
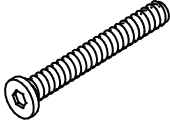 
 
 
 
 
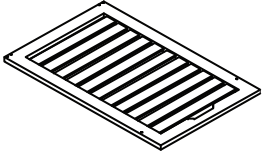 
 


 
 
 
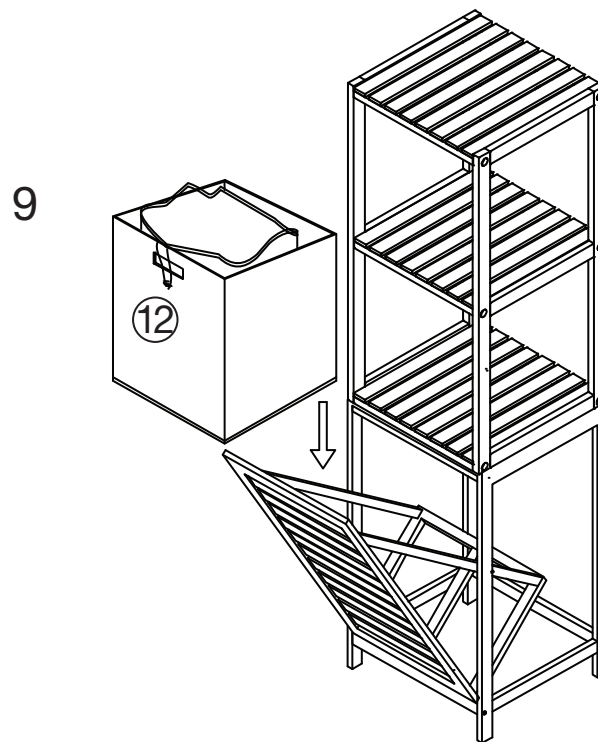 
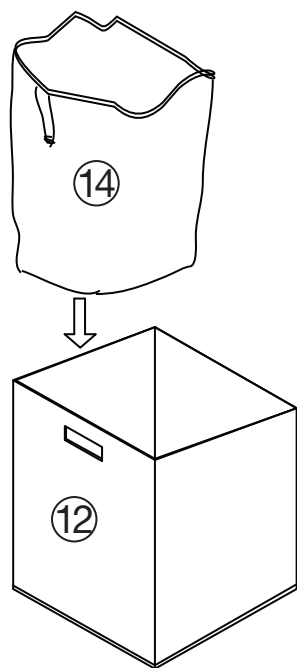 
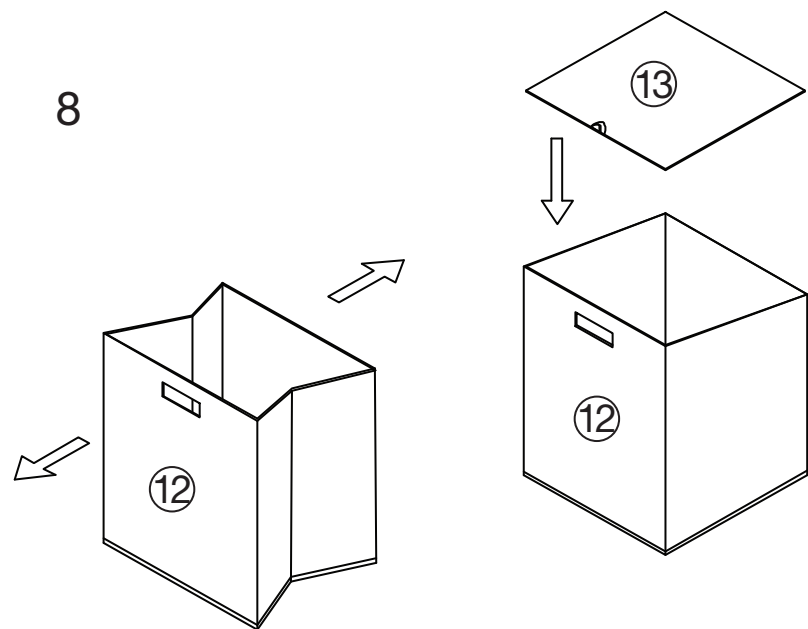 
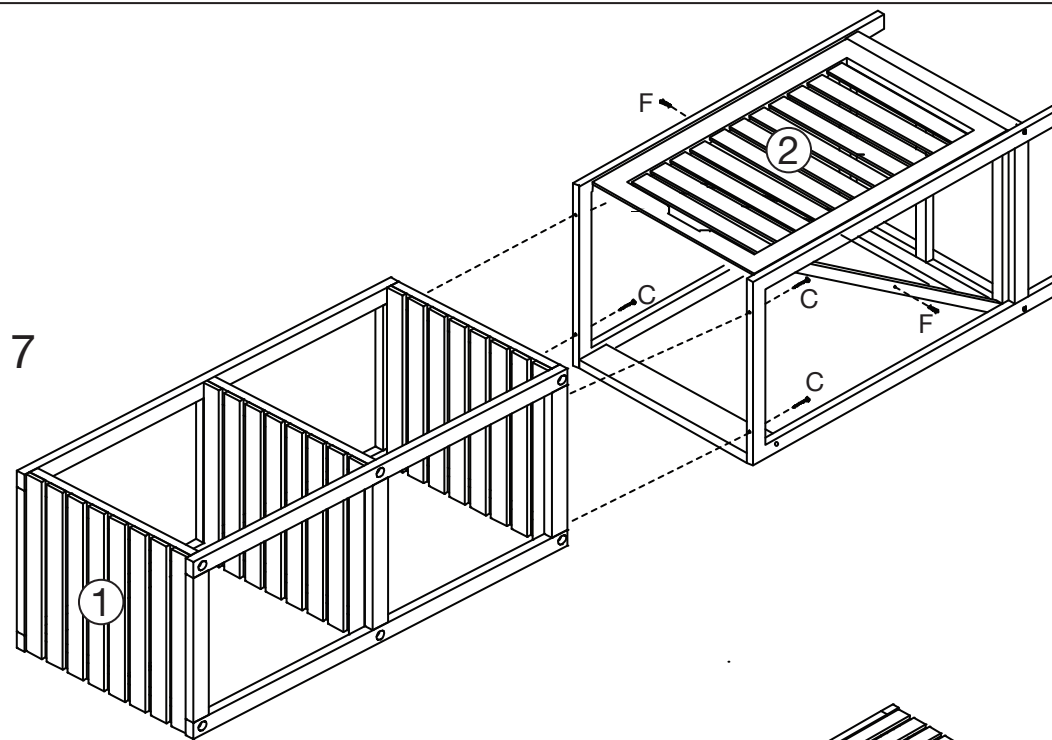 
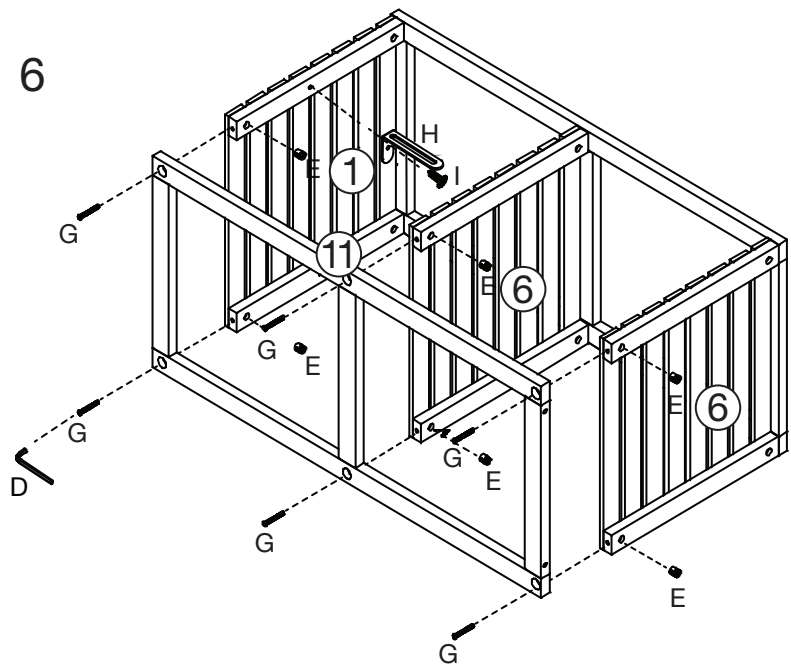 

5



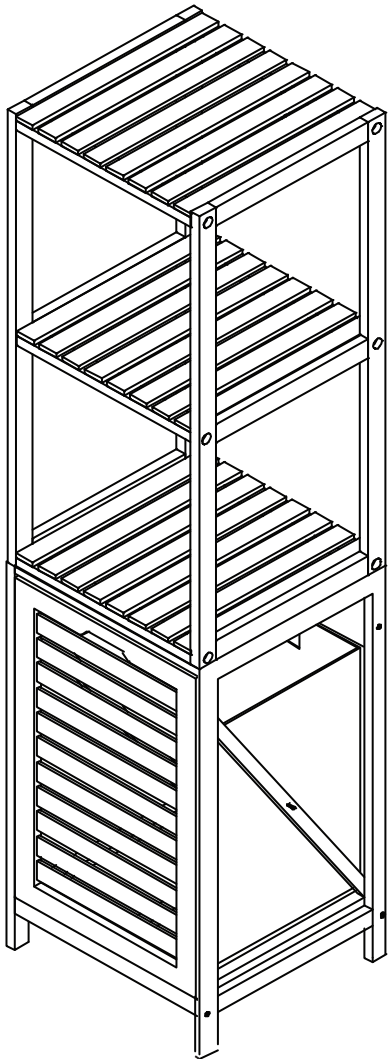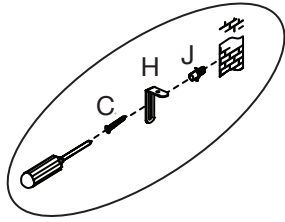

10

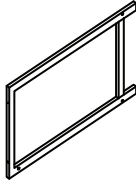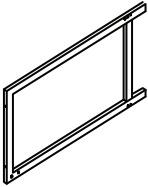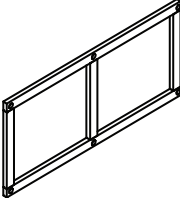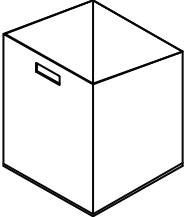

									
A	2 PCS	B	4 PCS	C	15 PCS	D	1 PC	E	14 PCS
									
F	8 PCS	G	14 PCS	H	1 PC	I	1 PC	J	1 PC
									
1	1 PC	2	1 PC	3	1 PC	4	1 PC	5	1 PC
									
6	2 PCS	7	1 PC	8	2 PCS	9	1 PC	10	1 PC
									
11	2 PCS	12	1 PC	13	1 PC	14	1 PC		