

1. Using two (D) screws, align and connect a Bottom leg (A) with a Middle leg (B). Then, using the (D) screws, align and connect the Middle leg (B) with a Top leg (C).
2. Repeat with the rest of the leg pieces until all three legs are assembled.
3. Stand up all three legs and slide the Lamp Holder (H) onto part (C) at the top. Take care that the holes in the Lamp Holder are properly aligned with the holes on the lamp's legs. To fasten the Lamp Holder to the legs, slide an Inner Hexagon Screw (F) into one of the holes and an Inner Hexagon Screw cup (G) into the hole on the opposite side. Place an allen key into both (F) and (G). Hold one in place and screw the other into it until tight. Repeat for the rest of the holes until all have been screwed in.
4. Screw the socket piece (H) onto the legs until tight.
5. Assemble the shade (instructions on back). Unscrew the socket Ring (J) from the socket, slide the shade onto the socket, and fasten by screwing the socket ring back onto the socket, until the shade is tightly secured.

IMPORTANT SAFETY WARNING:

AS A SAFETY FEATURE, IN ORDER TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS LAMP HAS A POLARIZED PLUG. THIS MEANS ONE PRONG IS LARGER THAN THE OTHER AND WILL ONLY FIT ONE WAY IN A POLARIZED OUTLET. IF THE PLUG DOES NOT FULLY FIT INTO THE OUTLET, TAKE IT OUT AND FLIP IT OVER, REINSERTING THE PLUG WITH THE PRONGS REVERSED. IF THE PLUG STILL DOES NOT FULLY FIT INTO THE OUTLET, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE THIS LAMP WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED INTO THE CORD'S SOCKET. NEVER PHYSICALLY MODIFY OR ALTER THE PLUG ITSELF IN ANY WAY.

Thank you for purchasing this Brightech product. We guarantee all of our products with a best-in-class warranty for any manufacturer defects. If you need assistance or are unsatisfied with your purchase, PLEASE REACH OUT TO US DIRECTLY at wecare@brightech.com or file a warranty claim at <https://www.brightech.com/pages/warranty-reques>

