 


Entertainment Stand

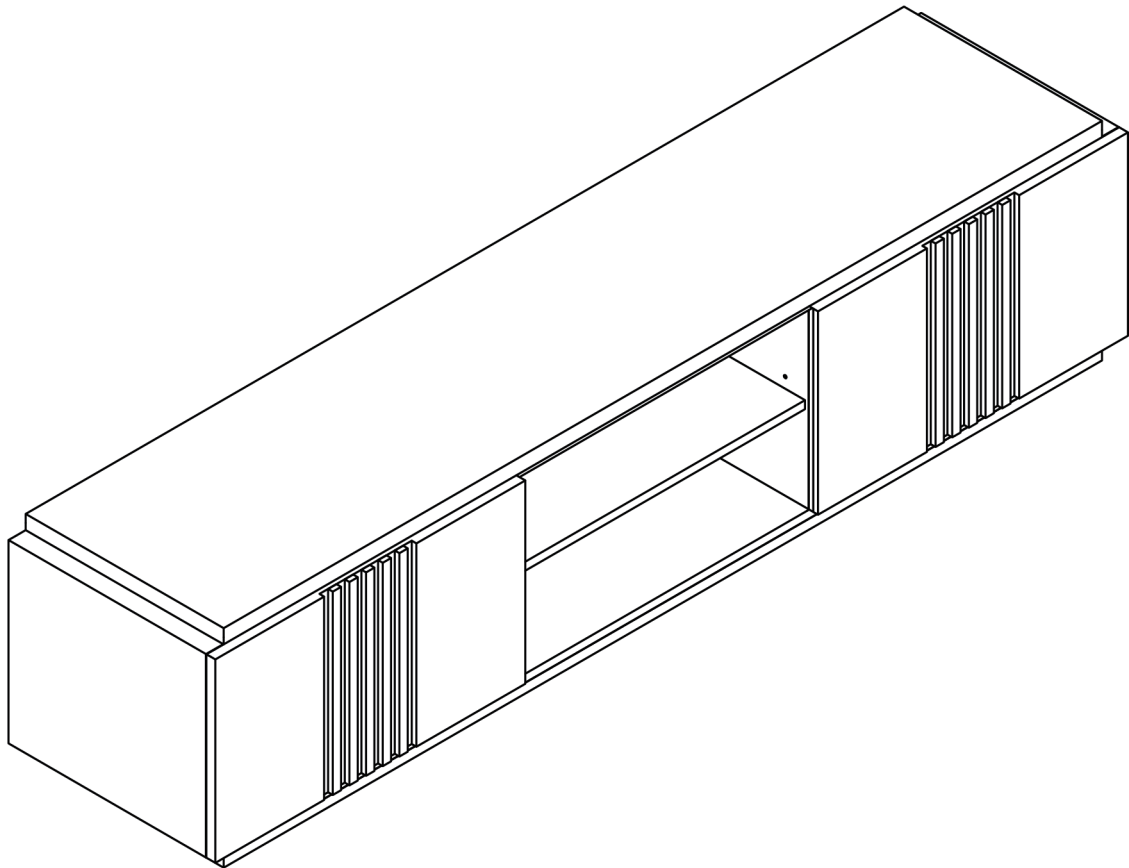

 


 
Estimated time for assembly:

90 mins



Weight limitations are as follows:

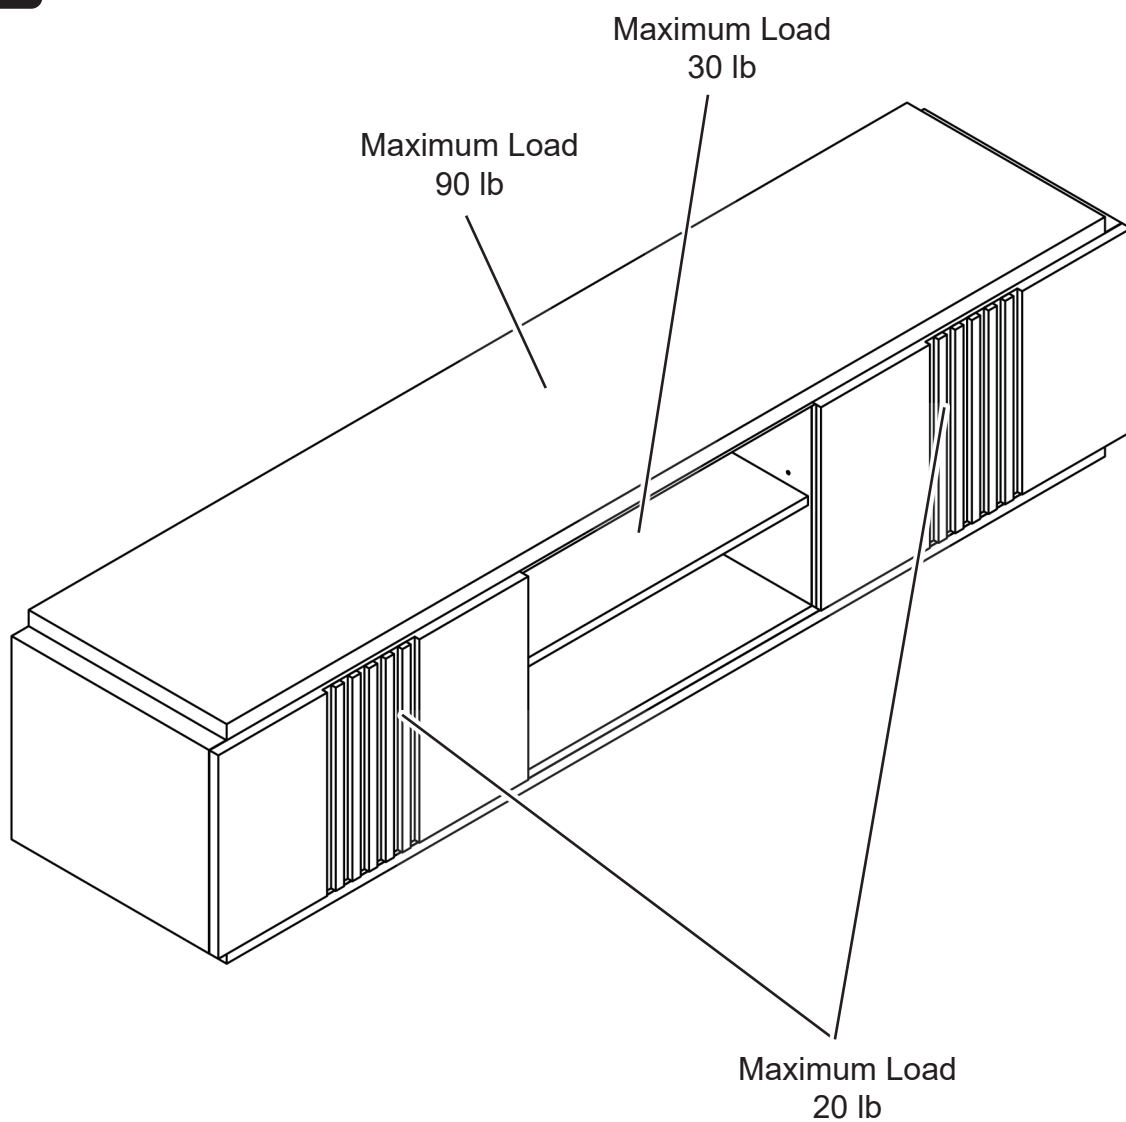


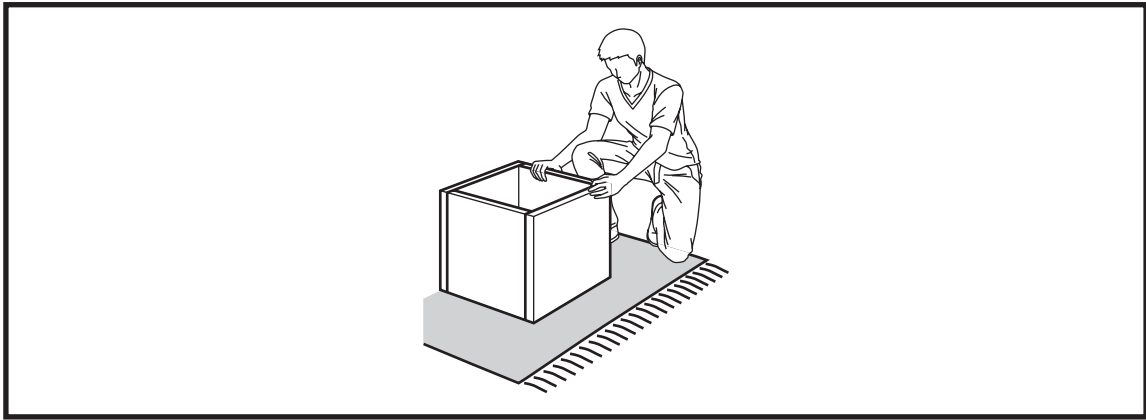

Assemble the furniture on an empty carton, carpet, or rug to prevent scratches or damage.

For safety, please keep pets and children away from the assembly area.

 Ensure the product is fully assembled before use. If you are missing any hardware or products, do not use it until you have restored the missing parts.

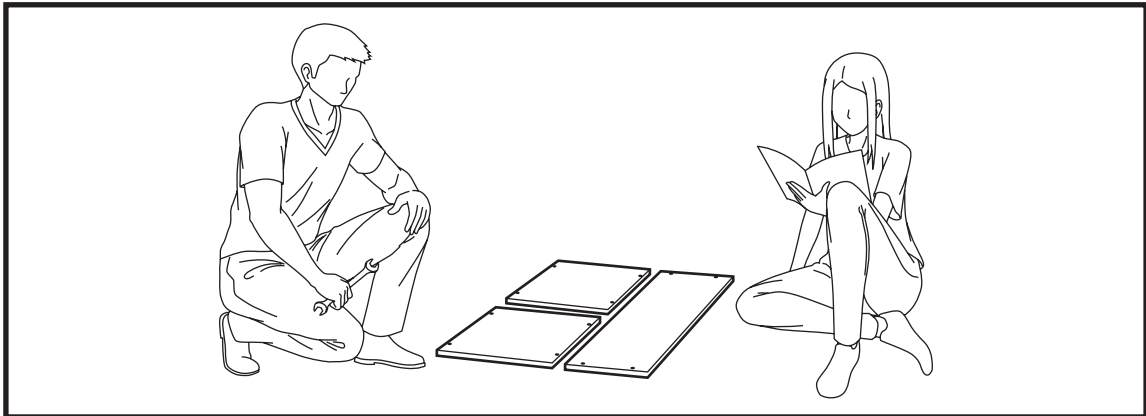

This furniture requires 2 people for assembly.

Read this instruction manual prior to assembly to familiarize yourself with the various steps.

Lay out all components and hardware separately on a flat surface and make sure that no parts are missing or damaged before assembly. Do not destroy or discard any packaging until you are certain that you have all the necessary parts for assembly.

 
Hand tight all hardware and careful not to over tighten to avoid damaging the product.

CAUTION

There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard.

Keep all plastic bags and packaging film away from pets and children to avoid suffocation.










PACKAGE CONTENTS

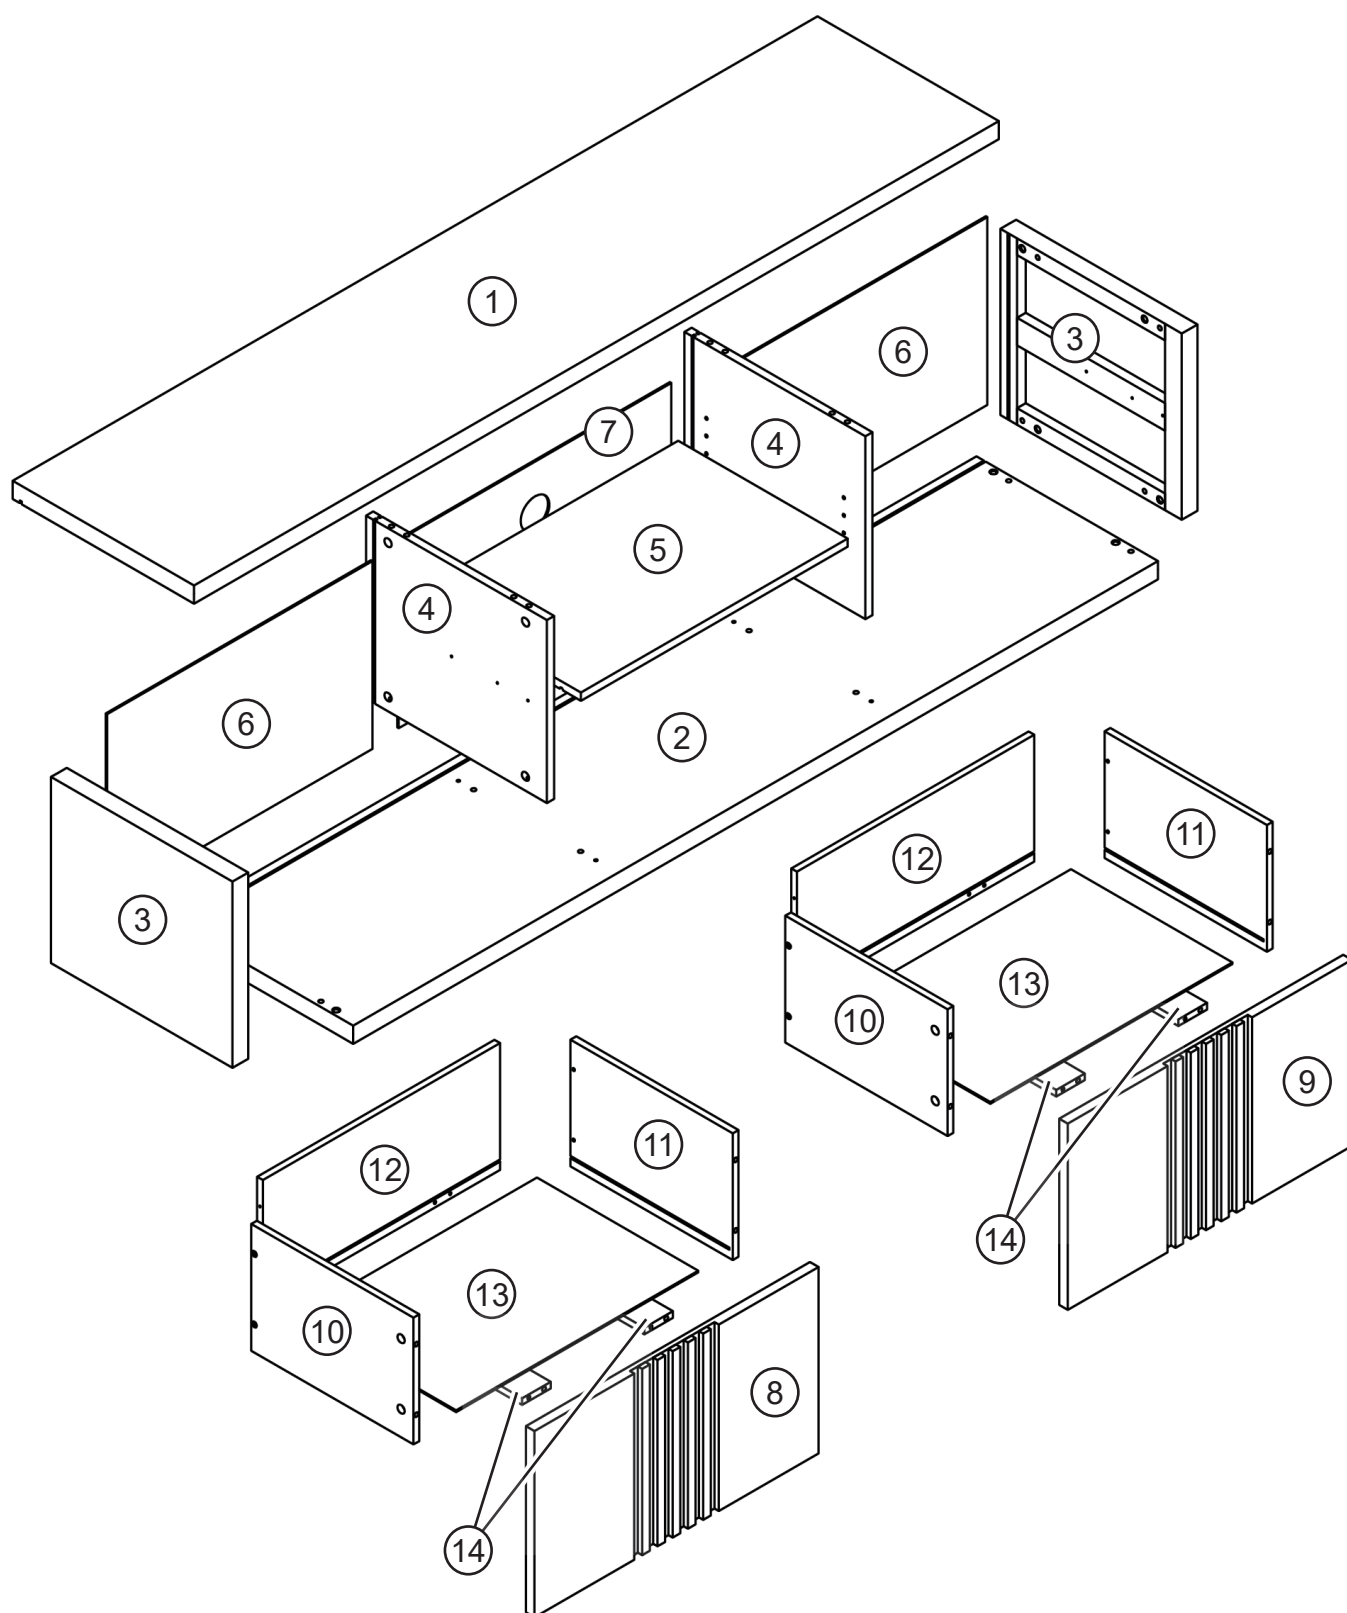

PACKAGE CONTENTS


CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Bottom Panel	1
3	Side Panel	2
4	Medial Panel	2
5	Storage Shelf Panel	1
6	Side Back Panel	2
7	Center Back Panel	1
8	Left Drawer Front Panel	1
9	Right Drawer Front Panel	1
10	Drawer Left Panel	2
11	Drawer Right Panel	2
12	Drawer Back Panel	2
13	Drawer Bottom Panel	2
14	Drawer Support Strip	4

         PACKAGE CONTENTS

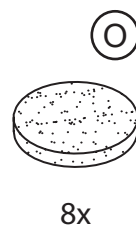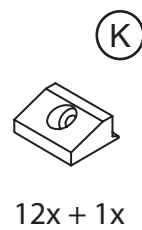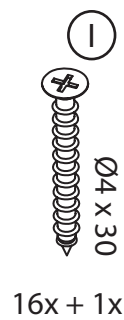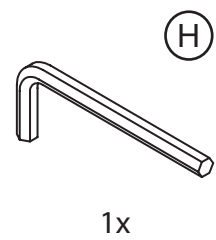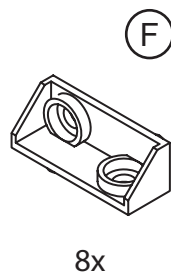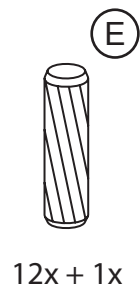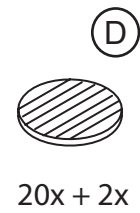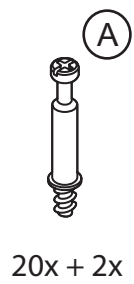

Install all hardware perpendicular to the opening.

 Required tools for assembly (Not included)



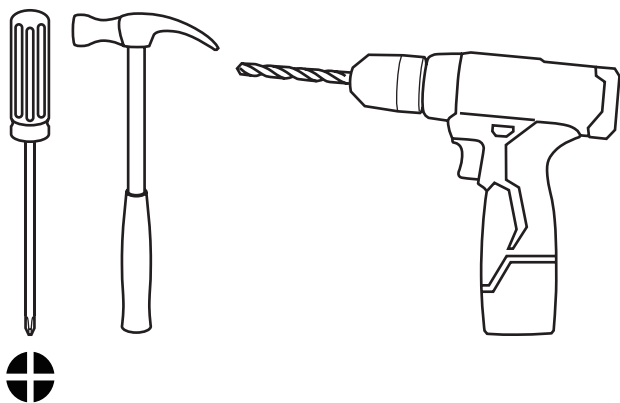


1




(M) 4x

   Detach the slide runner from the slide mount.

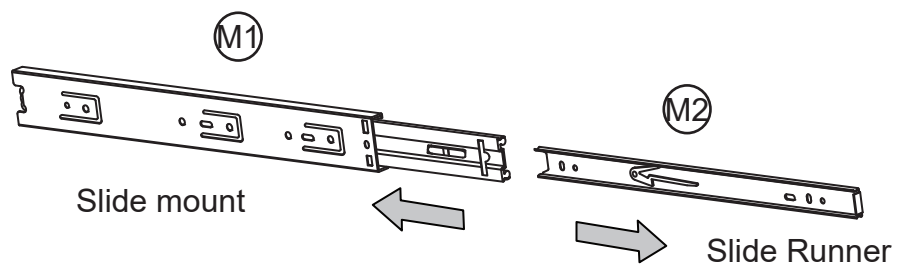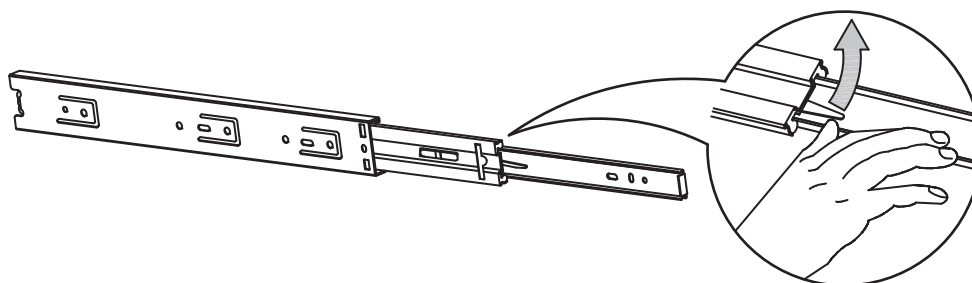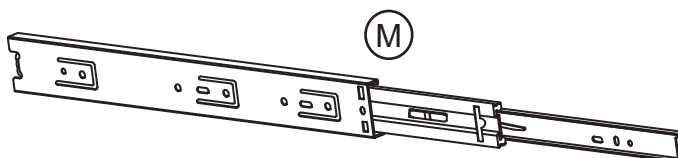

2

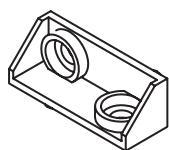 


(F) 8x



(G) 8x

 Attach corner connectors to the side panels (3).

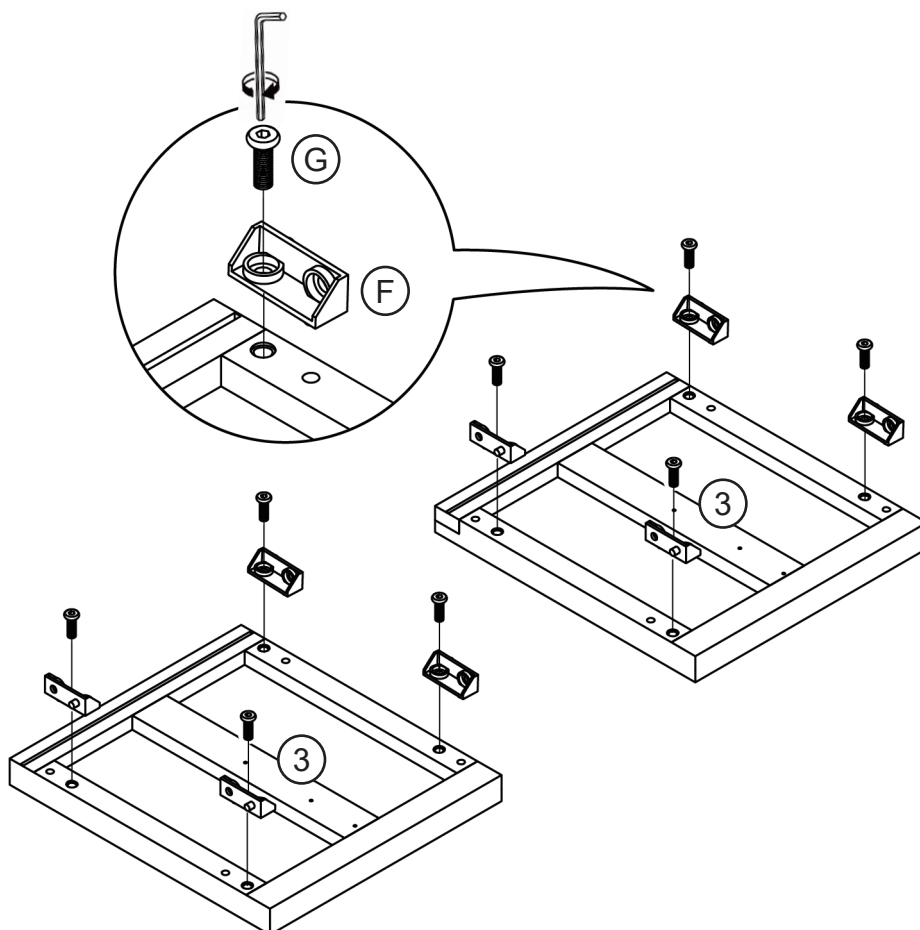

3

 


(M1) 2x





(N) 6x

Attach slide mounts to the side panels (3).

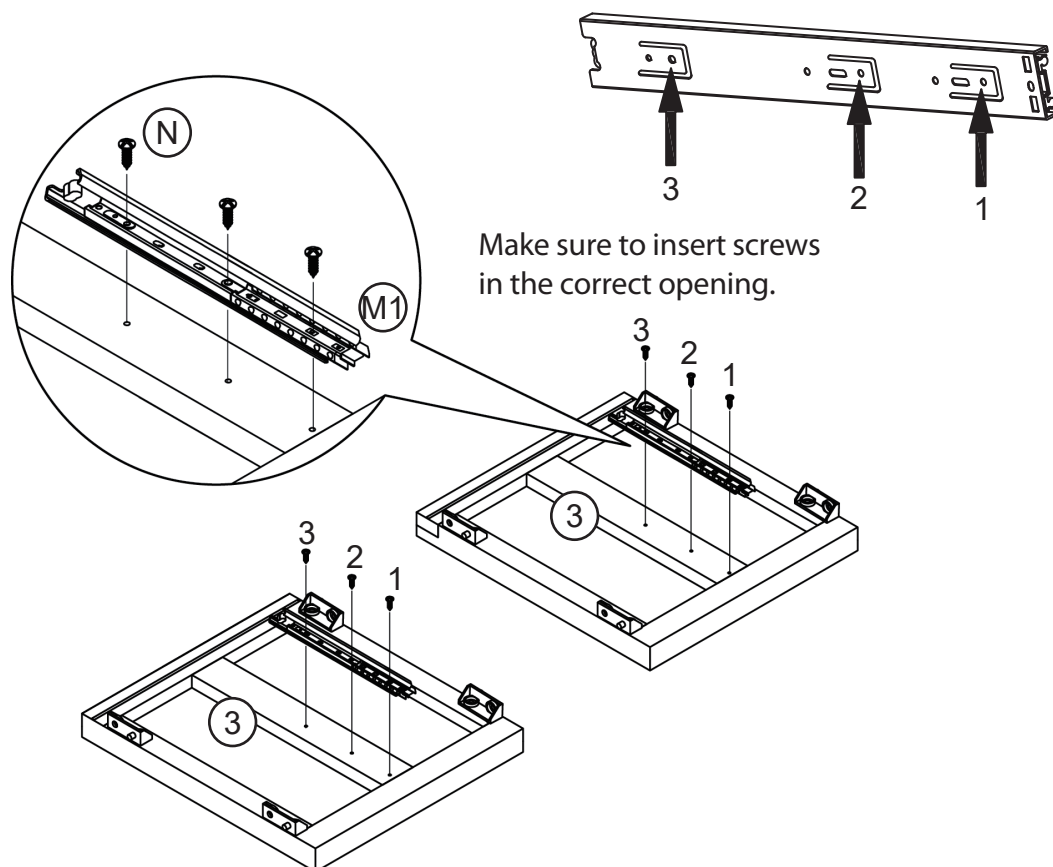



4

  Assemble side panels (3) on top of the bottom panel (2).

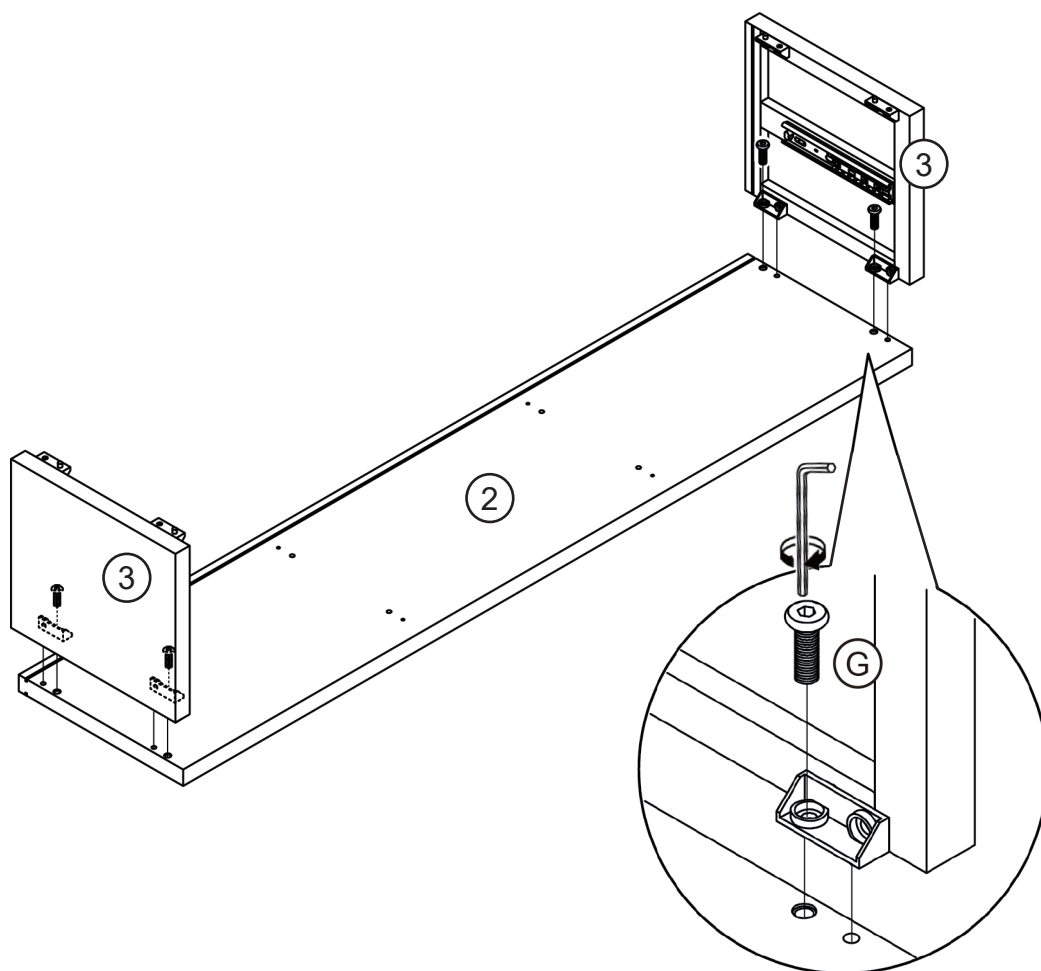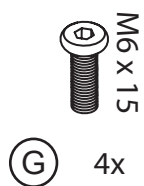


5

  
Attach cam bolts on top of the bottom panel (2).

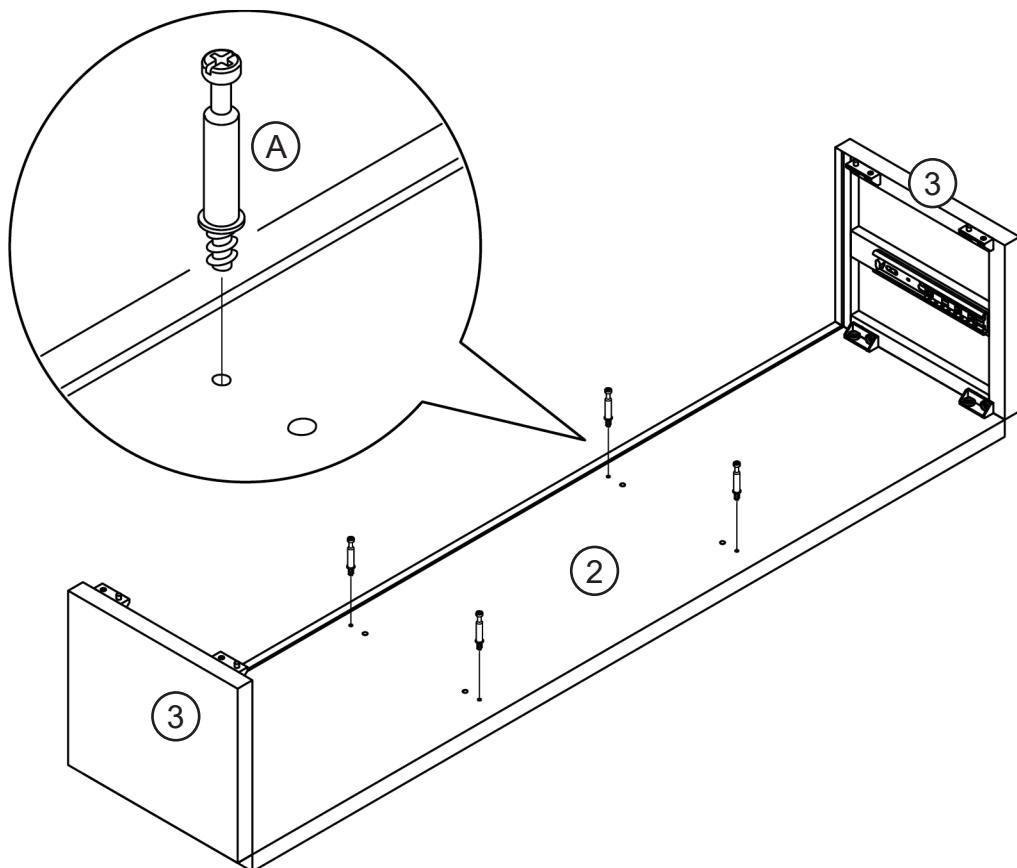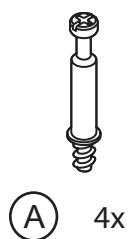


6

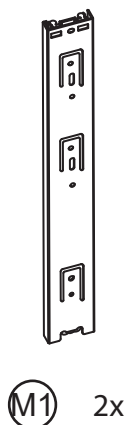 

 
Attach slide mount to the medial panels (4).

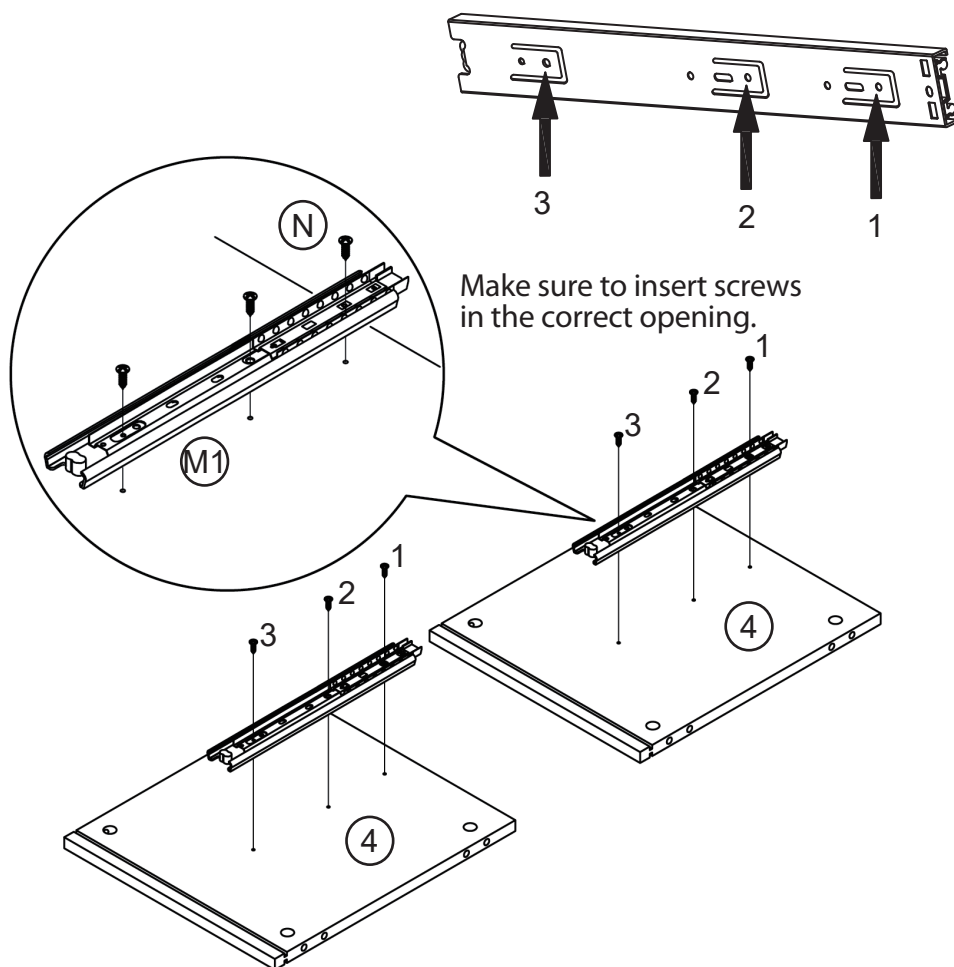

7

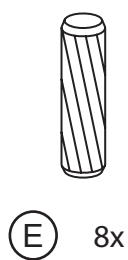 


 Insert wood dowels to the medial panels (4).

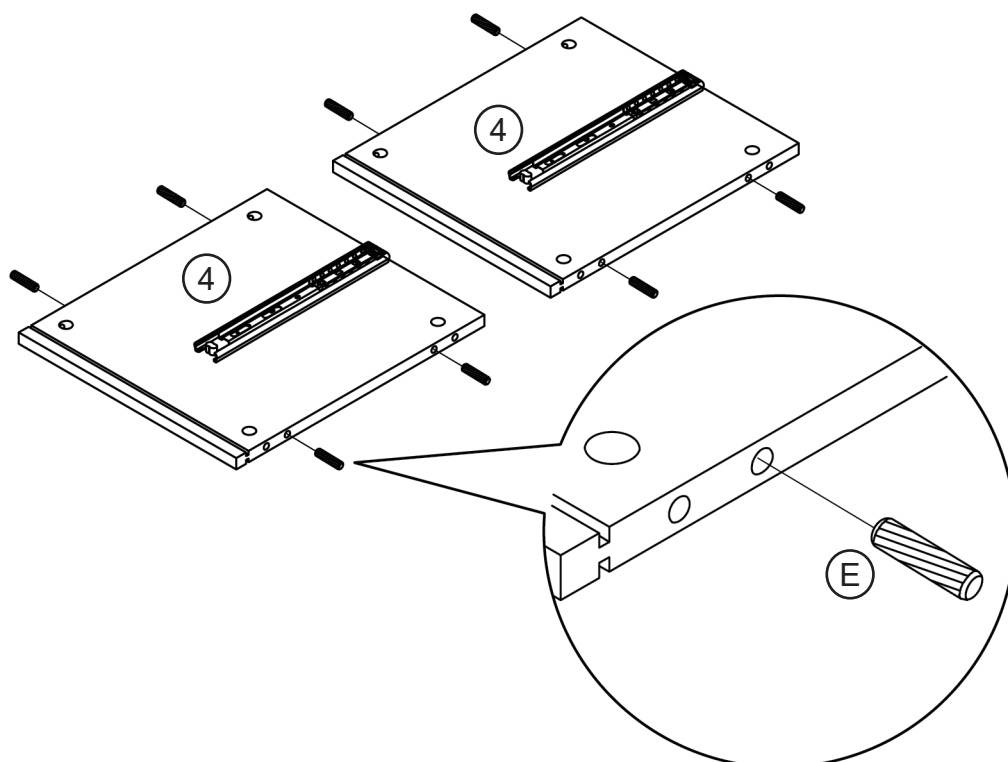


8

 Assemble medial panels (4) on top of the bottom panel (2).

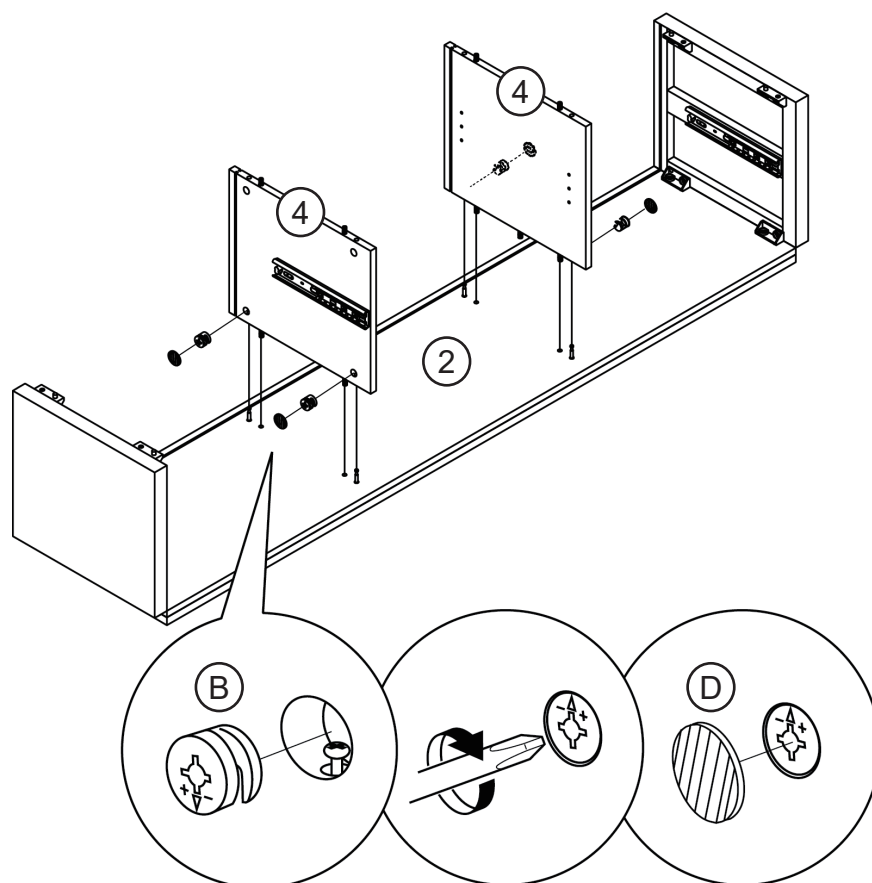



9

 Slide in the side back panels (6) and center back panel (7) to the back of the stand.

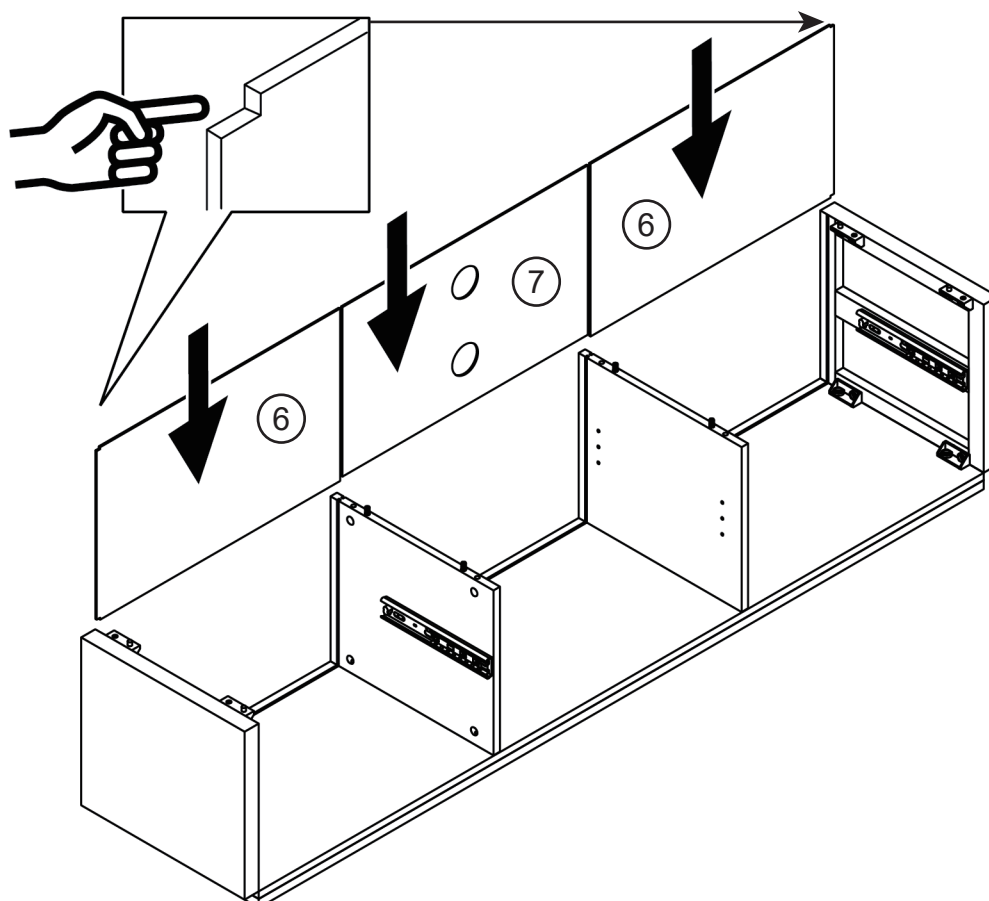




10

  Attach cam bolts to the underside of the top panel (1).

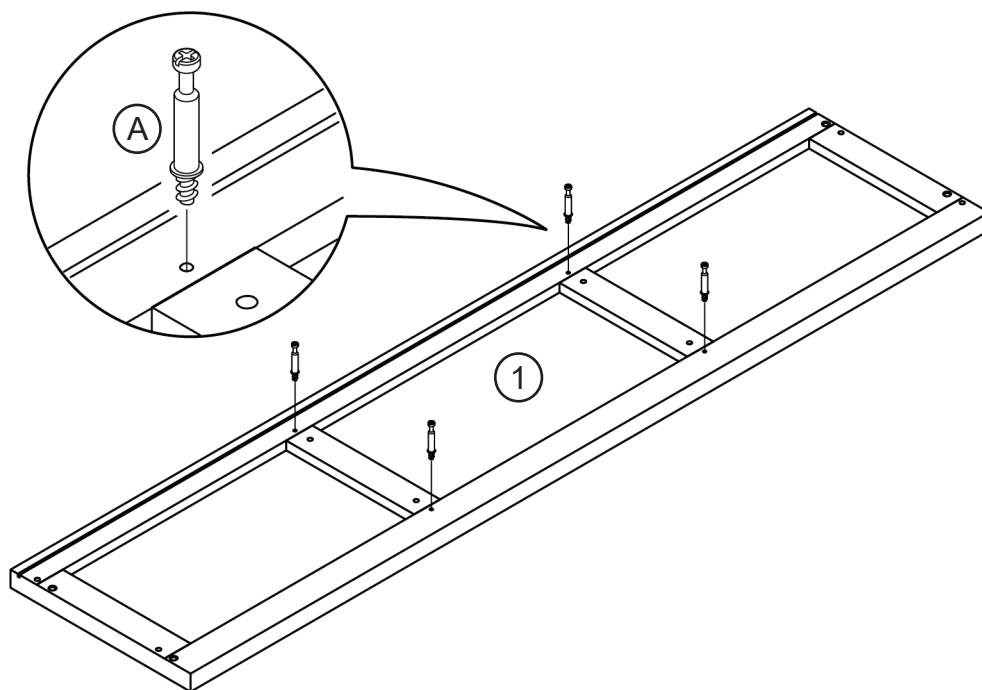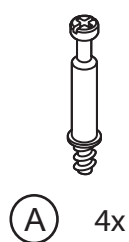

11

   Assemble the top panel (1) on top of the side panels' corner connectors.

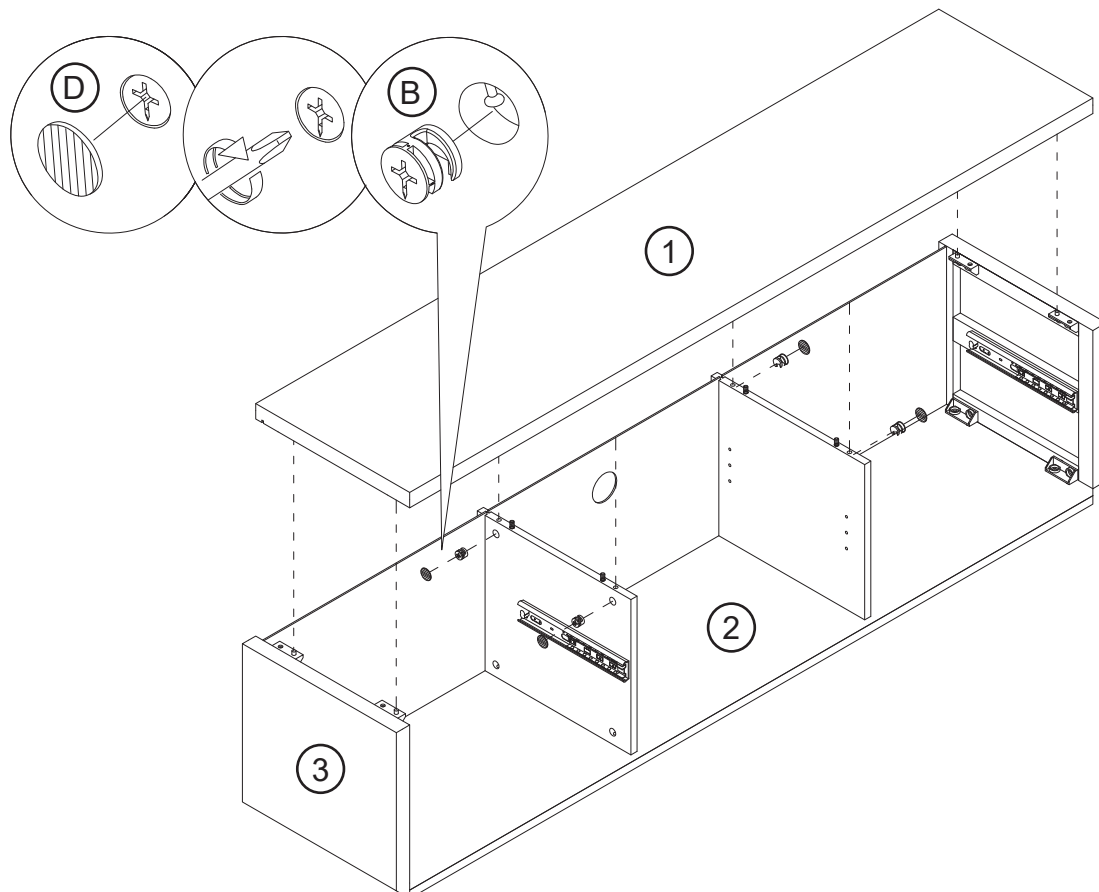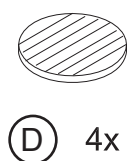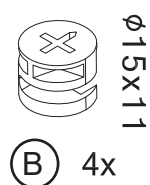


12

Secure the top panel to the medial panels by locking the cam locks.



 Ⓔ 4x

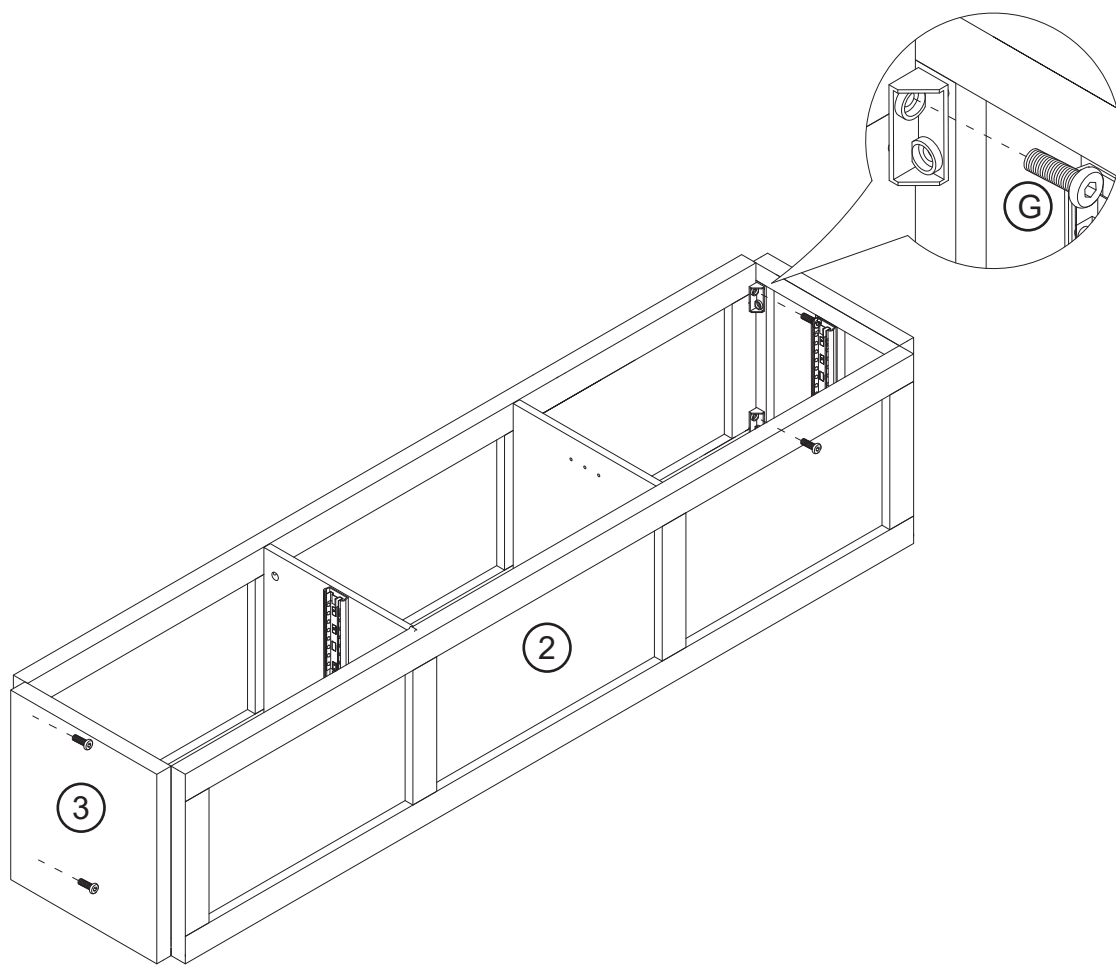


13

Attach protective pads underneath the stand.



 ⓪ 8x

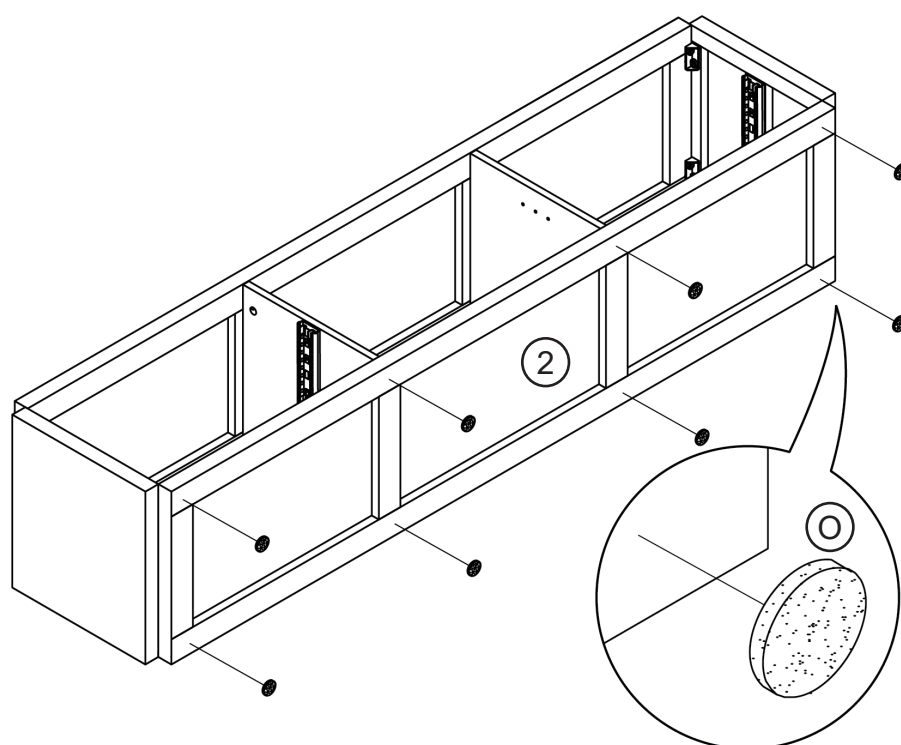

14

 
Secure the back panels in place.



(K) 12x



(L) 12x

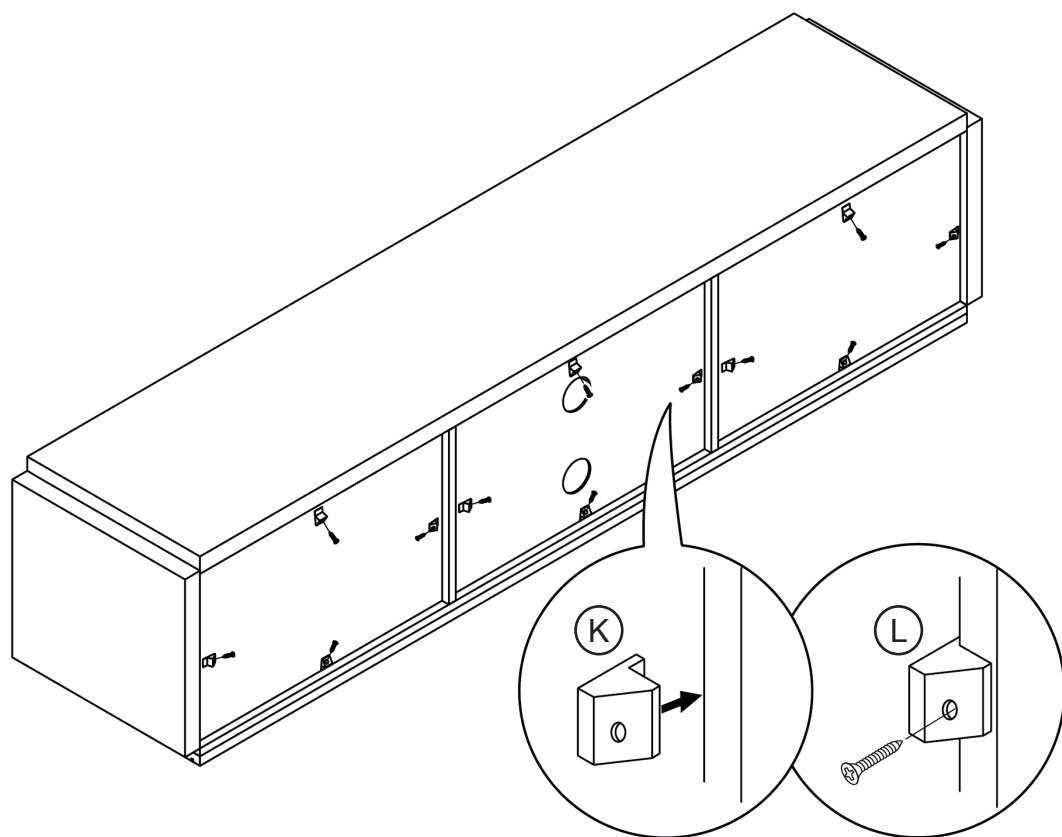

15

 
Attach slide runners to the drawer left and right panels (10, 11).



(M2) 4x




(N) 8x

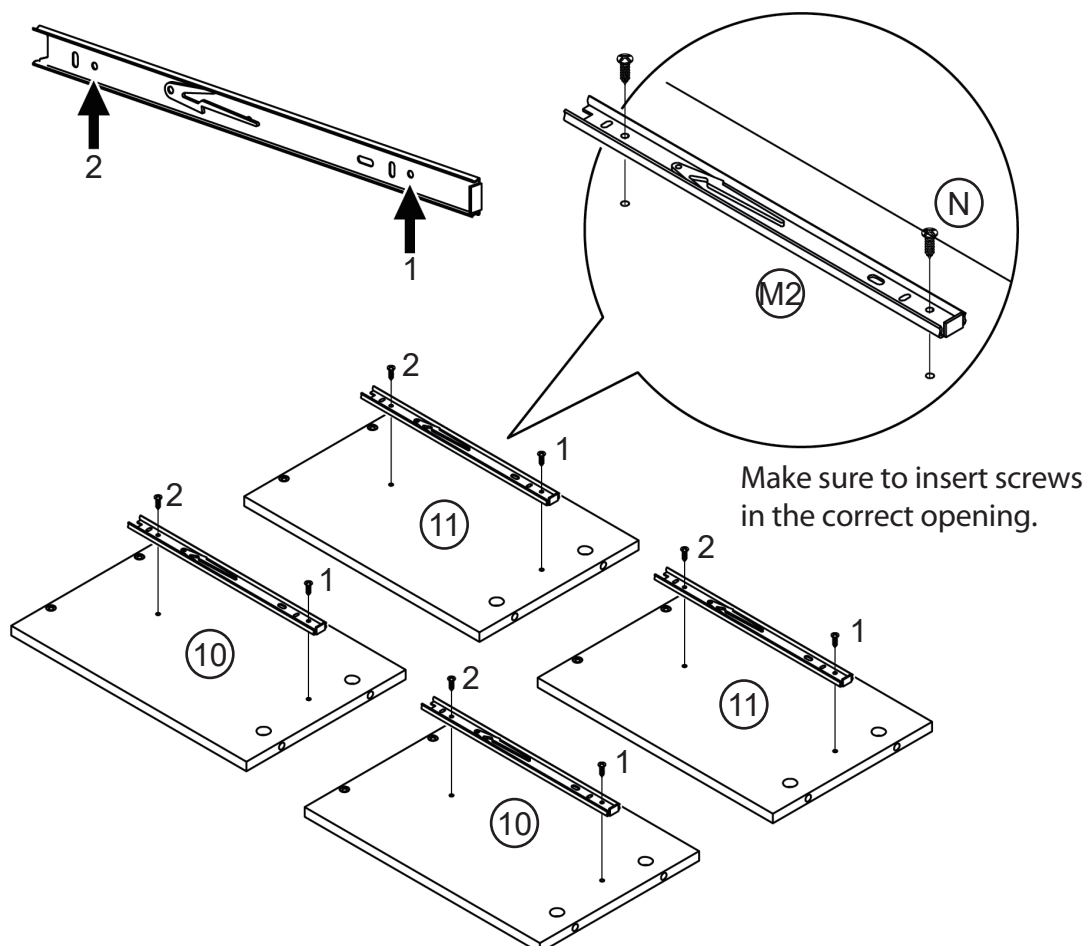



16

 Assemble the drawer back panel (12) between the drawer left and right panels (10, 11), then slide in the drawer bottom panel (13).

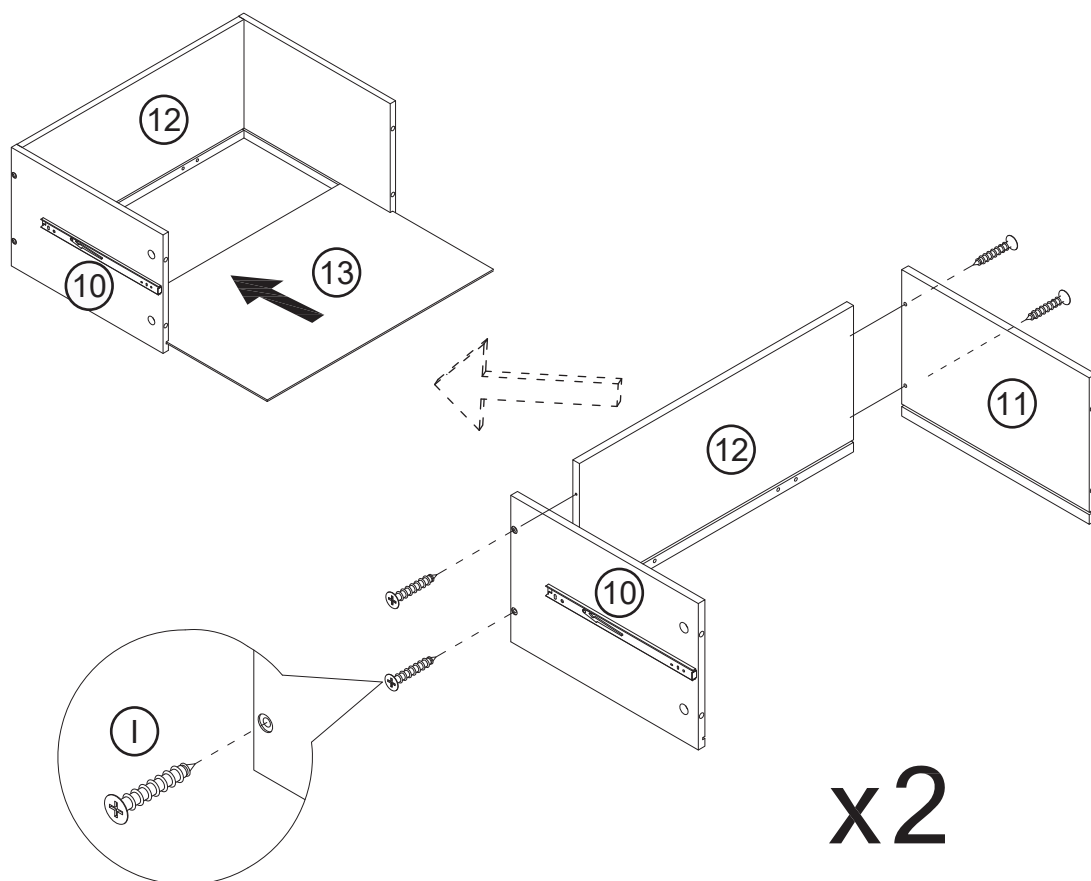



17

  Flip the drawer assembly upside down and attach drawer support strips (14) to the drawer back panel.

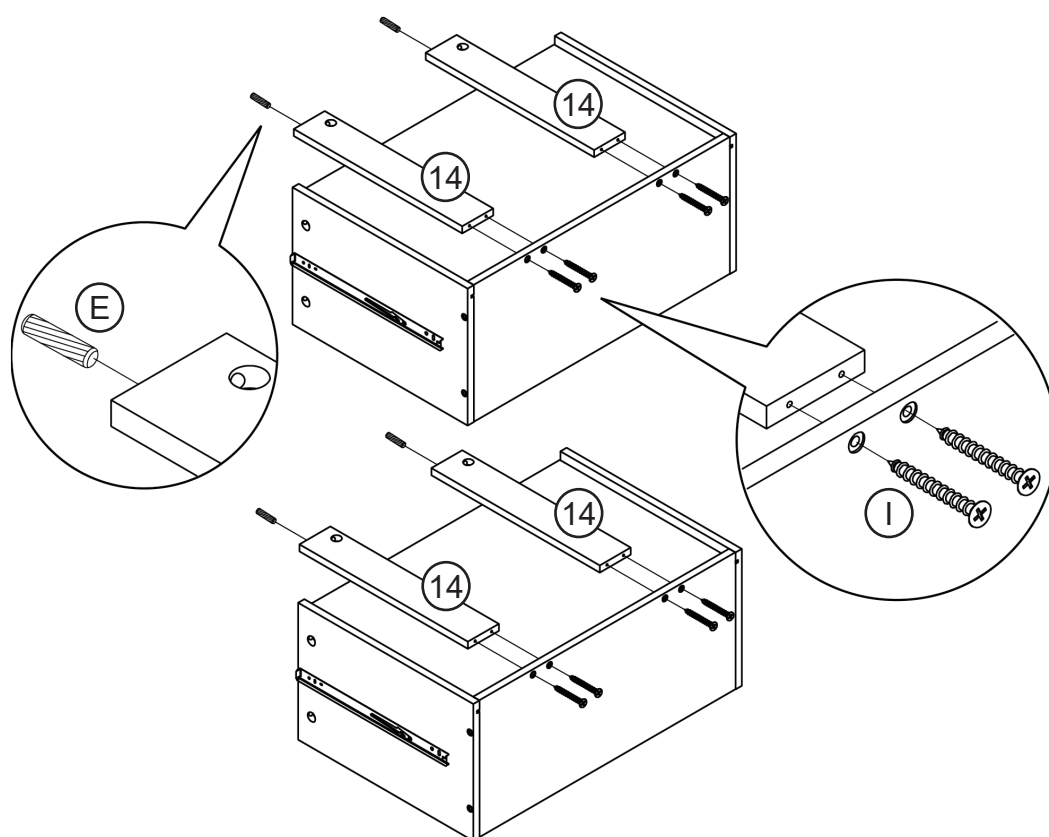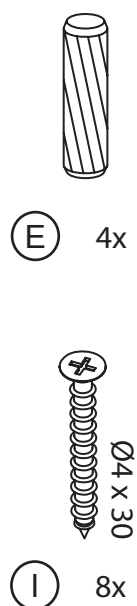



18

  Attach cam bolts to the drawer front panels (8, 9).



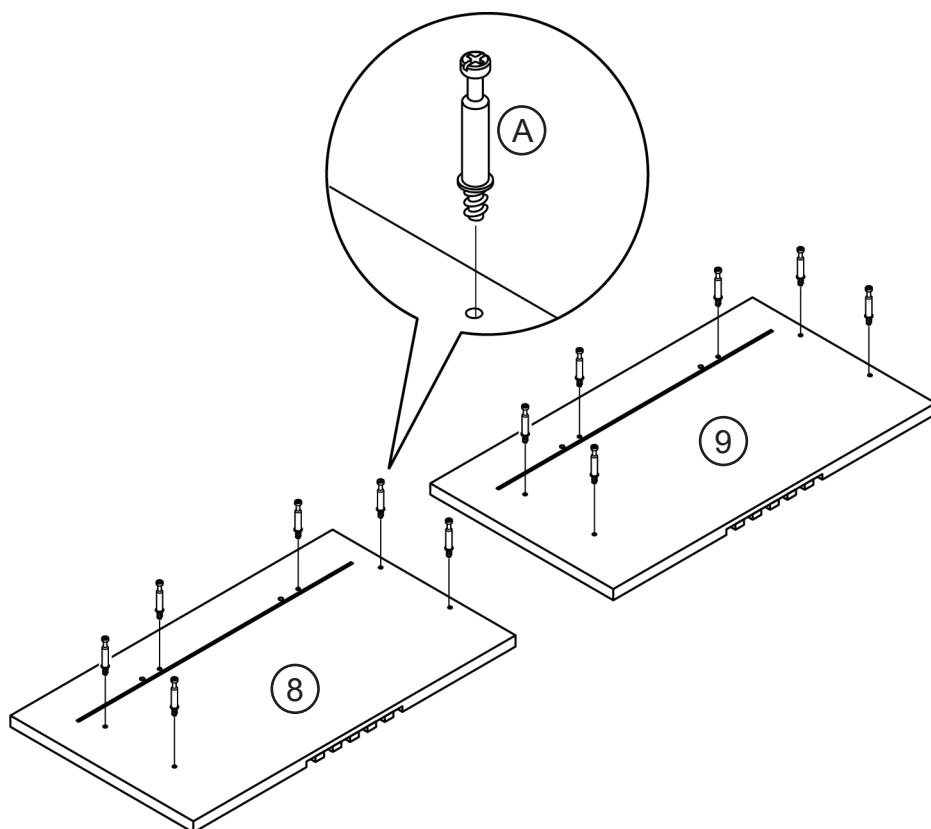
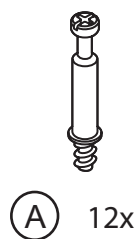


19

  Assemble the drawer front panels (8, 9) to the drawer.

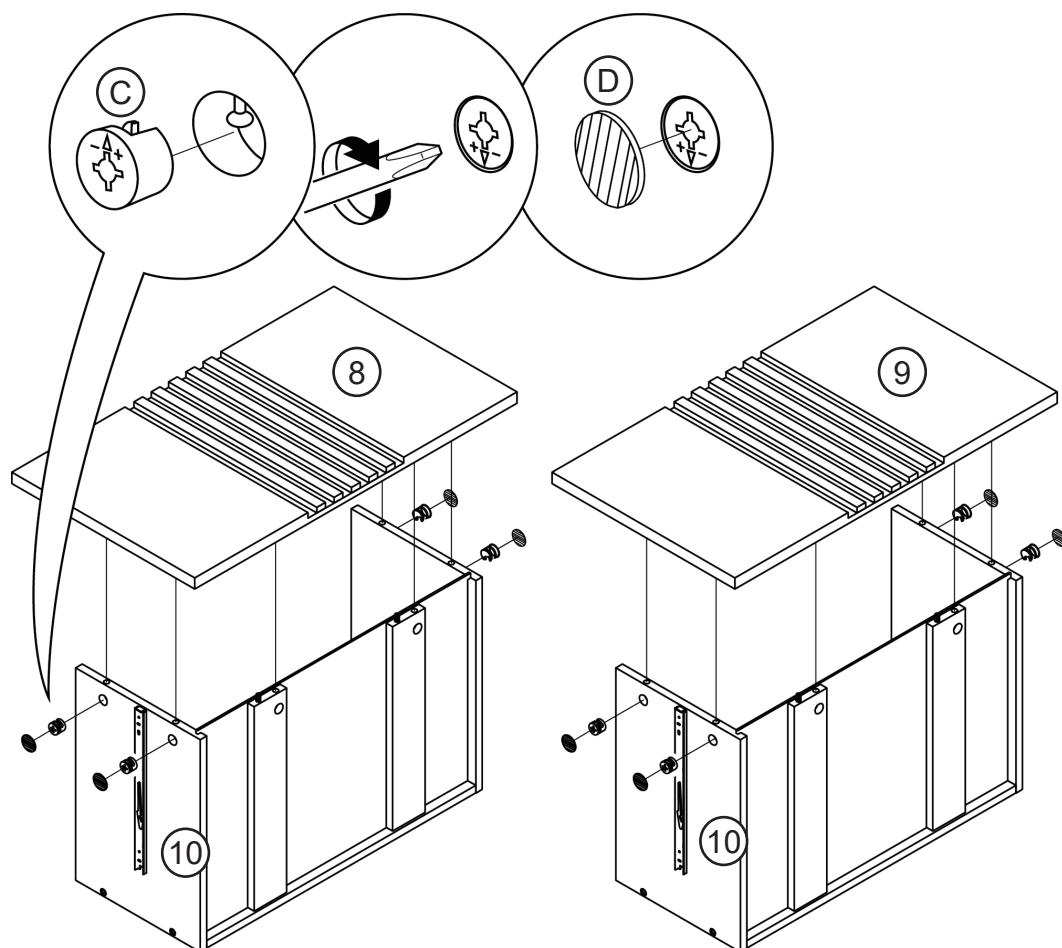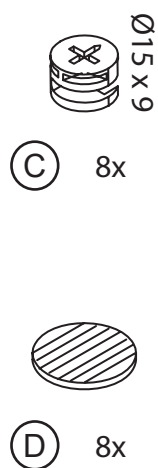


    Further secure the drawer front panels to the drawer support strips.

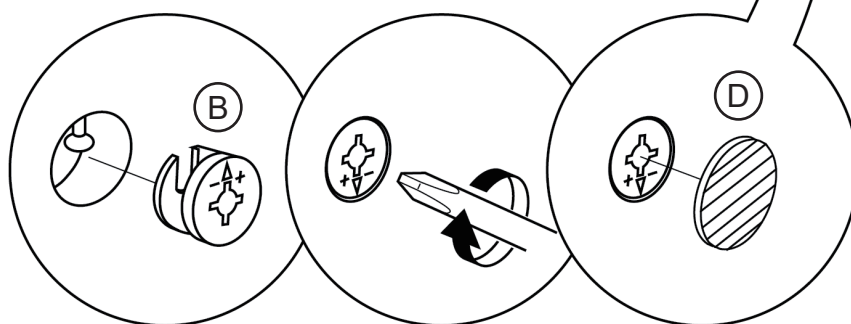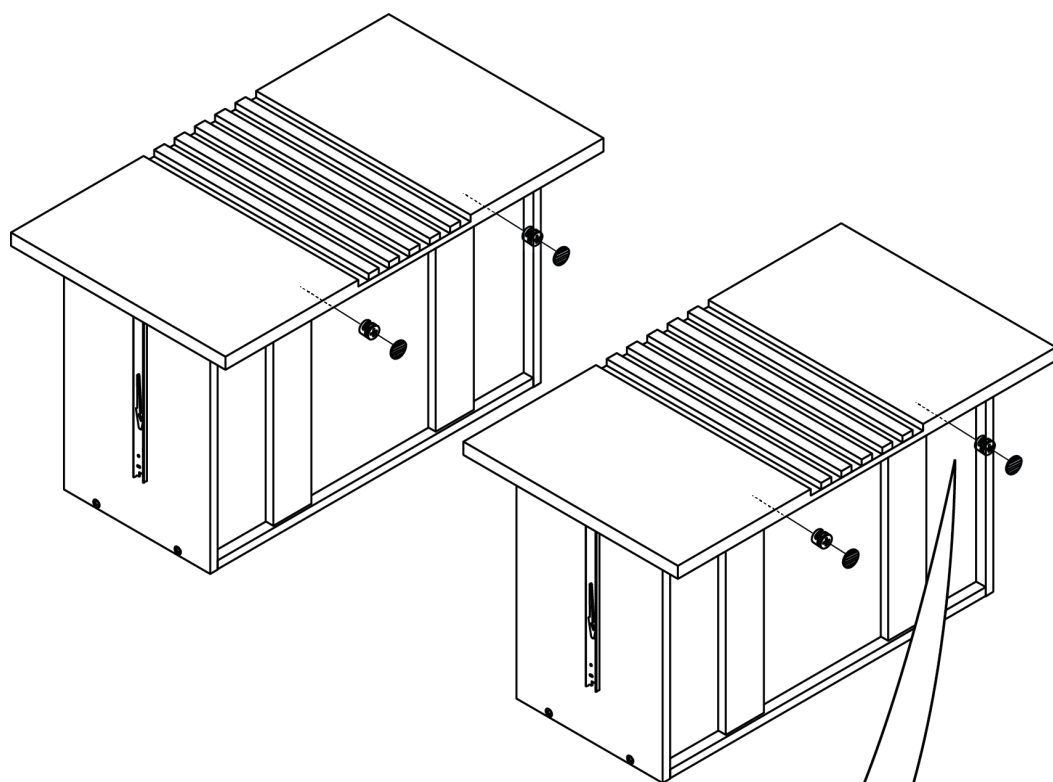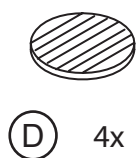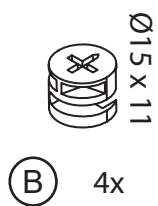




Slide the drawers into the stand.

 Note: Place the slidable part to the front position before sliding in.

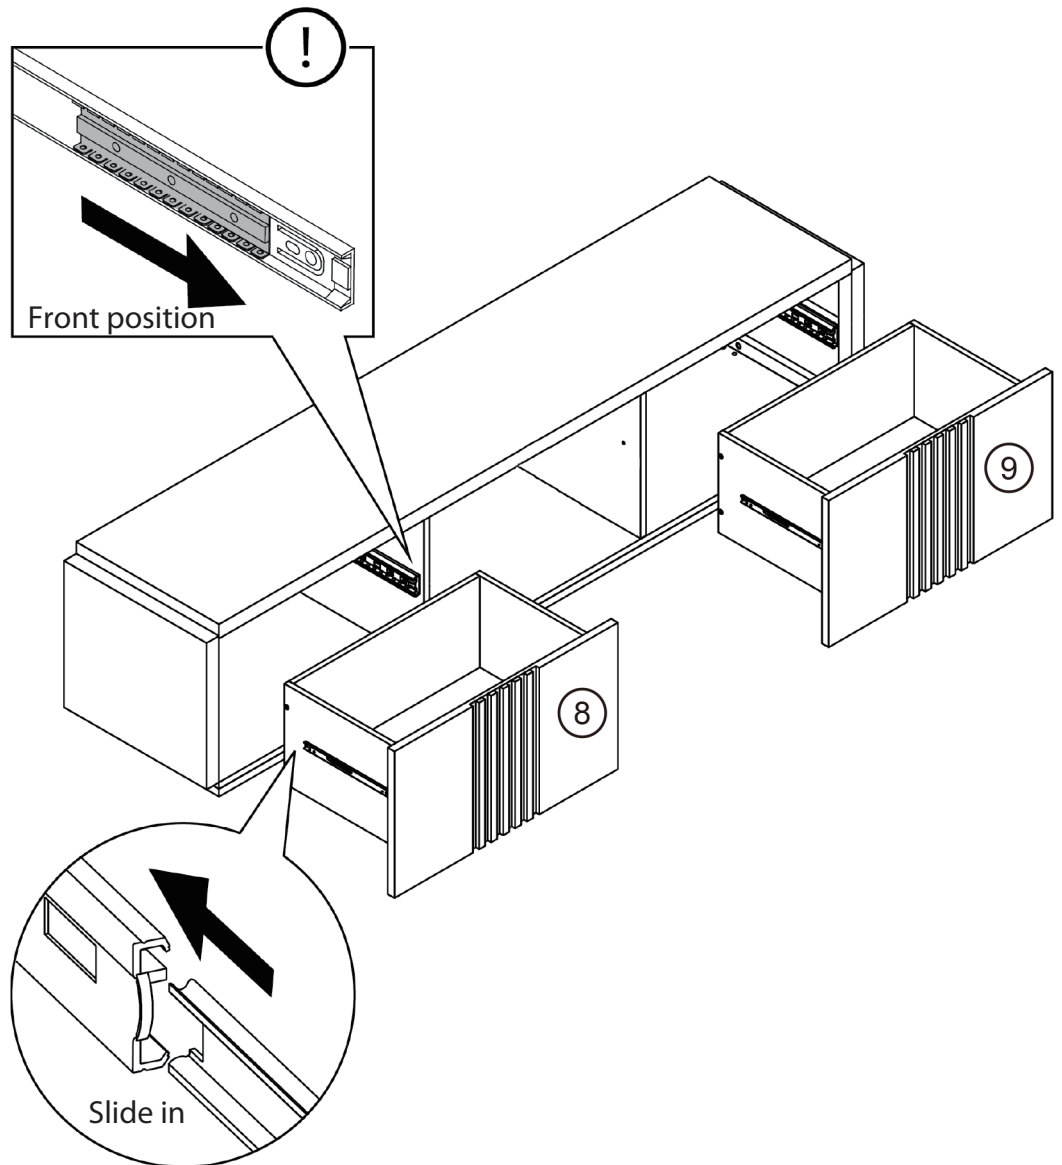


22

   Insert shelf pegs to the stand and put on the storage shelf panel (5).

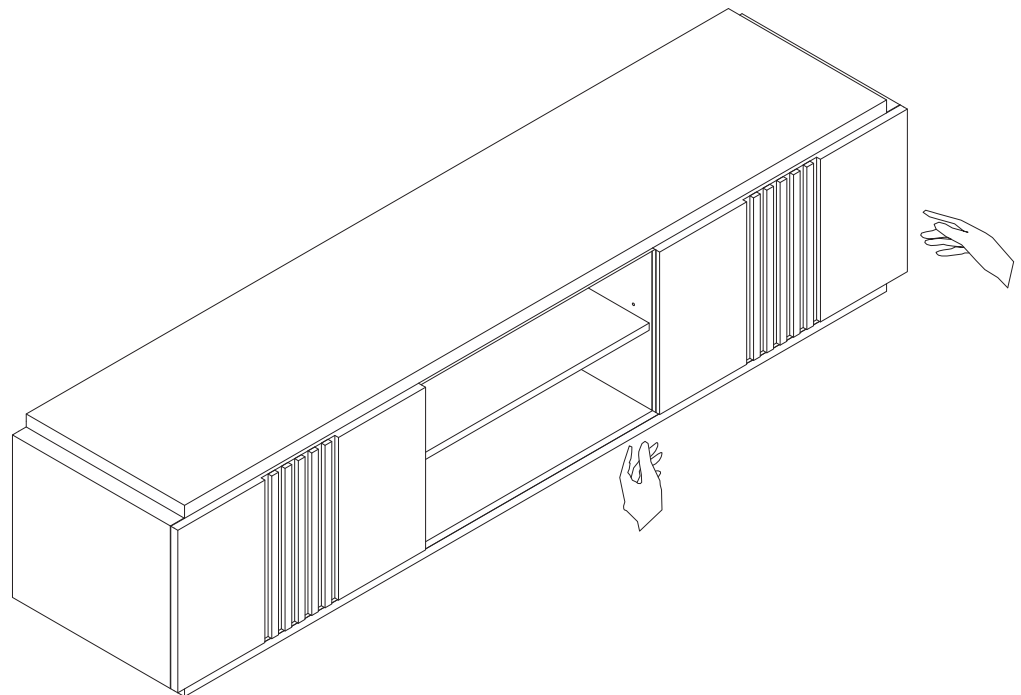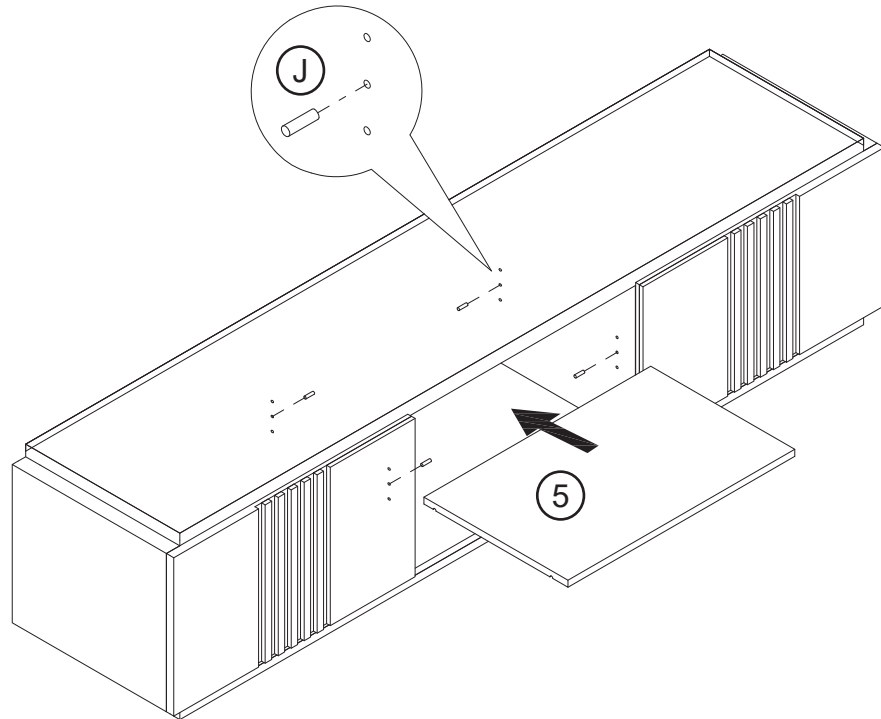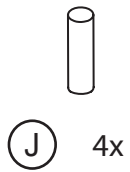

Note: Please slide out the drawer with both hands

 YOU'RE FINISHED!

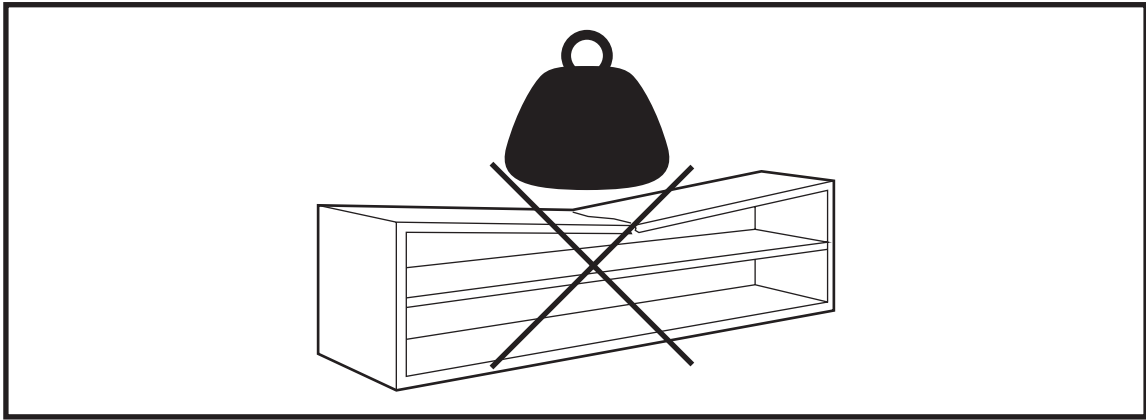

Warning

Only place items on top of the product if they meet the recommended size and weight limits.

Climbing on, stepping on, or placing overweighted objects on the product may cause property damage and/or injuries.

Items placed onto this product must be resting on a support surface without hanging over the edges.

WARNING

For use with televisions weighing 90lbs (40.82kg) or less. Use with heavier televisions may result in instability, causing tip over resulting in death or serious injury.

Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

NOTICE

The recommended maximum width of the TV is 75 inches. Do not exceed the maximum load capacity.

This product is designed for flat panel TVs only.

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of longevity, please follow the recommendations in this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly.
- Check the tightness of all bolts every 2 months and tighten them if necessary.



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) with a lightly dampened cloth.
- A small amount of mild soap can be used if necessary.
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF.

MDF will swell and distort when exposed to water damage. Make sure to dry the furniture immediately after cleaning.

⚠ WARNING

The manufacturer and seller are not responsible for any and all liability relating to personal injury, property damage or losses, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification or neglect of this product.