

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.

 


- Children should not climb or jump on the furniture.






- Dust and pick-up spills using a clean, non-colored, lint-free cloth.



Dining Table

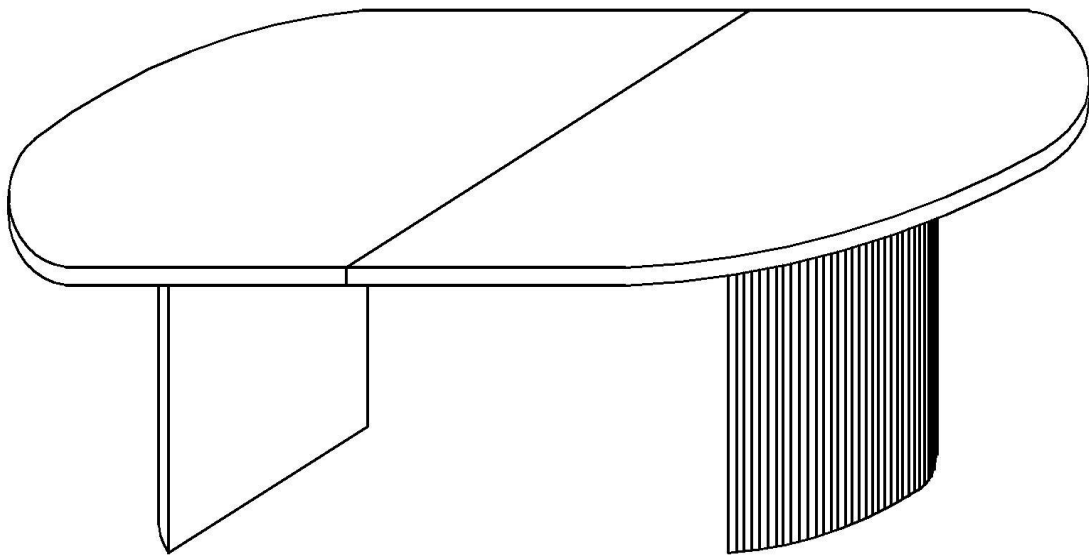

Parts List

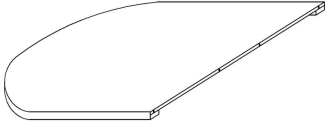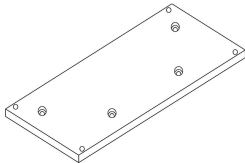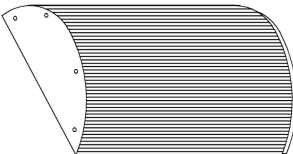   
Label	Picture	Description	QTY
A		Table Top	2
B		Plate	2
C		Crossbar	2
D		Table Base	2

  Hardware

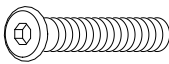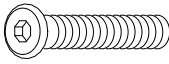Label	Picture	Description	QTY
①		5mm Allen Wrench	1
②		Bolt (M8*32mm)	17
③		Bolt (M8*57mm)	13
④		Spring Washer (M8)	30
⑤		Flat Washer (M8)	30

Assembly Preparation

 Before
Beginning
Assembly:

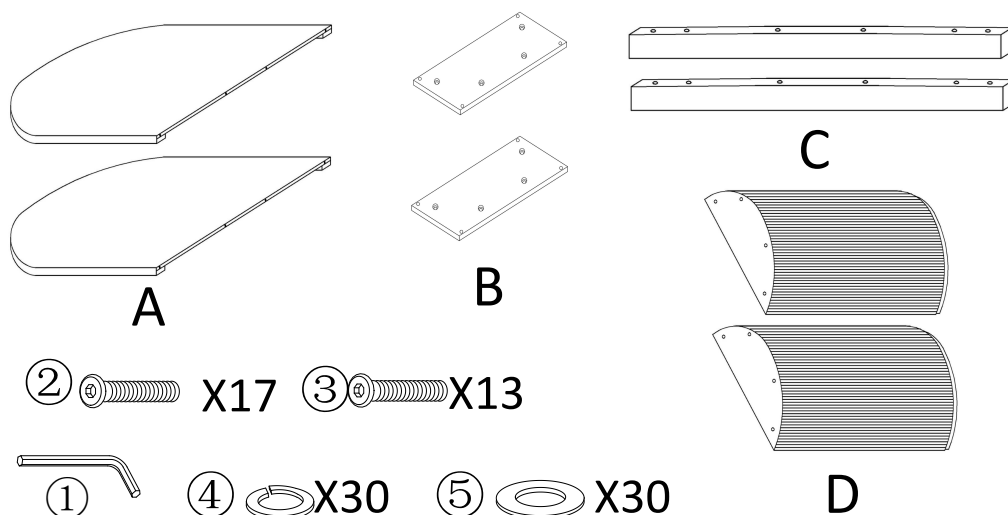

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-



 
- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

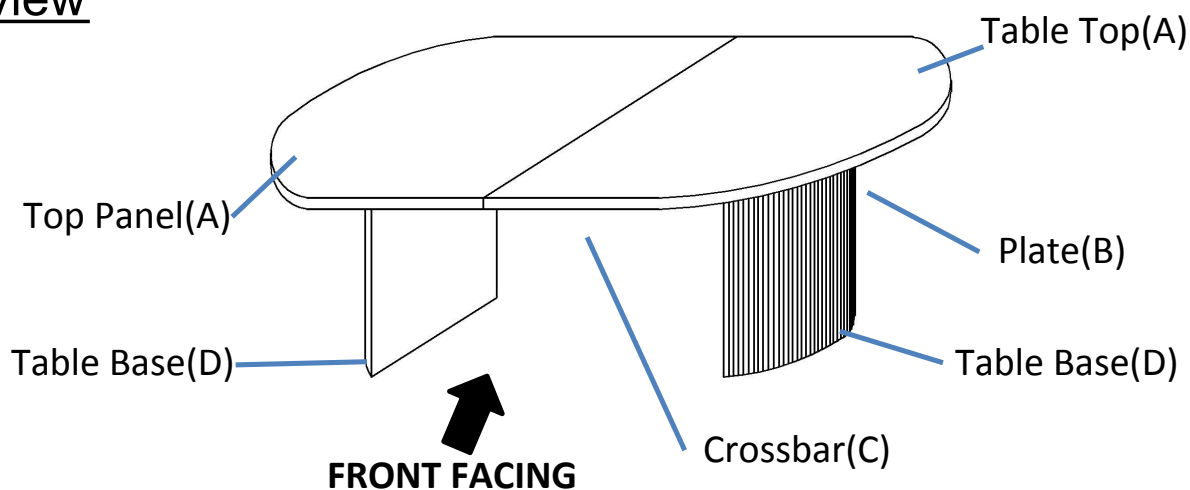


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the **Dining Table** parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

 Step 1

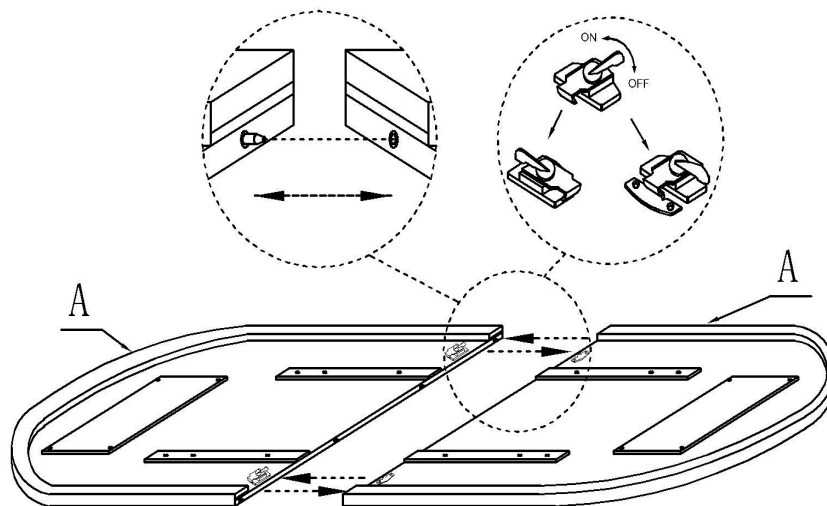


Please put the two Table Top (A) together as shown.
Place all parts on a clean, undamaged surface.

 Step 2

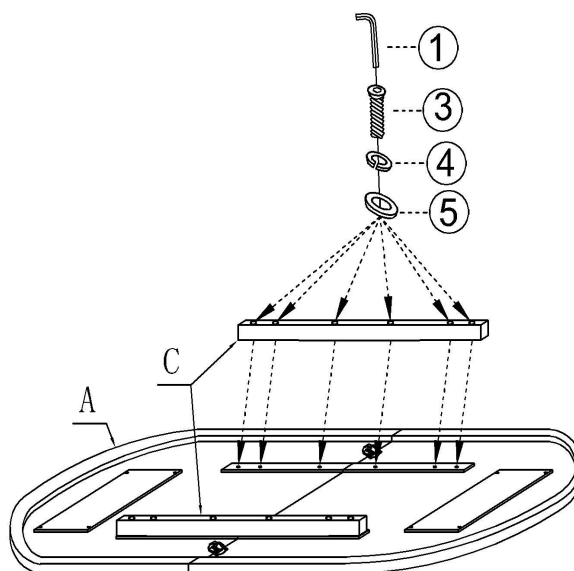


The bottom of the table top should be facing up as shown in the picture above. Use the Allen Wrench (①), Bolts (③), Spring Washers (④), and Flat Washers (⑤) to fix the Crossbar (C).

 Step 3

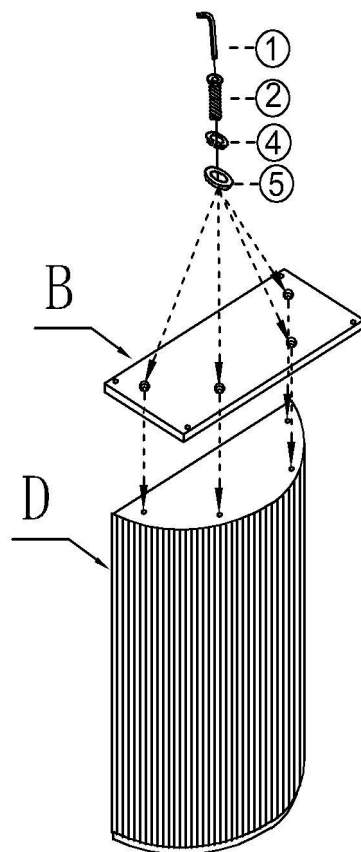


As shown in the picture: Please use the Allen Wrench (①) and Bolts (②), Spring Washers (④), Flat Washer (⑤) to fix the Plate (B) and the Table Base (D).

 Step 4

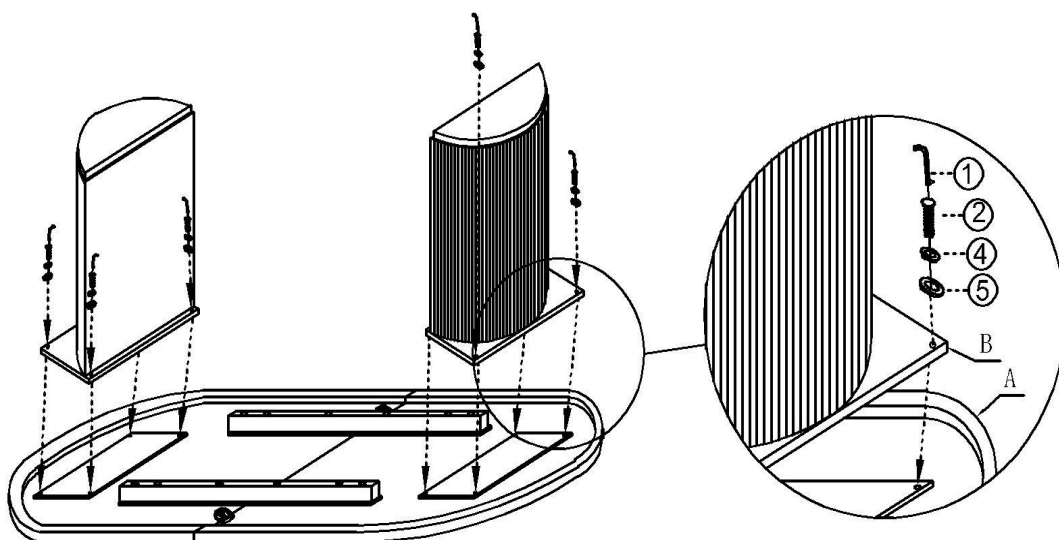

As shown in the picture: Please use the hexagonal wrench (①), bolts (②), spring washers (④), and flat washers (⑤) to fix the Table Top (A) and Plate (B).

 Step 5

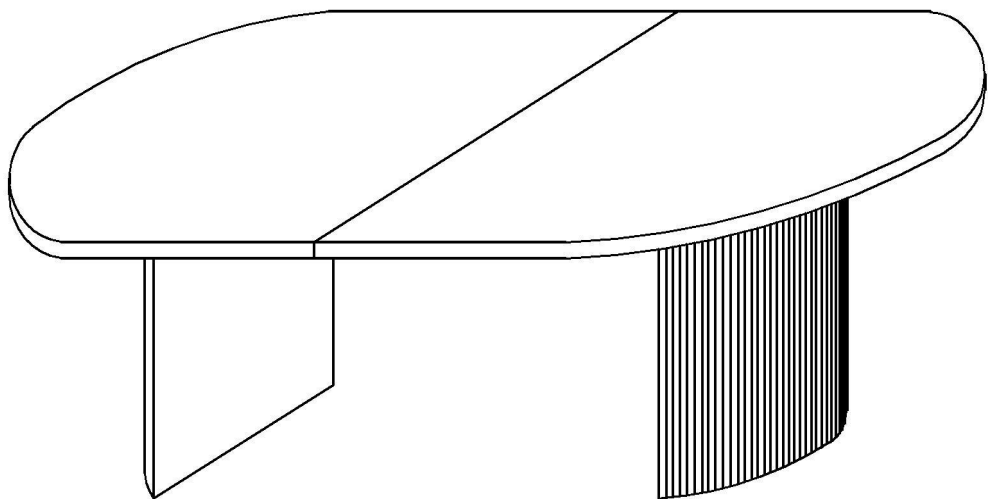

Your Dining Table is ready for use.
This Dining Table should only be used on a flat, level surface.