 


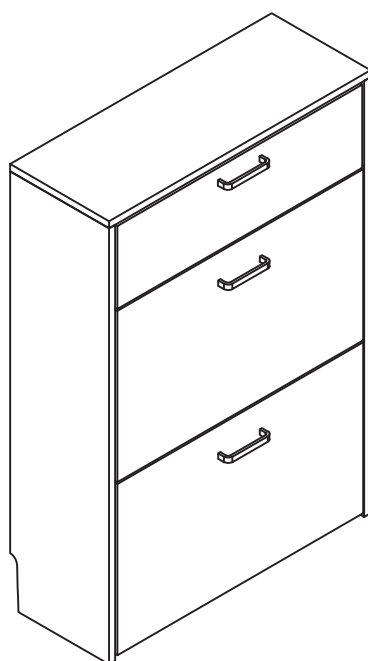




VINGLI SHOE CABINET

ASSEMBLY INSTRUCTION FOR MODELS:SC0DDDWB



2PERS

   Tool Required Not Provided

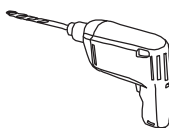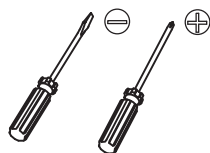

Thank you for purchasing from VINGLI!

Please contact us via email if parts are missing or damaged, we will gladly ship your replacement parts free of charge. Please attach your Order ID so that we can assist you better.



EMAIL



WEBSITE



IMPORTANT

support@vingli.com

www.vingli.com

THIS INSTRUCTION BOOKLET
CONTAINS IMPORTANT SAFETY
INFORMATION.PLEASE READ
AND KEEP FOR FUTURE
REFERENCE.

CONTENT

1.Return & Warranty.....	1
2.Before Starting.....	2
3.Model & Assembly Tips.....	3
4.Identify Parts.....	4
5.Part List.....	5
6.Assembly Steps.....	7
7.FAQs.....	21
8.Supplementary Instruction for Safe Use.....	22

RETURN & WARRANTY

Thank you for choosing our product!

We would like to take this opportunity to thank you for choosing us. We hope that you are completely satisfied with your purchase, and enjoy it for years to come.

Your satisfaction is our highest pursuit.

Return policy

We believe you will absolutely love your furniture, but if for some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service organization can answer most concerns and can assist you with any questions you may have about your new product.

The item must be returned in good condition, in the original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer that/which it was purchased from.

Warranty

The company warrants this product to be free from defects in material and workmanship and agrees to remedy any such defect.

This warranty covers one year from the date of original purchase. This is solely limited to the repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse, or which has been altered or repaired in any way.

For help with assembly, identifying parts, product information, or to place an order, please contact us freely.

BEFORE STARTING

Before Using Product



- ☐ Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.



- ☐ Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.



- ☐ Prepare a flat and Philips screwdriver (not included)
A Power Screwdriver is recommended.



- ☐ Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.




- ☐ For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

WARNING

- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.

Model & Assembly Tips

Applicable Model

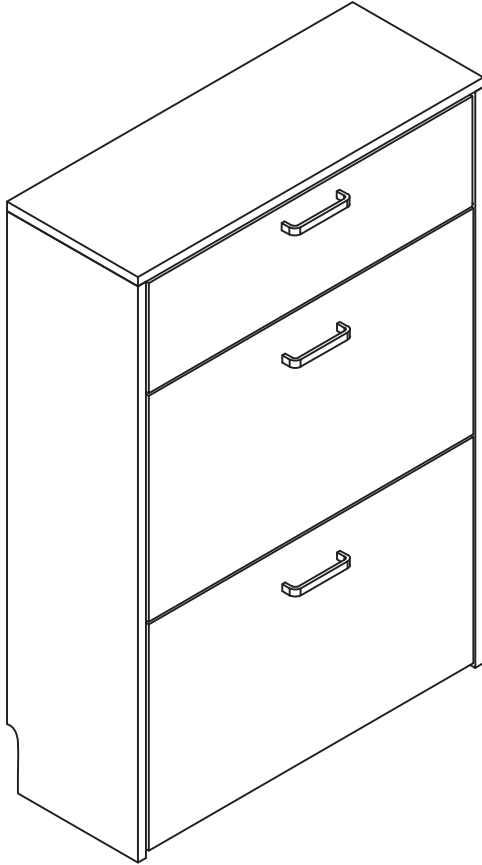

OVERALL SIZE:

25"W x 9.44D" x 36.61"H

63.5cm x 24cm x 93cm (LXWXH)

FEATURES:

Top Drawer & Two Flip Drawers
Cut-out in the Back

MAXIMUM LOAD:

DRAWER BOTTOM: 10 LBS



Estimated Time for Assembly

 
 
60-90mins

Caution:

1. This product is designed for home use and not intended for commercial use.
2. This product contains small components. Please ensure that they are kept away from small children.
3. Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.


IDENTIFY PARTS

1 case shipment

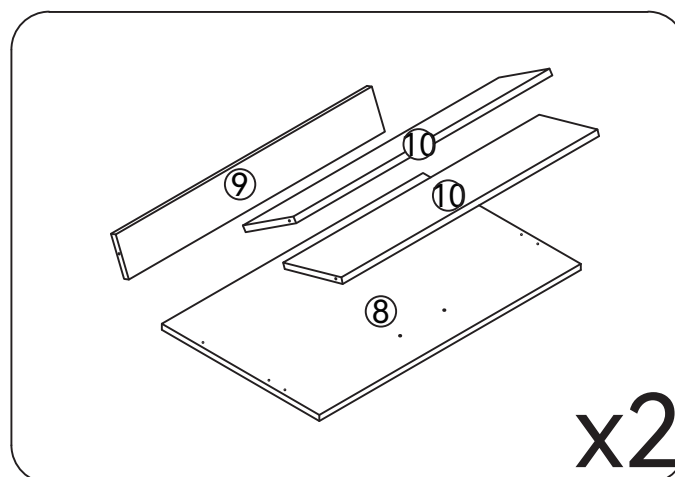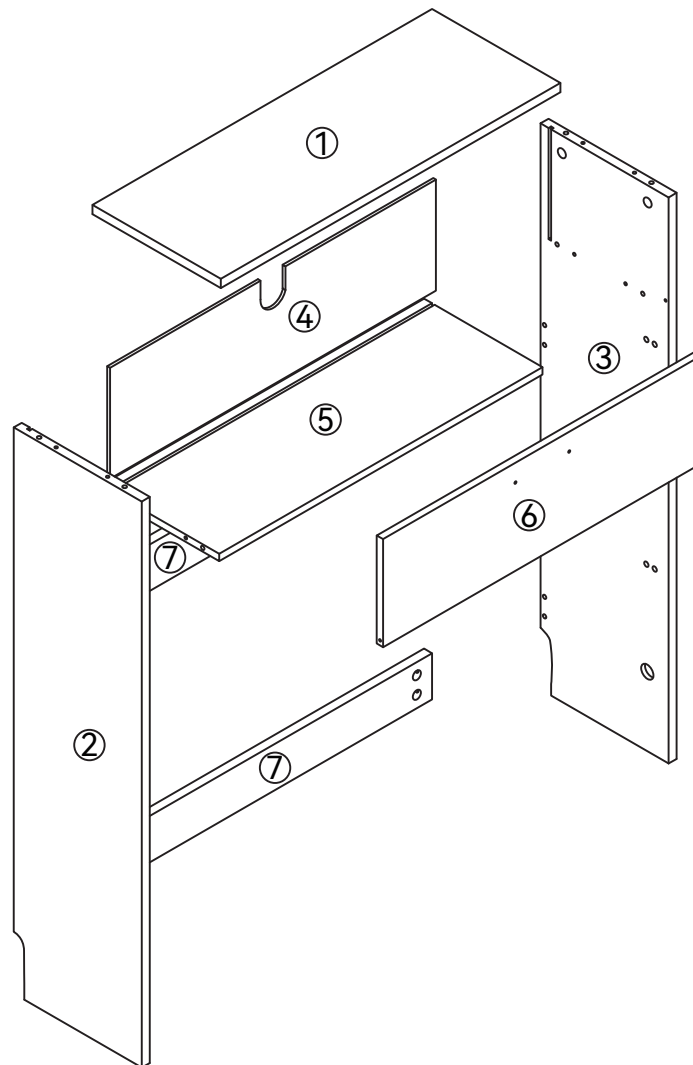


PART LIST

 ①x1

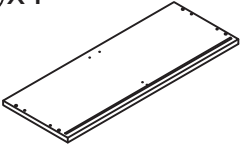


Top Panel

 ②x1

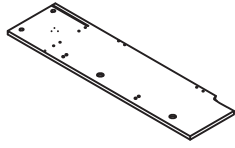


Left Side Panel

 ③x1

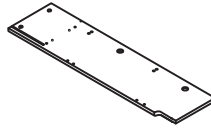


Right Side Panel

 ④x1

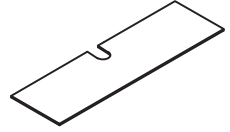


Back panel

 ⑤x1

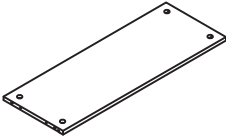


Middle Panel

 ⑥x1

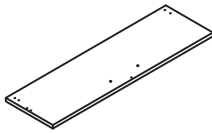


Top Drawer Front Panel

 ⑦x2




Rear Support Bar

 ⑧x2

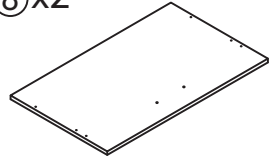


Shoe Drawer Front Panel

 ⑨x2



Shoe Drawer Bottom Panel

 
⑩x4

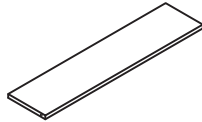

Divider

PART LIST

 Ax16(+2)



Φ6x35mm

Cam Bolt

Bx16(+2)



Φ15x10mm

Cam Lock

Cx8



Φ6x30mm

Wood Dowel

Dx28(+2)



Φ3.5x12mm

Screw

Ex1



Anti-tipping Iron Bracket

Fx2



Φ4x12mm

Screw


Gx3



Φ4x16mm

Drawer Handle & Handle Screw

 
Hx4



Φ3x14mm

Mending Wedge & Screw

 Ix1



Φ3x14mm

Magnetic Lock & Screw

Jx4



Door Stop

Kx4



Outer Runner

Lx2



Left Swivel Rack Bracket

Mx4



Inner Runner

Nx10(+1)



Φ3x12mm

Screw

Ox1



Metal Pull Rod

Px1



Magnetic Iron Sheet

Qx4



Foot Pad

Rx2



Right Swivel Rack Bracket

Sx1



Plastic Nut & Corner Hinge Plate

Tx1



Φ4x40mm

Screw

Ux1

 


Φ6x30mm

Expansion Screw


ASSEMBLY STEPS

Guide to assemble the Cam Bolt and Cam Lock. Note to align the arrow of the Cam Lock with the direction of the head of the Cam Bolt, and rotate the Cam Lock until it is locked.

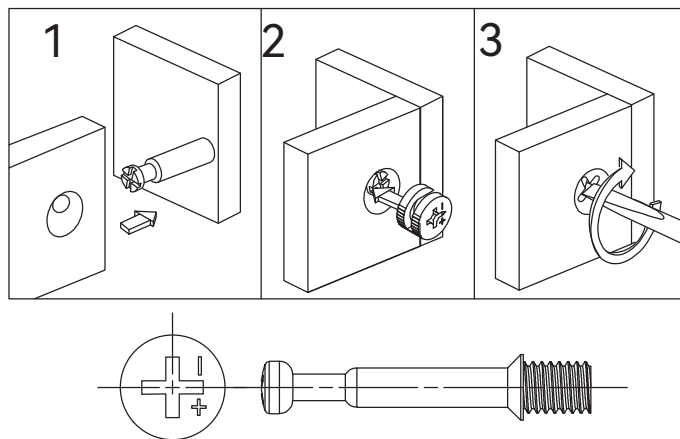


ASSEMBLY STEPS

 STEP 1 Use a hammer to slightly knock door stop (J) and outer runner (K) into the left side panel (2) and right side panel (3).

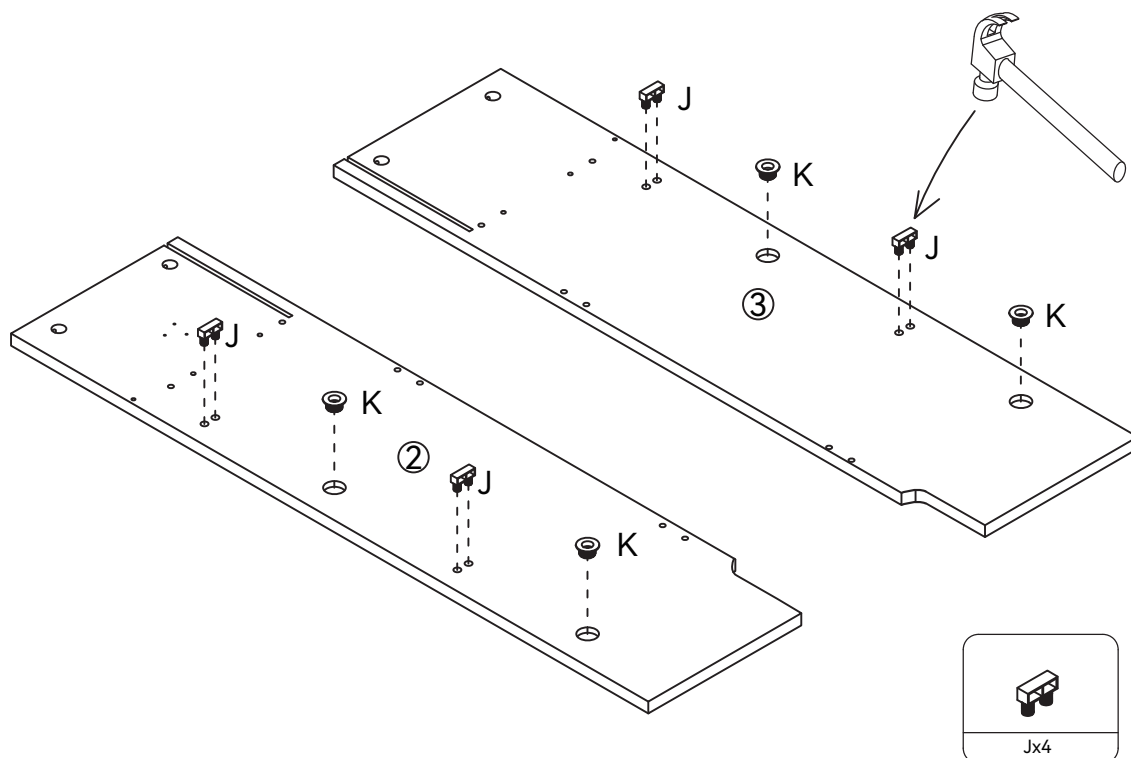


STEP 2 Install the cam bolt (A) into the holes on left side panel (2) and right side panel (3).

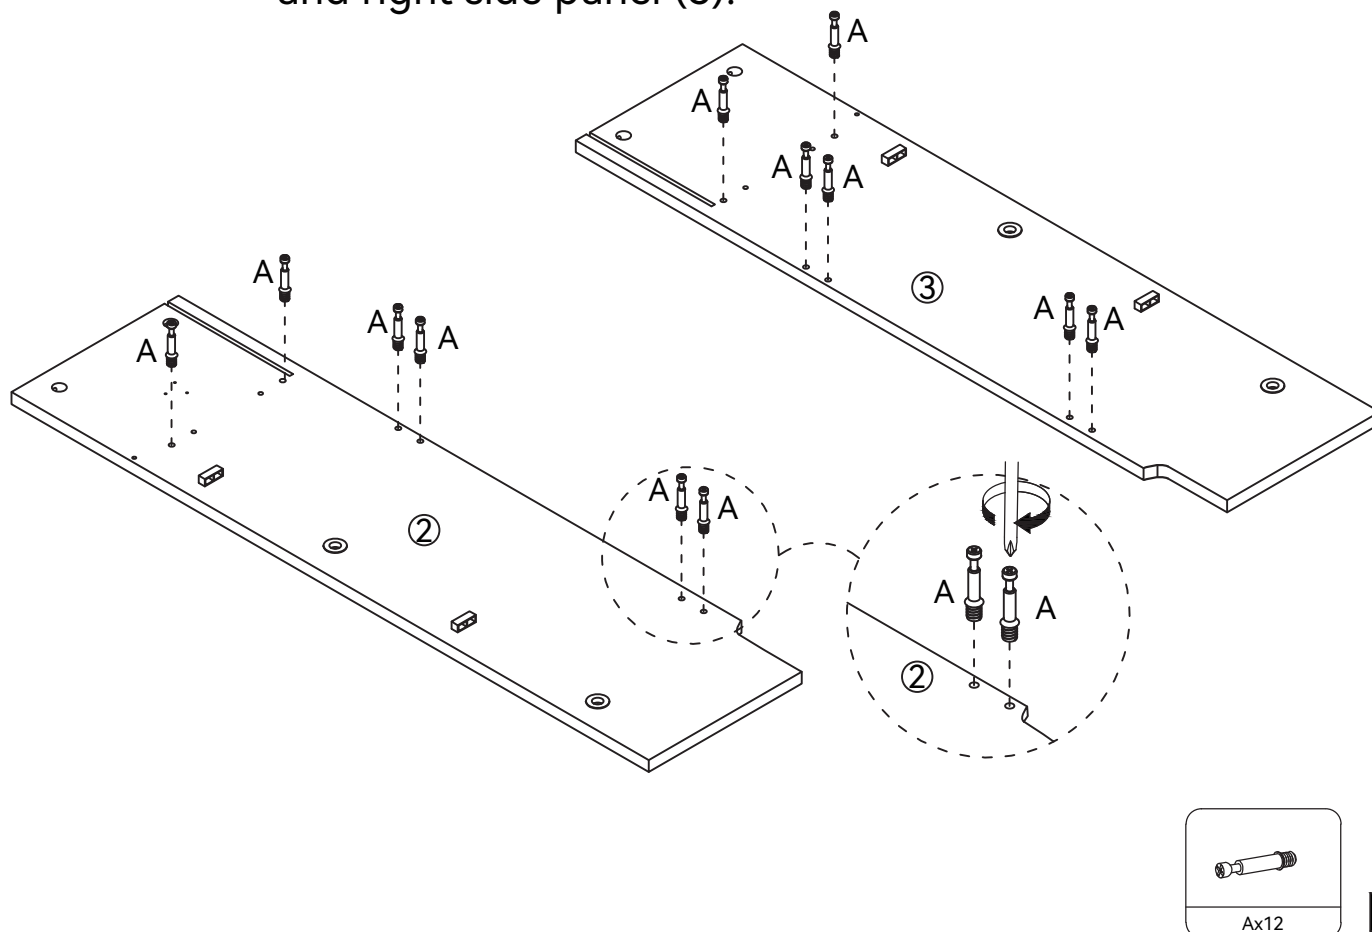

ASSEMBLY STEPS

STEP 3

Install the metal pull rod (O) on the left side panel (2) with screw (N).

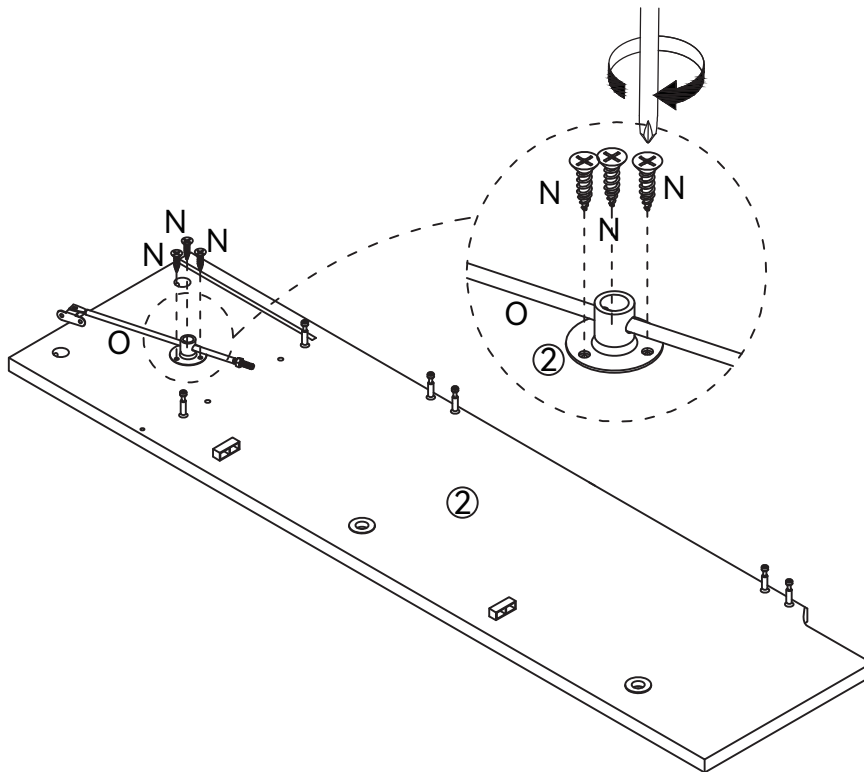


Nx3



Ox1

STEP 4

Insert the wood dowel (C) into the holes on middle panel (5). Attach the middle panel (5) and rear support bar (7) to left side panel (2) with cam lock (B).

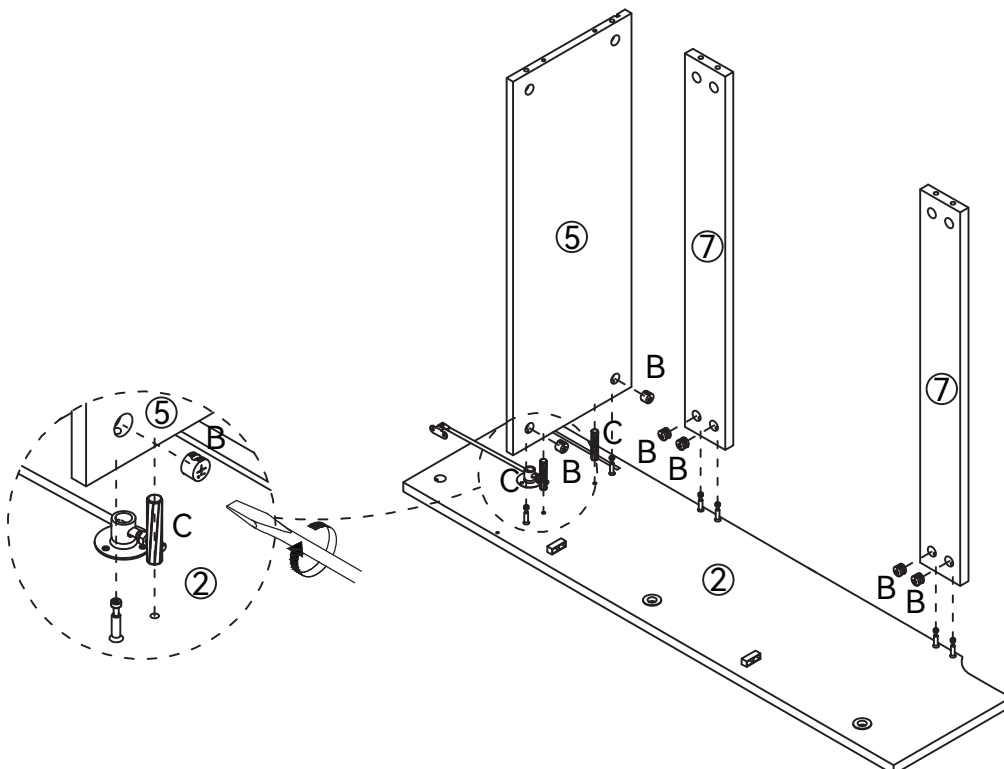

Bx6






Cx2

ASSEMBLY STEPS



STEP 5

Insert the wood dowel (C) into the holes on middle Panel (5). Install the right side panel (3) with cam lock (B) as shown below.

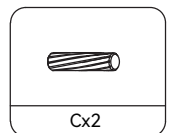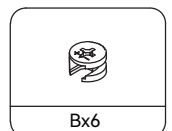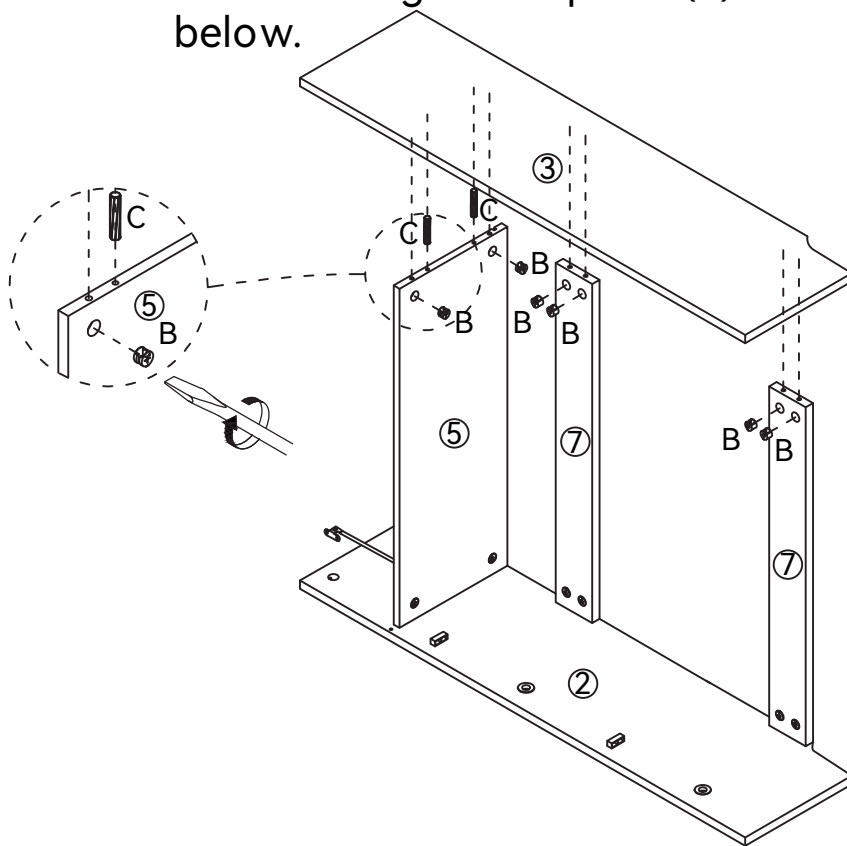

STEP 6


Use a hammer to slightly knock the foot pad (Q) into the left side panel (2) and right side panel (3).

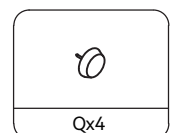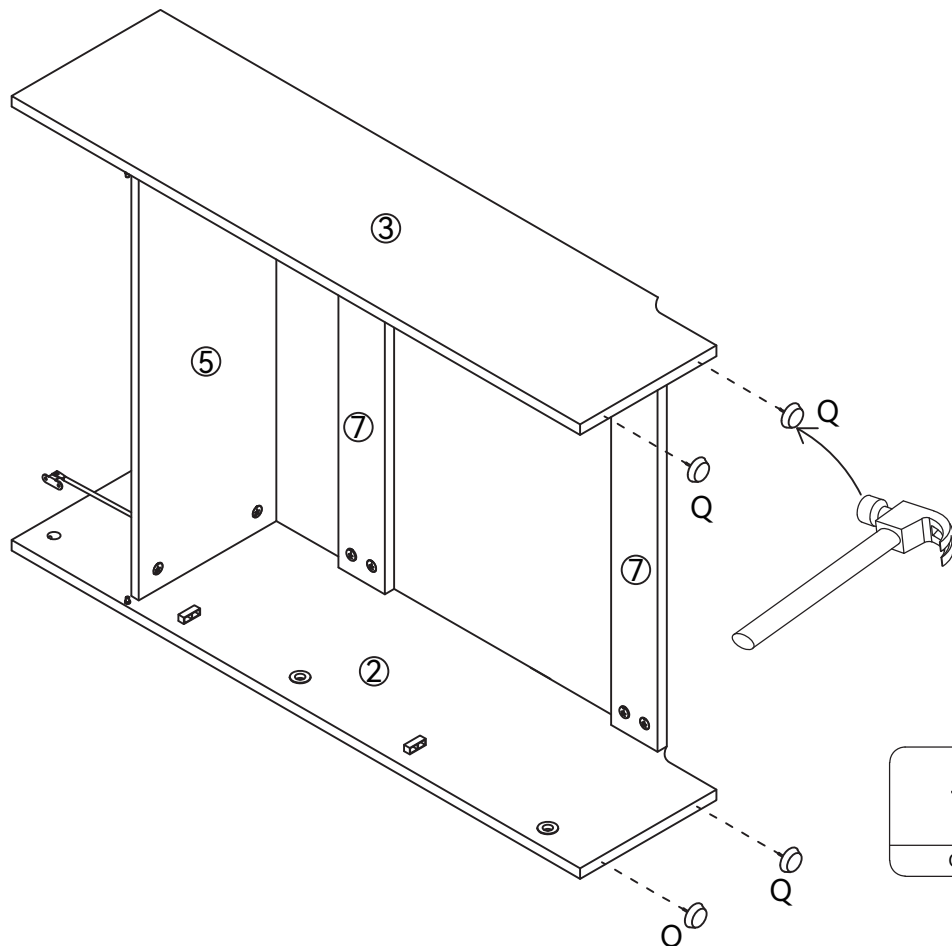

ASSEMBLY STEPS


STEP 7

Place the back panel (4) along the slot of left side panel (2) and right side panel (3).

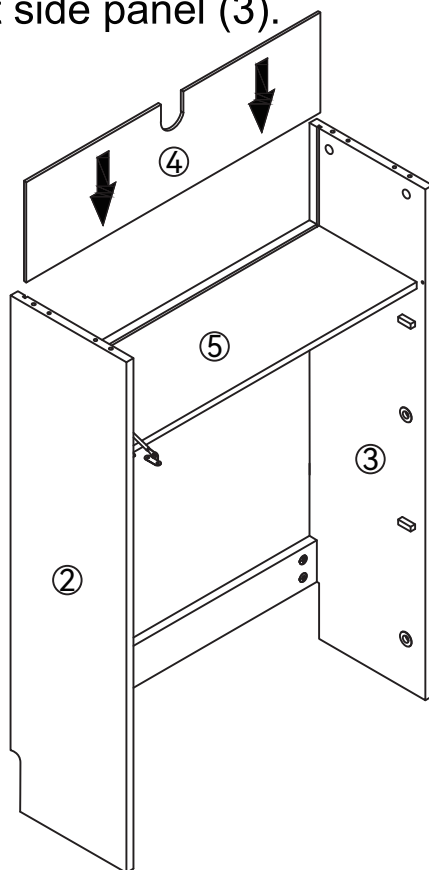

STEP 8




Install the cam bolt (A) into the holes on top panel (1).
Install the anti-tipping iron bracket (E) with screw (F).
Install the magnetic lock (I-1) with screw (I-2)

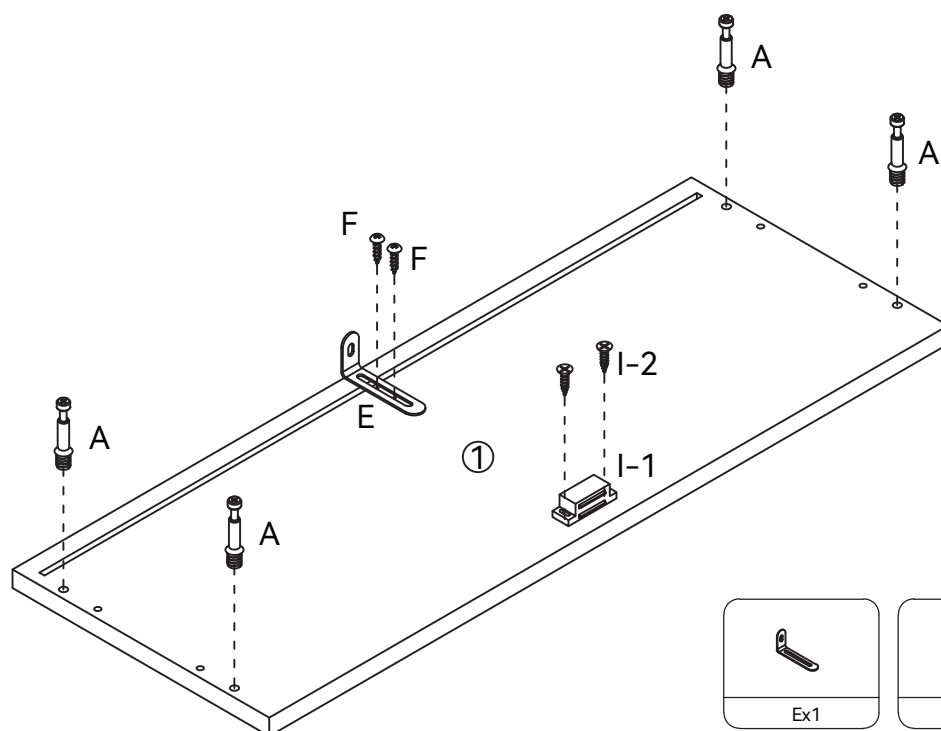

ASSEMBLY STEPS


STEP 9

Insert the wood dowel (C) into the holes on the left side panel (2) and right side panel (3). Attach the top panel (1) to left side panel (2) and right side panel (3) with cam lock (B).

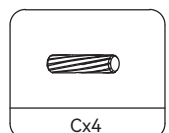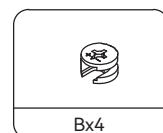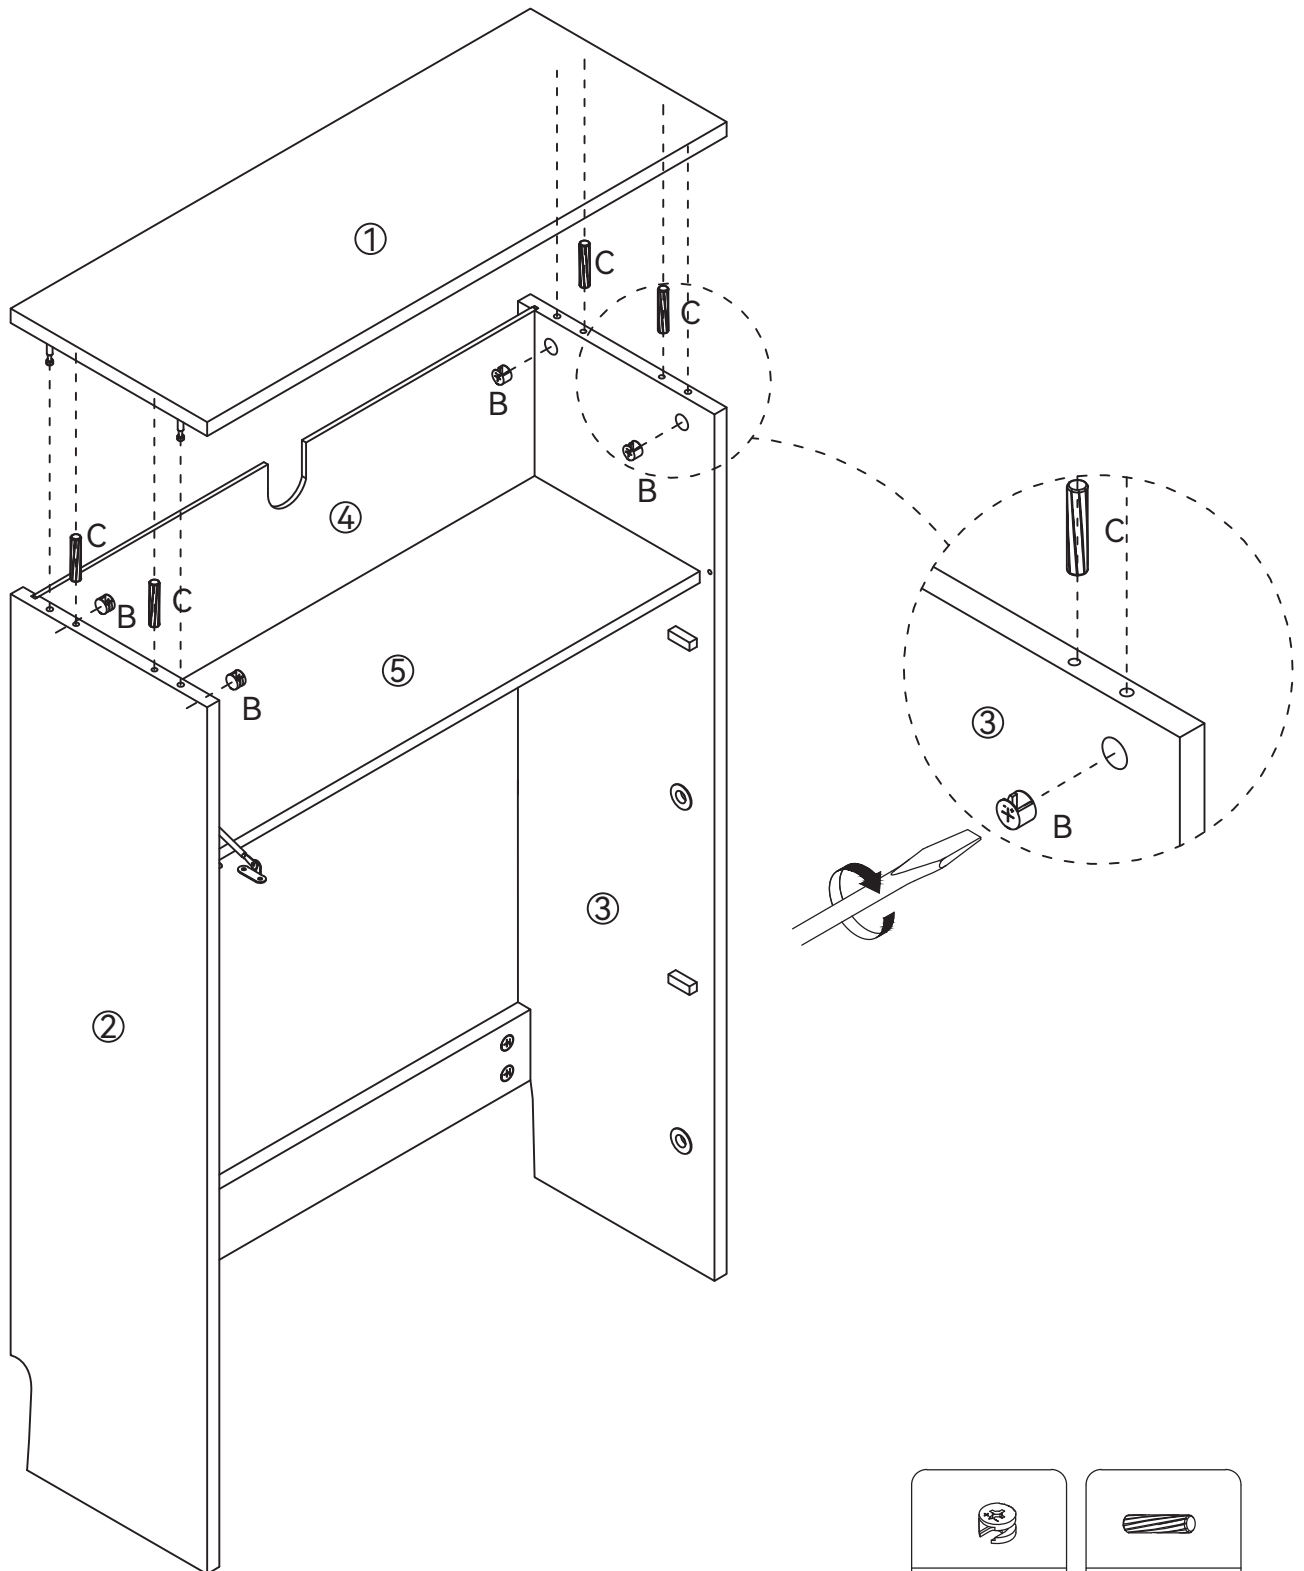


ASSEMBLY STEPS

STEP 10 Fix the left swivel rack bracket (L) and the right swivel rack bracket (R) to the shoe drawer front panel (8) with screw (D).

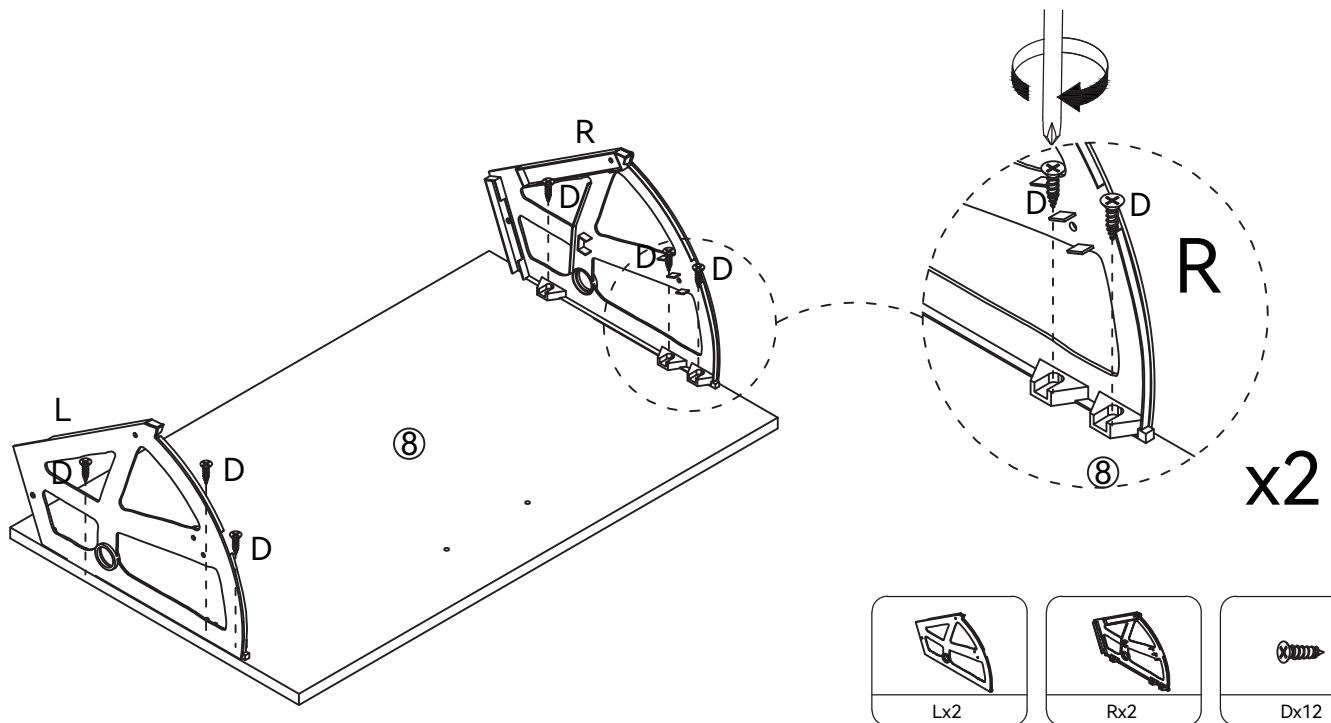


 STEP 11 Place the shoe drawer bottom panel (9) along the slot of swivel rack bracket (L & R) and then fix it with screw (D).

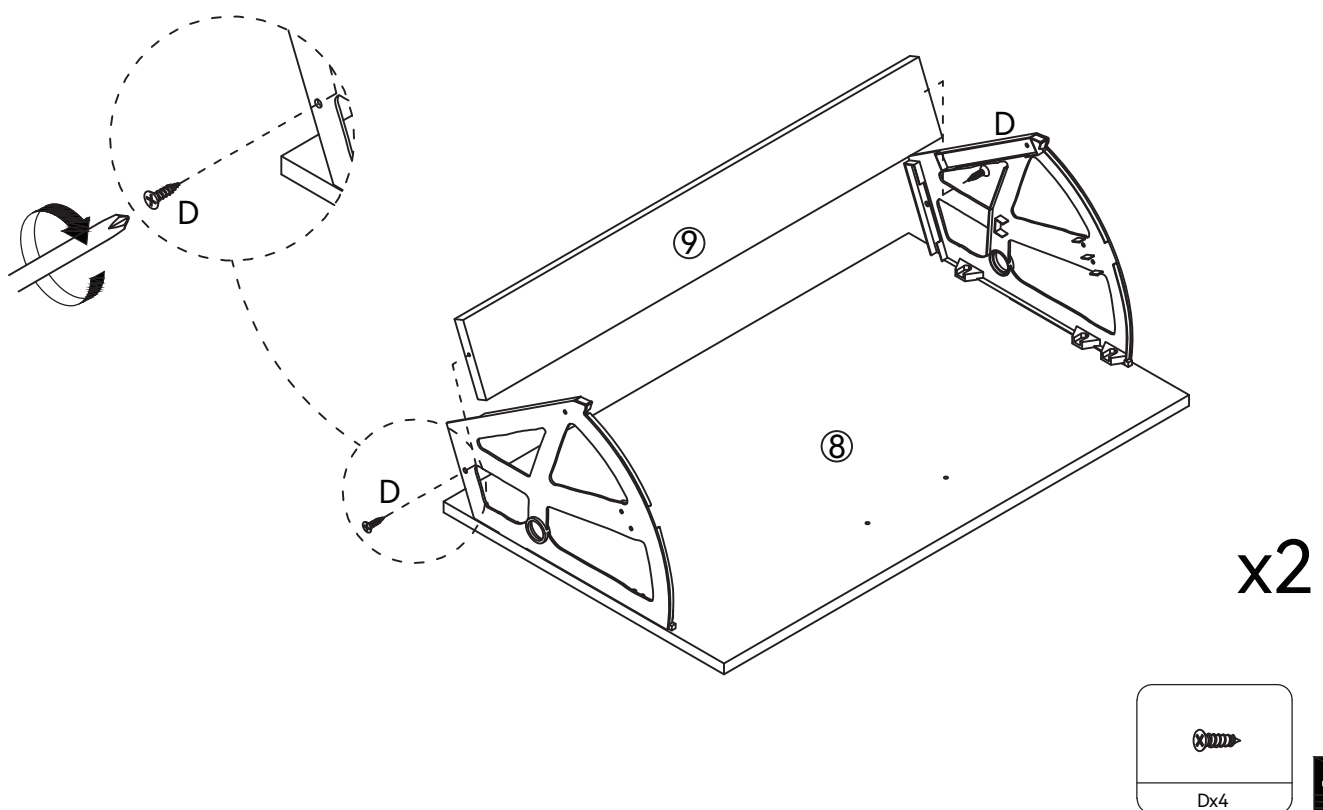


ASSEMBLY STEPS



 
STEP 12 Place the divider (10) into the slot of swivel rack bracket (L & R), and then fix it with screw (D).

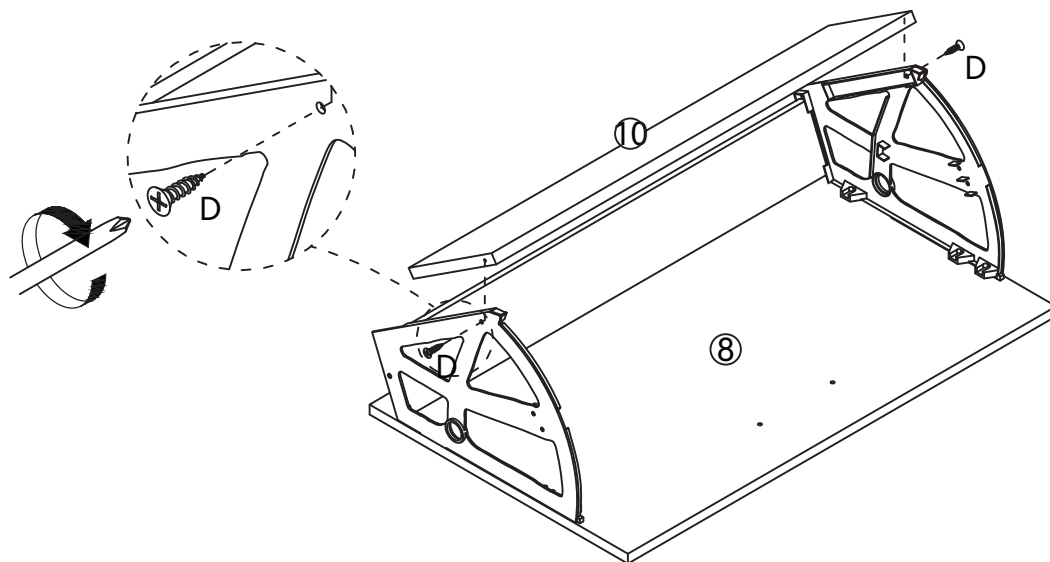

x2

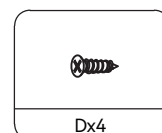 


   STEP 13 Install the flip drawer with the inner runner (M) and screw (D).

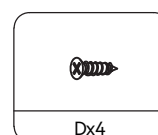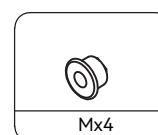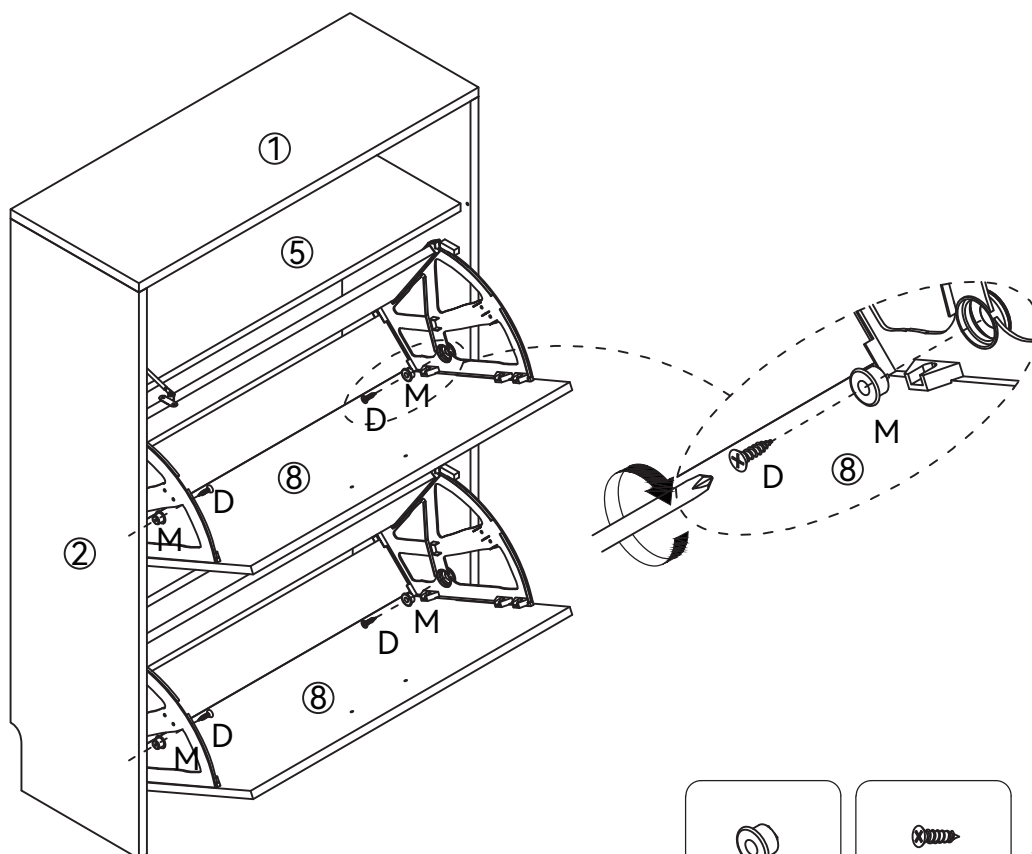


ASSEMBLY STEPS

 STEP 14 Install the drawer handle (G-1) with handle screw (G-2).

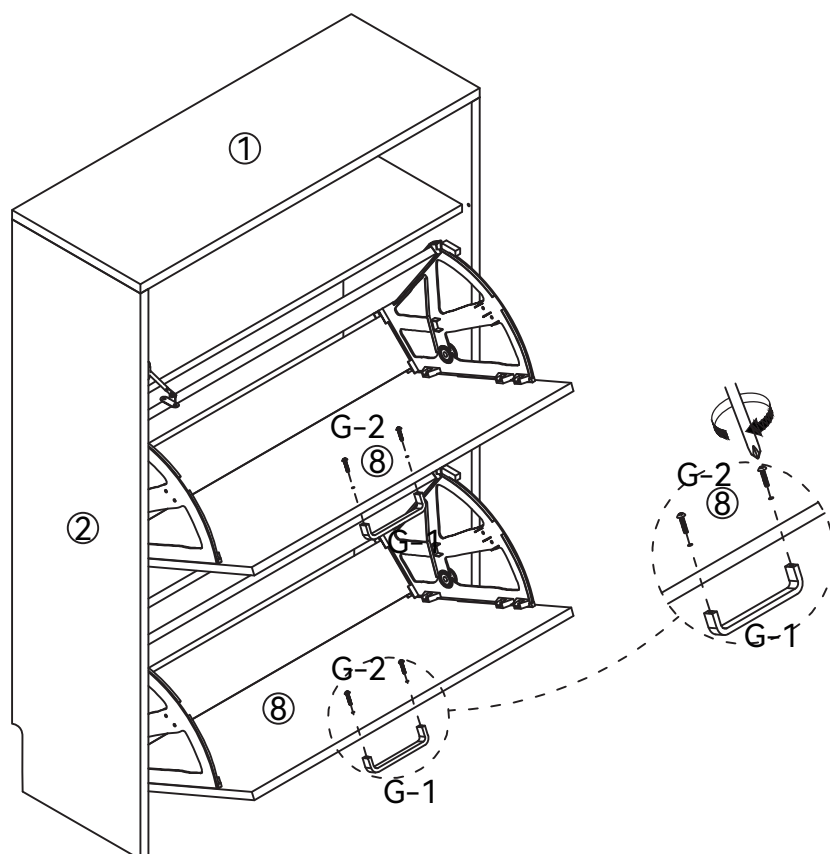


 STEP 15 Place the divider (10) into the upper/lower slot of swivel rack bracket (L & R) according to your need, and then fix it with screw (D).

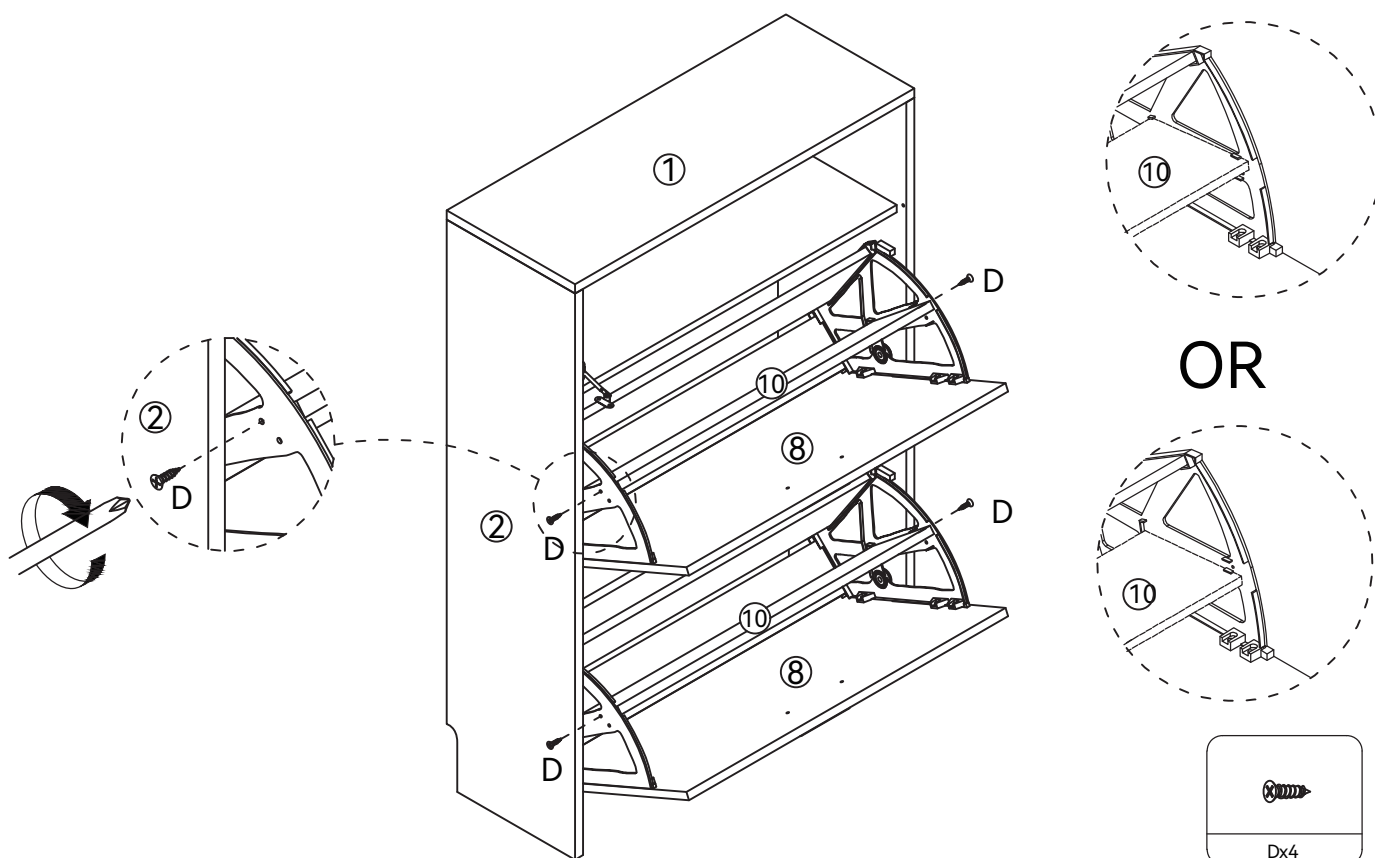


ASSEMBLY STEPS

 STEP 16


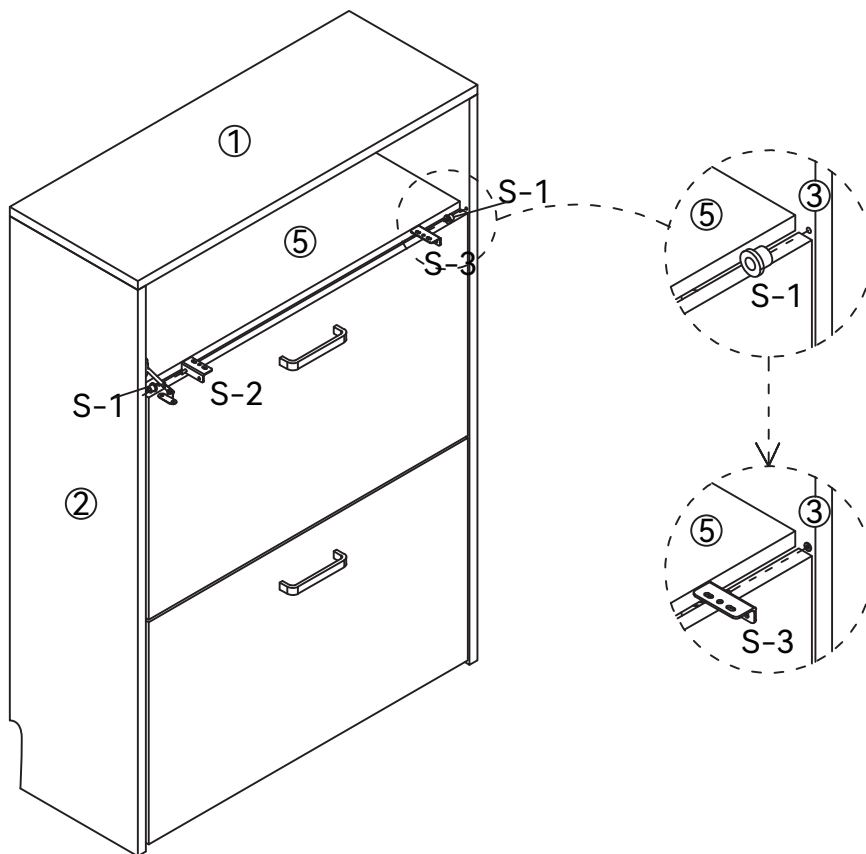


 Insert the plastic nut (S-1) into the left & right side panels (2 & 3) with the holes facing outward, and then insert the corner hinge plate (S-2) into the nut hole on the left side panel (2) and insert the corner hinge plate (S-3) into the nut hole on the right side panel (3).

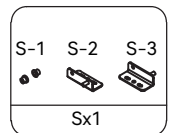

STEP 17

  Align the holes on the top drawer front panel (6) and corner hinge plate and then screw in the screw (N).



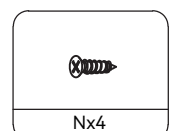
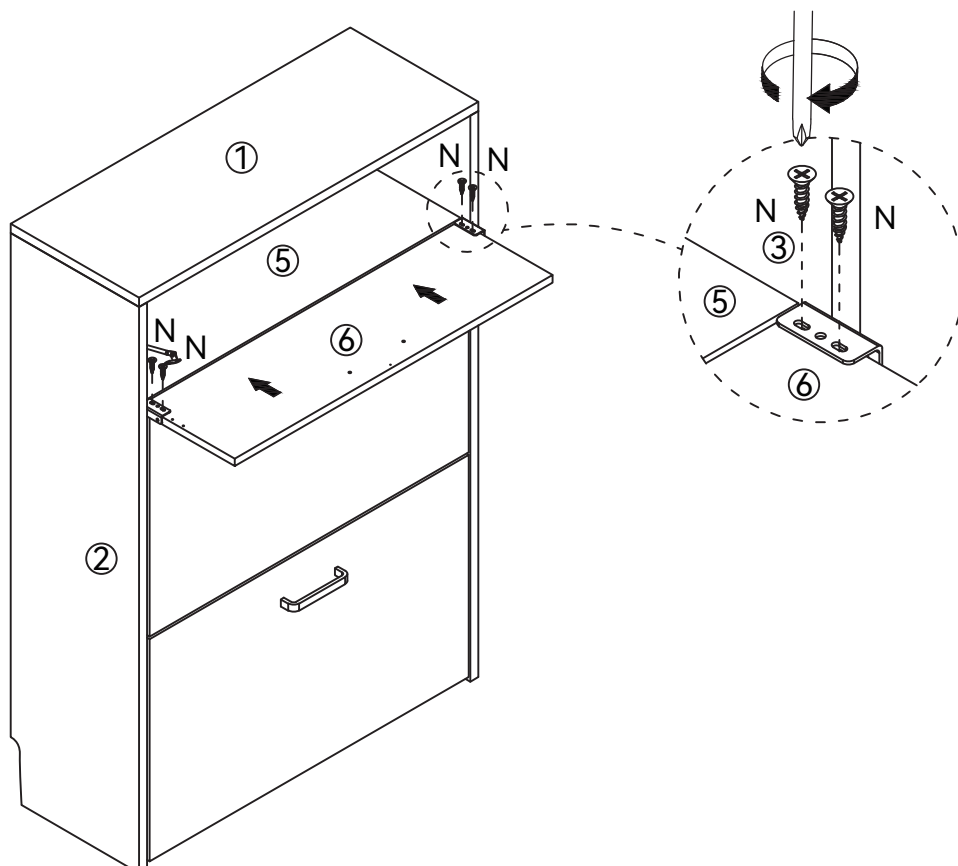


ASSEMBLY STEPS

STEP 18 Fix the metal pull rod (O) on the top drawer front panel (6) with screw (N).



Install the magnetic iron sheet (P) with screw (N).

    Install the drawer handle (G-1) with handle screw (G-2).

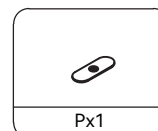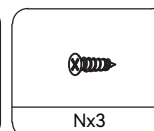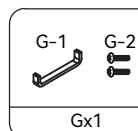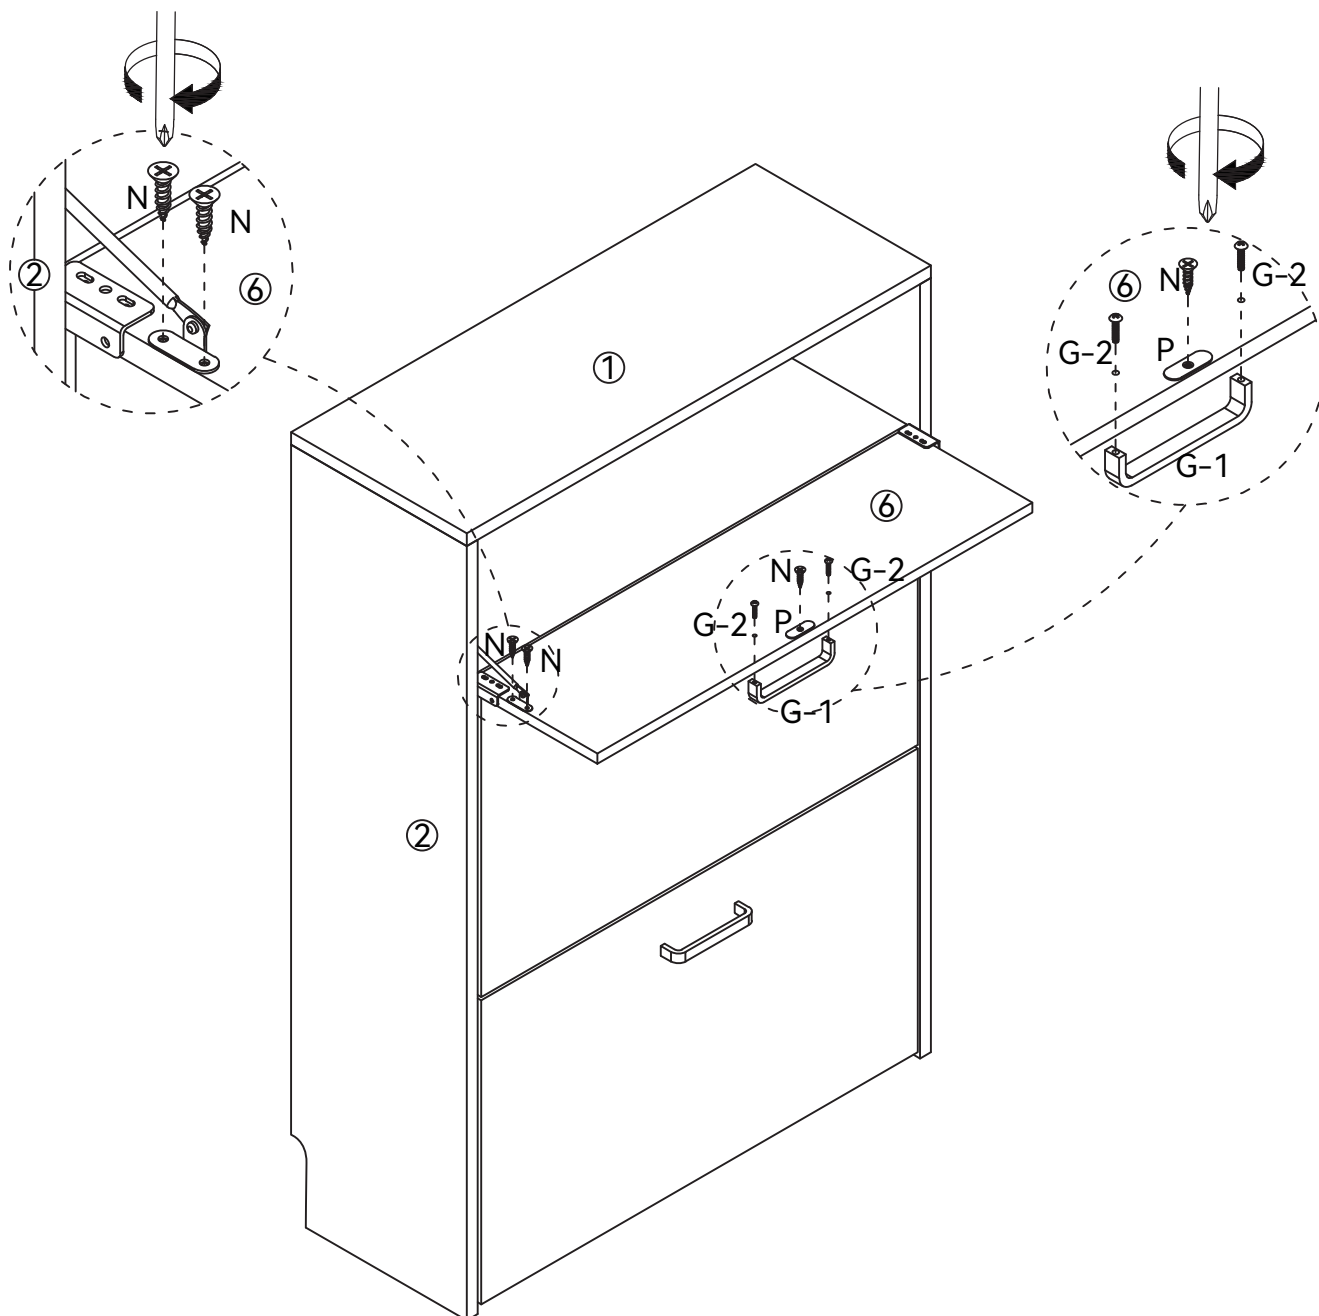

ASSEMBLY STEPS

  STEP 19 Insert the mending wedge (H-1) into the the gap in back panel (4) and fix it with screw (H-2).





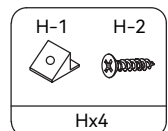
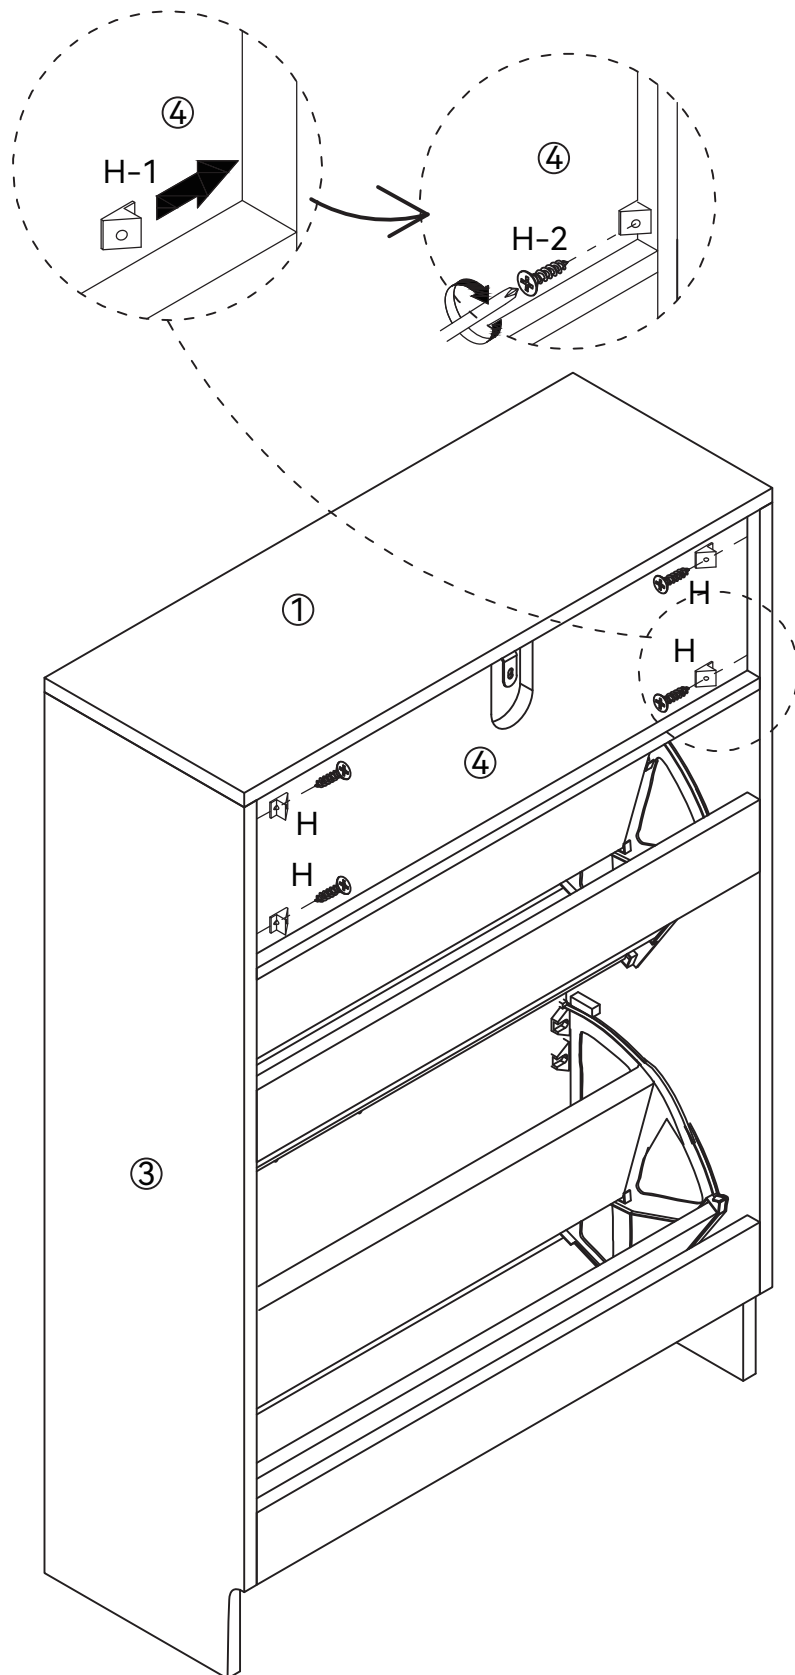


ASSEMBLY STEPS

STEP 20

Drill a hole in the wall and then insert the expansion screw (U) into the hole and tap it lightly with a hammer until it is flush with the wall.

      Pass the screw (T) through the hole on the anti-tipping iron bracket (E) and connect it to the expansion screw (U).

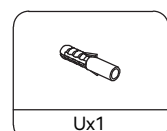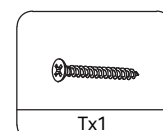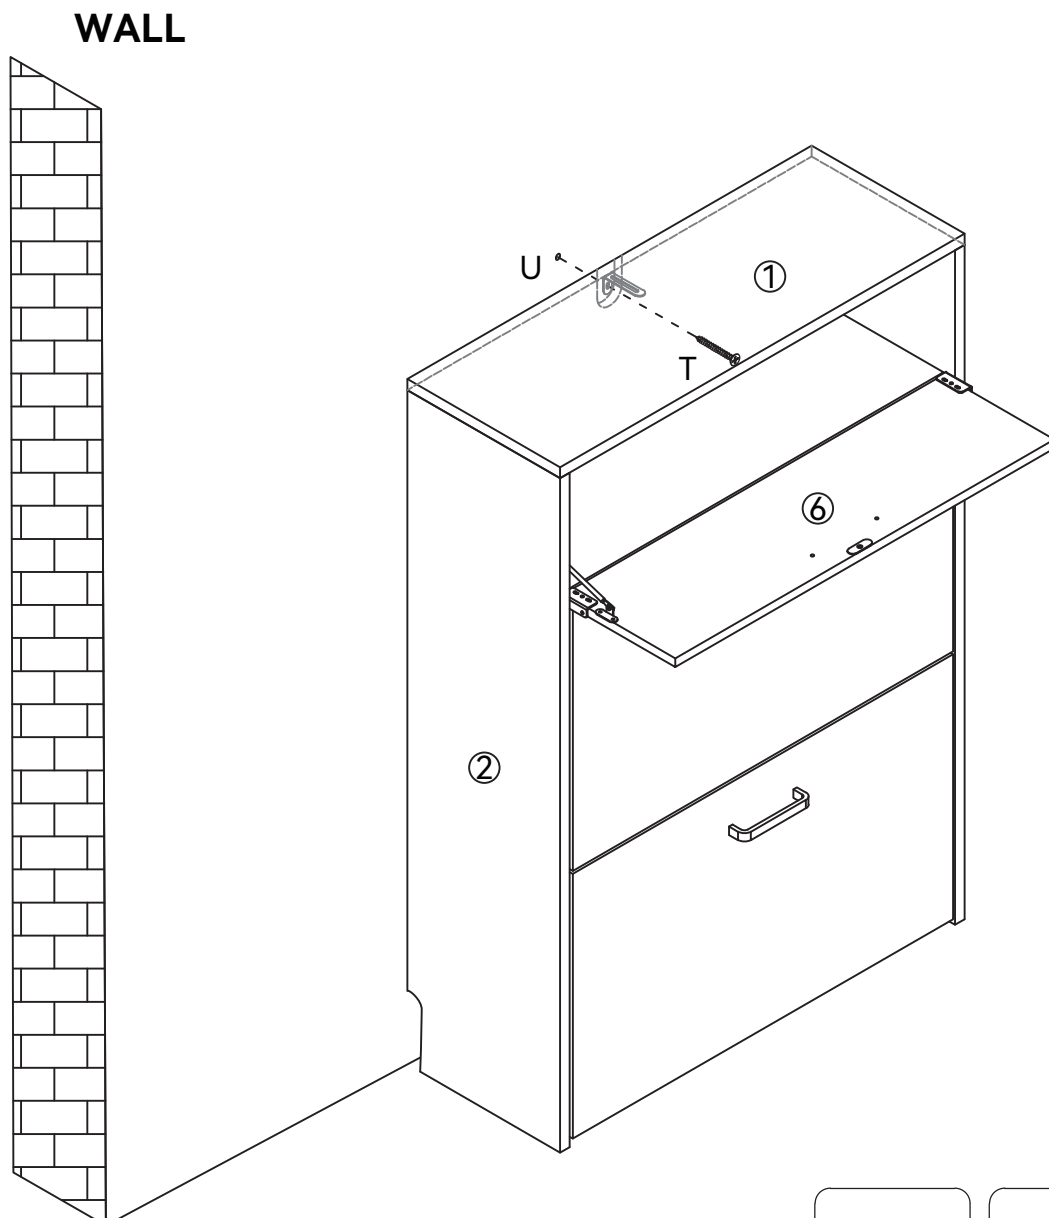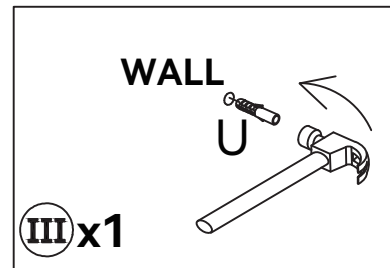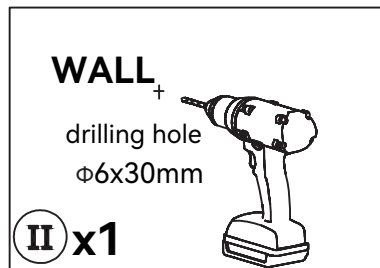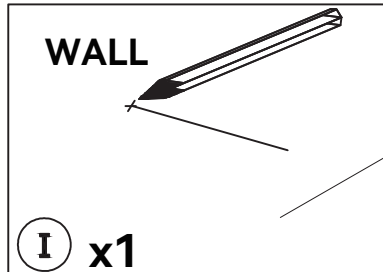


ASSEMBLY STEPS

STEP 21

Finished

 WALL

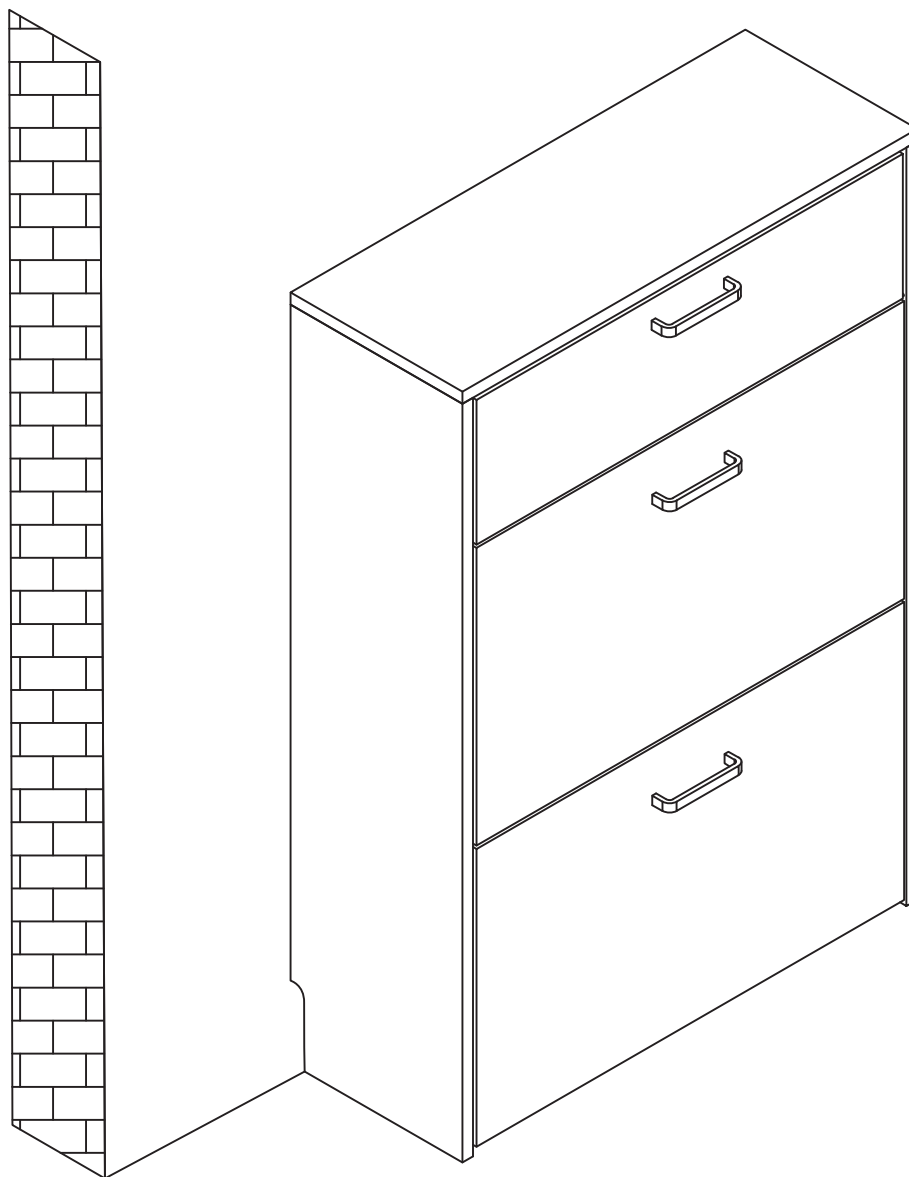

FAQs

1. What should I do when I received a damaged item?

3 ways you can contact VINGLI customer service. We will get to your claim in 24 hours.

① www.vingli.com

- Go to our website
- Scroll down to Contact Us
- Fill out the forum (enter your name, email, order ID and brief description including reasons of damage, quantity of broken part and request)

② support@vingli.com

Send us an email with "**Shoe cabinet** & order ID" as subject, pictures of damage and brief description as shown below.

Subject	'Shoe cabinet 111-1111111-1111111'
Message	'One panel is broken upon delivery. Pls find the attached picture and resolve my issue.'
Attachment	'Pictures of damage'

③ Amazon

- Sign in
- Go to Your Orders
- Find your order in the list
- Select Problem with order
- Choose your topic from list displayed
- Select Contact seller.

We will reply and resolve your issue within 24h.

2. What should I do when I need product repairs?

Pls feel free to contact VINGLI customer service with your order ID, pictures of damage, quantity and corresponding listing number of damaged part showed in Manual, then we will process the after-sale issue based on the extent of damage.

3. What should I do when product part or the entire product is missing?

3.1 Product parts missing

Pls feel free to contact VINGLI customer service with your order ID, the quantity and corresponding listing number of missing part showed in Manual, then we will send it out for you as soon as possible.

3.2 Product missing

Pls feel free to contact VINGLI customer service with your order ID, then we will arrange reshipping or refund for you as soon as possible.

*Note: please check to make sure you have all of the packages for each item, as there may be more than 1 box containing all parts.

Supplementary Instructions for Safe Use

English



WARNUNG



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

- NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French



WARNUNG



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.

- N'ouvrez JAMAIS plus d'un tiroir à la fois.

- Placez les objets les plus lourds dans les tiroirs les plus bas.

- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German



WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippen von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.

- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.

- Legen Sie schwerste Gegenstände in die untersten Schubladen.

Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht
Dies ist ein dauerhaftes Etikett.

Nicht entfernen!