 


Mayfair TV Bed

Assembly Instructions - Please keep for future reference

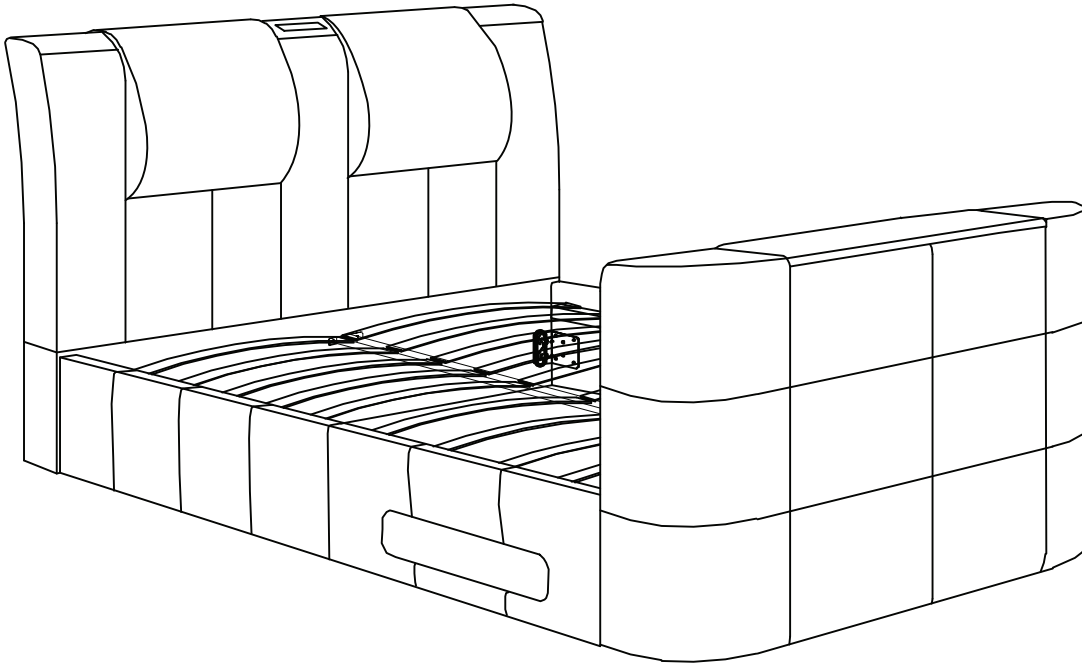

Dimensions 4 ft 6"

Depth x Width x Height

219cm x 146cm x 107cm (Double)

Dimensions 5 ft


Depth x Width x Height

229cm x 160.5cm x 107cm (King)

Dimensions 6 ft

Depth x Width x Height

229cm x 190.5cm x 107cm (Super King)

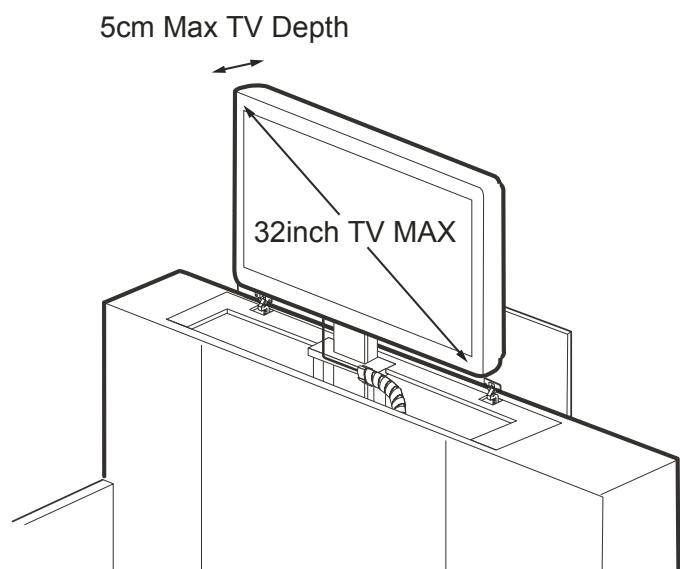

Important - Please read these instructions fully before starting assembly



Safety and Care Advice

Cautions

Assembly time: 1.5 Hours

- Before using the unit please read the manual
- Retain these instructions for future reference
- Tools not included
- Strictly for indoor use
- Keep small parts out of reach from children
- This product is intended for a maximum weight of 100kg per side (200kg combined)
- This product should only be used on firm level ground
- This product complies with the essential requirements of the EMC Directive 2004/108/EC and
- Low Voltage Directive 2006/95/EC
- Keep away from temperatures over 35°C.
- Only use recommended accessories.

Do

- When you are ready to start, make sure you have the right tools, plenty of space and a clean dry area for assembly
- Check the pack and ensure you have all the parts listed
- Due to the size of the product we recommend it is assembled in the room intended for use
- Ensure the product is fully assembled as illustrated before use
- Check all the fittings are secure regularly
- Keep this product away from open flames such as candles.

Do Not

- DO NOT use power tools to assemble this product
- DO NOT over tighten fittings
- DO NOT stand or jump on the product
- DO NOT sit on the side rails
- DO NOT use the product if parts are missing or damaged
- DO NOT expose to direct sunlight, moisture or extreme temperatures.
- DO NOT expose this product to dripping or splashing, rain or areas with heavy moisture.
- DO NOT place any objects filled with liquids, such as vases, on the product.
- DO NOT place the product in direct sunlight or heat, such as radiators.
- DO NOT insert foreign objects into the product.
- DO NOT attempt to repair this unit by yourself.
- DO NOT exceed the weight limit

Safety and Care Advice

Warnings - Electrical Components

Assembly time: 1.5 Hours

- Unplug the unit during lightning storms or when unused for long periods of time.
- Where an appliance couple is used as the disconnect device, the disconnect device shall remain readily operable.
- The unit should be powered off before plugging the product into the power outlet.
- This unit should be powered off before unplugging the product.
- Install this unit so that the power cord can be unplugged from the socket immediately if any problems occur.
- The battery for the TV Mechanism remote control is 2032 and can be replaced by the user with caution. Replace only with the same or equivalent type.
- Never try to repair this product yourself, take it to an authorized technician. Trying to remove panels or repairing the unit yourself could result in an electric shock. Servicing is required when the unit has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen onto the unit, the unit has been exposed to rain or moisture or does not operate normally.
- Do not expose the remote control and battery to excessive heat such as sunshine, fire or the like.

Care Instructions


- Wipe with a clean damp cloth. If there are any stubborn marks, use a non abrasive sponge with warm soapy water
- Do not use solvent based cleaners or detergents as they can bleach or damage the product
- Never use scourers, abrasives or chemical cleaners

Customer Service Help Line & Missing Parts

- If you have a fault with your product call customer services on 0118 907 0130 (Monday to Friday 09:00 – 17:00 excluding bank holidays)

This product complies to the essential requirements of the EMC Directive 2004/108/EC and Low Voltage Directive 2006/95/EC


Exploded Bed View

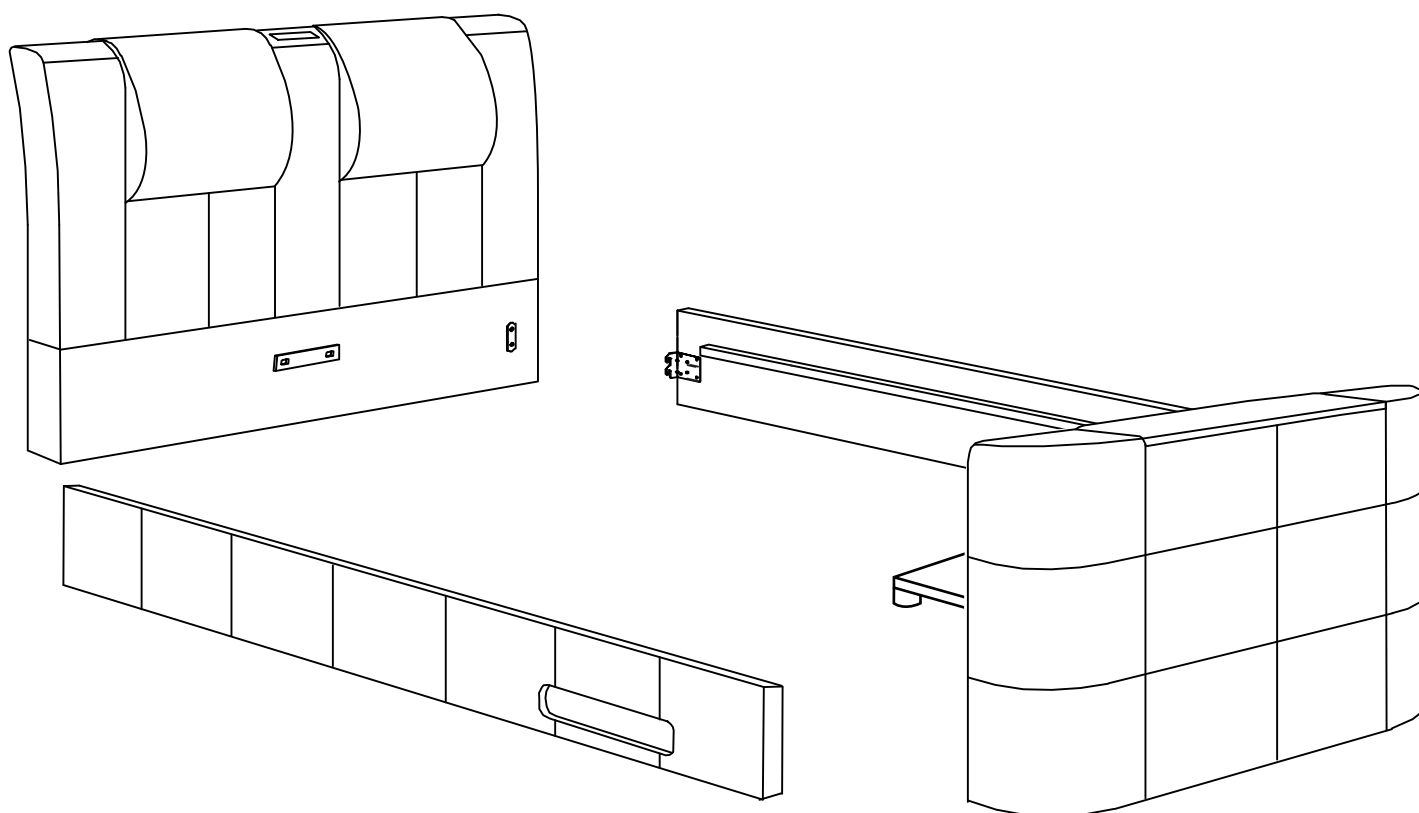


Components

If you have damaged or missing components
call the **Customer Helpline: 0118 9070130**


☐ Tick boxes provided to check the components

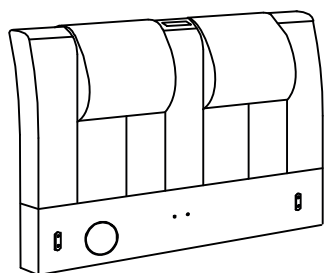


a Headboard ☐

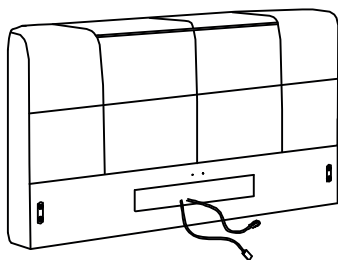


b Footboard ☐

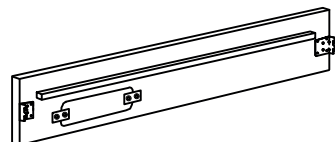


c Right Side Rail ☐

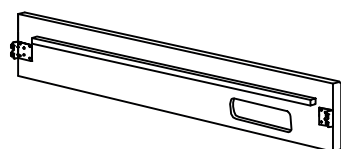


d Left Side Rail ☐

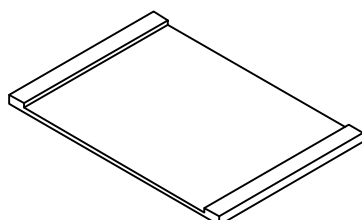

e Tray ☐

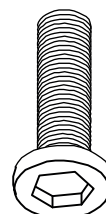


f Bolt M8 x 18mm x 8 ☐

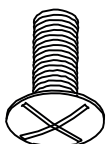


g Bolt M8 x 20mm x 4 ☐




h Allen Key M5 ☐

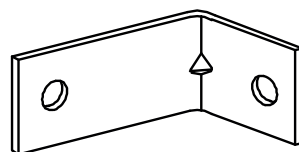

i Bracket x 2 ☐

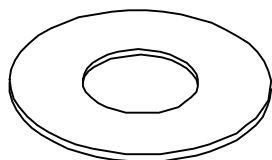

j Washer (M8) x 4 ☐

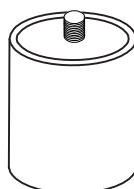


k Feet x 2 ☐


Components

If you have damaged or missing components
call the **Customer Helpline: 0118 9070130**

 ☐ Tick boxes provided to check the components



l Bolt M8 60mm x 2

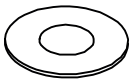


m Washer (M8) x 2



n Nut M8 x 2




o Screws No. 6 x 45mm x 8

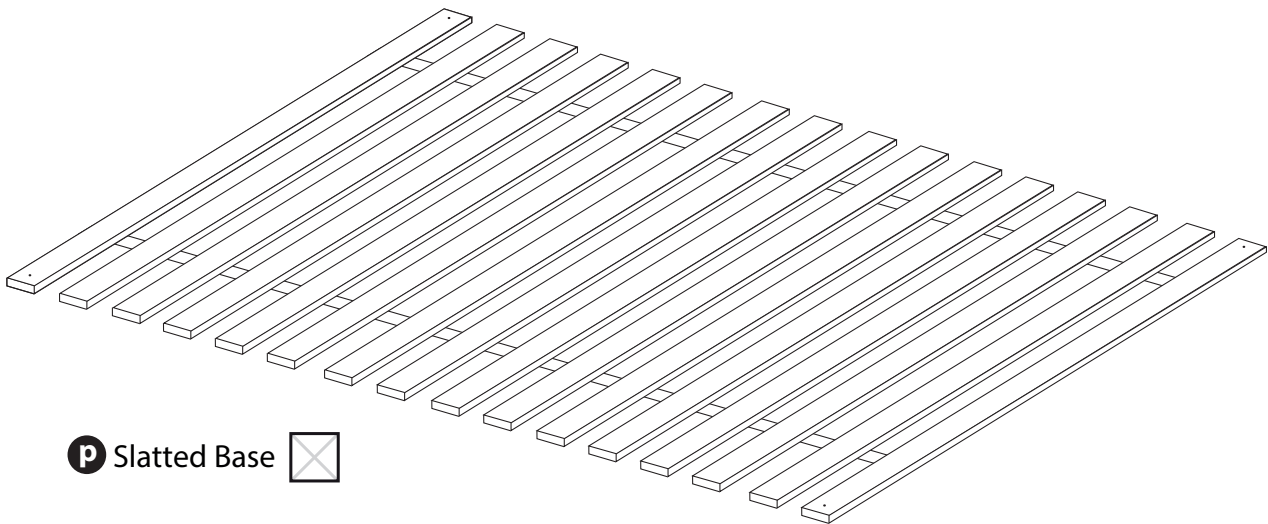

p Slatted Base



q Cross Members

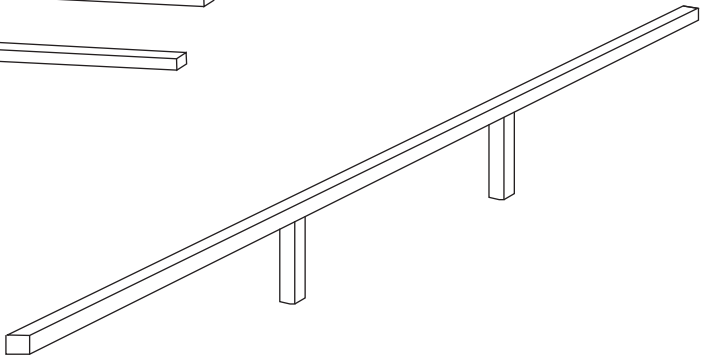

r Centre Rail







Assembly Instructions

Step 1

Inserting bolts

Loosely attach 2 x bolts **(f)** to both corners of the headboard **(a)**. Then repeat for the footboard **(b)** as shown.

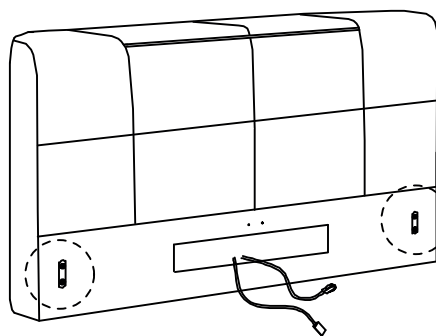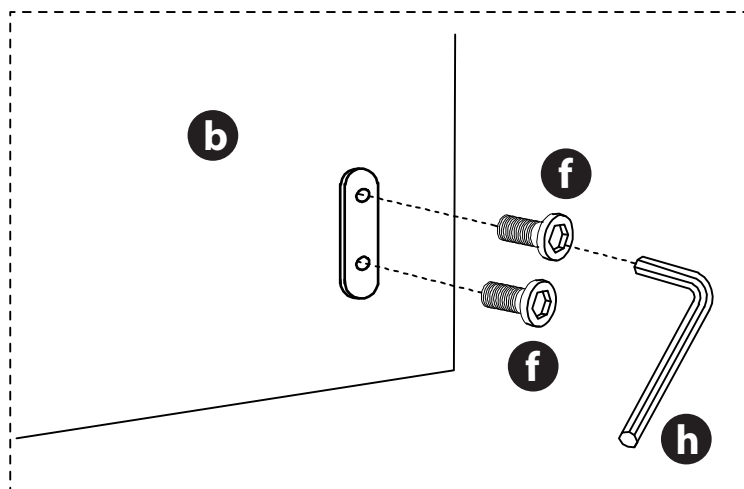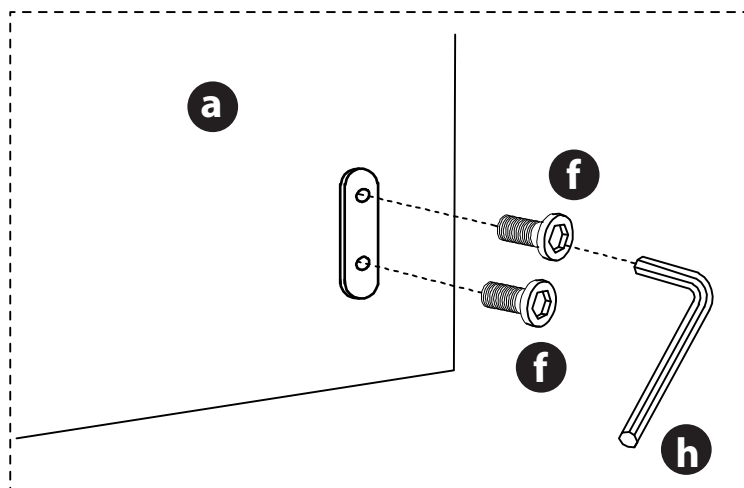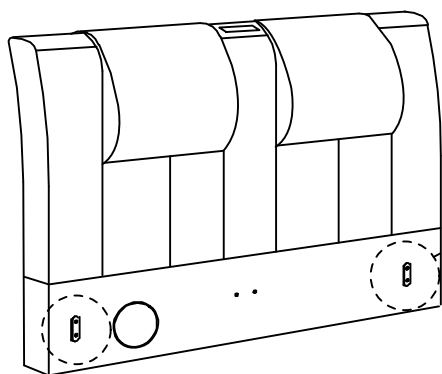

Parts

- ☒ (a) Headboard
- ☒ (b) Footboard
- ☒ (f) Bolt M8 18mm x 8
- ☒ (h) Allen Key

Assembly Instructions





Step 2

Attaching side rails

Hook on the side rails **(c)** & **(d)** to the loosely fitted Bolts **(f)** on the headboard **(a)** then securely tighten the bolts.




Do not over tighten.

Repeat this step on the footboard **(b)**.

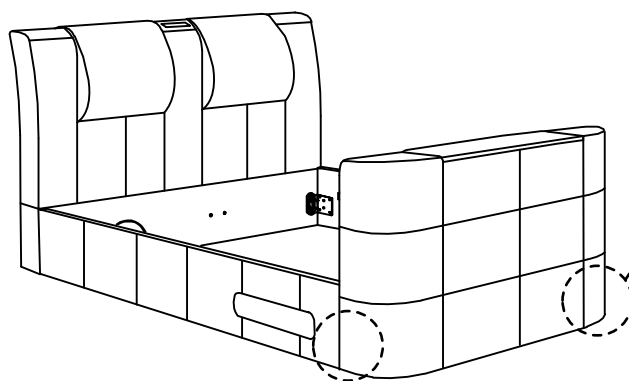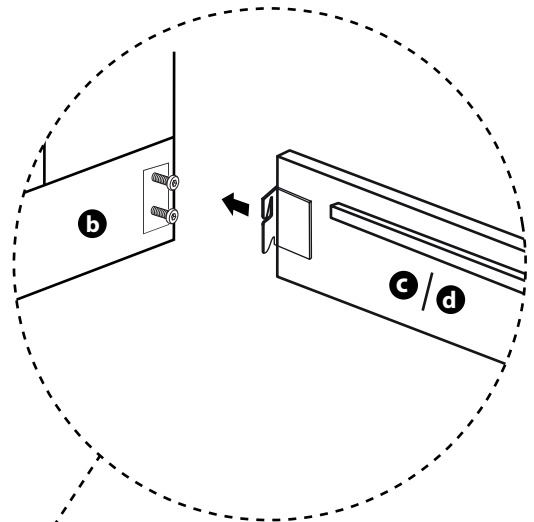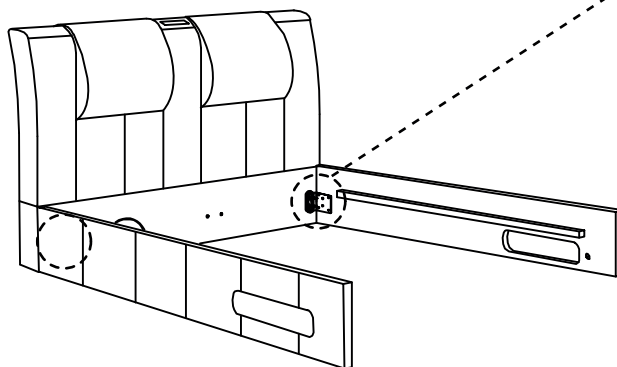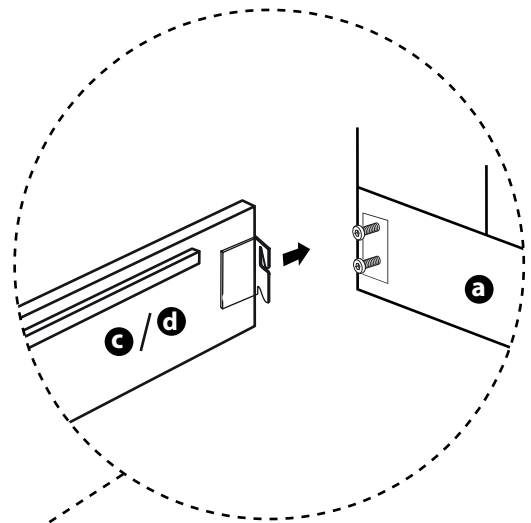

Parts

-  (c) Right Side Rail
-  (d) Left Side Rail
-  (h) Allen Key

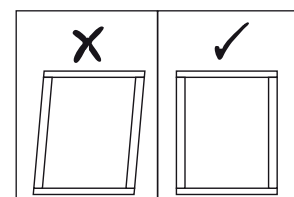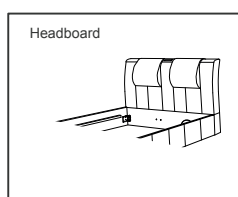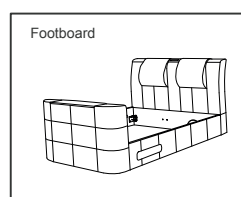


Assembly Instructions


Step 3

Attaching the tray **(e)**

a) Attach the 2 x brackets **(i)** to tray **(e)** by inserting 2 x bolts **(g)** with 2 x washers **(j)**.

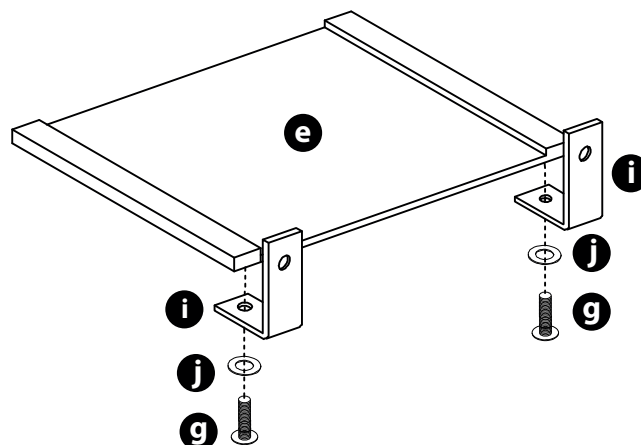


b) Insert 2 x feet **(k)** to the other side of the tray **(e)** by rotating them anti-clockwise.

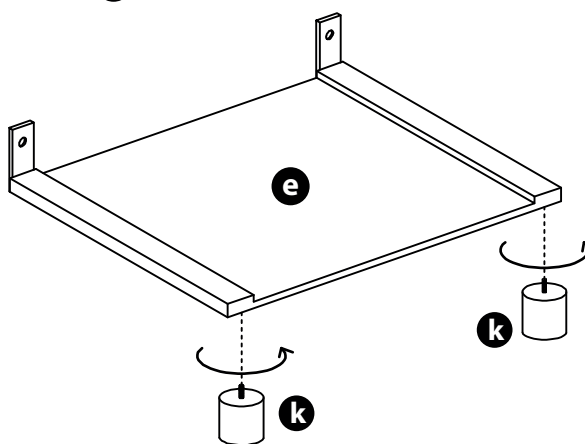

c) Place the brackets **(i)** (that are now attached to the tray **(e)**) up against the chosen side rail **(c)** or **(d)**.


Attach the tray **(e)** by inserting 2 x bolts **(g)** with 2 x washers **(j)**.

Note: That the tray can be fitted on either of the side rails.

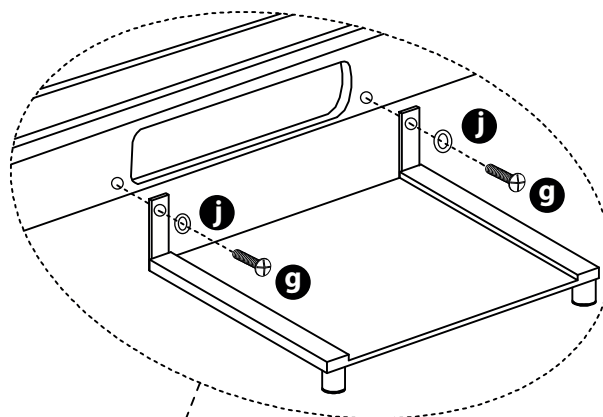

Parts



-  (e) Tray
-  (i) Bracket x 2
-  (j) Washer x 4
-  (g) Bolt M8 20mm x 4
-  (k) Feet x 2

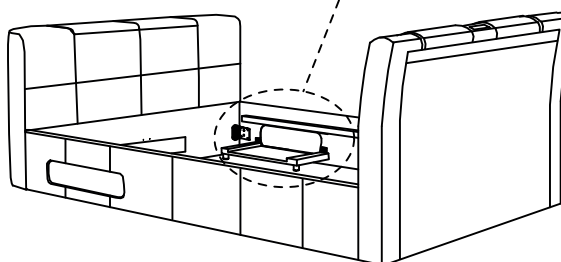

Assembly Instructions

Slat Assembly


Turn the frame the right way round. Lay the slats on the bed frame and fix the end slats to the wooden support bars on the bed side rails using the 4 screws provided.*

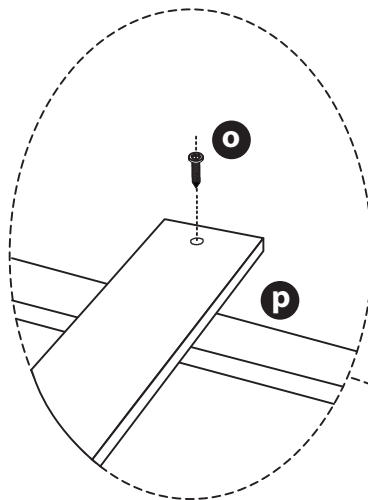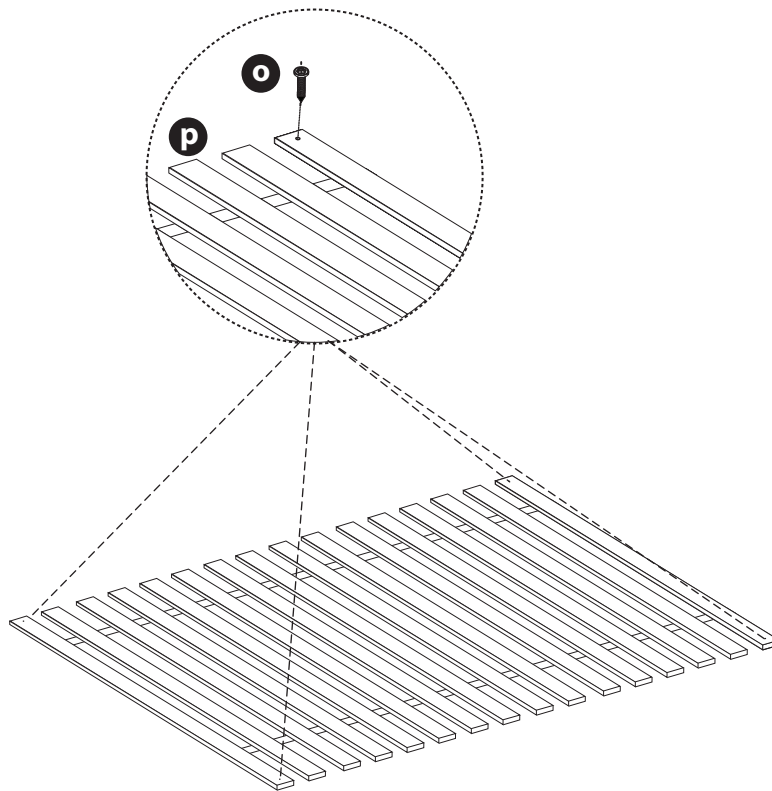

Parts


-  (p) Slatted Base
-  (o) Screws No. 6 x 45mm x 4

*Pilot holes are not provided as the screws are the self-tapping style that screw directly into the wooden rail.

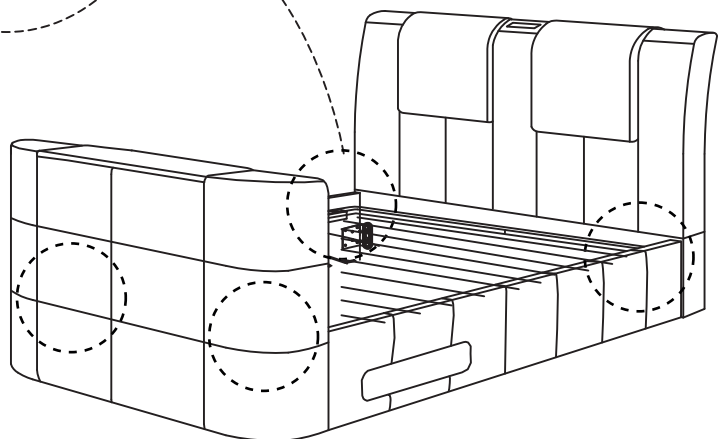


MK4 Cabling Components


☐ Tick boxes provided to check the components

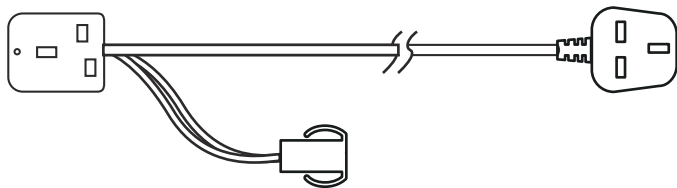

(1R) TV Power Supply ☐

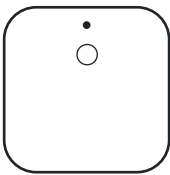

(2R) Wireless Control Box ☐

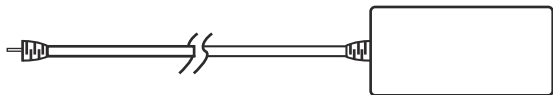

(3R) AC / DC Adaptor ☐



(4R) Motor Power Supply ☐




(2032 Battery is included)

(5R) Hand Control ☐

TV Mechanism MK4 Cabling Guide

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

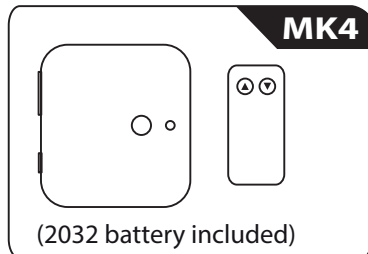


- a)** Plug the receiver power supply in (4R) and the TV power line (1R) directly into the mains (Via a multi gang or extension socket, not supplied).




Do not plug the receiver power supply (1R) into the auto switch as the mechanism will not work!

- b)** Plug your TV into (1R) the auto-switch socket. This auto-power-off device cuts power to the TV when stowed avoiding overheating and potential damage to the unit.

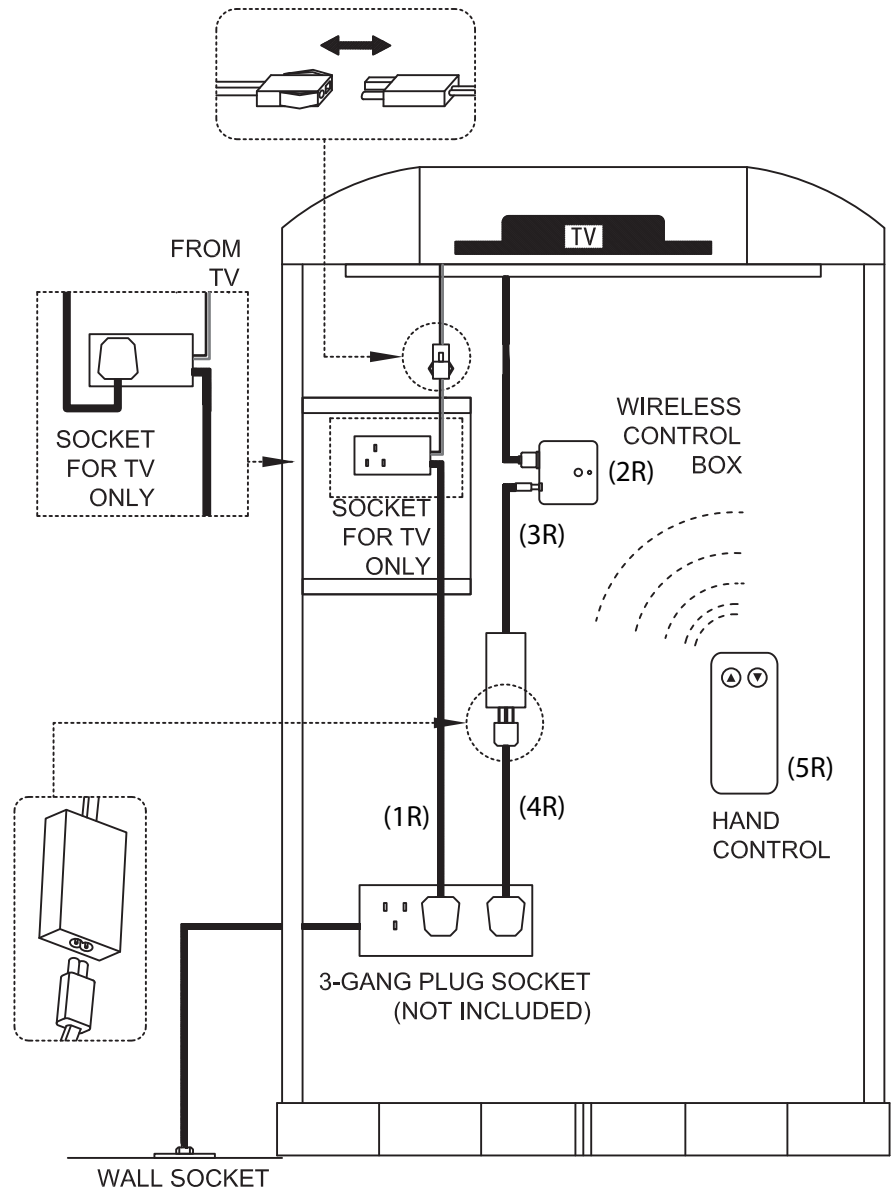

Contact the supplier if any of the cords or part component is damaged.

TV Bed MK4 Remote Control Guide

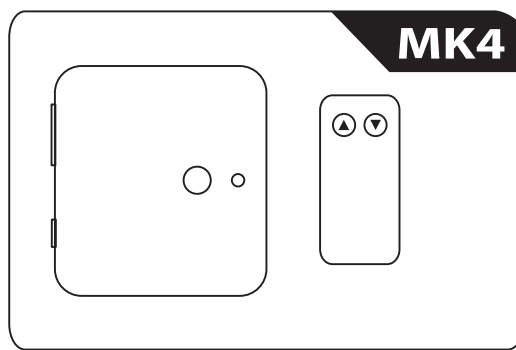

When necessary, you will need to use a 2032 battery in the remote for replacement.

Your remote control system is pre-set and you can use this immediately. You will only need to reset the remote system if your hand set does not respond.

Operation – Refer to wire diagram for parts listing

1. Connect the mechanism motor inlet cord from the footboard to the 5-Pin Din outlet.
2. Connect the DC power supply to the DC jack, both on the back of the Box.
3. One press on the remote controls **↑ up** button will drive the TV bracket upwards, press again on the **↑ up** button will pause the upward movement.
4. One press on the **↓ down** button will drive the TV bracket downwards, press again on the **down** button will pause the downwards movement.

Synchronize (Pairing) the controller Box to the Handset

Provided that the button on the controller box below the LED has not been PRESSED, the pair should be synchronized. If you need to synchronize them follow the instructions.

1. Press and hold down the button on the controller BOX, for eight Seconds. The red LED will flash quickly.

This will delete the pairing (so the handset will not work). To reset the pairing follow the next steps:



1. Press and hold the button on the controller box for three seconds.
2. The LED will flash slowly, and then release the button. Press any of the buttons on the handset.
3. The LED on the controller box will stop flashing.
4. The pairing is completed and the handset is operative with the control box.

Fitting the TV

Note: When raising the mechanism without the TV fitted, lift the lid on the footboard first. Do not let the lid touch the mechanism whilst it is in motion at any time, either moving up or down, until the TV is fitted.

When using the electric mechanism, please allow the TV bracket to fully rise or retract before pushing the button again. Should you repeatedly push the button whilst mechanism is moving safety device will cut off the power to prevent damage. Should this happen, unplug the TV bed from the main power supply and remove the plug from the wall for 5 minutes. Reinsert the plug and switch on to start using the TV bed again.

Note: If you are not fitting the TV at this point, please move directly to the next step.

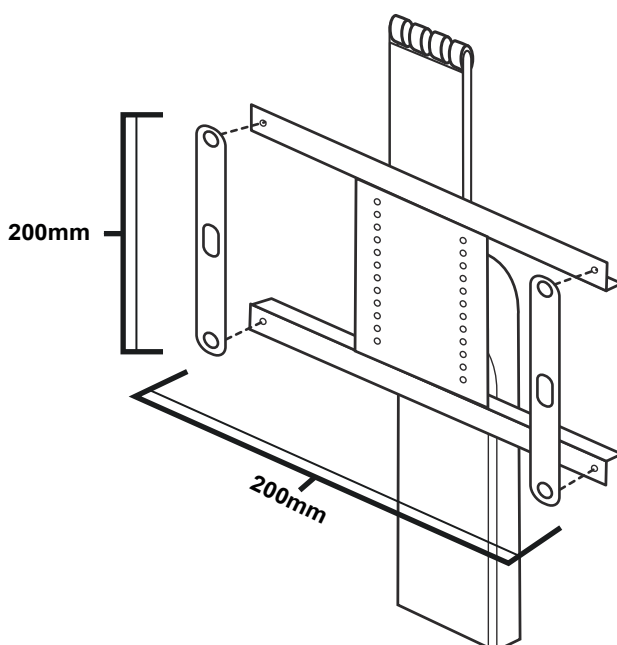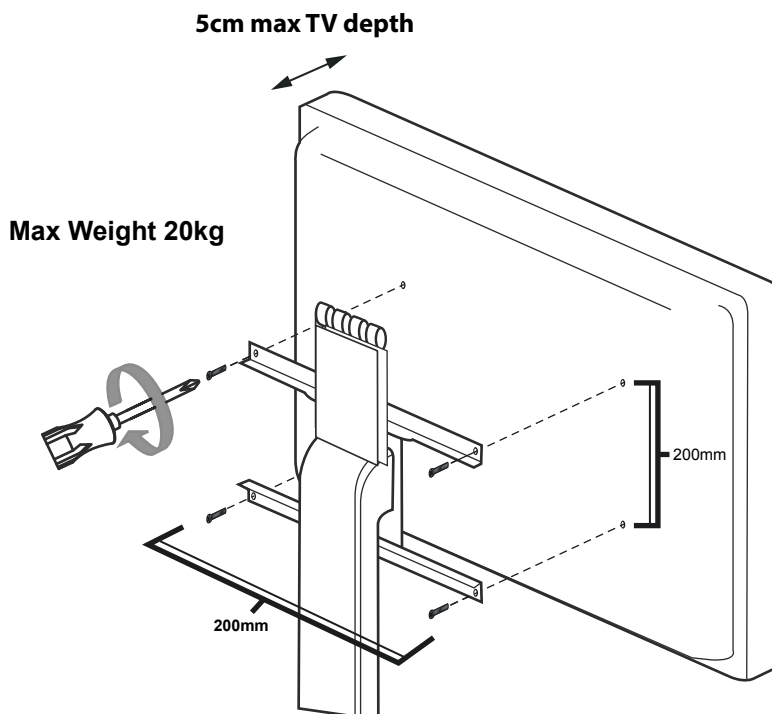

Adjusting TV Bracket


Should you need to adjust the position of the TV bracket to best fit your TV, follow these steps:

1. Remove the 4 bolts on the front plate as shown.


2. Move the bracket up or down as required.

3. Reattach 4 screws onto front plate. Attach television as shown in previous step.


Remove 4 bolts from plate.

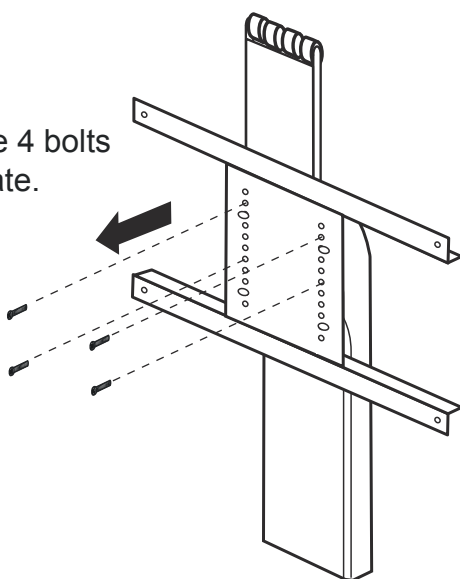

Adjust height of brackets

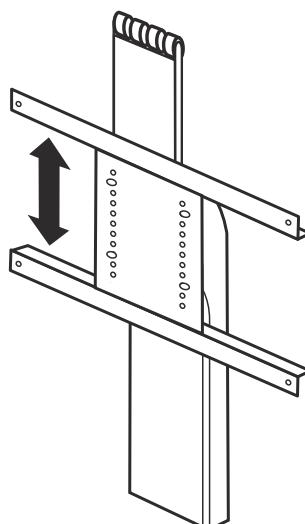






Reattach 4 bolts to plate.

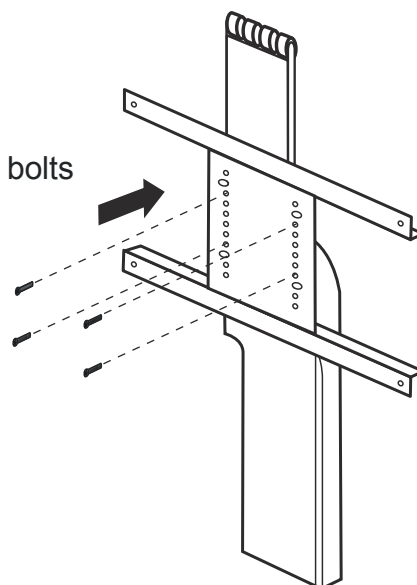

TV Bracket

The position of the mounting holes your TV use will vary depending on the make and model.

The TV bed has a universal fitting and can accommodate TVs with the following standard VESA compliant sizes.

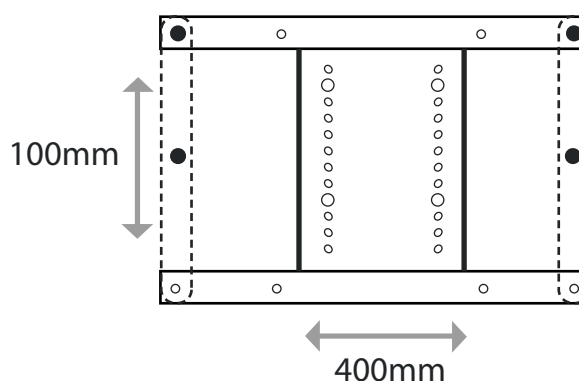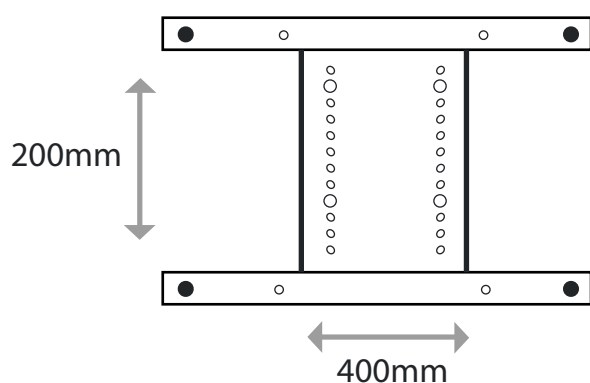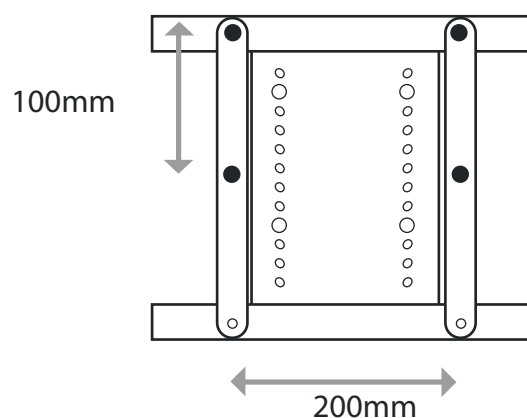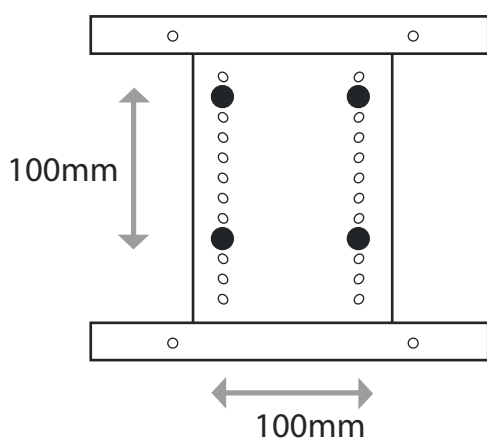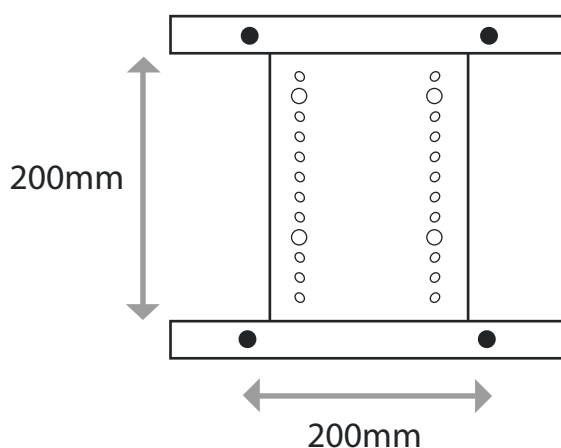

Assembly is now complete