

Electric Wine Bottle Opener



OWNER'S MANUAL



DO NOT RETURN TO STORE!
HAVE QUESTIONS OR NEED SERVICE?

Read the instructions carefully and keep for future reference. Information maybe updated from time to time so please refer to the website for the latest version of the manual.


Congratulations on your new Electric Wine Bottle Opener!

In addition to its contemporary design, this is a highly sophisticated engineered product that will give you many years of satisfaction.

Here are some of the best reasons for buying your device:

- Bottle foil cutter included.
- Can easily and smoothly pull out the cork.
- No batteries needed - it is rechargeable.
- In one charge approx 40 bottles can be opened.

Product and Parts

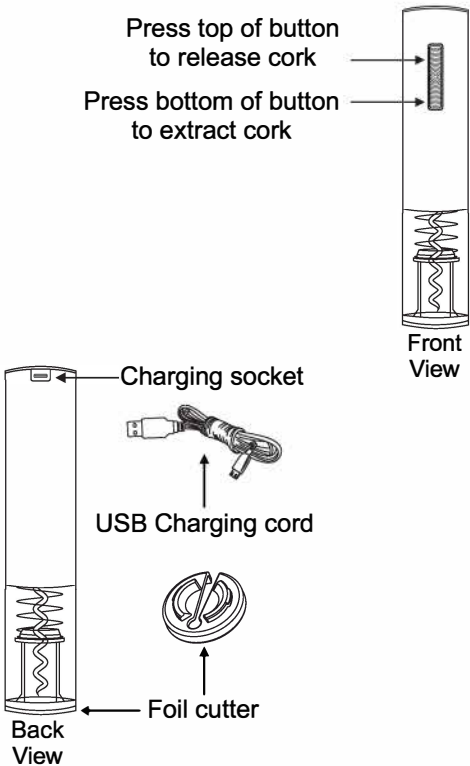

Using the Bottle Opener



1. Snap off the foil cutter from the base of the opener.
2. Place the foil cutter around the bottle neck and hold it firmly while rotating the bottle all the way around until the foil seal is removed.



3. Holding both the bottle and opener firmly, place the bottom of the opener on top of the bottle, ensuring they are aligned.



4. Press and hold the bottom of the button (extract) while simultaneously pressing down slightly on the opener. The corkscrew will turn and pierce the cork and lift it out of the bottle gradually.

5. When the cork has been pulled out completely, in about 6 - 8 seconds, the opener will automatically stop.

6. Release the extract button.



7. Press and hold the top of the button (release) for 5 - 7 seconds to remove the cork from the corkscrew.

The opener can be used for corks with a diameter of 0.8 to 0.9 inches and a height of 1.7 inches.

The opener can be used for bottles with a bottle neck outer diameter of not more than 1.4 inches and inner diameter of 0.7 to 0.9 inches.

Warranty

Undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. During this period, we will provide parts necessary to correct such defect, free of charge if operated in accordance with the instructions with the product.

2. Register

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

All rights reserved. Manual subject to change without notice.

Safety

Avoid contact with the corkscrew and sharp edges of the foil cutter.


Keep away from flammable, explosive materials.
Do not:

- Immerse the opener in water or any other liquid.
- Force the opener onto the bottle or try to speed up the process.
- Dismantle the product (voids warranty).

Keep this product away from children.

Charging

In one charge approximately 40 bottles can be opened.

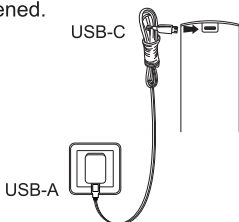

- Insert one end of the included cord into the USB-C socket at the back of the opener. Insert the other end into a standard USB-A socket.
- Charge the opener for 12 hours before using it for the first time.
- If the opener is not used for a month, charge it again.
- It takes at least 16 hours to fully charge the battery.
- Charge with a power adapter with fixed output voltage of 4.5V – 5.5V. The adapter is not included.
- Do not use with a fast charging power adapter.

Do not use the opener while it is charging.