



HAUTE DECOR

4.5' Pre-lit Alberta Alpine Potted Tree
120 ct. Warm White 2-Function LED Lights
Battery Operated with Timer
Item # DCCT4508



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Requires three (3) x D 1.5V batteries (sold separately) • Alkaline batteries recommended
Includes timer: 6 hours on / 18 hours off cycle • For indoor and covered outdoor use

PARTS LIST

- 1 EA. TREE POT
- 1 EA. TREE SECTION A (BOTTOM)
- 1 EA. TREE SECTION B (TOP)

ASSEMBLY

CAREFULLY REMOVE THE CONTENTS FROM THE CARTON AND KEEP THE CARTON FOR FUTURE STORAGE. BE SURE TO UNTANGLE ANY WIRES THAT MAY BE TANGLED WITH OTHER ITEMS. PLEASE DO NOT FORCIBLY REMOVE ANY CONTENTS.

Step 1: Locate the **TREE POT** and place it where you are going to set up the tree. THIS PRODUCT IS SUITABLE FOR INDOOR AND COVERED OUTDOOR USE. **⚠ IMPORTANT: DO NOT PLACE THE TREE WHERE IT IS LIKELY TO WOBBLE DUE TO UNEVEN FLOORS OR THICK CARPETING. PLACE THE TREE ON A LEVEL SURFACE.**

Step 2: Find **TREE SECTION A** which is tagged with the letter "A". Remove the plastic cap (see **Fig. 1**) that is on the bottom of the tree pole. It can be kept and reused for storage if desired. Insert TREE SECTION A into the TREE POT. Do not force the pole. It will slide down to its correct position. Make sure the pole is firmly seated and standing straight.



Fig. 1

Step 3: Take **TREE SECTION B** which is tagged with the letter "B" and insert it into the top of TREE SECTION A.

Step 4: Connect the light set plug from TREE SECTION B to the light set plug in TREE SECTION A. The plugs have a label with the number one **1**. Further secure the plug connection by screwing the outer cover into place.

⚠ IMPORTANT: Do NOT REMOVE THE NUMBERED LABELS **1 ON YOUR LIGHTS. THEY WILL HELP YOU TO EASILY FIND THE PLUGS AND CONNECT THE FOLLOWING YEAR.**

Step 5: In TREE SECTION A, locate the battery box (see **Fig. 2**). Open it by unfastening the clips on the sides. Insert three (3) D batteries (not included) with the correct polarity (+/-) as indicated on the battery box. Close the battery box and fasten the clips securely, ensuring the gasket is in position to keep out water.

Step 6: To turn the lights ON and switch functions, press the black button on the front of the battery box. The lights have the following functions:

1. STEADY ON WITH TIMER (6 HOURS ON, 18 HOURS OFF)
2. TWINKLE WITH TIMER (6 HOURS ON, 18 HOURS OFF)
3. OFF



Fig. 2

Timer is automatically preset for lights to stay on for 6 hours and turn off for 18 hours. It is recommended to first activate your lights at the time that you want them to come on each day. *NOTE: Product does not have a continuous light feature. It only operates on a timer.* If the lights become dim, then replace with new batteries.

IF YOU HAVE ANY LIGHTS NOT WORKING, THEN VISIT THE SECTION ON TROUBLESHOOTING FOR LIGHTS.

SHAPING

SOME SHAPING IS RECOMMENDED SINCE THE TREE HAS BEEN PACKED INSIDE A BOX. THE TREE CAN BE RESHAPED TO ITS ORIGINAL FULLNESS BY BENDING AND SEPARATING THE BRANCHES. FOLLOWING ARE THE STEPS:

1. Turn the lights on as you are shaping the tree.
2. Reference the tree image on the front page. It will help guide you on how the tree looks properly shaped.
3. Shape by section and layer, starting at the bottom of the tree and working your way up to ensure all branches are shaped.
4. Gently pull down the branches and spread the leaves. As you move from the bottom to the top portion of the tree, gradually decrease the distance that the branches are pulled down.
5. Offset the branches from one another to hide the tree's pole and fill spaces. Continue spreading the tips until they resemble that of a real tree.
6. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Your tree is now ready to decorate and enjoy!

CLEANING & CARE

PROPER CLEANING AND CARE WILL HELP PRESERVE THE BEAUTY OF YOUR CHRISTMAS TREE FOR MANY YEARS TO COME. HERE ARE SOME GENERAL TIPS TO FOLLOW:

- Dust gently using a soft cloth or fabric duster.
- Do NOT use any chemicals or solvents to clean.
- Handle the light sets gently. Do NOT pull or tug light sets as this may inadvertently loosen the bulbs.
- Follow all the Storage and Safety Instructions.

STORAGE

TO KEEP YOUR CHRISTMAS TREE IN GREAT CONDITION, IT IS IMPORTANT TO STORE IT PROPERLY AS FOLLOWS:

1. Remove the batteries from the battery box.
2. Remove any ornaments and decorations that were added by you and did not come with the tree.
3. Starting with the top, separate each tree section and pot gently, being sure not to roughly handle as it could cause damage to the parts and could loosen or break bulbs.
4. Compress each tree section by turning it upside down and squeezing the branches together so that it will fit more easily into the storage box or container. You can also tie a ribbon or cord around the sections to secure the branches closer together for storage.
5. Place all the parts gently back into the storage box. The box will help prevent the tree from being damaged should it get bumped in your garage, basement, or other storage location. Tape the box shut to keep out any dust or insects. When packing up the tree, please ensure that there is no undue strain or stress on the light sets to ensure they do not get cut, frayed, or damaged.
6. Be sure to store the tree in a cool, dry area free of water and moisture to prevent mold and mildew from accumulating and a musty odor developing. Exposing your tree to excessive heat or humidity may damage your tree. **DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F. STORE THE CARTON FLAT AND NOT UPRIGHT ON ITS SHORT END.**

TROUBLESHOOTING FOR LIGHTS

IF YOUR LIGHTS ARE NOT WORKING, THEN TRY THE FOLLOWING TROUBLESHOOTING STEPS:

1. Press the black button on the front of the battery box.
2. Check to ensure rubber protection over button intended to keep out water is not damaged.
3. Ensure all batteries are fresh, inserted fully, and in correct polarity (+ and -) positions.
4. If the lights are dim, then replace the batteries with new ones.
5. Check the light set plugs within the tree for proper positioning and tight connection. Plugs are keyed to fit one direction only with the flat section of the female plug matching up to the flat section of the male plug.



NOTE: LED bulbs are permanent and cannot be removed from the light sets.

IMPORTANT SAFETY

THIS TREE IS SAFE FOR INDOOR AND COVERED OUTDOOR USE.

PLEASE READ AND FOLLOW ALL THE INSTRUCTIONS AND WARNING TAGS THAT ARE ON THE TREE AND PROVIDED WITH THE TREE.

SAVE THESE INSTRUCTIONS – THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS.

BASIC PRECAUTIONS SHOULD ALWAYS BE PRACTICED INCLUDING THE FOLLOWING:

- **WARNING!** This is not a toy. For decorative use only. KEEP OUT OF REACH OF CHILDREN.
- Do not operate this product if the battery box or light set is damaged. Always inspect for signs of damage or wear.
- Always purchase the correct size and grade of battery.
- DO NOT mix old and new batteries.
- Replace all batteries of a set at the same time.
- DO NOT mix alkaline, standard (carbon zinc), or rechargeable (nickel cadmium) batteries.
- Clean the battery contacts and those of the device prior to battery installation.
- Ensure the batteries are installed correctly regarding polarity (+and-).
- Remove batteries when the product is not in use.
- Remove used batteries promptly.
- Non-rechargeable batteries are NOT to be recharged.
- DO NOT dispose of batteries in fire. Batteries may explode or leak.
- Recycle or dispose of batteries according to local and federal government requirements.
- Do not immerse the tree or any of its components in water or other liquids.
- This seasonal use product is not intended for permanent installation or use.
- This product is not intended for commercial purposes.
- Do not secure the wiring of this product with staples or nails or place on sharp hooks or nails.
- Do not alter the construction of the wiring in any way.
- Do not use this product for anything other than its intended use.

- Do not hang ornaments or other objects from the cord, wire, or light string.
- Do not close doors or windows on the product or light set cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper, or any material not part of the product when in use.
- Do not mount or support strings in a manner that can cut or damage the wire insulation.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not place your tree where it is likely to wobble due to uneven floors or thick carpeting. Place on a hard, flat surface.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADA ICES COMPLIANCE STATEMENT

This device complies with CAN ICES-005 (B) / NMB-005 (B). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CUSTOMER SERVICE

THANK YOU FOR YOUR PURCHASE!

Comments or questions?

Contact us at 1-877-359-0115

customerservice@haute-decor.com

Haute Decor

PO Box 1594

Allen, TX 75013



©2025 Haute Decor

Made in China