 
 


Installation & Assembly

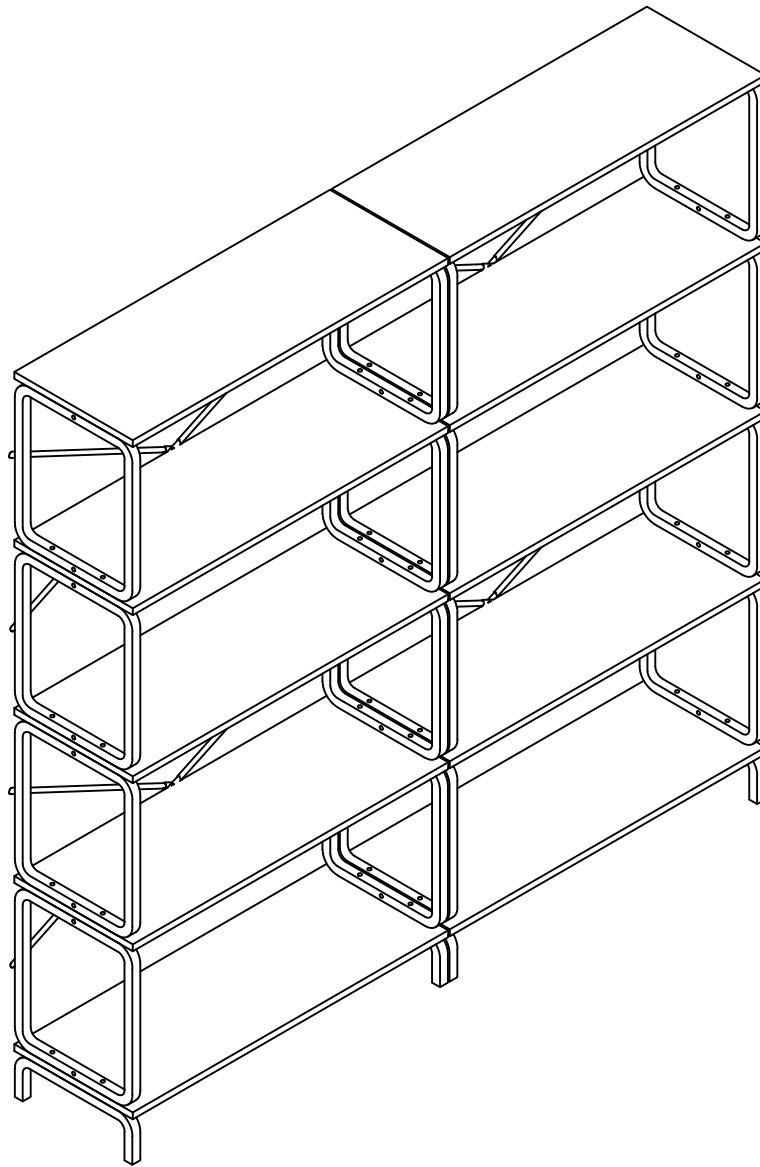


Installation of Cams and PKns






Screw the pKn to the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pkn lock. Lock the cam by turning the cam head with a screw until tightened. Please do not use an electric screwdriver to assemble the unit.

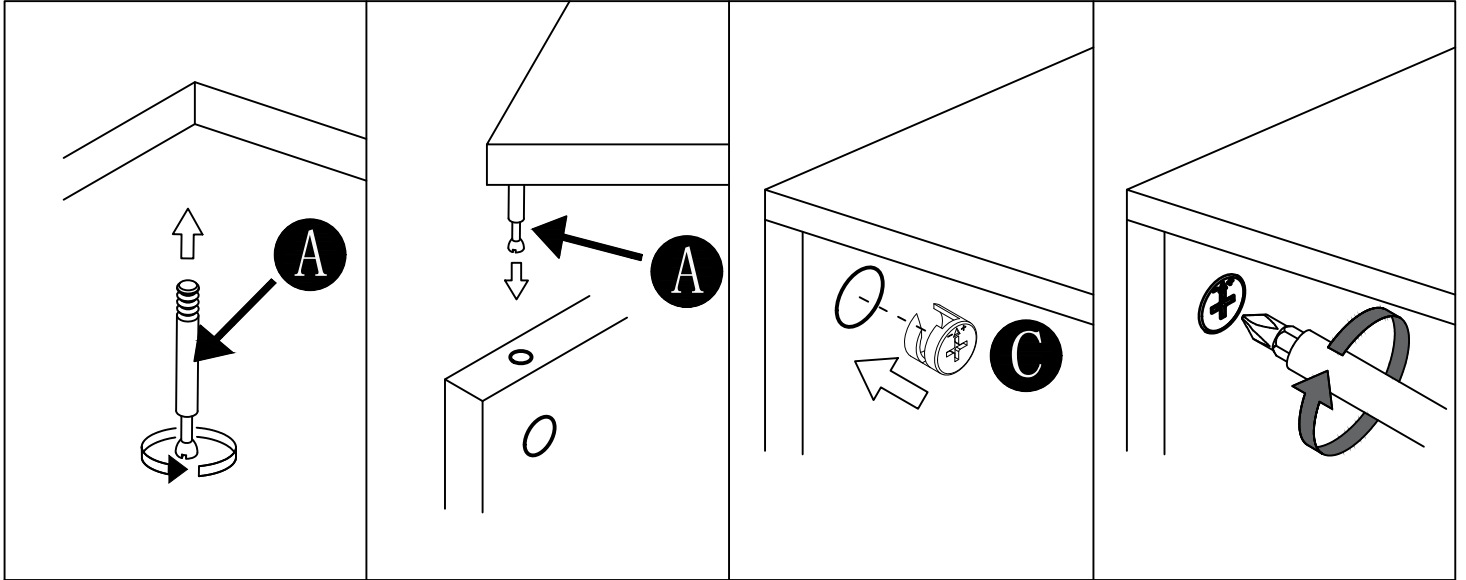



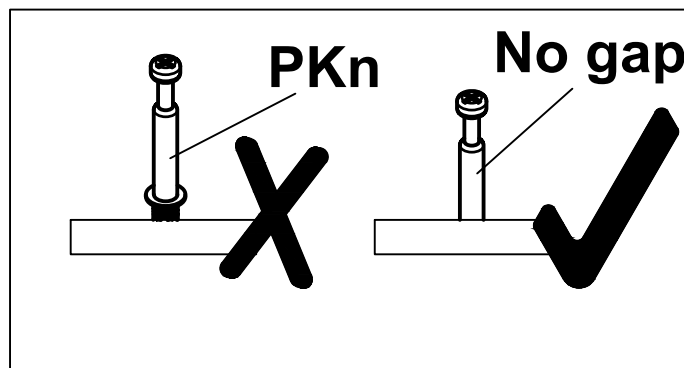

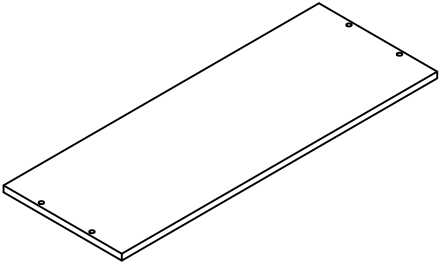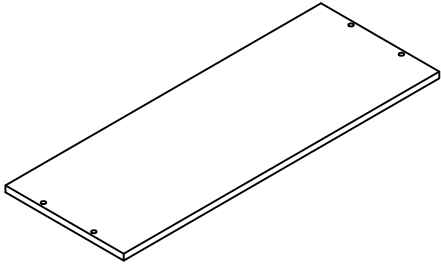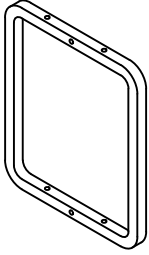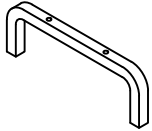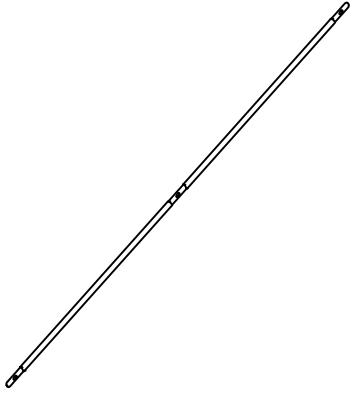



Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.




Parts & Hardware LKst

 <p>1 2pcs</p>	 <p>2 8pcs</p>	 <p>3 16pcs</p>
 <p>4 4pcs</p>	 <p>5 8pcs</p>	

Parts & Hardware LKst

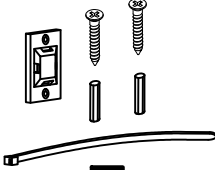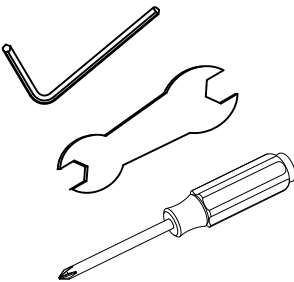
 <p>F 8pcs</p>	 <p>I 8pcs</p>	 <p>K 32pcs</p>	 <p>N 20pcs</p>
 <p>V 44pcs</p>	 <p>Y 8pcs</p>	 <p>Z 2set</p>	

1

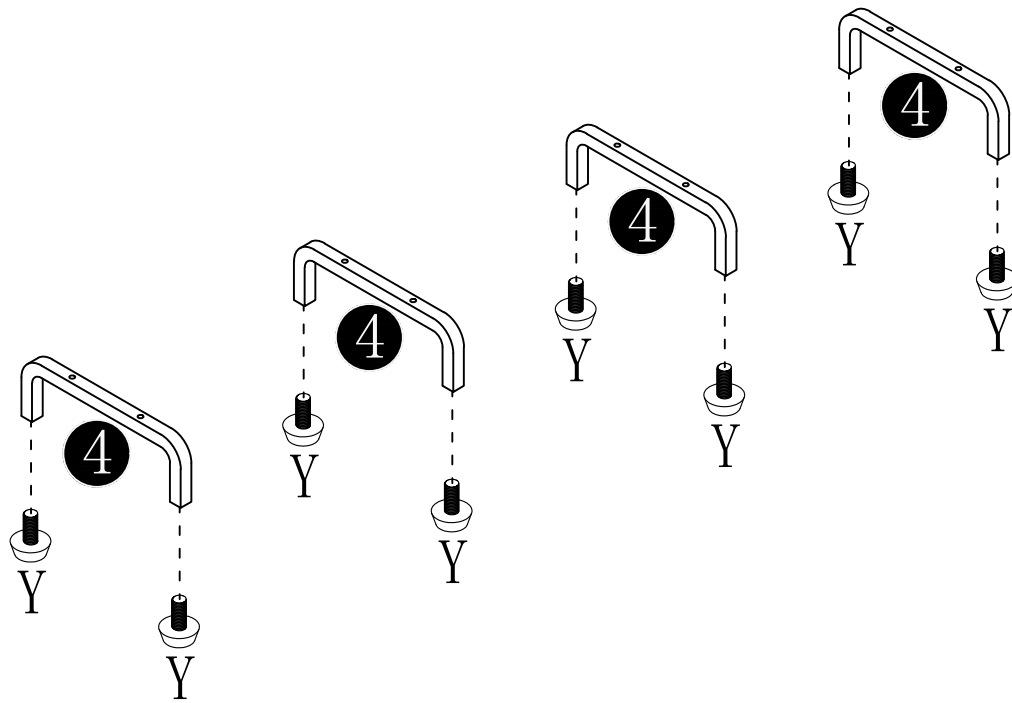

Y
x8



 
2

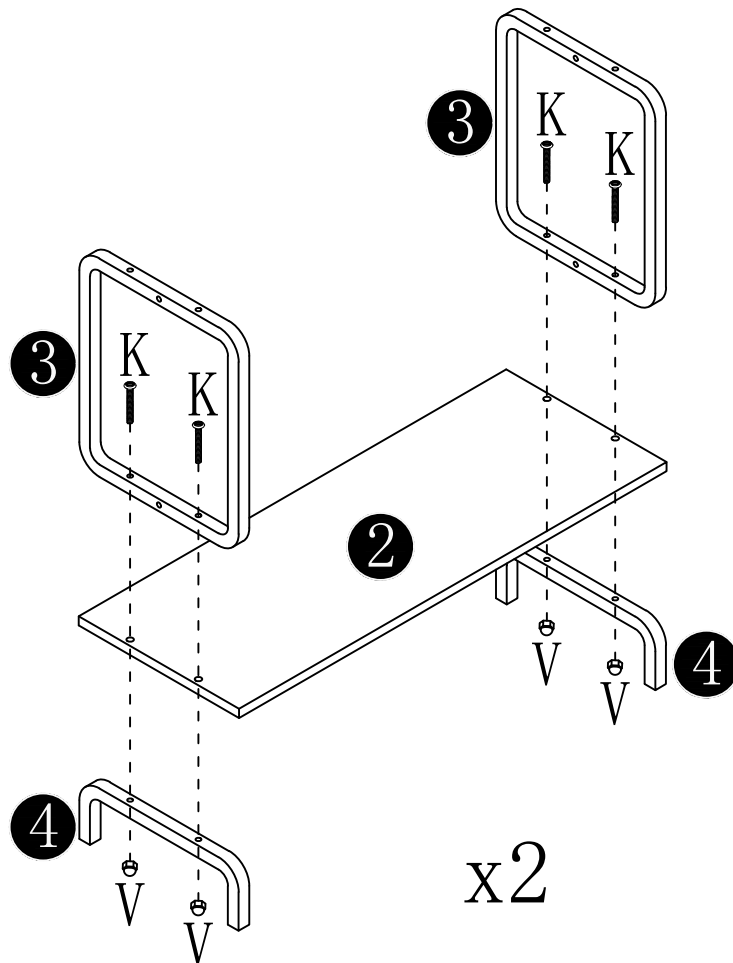



K
x8

V
x8

 
 
 
3

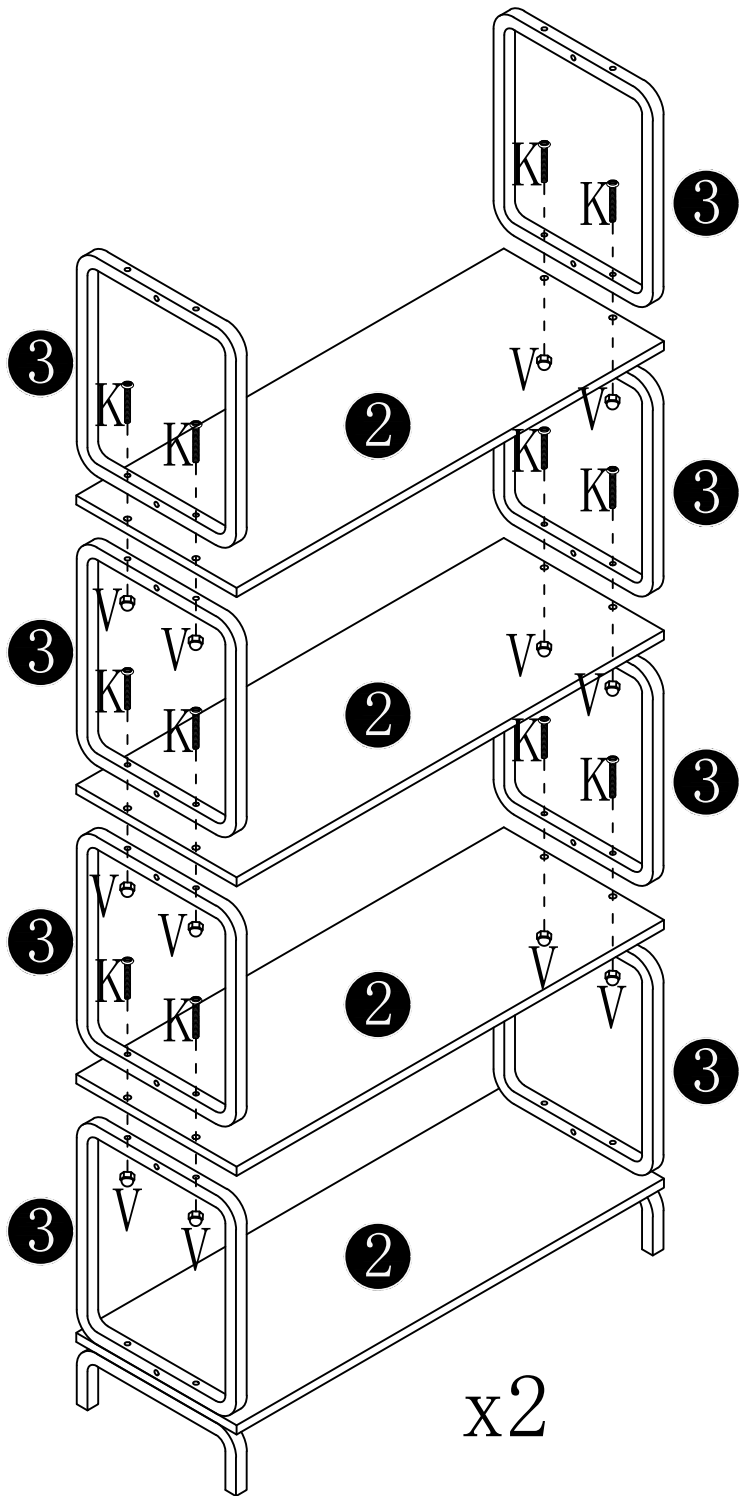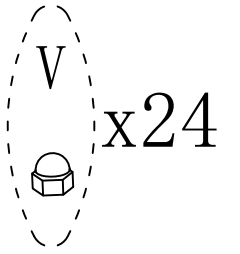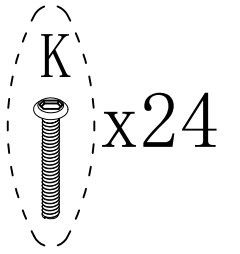



4

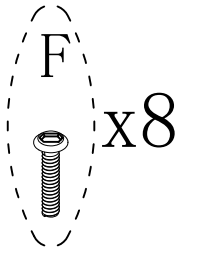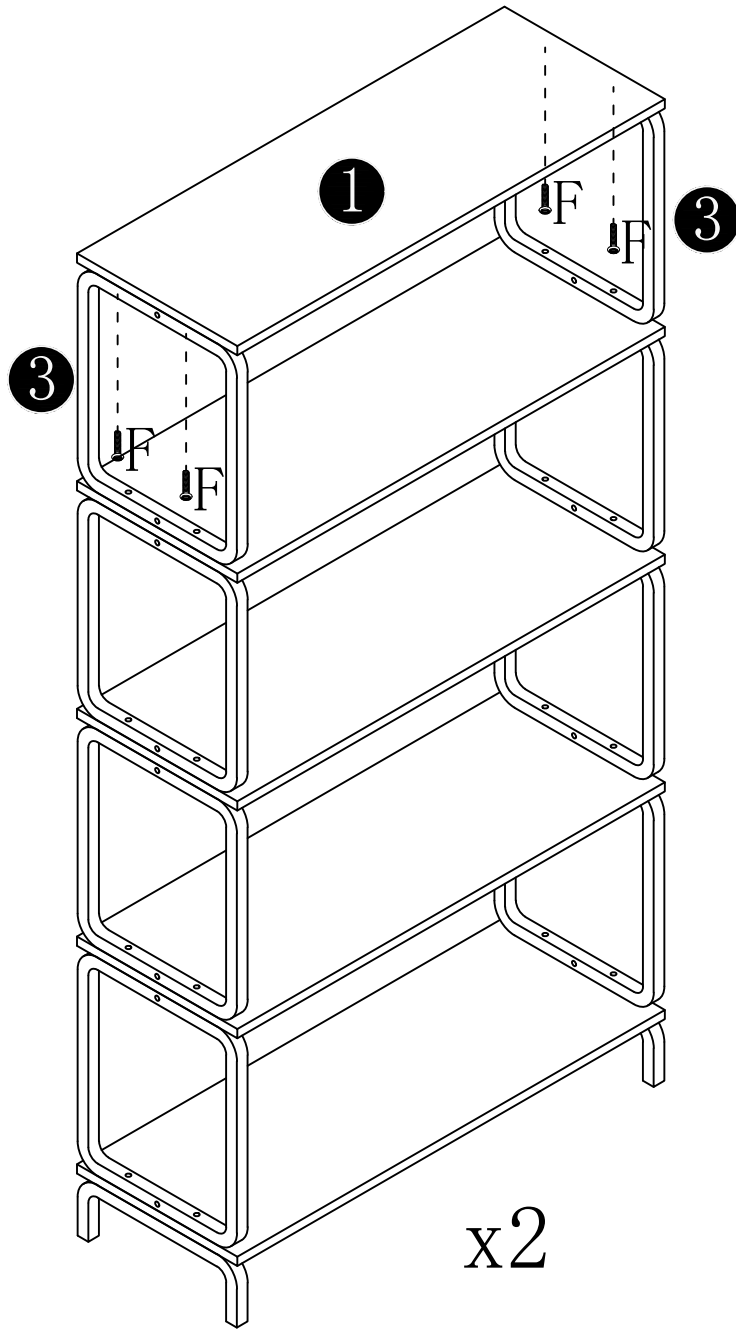  




5

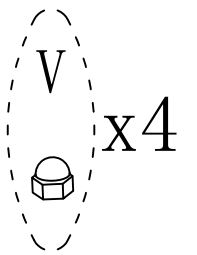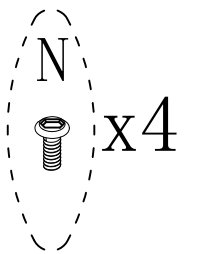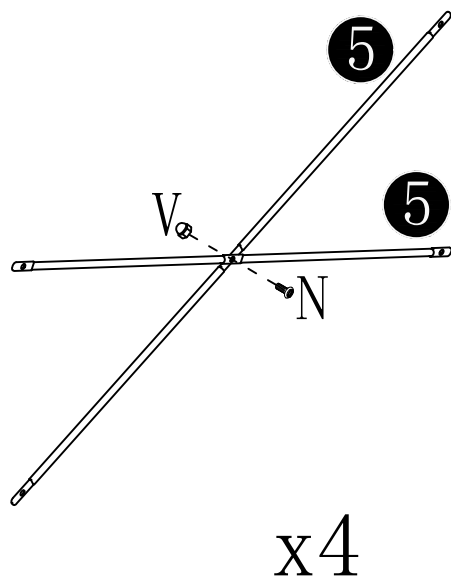   

6

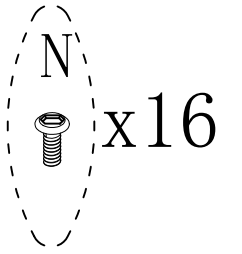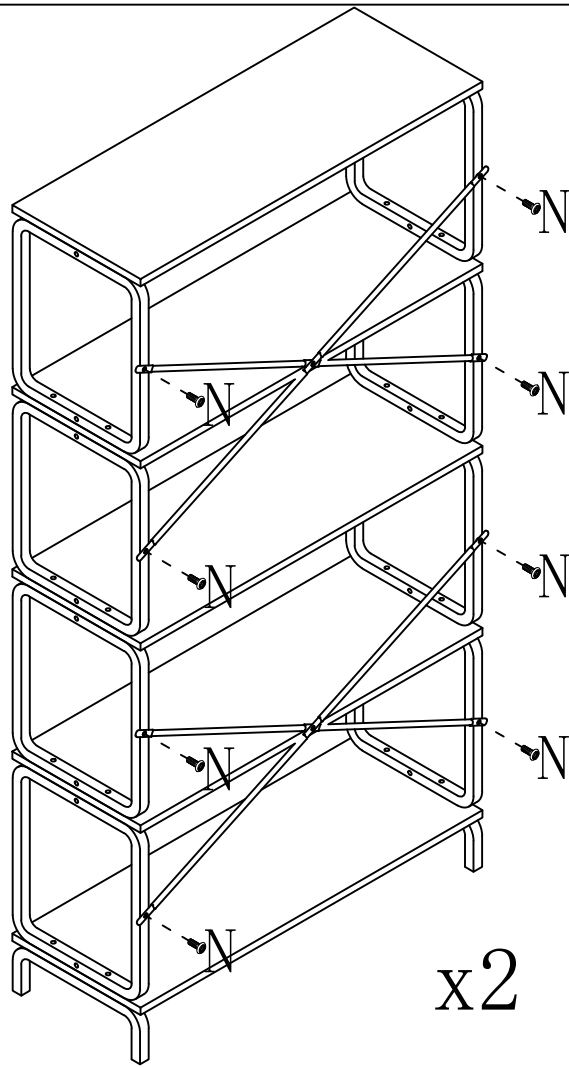  

7

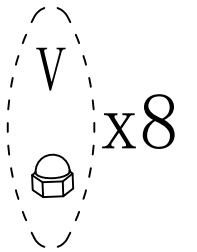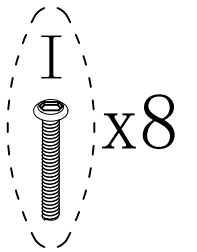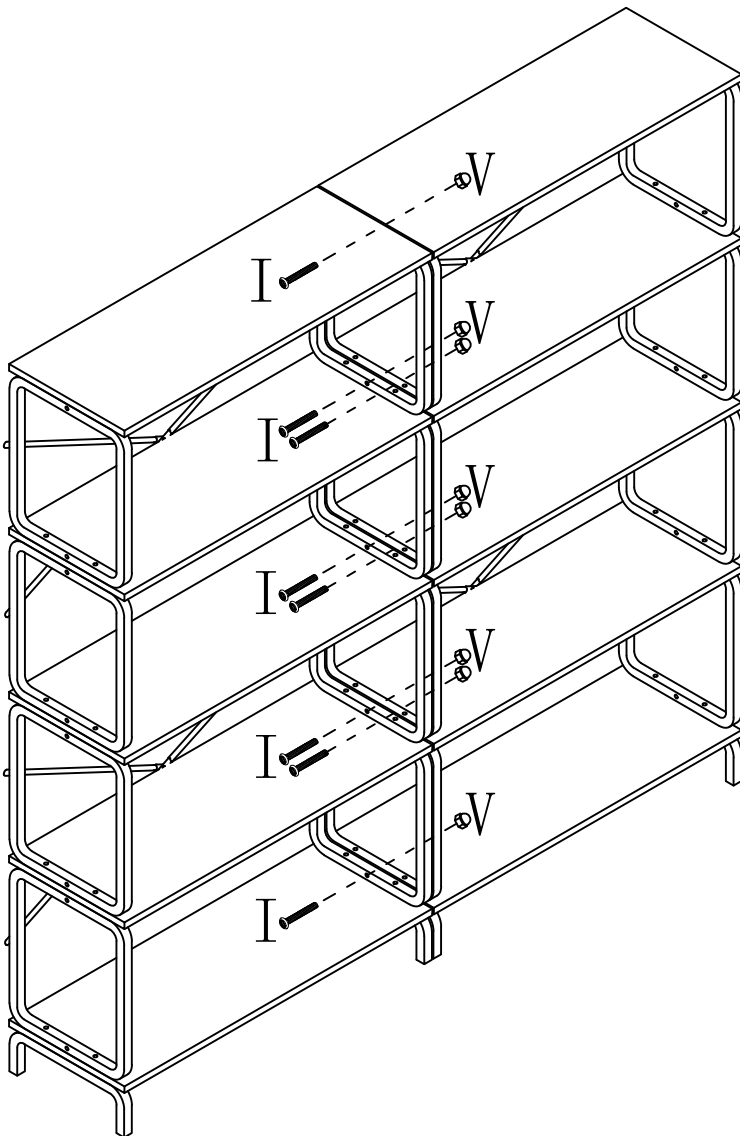   

8

