


ASSEMBLY INSTRUCTION

DINING CHAIR

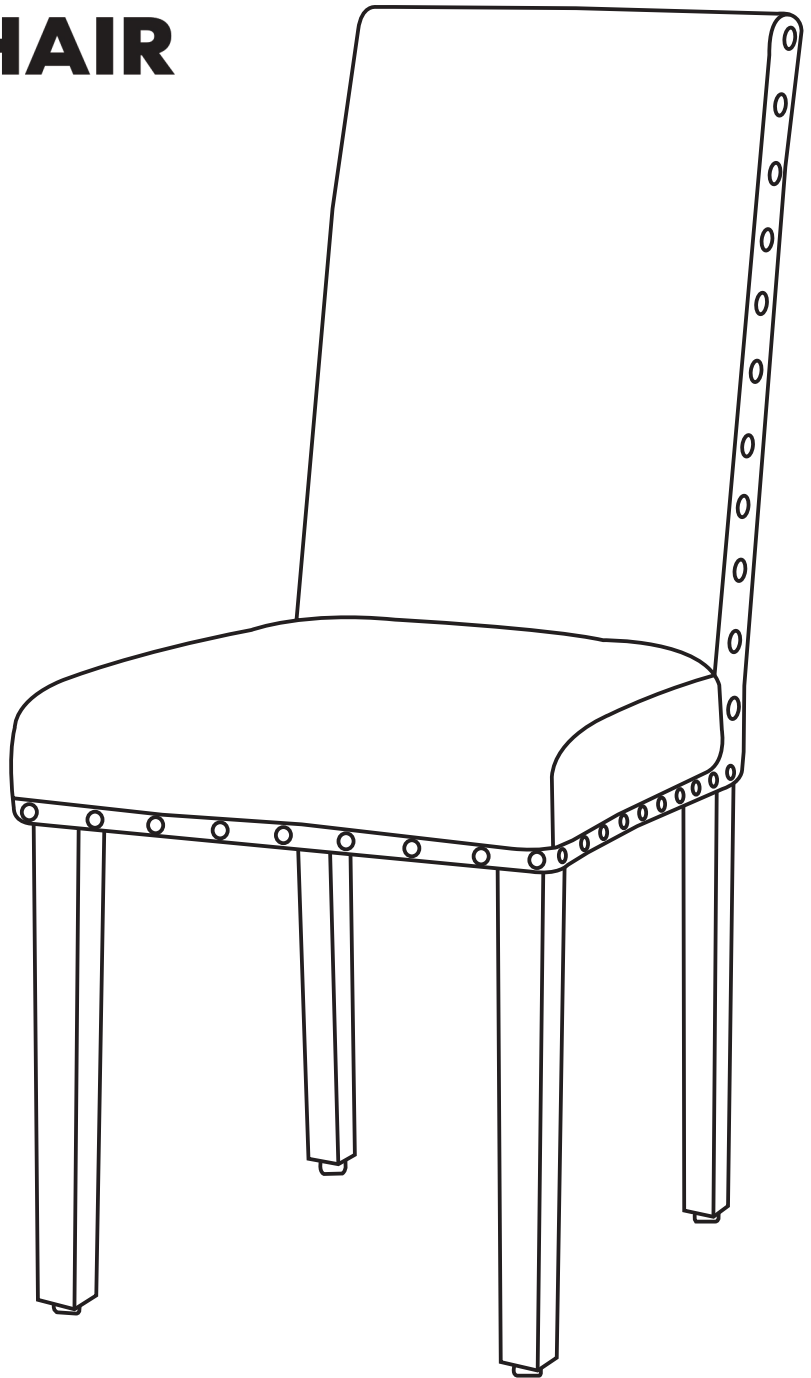

ASSEMBLY GUIDE

IMPORTANT SAFETY NOTICE: READ CAREFULLY BEFORE BEGINNING ASSEMBLY!



Follow the assembly steps in order. **DO NOT** skip any steps.



Always using proper tools. **DO NOT** use power tools to assembly.



Be sure to check all packing materials carefully before start, if parts are missing, please contact us to obtain any missing parts. **DO NOT USE SUBSTITUTE PARTS.**



Keep the instructions and extra materials for future reference.




Periodically check to ensure that all connectors (bolts, screws, etc.) are tight, please keep the Allen key whenever needed.




Where assembly instructions state that the assembly requires two or more people, **DO NOT** attempt by yourself as there is a risk of injury.

PACKAGE LIST

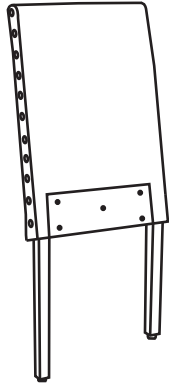

1 X1

Back Cushion

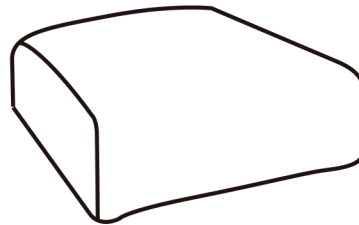


2 X1

Seat Cushion



3 X2

Front Legs

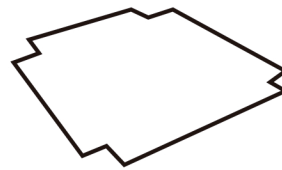

4 X1

Seat Back Cover



M8*60mm Bolts

A X5



M8*80mm Bolts

B X4



Flat Washer

C X9



Lock Washer

D X9




Allen Key

E X1


ASSEMBLY INSTRUCTIONS

Use the carton/carpet as a working surface to prevent product damage during assembly.

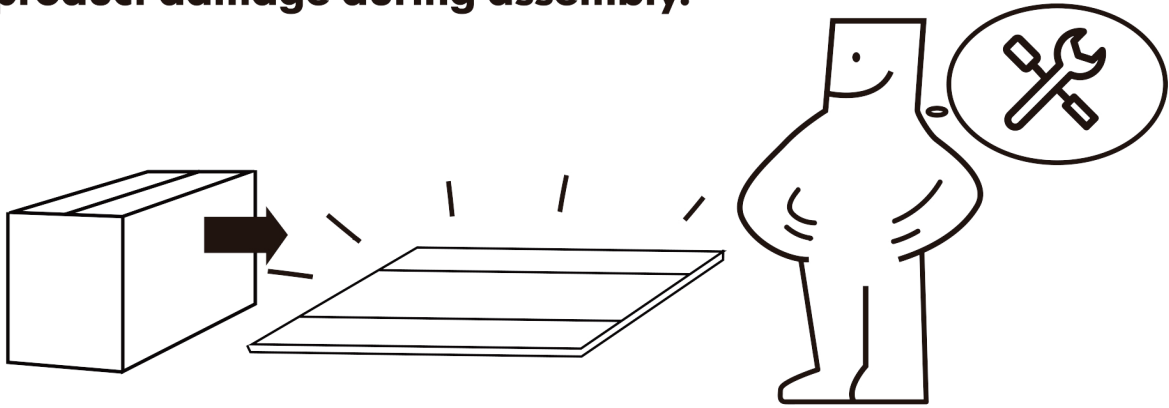

STEP 1


Attach the Back Cushion(1) and Seat Cushion(2) with FOUR Bolts(B) on the two sides, One Bolt(A) in the middle, using the Allen Key(E), all bolts need to connect Lock Washer(D) and Flat Washer(C) before insert.

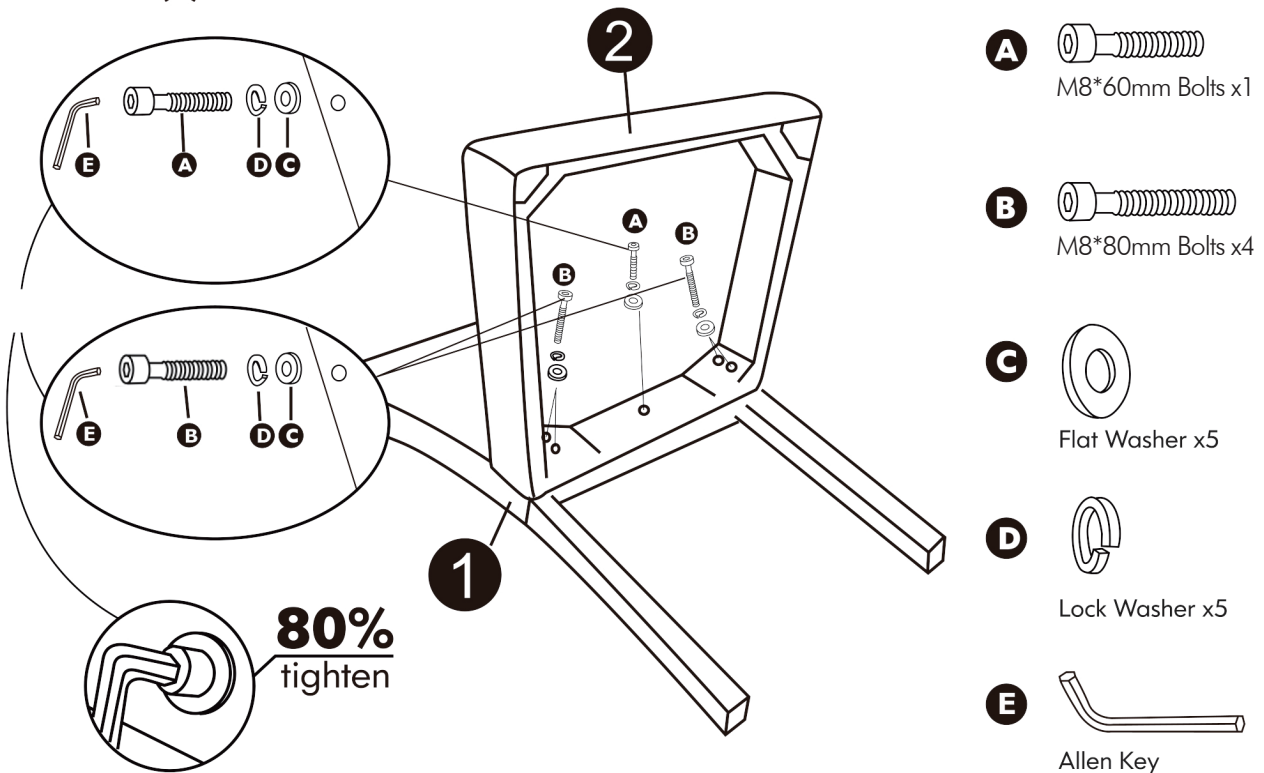

DO NOT over tighten the bolts, 80% is enough.


STEP2

Attach 2 Front Legs(3) and Seat Cushion(2) with FOUR Bolts(A) by using the Allen Key(E). All bolts need to connect Lock Washer(D)and Flat Washer(C) before insert.

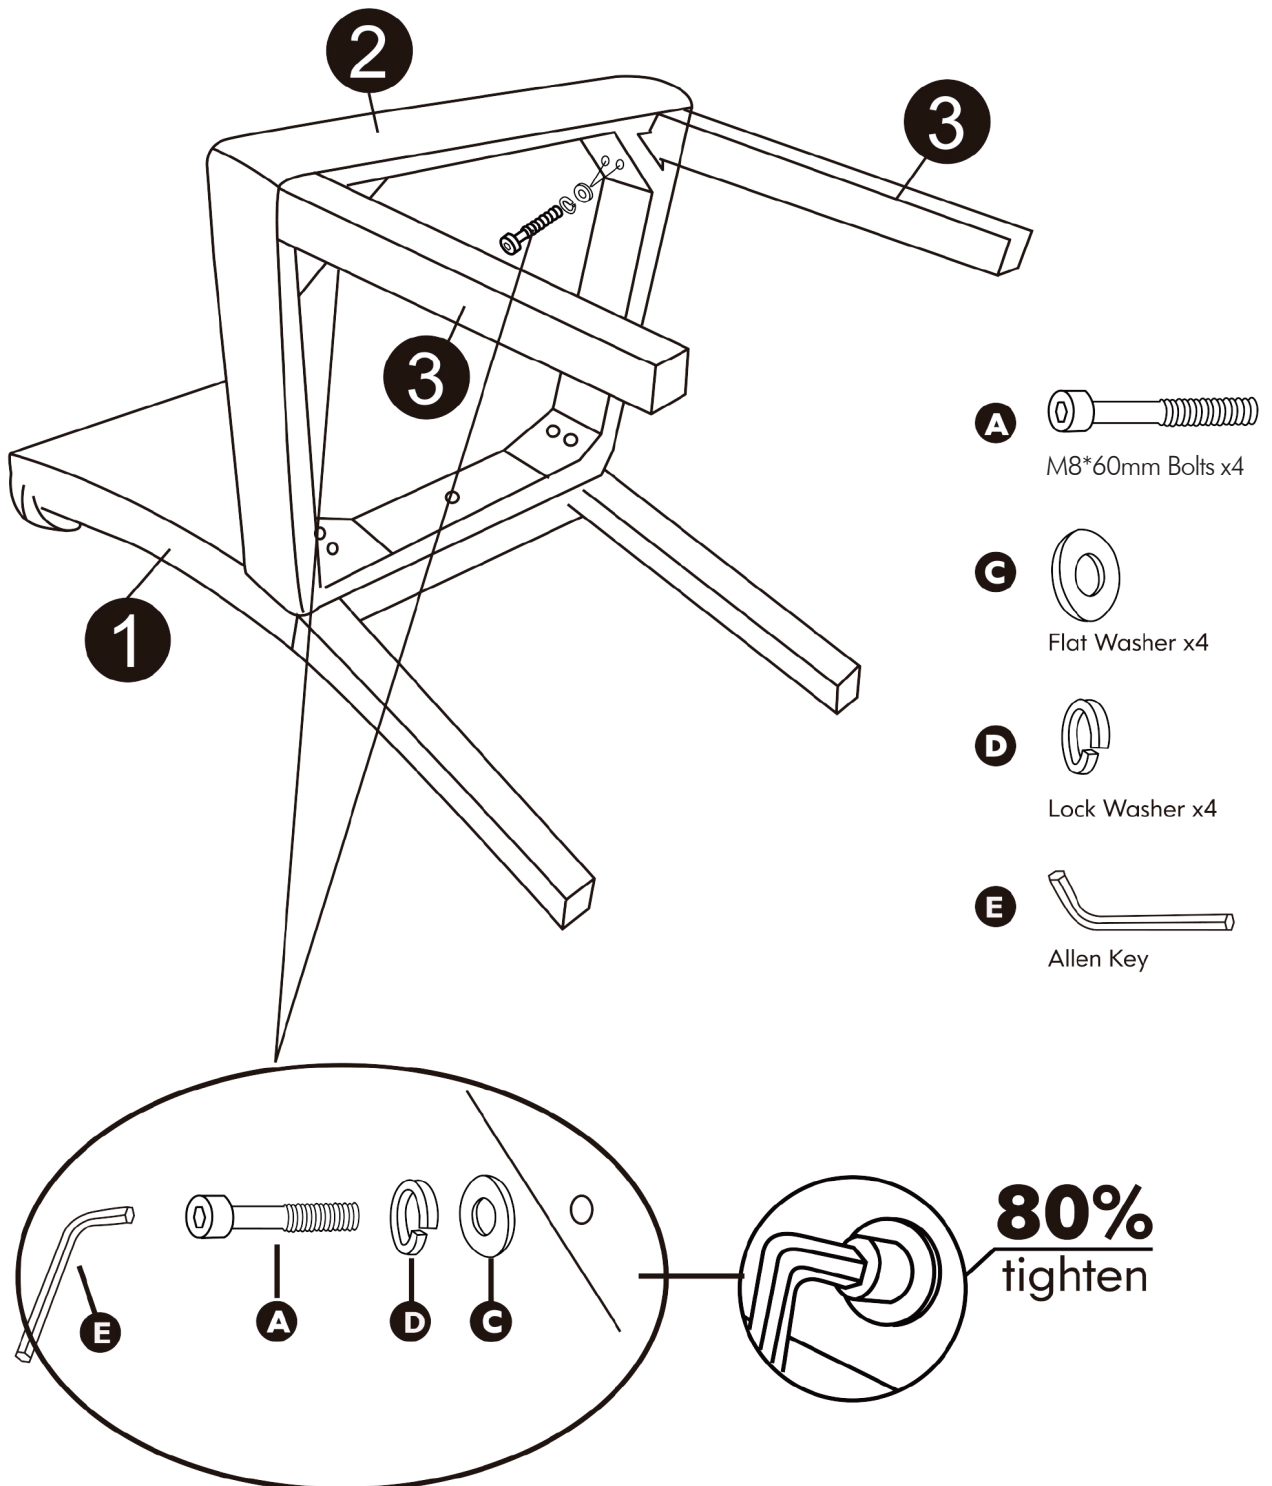



DO NOT over tighten the bolts, 80% is enough.

STEP3

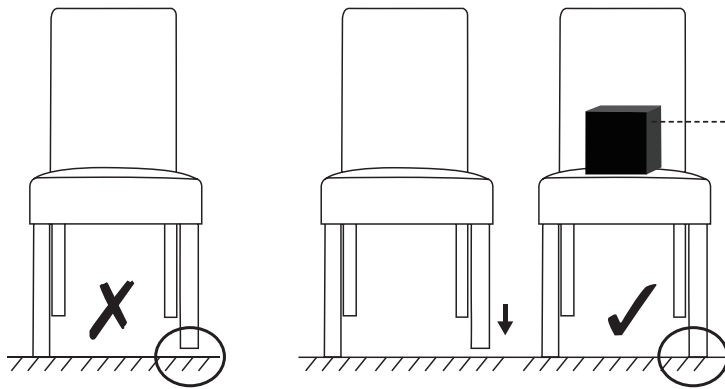

**Apply pressure on the seat.
(About 20kg)**

Place the chair on a flat surface and apply pressure on the seat. Then tighten the middle bolt on the back, then both bolts on the sides, followed by the front legs. Ensure all bolts are fully tightened before using the chair.

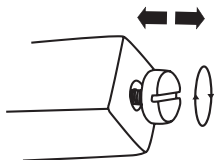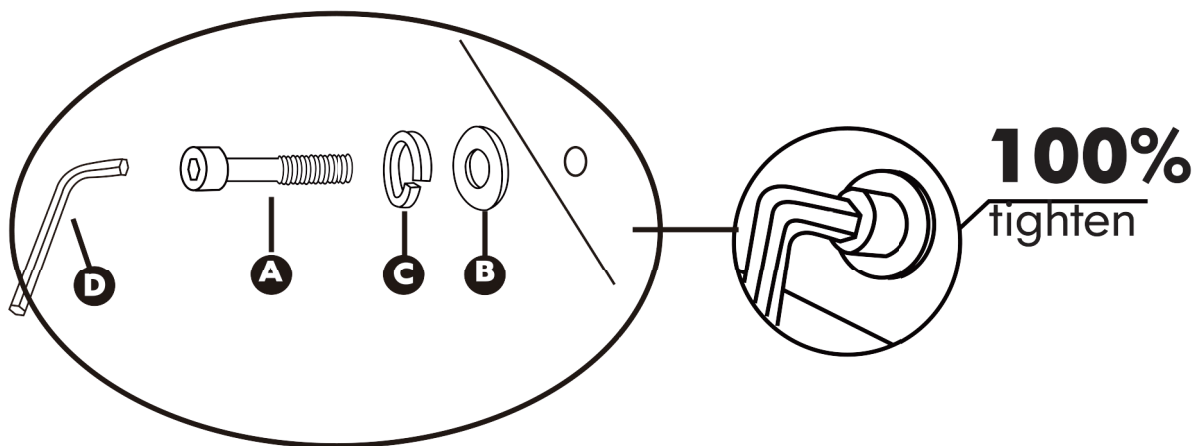


If the legs are uneven, you can also adjust the foot pegs at the bottom of the legs to improve balance.

WARNING!! IF CHAIR IS NOT STABLE , DO NOT USE, IT COULD LEAD TO DAMAGING THE PRODUCT.


STEP 4

Finally, seal the Seat Base Cover (4) back on to the underside of the chair seat.

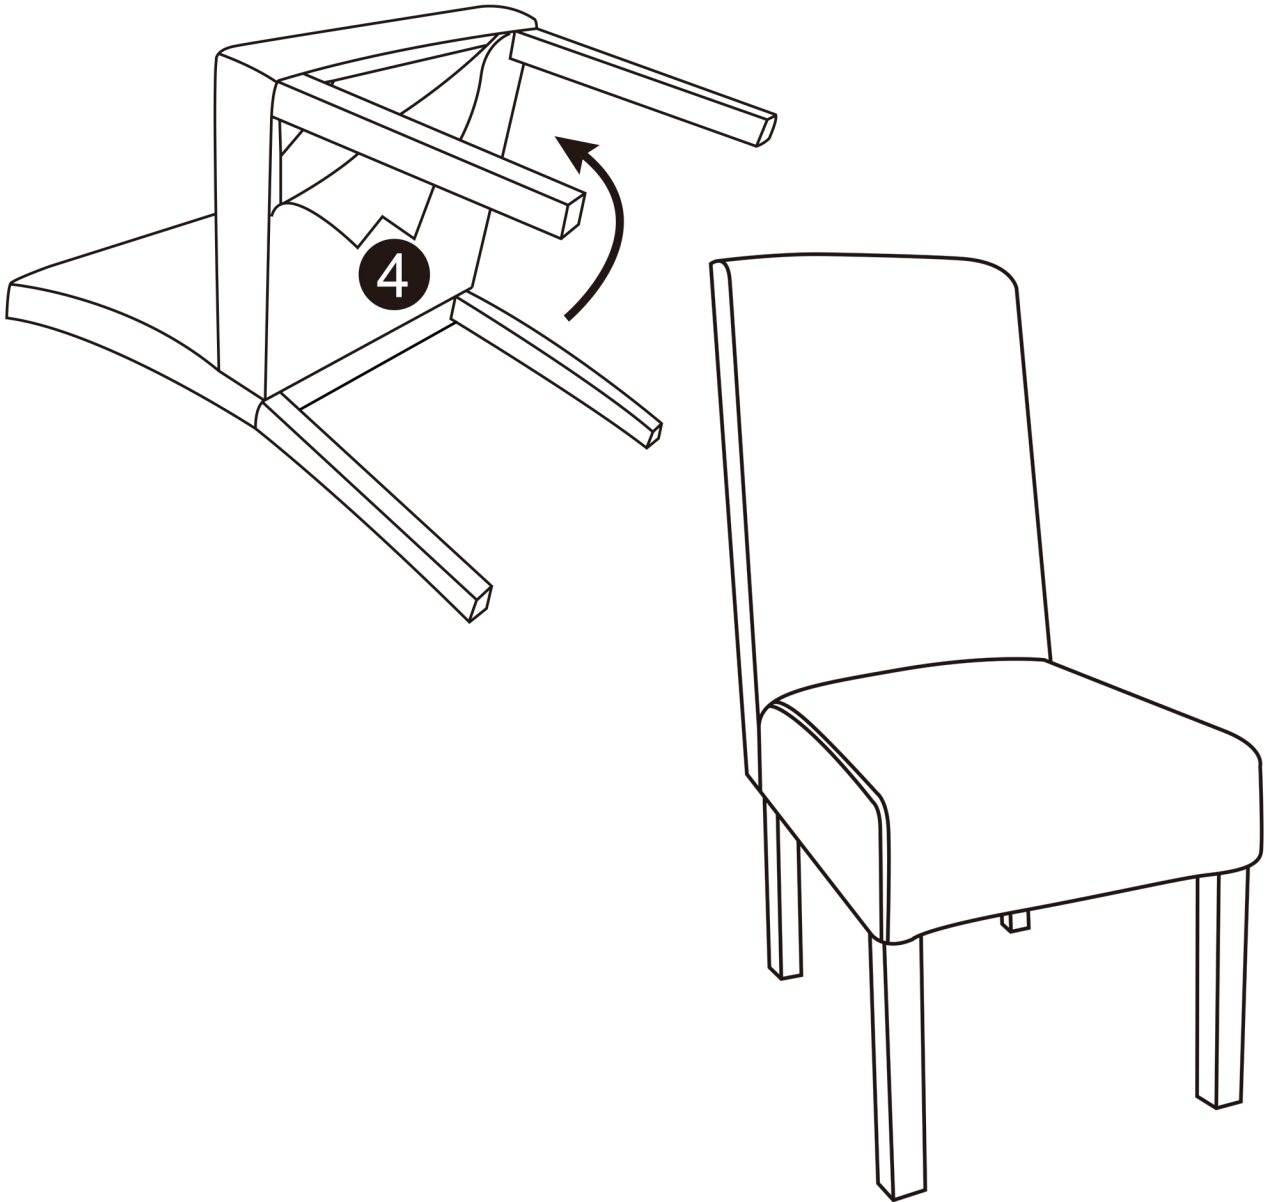

A friendly reminder from us:

Please keep the Allen wrench.
After a period of time, there may be a chance
the KD furniture may become loose, please
use an Allen wrench to tighten the loose bolts.

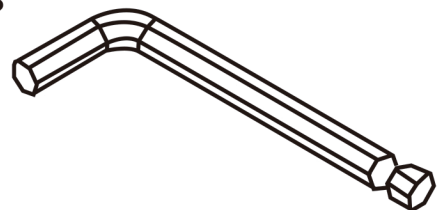

CARE & MAINTENANCE



DO NOT PUT HOT ITEMS DIRECTLY ON FURNITURE SURFACE.



DO NOT CLEAN FURNITURE WITH HARSH CLEANSERS OR POLISH.



DO NOT PLACE FURNITURE UNDER DIRECT SUNLIGHT.



DO NOT PLACE FURNITURE NEAR HEATING OR COOLING VENTS.



DO NOT WRITE ON FURNITURE WITHOUT A PADDED BARRIER TO PROTECT THE SURFACE.



DO NOT PLACE FURNITURE OUTSIDE, FOR INDOOR USE ONLY.



STAINS MAY BE REMOVED WITH MILD SOAP SOLUTION AND DAMP CLOTH.



DUST AND PICK-UP SPILLS USING A CLEAN, NON-COLORED, LINT-FREE CLOTH.

- **DO NOT** stand on the chair. **DO NOT** use the chair as stepladder.
- Use this product for seating one person at a time.
- **DO NOT** use the chair unless all bolts and screws are firmly secured.
- Avoid contact with sharp objects to prevent puncturing the fabric.
- Every 6 months or whenever needed, check all bolts and screws to ensure they are tight.
- Chair weight limit not to exceed **250 LBS**.