

UFO High Bay

JONATHAN Y

ITEM#:JYL9801A

INSTRUCTION MANUAL

- Thank you for purchasing our UFO Highbay. Please read the below articles carefully to see how to use this product safely.
- Warning contents and attention contents related to product safety use, please be sure to follow it.

⚠ Warning

- This UFO High bay within the input voltage range:120-277VAC,50/60Hz.
- If input voltage exceeds this range, it may cause light failure. Please be sure to operate under correct input voltage.
- Ensure ambient operating temperature of -40°F(-40°C) through 131°F(55°C).
- Using this UFO High bay in temperatures outside of this range will reduce the UFO High bay lifespan.
- Make sure to turn off power before starting the installation process.

⚠ Attention


- IP rating: IP65, can work under wet locations.
- Please keep the UFO High bay away from any corrosive substance. When you clean it, please use damp or dry cloth.

Model Number	UHB1210-100W- XXX-X-XXXX(X)	UHB1215-150W - XXX-X-XXXX(X)	UHB1220-200W - XXX-X-XXXX(X)	UHB1224-240W - XXX-X-XXXX(X)
Power	100W	150W	200W	240W
Input Current	0.92A	1.38A	1.83A	2.2A
CCT	XXX="XXK" can be "35K", "40K", "50K", "57K", "65K"			
Input Voltage	AC120-277V			
Frequency	50/60HZ			
Power(TCP/TP)	60W/80W/100W	100W/125W/150W	100W/150W/200W	150W/200W/240W
Input Current(TCP/TP)	0.55A/0.73A/0.92A	0.92A/1.15A/1.38A	0.92A/1.38A/1.83A	1.38A/1.83A/2.2A
CCT((TCP/TC))	35K-40K-50K			


"XXX" can be any letter or number to represent light-emitting angle;
"X" can be H, L or HY (Y=number) to represent lighting effect (no effect to power);
"XXXX" can be XXX,TCP, TP-XXK or TC. "XXK" can be "35K", "40K", "50K", "57K", "65K"
TCP=Adjustable power and CCT, TP-XXK =Single CCT with adjusting power, XX can be any number, for example 30K=3000K., TC=Adjustable CCT;
"(XX)" can be (MS),(PIR),(BT) to indicate Microwave Sensor, PIR Motion sensor, Motion Sensor with Bluetooth or blank to indicate without Motion Sensor.

Installation Instruction





1. Rings type:

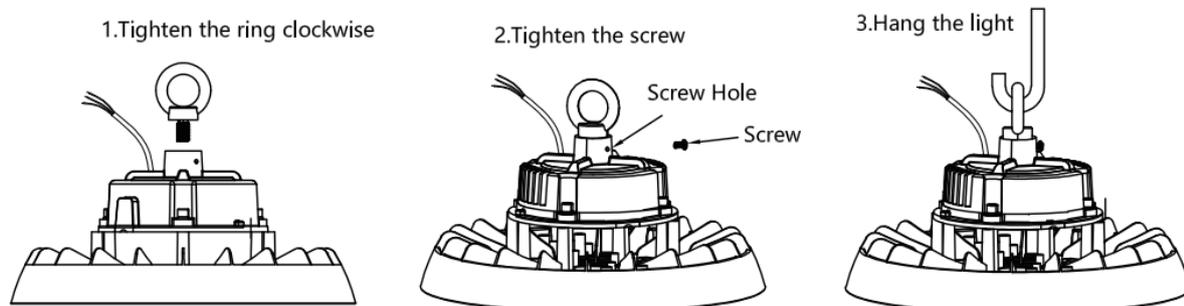


2. Hook type:

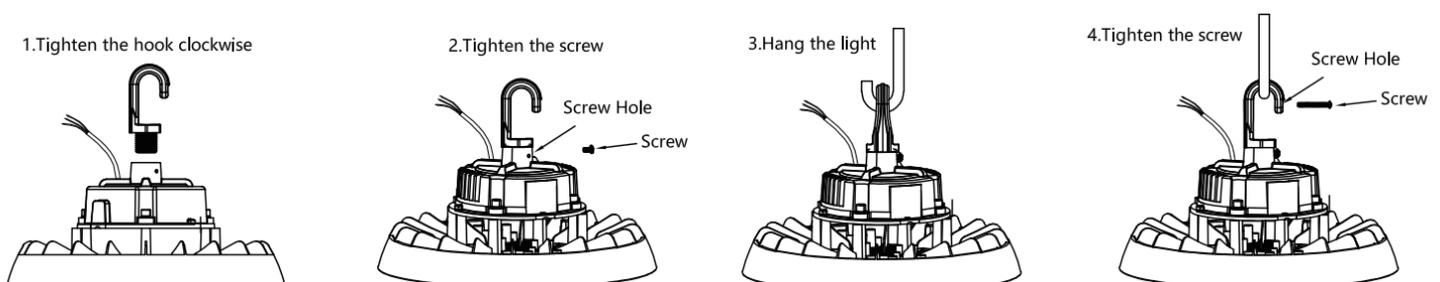




Unit: mm

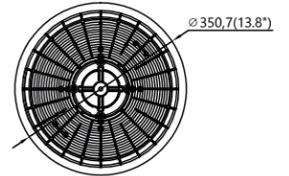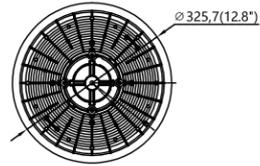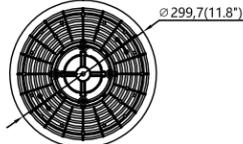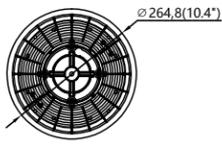

Rings:

 

Hook:

   

100W

150W


200W

240W


CCT and Watts selected Operation Manual:

C/B/A (Minimum / Middle / Maximum wattage) , WW /NW/CW (CCT:35K/40K/50K)


1.Remove the rubber pad from the driver

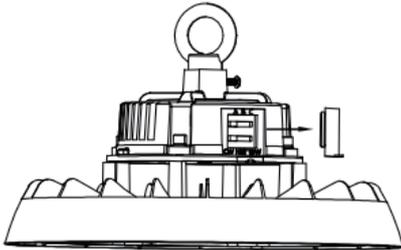

2.Use the slide switch to select wattage and CCT

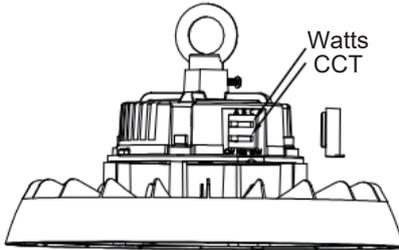


3.Attach the rubber pad to the driver

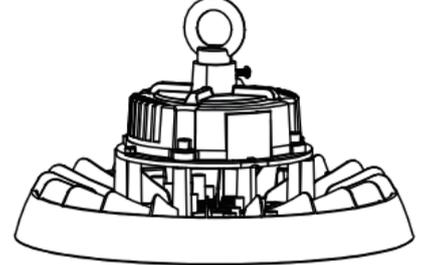

Wiring Connection

Turn off the power,connect AC wire. black wire to L,white wire to N,and green wire to E. Connect wires as below,Purple wire is DIM+, Pink wire is DIM-

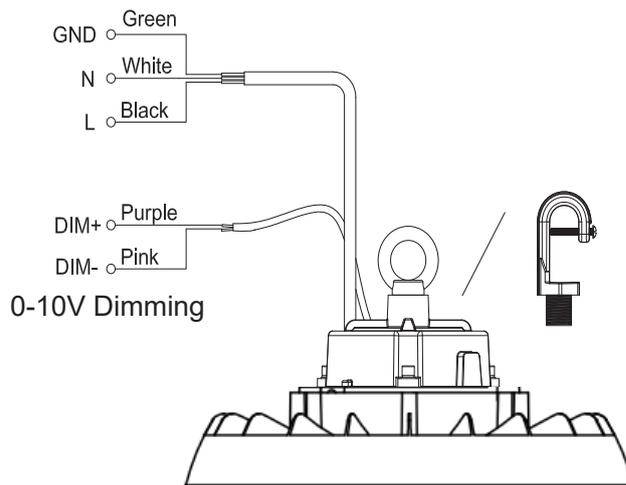

Tip:The above content is for reference only,please take the real thing as the criterion.

carried out by a qualified electrician.