



 


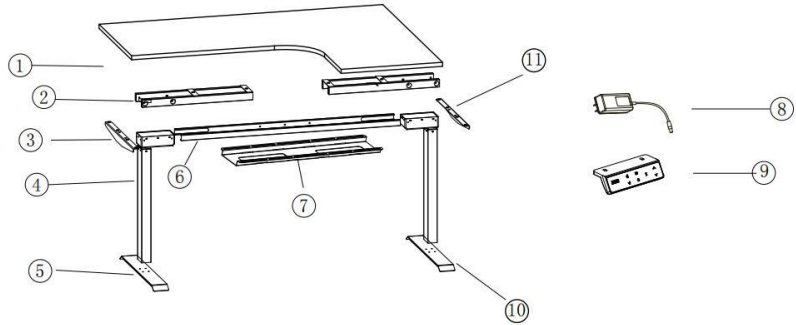













Electric Lift Table Installation Diagram

Parts List







①  Wooden Board (x1)	②  Crossbeam (x2)	③  Angle Bracket (x1)
④  Table Leg (x2)	⑤  Base Foot (x1)	⑥  Telescoping Crossbeam (x2)
⑦  Cable Management Box (x1)	⑧  Power Adapter (x1)	⑨  Hand Controller (x1)
⑩  Long Base Foot (x1)	⑪  Long Angle Bracket (x1)	


Screw Packet List

A  M6×12(×20)	B  M6×10(×4)	C  M6×15(×8)	D  ST4×15(×14)
E  5mm T-wrench	F  Phillips screwdriver	G  Adjustable Feet (x4)	

Spare Screw Packet


A  M6×12(×2)	B  M6×10(×1)	C  M6×15(×1)	D  ST4×15(×2)
---	---	---	--

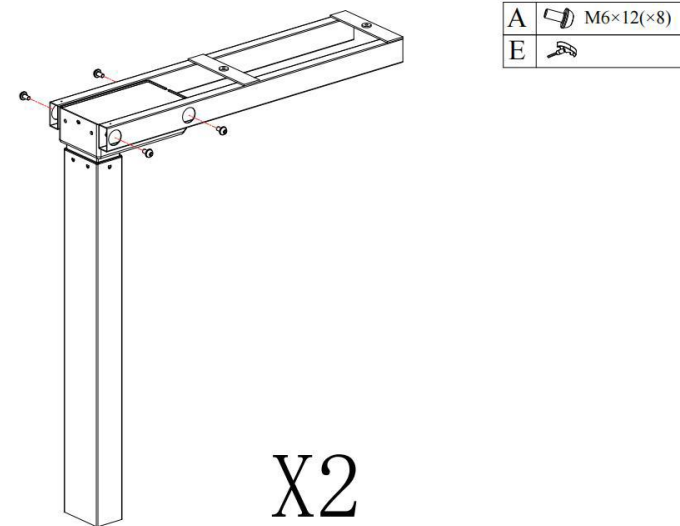

Installation Step 1



X2

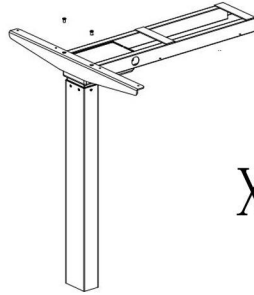
Installation Step 2



B	 M6×10(×4)
F	

X2


Installation Step 3

 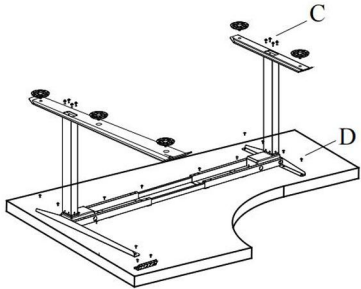



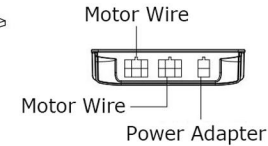
Note:

- 1.The side away from the hand controller has a long motor wire.
- 2.Adjust to the appropriate length according to the desk board hole positions.
- 3.The force for installing the desk board is approximately 8N.


Installation Step 4

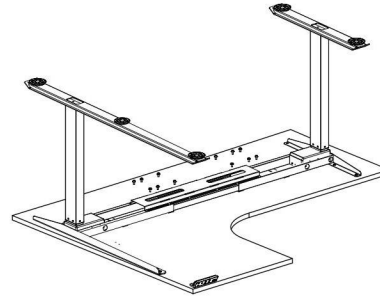



A	 M6×12(×8)
E	

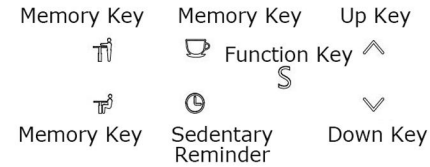

 
Complete



Instructions for use:

- 1.To reset at the lowest position or when an error code appears, press and hold the  key.
- 2.To save a memory position: Move the desk to the desired position, press the S key until the display screen flashes, then press the corresponding memory key.
- 3.By briefly pressing a memory key, the desk will move to the preset height. Press any key during movement to stop the desk.
- 4.Sedentary Reminder Function: Press  key to enter the sedentary reminder settings, use the up and down keys to toggle between durations and to turn off.

- (1). The sedentary reminder is triggered when the adjustable desk remains at any height for longer than the set sedentary reminder duration.
- (2). After the sedentary reminder is triggered, it will remind every 2 minutes by flashing the current height on the display for 9 seconds, totaling three reminders.
- (3). If the desk's height changes within the set duration or before the three reminders are complete, the timer will reset.
- (4). When the sedentary reminder function is enabled, the third decimal point on the display screen will light up in the screen-off state, indicating that the function is on. When the sedentary reminder is off, there will be no decimal point indication.
- (5). If the desk's height remains unchanged after the three reminders, the sedentary reminder will automatically turn off. To reactivate the function, follow the activation steps again.

- 5.Child Lock Function: Press and hold the S and  keys simultaneously; the screen will display "LOC," indicating that the child lock is enabled. To disable the child lock, repeat the same operation.