














USER'S MANUAL



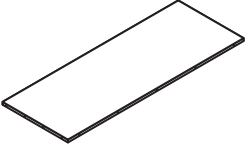
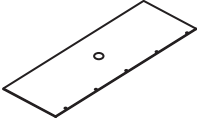
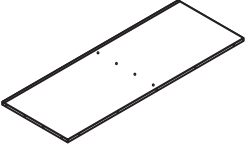
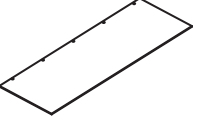
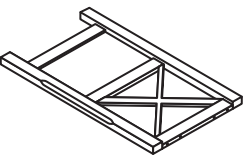
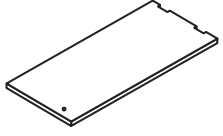
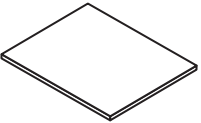
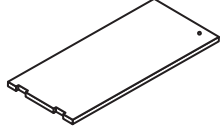
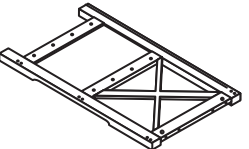

TV STAND

PRODUCT ASSEMBLY

Hardware List


ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
A	Cam Bolt		34 pcs	H	Magnetic Bar		2 pcs
B	Camlock		34 pcs	I	Hinge		4 pcs
C	Wooden Dowel		32 pcs	J	Screw		5 pcs
D	Knob Bolt		2 pcs	K	Screw	 3*12mm	18 pcs
E	Knob		2 pcs	L	Fixed Button		4 pcs
F	Screw	 3*14mm	4 pcs	M	Screw	 3*16mm	4 pcs
G	Magnetic Catch		2pcs				

Parts List

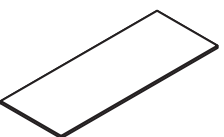ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel		1 pc	7	Top Connect Bar		2 pcs
2	Shelf		1 pc	8	Upper Back Panel		1 pc
3	Bottom Panel		1 pc	9	Lower Back Panel		1 pc
4	Left Side Panel		1 pc	10	Left Door		1 pc
5	Divide Panel		1 pc	11	Right Door		1 pc
6	Right Side Panel		1 pc	12	Shelf and Bottom Connect Bar		2 pcs

PRODUCT ASSEMBLY


Parts List Assembly Overview

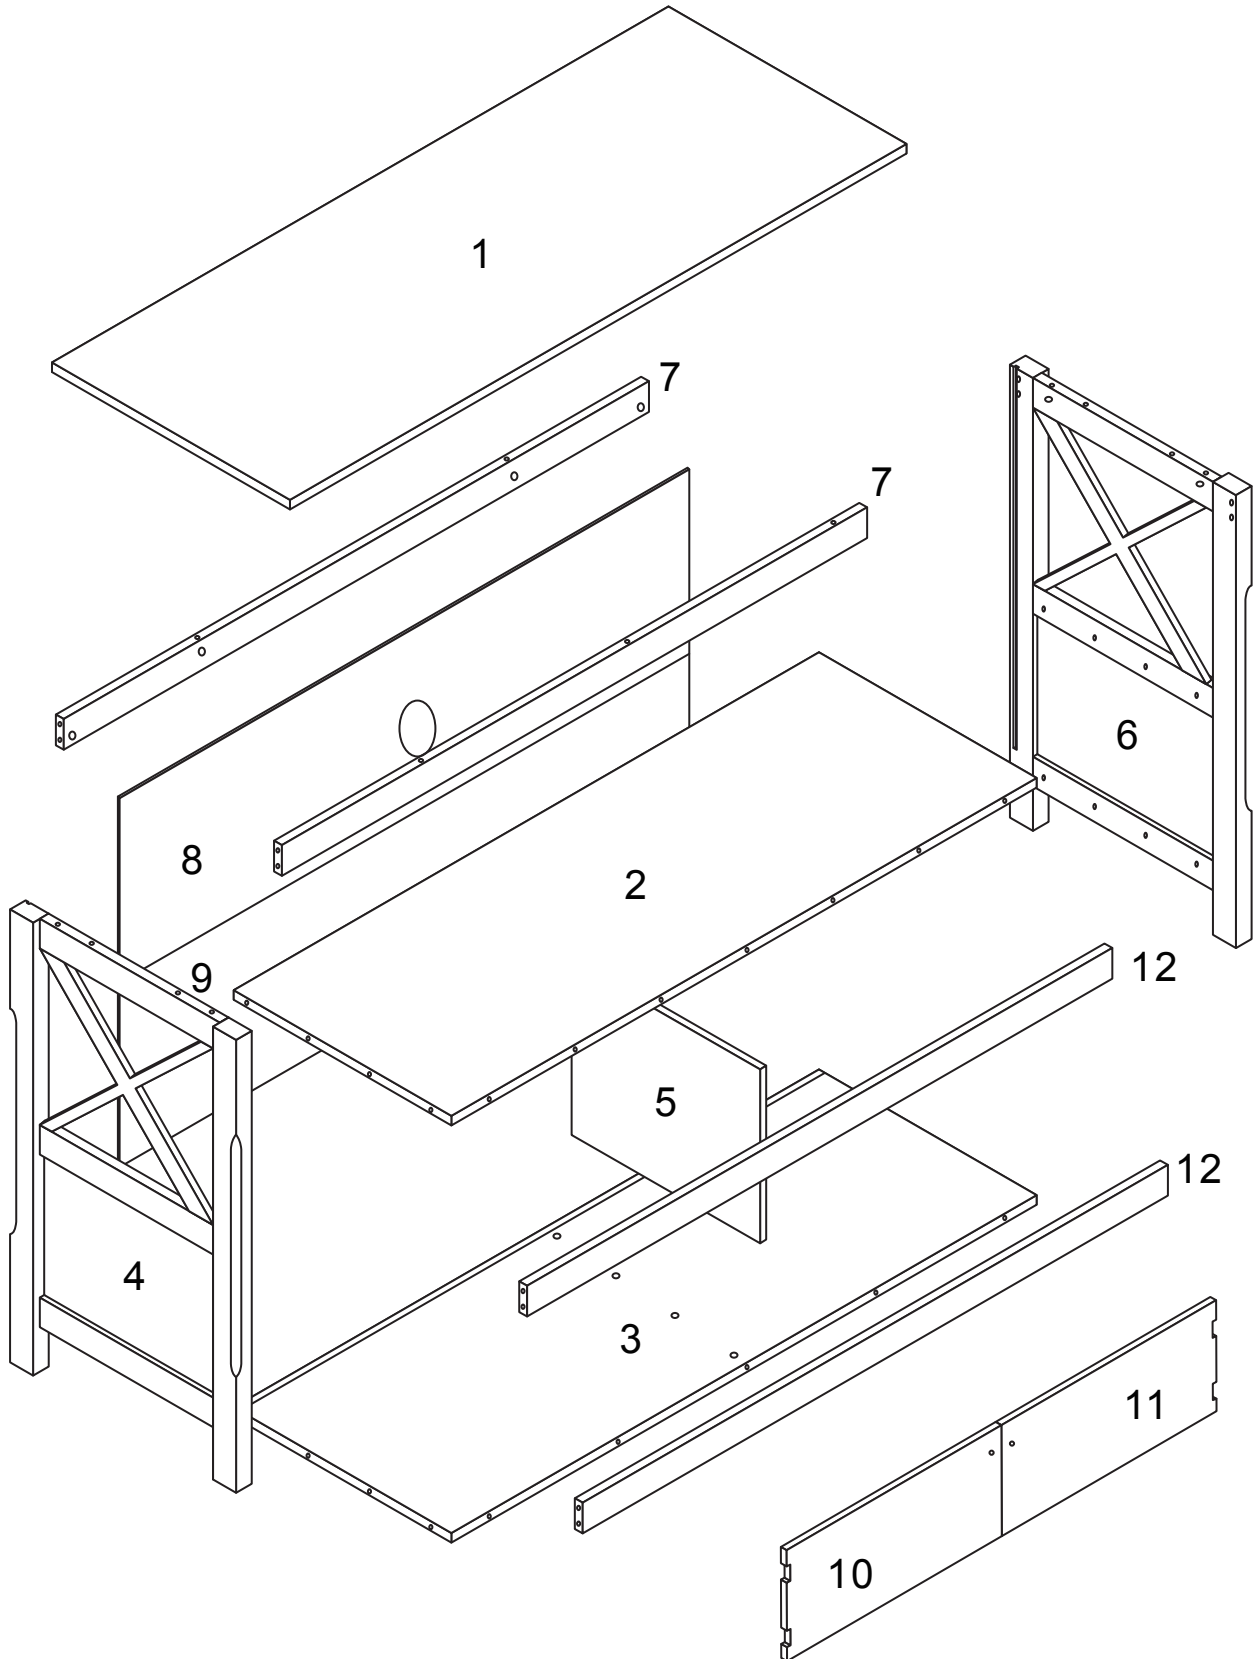

PRODUCT ASSEMBLY

STEP 1


a) Screw in Cam-bolt (A) into designated holes on Shelf and Bottom Connect Bar (5).

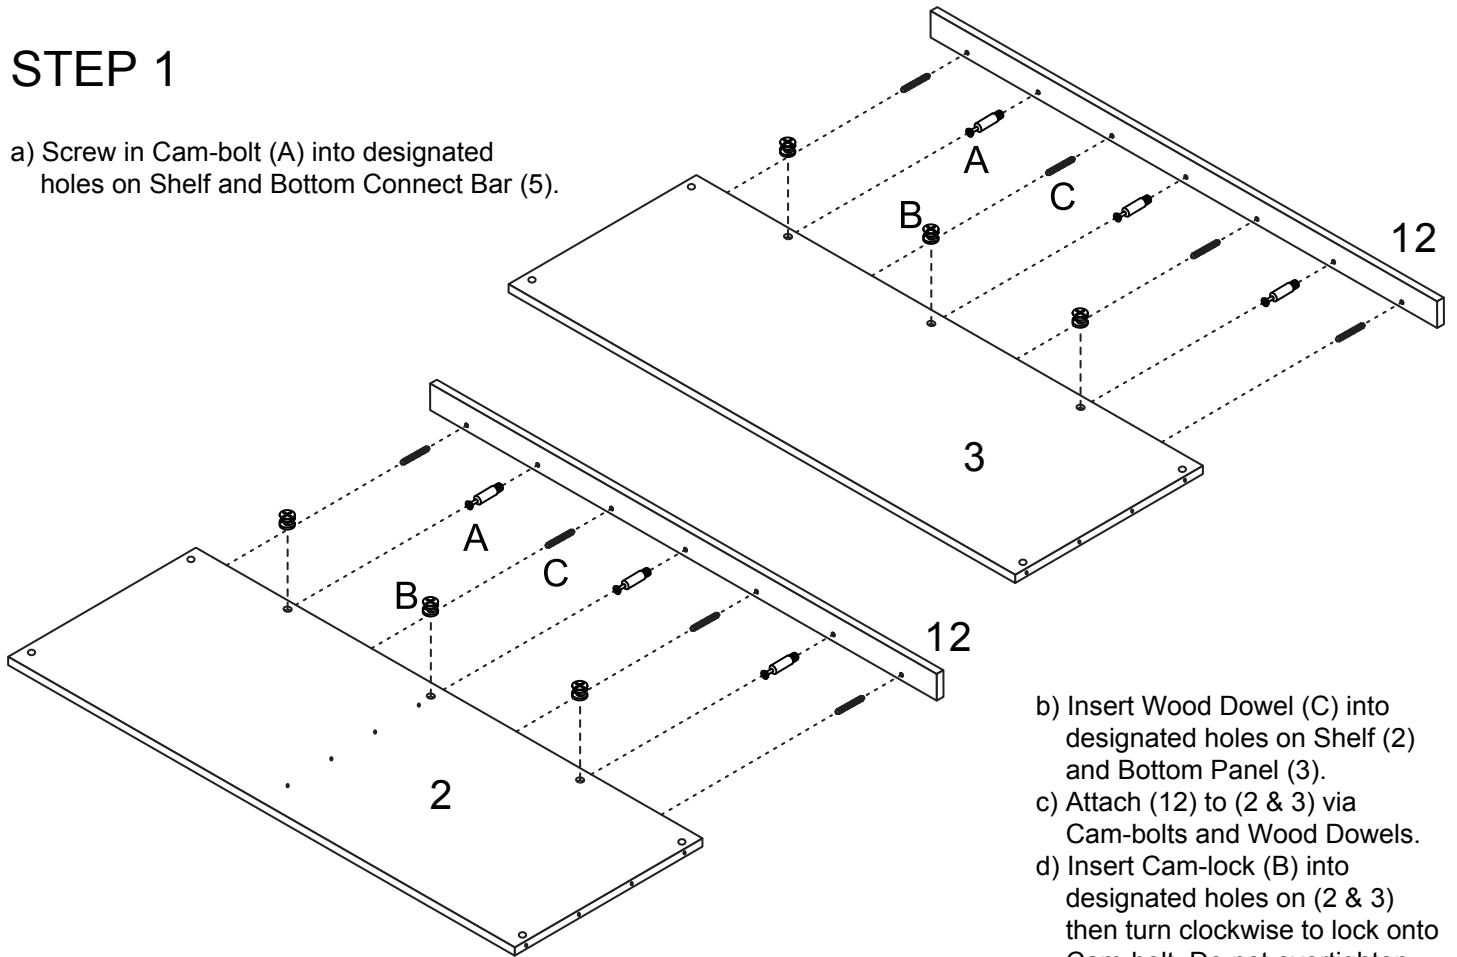

- b) Insert Wood Dowel (C) into designated holes on Shelf (2) and Bottom Panel (3).
- c) Attach (12) to (2 & 3) via Cam-bolts and Wood Dowels.
- d) Insert Cam-lock (B) into designated holes on (2 & 3) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

STEP 2


a) Screw in Cam-bolt (A) into designated holes on Shelf and Bottom Panel (2 & 3).

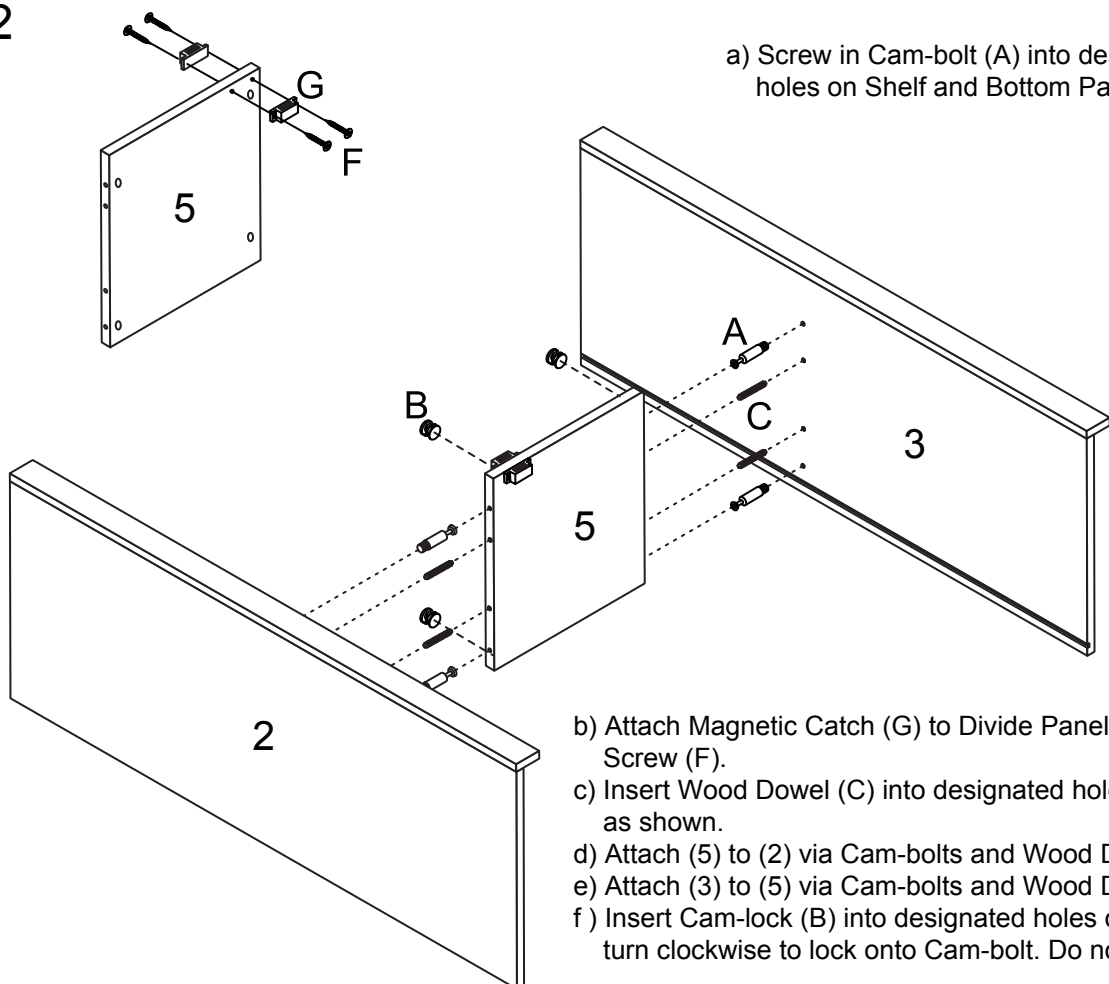

- b) Attach Magnetic Catch (G) to Divide Panel (5) with Screw (F).
- c) Insert Wood Dowel (C) into designated holes on (5) as shown.
- d) Attach (5) to (2) via Cam-bolts and Wood Dowels.
- e) Attach (3) to (5) via Cam-bolts and Wood Dowels.
- f) Insert Cam-lock (B) into designated holes on (5) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

PRODUCT ASSEMBLY


STEP 3

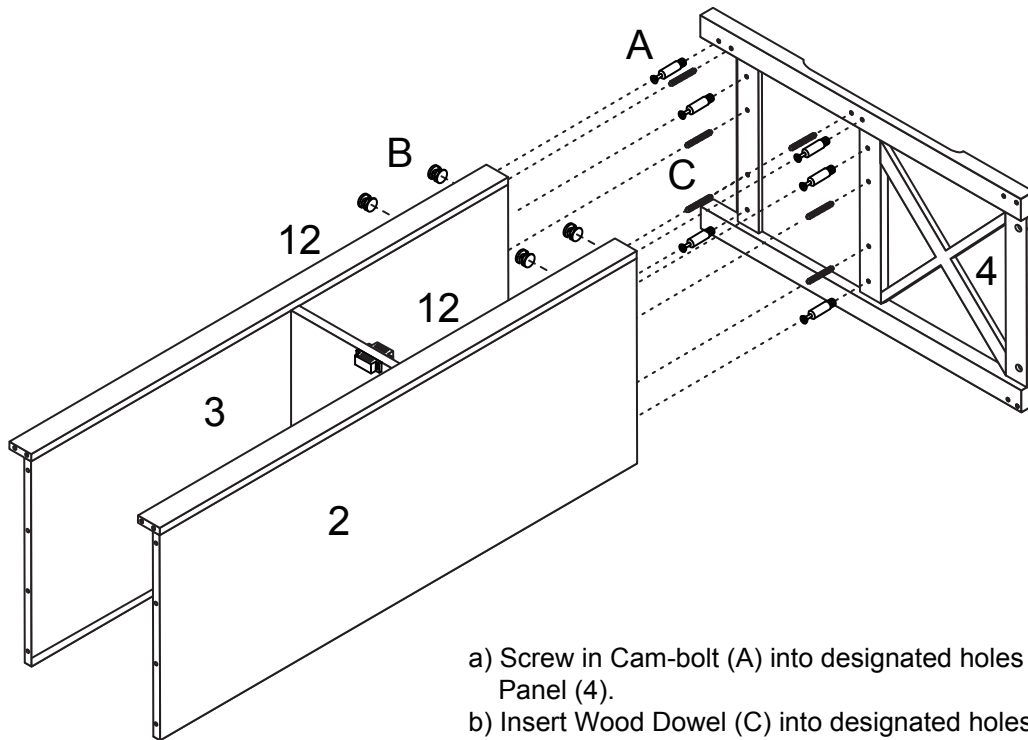

- Screw in Cam-bolt (A) into designated holes on Left Side Panel (4).
- Insert Wood Dowel (C) into designated holes on (2, 3 & 12).
- Attach (4) to (2, 3 & 12) via Cam-bolts and Wood Dowels.
- Insert Cam-lock (B) into designated holes on (2, 3 & 12) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

STEP 4


- Screw in Cam-bolt (A) into designated holes on Left Side Panel (4).
- Insert Wood Dowel (C) into designated holes on Top Connect Bar (7).
- Attach (7) to (4) via Cam-bolts and Wood Dowels.
- Insert Cam-lock (B) into designated holes on (7) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

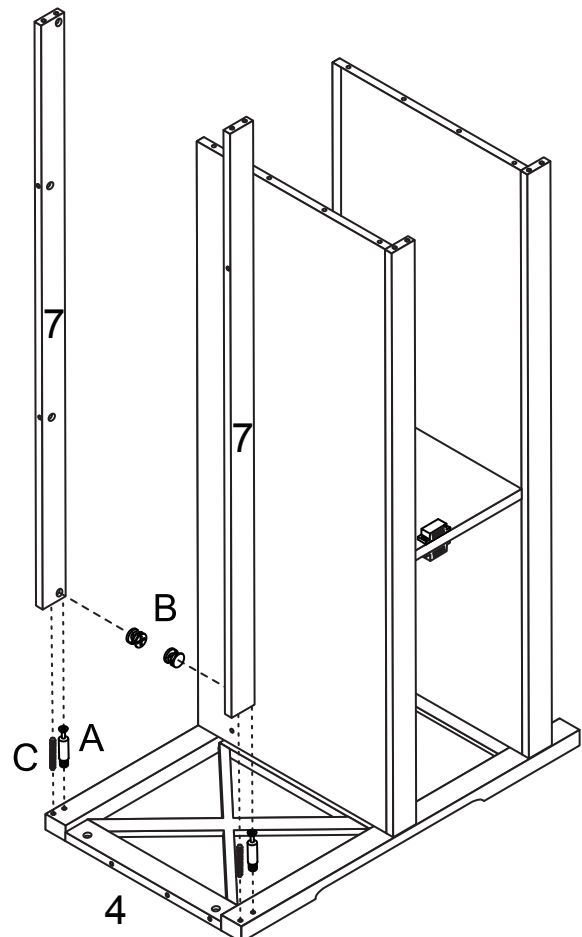

PRODUCT ASSEMBLY


STEP 5

- Screw in Cam-bolt (A) into designated holes on Right Side Panel (6).
- Insert Wood Dowel (C) into designated holes on (2, 3, 7 & 12).
- Attach (6) to (2, 3, 7 & 12) via Cam-bolts and Wood Dowels.
- Insert Cam-lock (B) into designated holes on (2, 3, 7 & 12) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

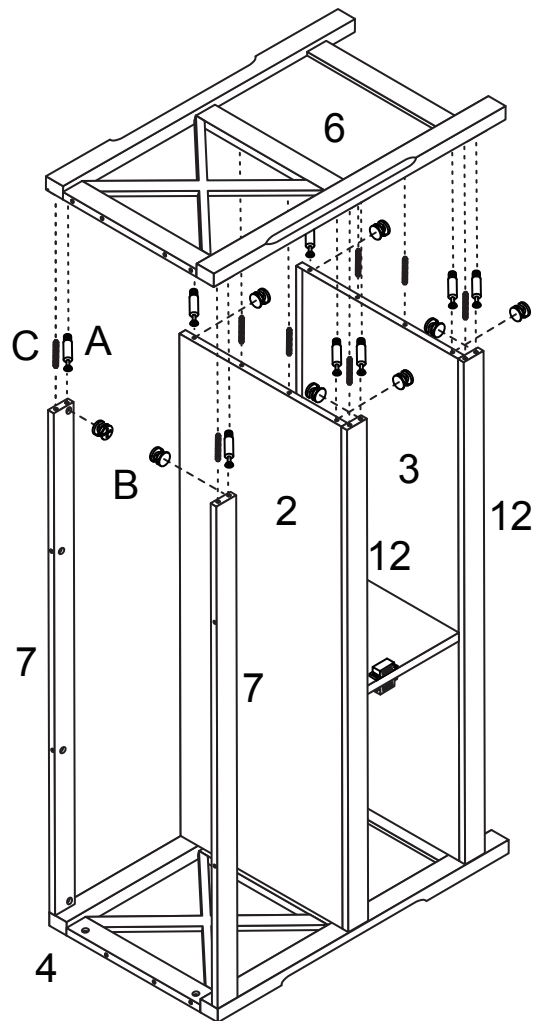


STEP 6

- Screw in Cam-bolt (A) into designated holes on Top Panel (1).
- Insert Wood Dowel (C) into designated holes on (4 & 6).
- Fit Lower Back Panel (9) and Upper Back Panel (8) to Side Panels (4 & 6) via groove on respective side Panels.
- Attach (1) to (4, 6 & 7) via Cam-bolts and Wood Dowels.

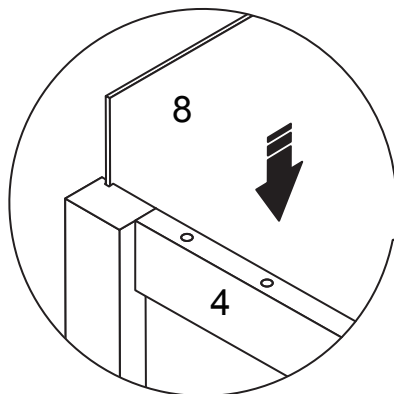


- Insert Cam-lock (B) into designated holes on (4, 6 & 7) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

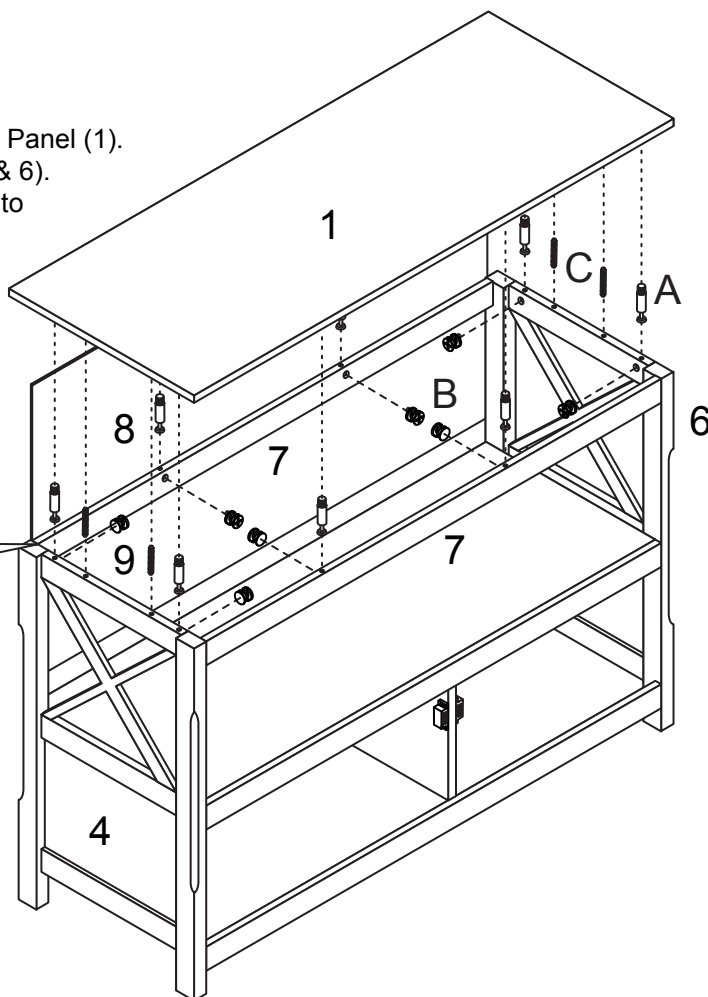


PRODUCT ASSEMBLY

STEP 7

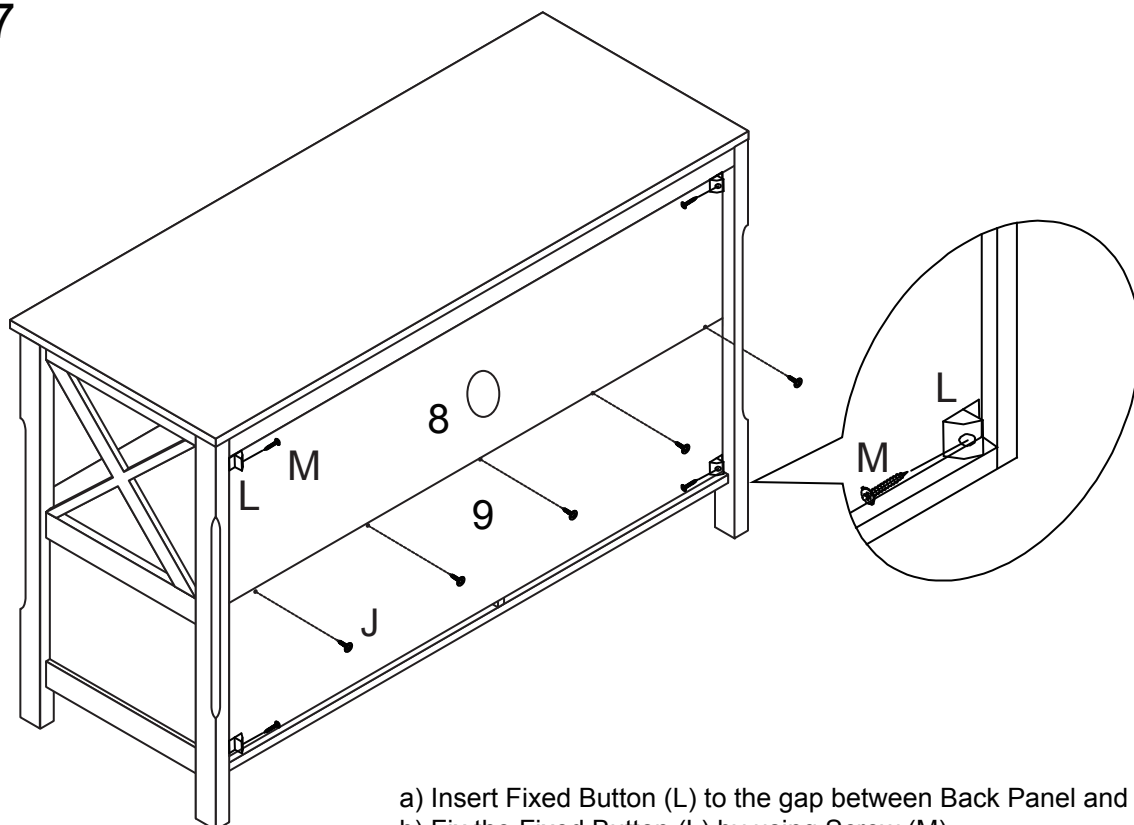

- a) Insert Fixed Button (L) to the gap between Back Panel and Side Panel.
- b) Fix the Fixed Button (L) by using Screw (M).
- c) Fix Back Panels to Shelf by using Screw (J) as shown.

STEP 8

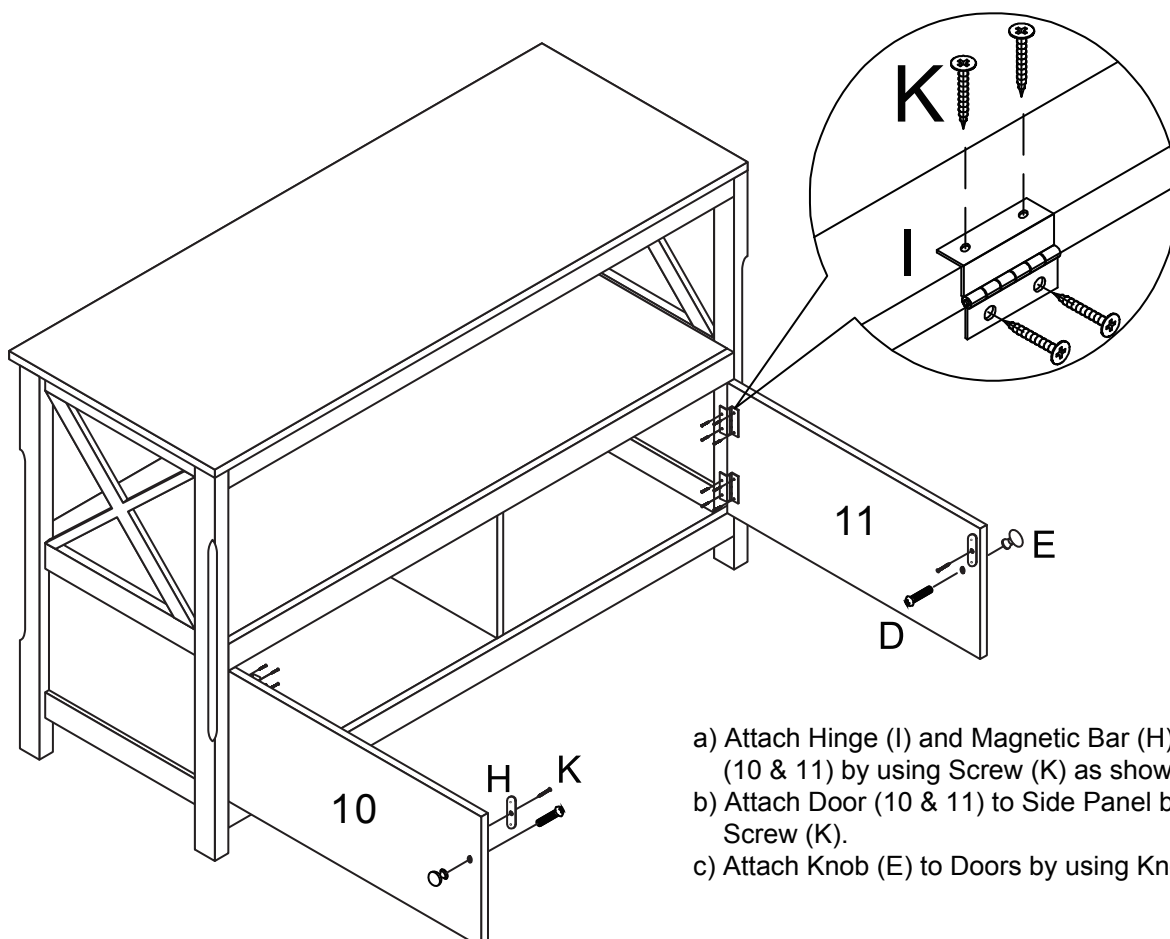

- a) Attach Hinge (I) and Magnetic Bar (H) to Door (10 & 11) by using Screw (K) as shown.
- b) Attach Door (10 & 11) to Side Panel by using Screw (K).
- c) Attach Knob (E) to Doors by using Knob Bolt (D).