



Bladeless Cooling Fan

Black | REDBSF03B
Silver | REDBSF03S
White | REDBSF03W



2 year
guarantee*



Instruction Manual



British engineering &
innovation since 1928

THANK YOU

FOR CHOOSING



We hope you love your product for many years!



Register your purchase

www.rediffusion.uk/registermywarranty

Scan QR code using mobile device

Rediffusion offers a standard one-year warranty. The standard one-year guarantee is only extended to 2 years upon registration of the product within 30 days of purchase. If you do not register the product with us within the 30-day period, your product is guaranteed for 1 year only.

The registration will enable us to contact you in the unlikely event of a product safety notification. You can find more details about guarantee and service further on in this manual.

CONTENTS

TECHNICAL SPECIFICATION	1
IMPORTANT SAFEGUARDS	2 & 3
HOW TO USE	4 & 5
CLEANING & CARE	6
DISPOSING OF THE PRODUCT	7
CUSTOMER SUPPORT	8
GUARANTEE & WARRANTY	9

TECHNICAL SPECIFICATION

Power:	45W
Voltage/Frequency	220-240V~, 50-60Hz
Dimensions:	22.5 X 22.5 67.5
Net Weight:	3.5 kg

This user manual can also be downloaded from our website.

www.rediffusion.uk

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using your product.
2. The appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children.
4. Children should not use or play with the appliance.
5. Use the fan only for intended use.
6. This product is intended for household use only and not for commercial or industrial use.
7. To protect against electrical shock, do not immerse the unit, plug, or cord in water or spray with liquids.
8. Unplug from the outlet when not in use, when moving the fan from one location to another, before putting on or taking off parts, and before cleaning.
9. Never insert fingers, pencils, or any other objects through the air outlet.
10. The appliance must be placed on a stable level surface.
11. Always use it on a dry surface.
12. Do not use a fan:
 - near curtains, plants, window treatments, etc.
 - in a window, rain or moisture may cause an electrical hazard
 - near a source of fire
 - in an area exposed to direct sunlight
 - near a bath, shower, pool, or area where water is likely to splash
13. Do not operate in the presence of explosive and/or flammable fumes.
14. Do not place the fan or any parts near an open flame, cooking, or other heating appliances.
15. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner.
16. Do not let the cord hang over the table or counter or touch hot surfaces.
17. To disconnect, grip the plug and pull from the wall outlet. Never yank on the cord.
18. During the first few minutes of initial use, a slight odour may be noticeable. This is normal and will quickly disappear.

Important Safeguards


Power Cord Safety Tips

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
2. Never pull or yank on the cord or the appliance.
3. To insert the plug, grasp it firmly and guide it into the outlet.
4. To disconnect the appliance, grasp the plug and remove it from the outlet.
5. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the power cord replaced. Please return it to our Service Department or to an authorised service representative.
6. Never wrap the cord tightly around the appliance as this could cause the wire to fray and break.
7. Do not operate the appliance if the power cord shows any damage.

Battery Warning

1. Insert batteries into the remote correctly, paying attention to the polarities (+ and -) indicated on the batteries and on the device.
2. Batteries must not be short-circuited.
3. Do not charge the batteries.
4. **KEEP BATTERIES OUT OF THE REACH OF CHILDREN.** Ingestion can cause chemical burns, soft tissue perforation, and death. Serious burns can arise within 2 hours of ingestion. Consult a physician immediately.
5. Do not allow children to replace the batteries.
6. Do not force the discharge of the batteries. Do not mix new and used batteries or batteries of different types or from different manufacturers together.
7. Discharged batteries must be removed immediately from the device and disposed of according to the laws in force.
8. Do not heat the batteries or expose them to heat sources.
9. Do not directly solder the batteries.
10. Do not disassemble the batteries.
11. Do not deform the batteries.
12. Do not throw or dispose of batteries in a fire.
13. Do not put in contact with water or moisture, especially if the battery is damaged.
14. Do not encapsulate or modify batteries.
15. Store unused batteries in their original packaging away from metallic objects. If already removed from the packaging, do not mix or mix the batteries.
16. If you intend not to use the device for an extended period of time, remove the batteries.
17. Clean the battery contacts and those of the device before inserting the batteries.
18. In the event of battery leaks, avoid any contact with the leaked material; in case of contact, rinse the affected area with water and consult a doctor.

How To Use

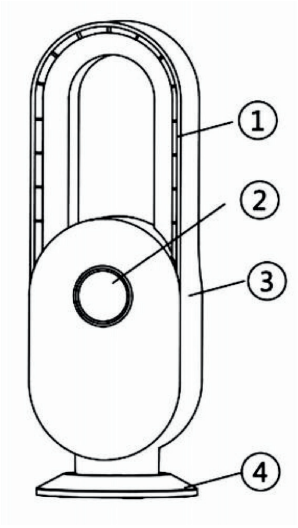

Parts Description:

1. Air Outlet
2. Control Panel
3. Body
4. Support Base

How To Use:

1. Before using the appliance, make sure it is on a flat and stable surface. Damage may occur if the appliance is placed on an unstable slope or surface.
2. Set all switches to the **OFF** position, then insert the plug directly into a power outlet. Make sure that the plug fits securely into the socket.
3. To completely turn off the appliance, turn all the controls to the ON/OFF position, then remove the plug from the socket.

Control Panel/Remote Control:

1. Press **ON/OFF** to start the device.
2. Press **SPEED** to select the fan speed level: I (Low), II (Medium), III (High). The fan defaults to mid gear speed when it is turned on.
3. Press **MODE** to select the ventilation mode: normal, natural, or night. To stop ventilation, simply press **ON/OFF**. The fan will default to normal when turned on.
4. Press **SWING** and the fan will start oscillating. To stop oscillation and fix the position, press **SWING** again.
5. Press **TIMER** to choose the desired operating time from 1 to 15 hours. Once the timer has finished, the device will automatically turn off. You can set the **TIMER** function when the fan is in standby mode. Simply press the **TIMER** button to set the time. Then set the **SPEED** and **MODE**. Select **ON/OFF** to close the function.

How To Use

Control Panel

Swing: Press to activate the swing function. This mode will not be activated when the fan is off or the timer is set to off.

Timer: Press the timer repeatedly to set it from 1 to 15 hours.

ON/OFF: Press this button to turn the fan on or off.

Speed: Press to select the desired airflow speed - Low - Medium - High

Mode: Press mode to choose the type of airflow: normal, natural, or sleep.

IMPORTANT: Always turn off the appliance and unplug it when not in use.



Remote Control

ON/OFF: Press this button to turn the fan on or off.

Speed: Press to select the desired airflow speed - Low - Medium - High

Swing: Press to activate the swing function. This mode will not be activated when the fan is off or the timer is set to off.

Timer: Press the timer repeatedly to set it from 1 to 15 hours.

Mode: Press mode to choose the type of airflow: normal, natural, or sleep.

IMPORTANT: Do not place anything between the fan and the remote control to allow the remote control to work properly. The remote control can be used with a range of around 8m from the receiver (the reception is placed inside the main body of the fan) To remove the batteries, open the battery compartment on the back of the remote control, sliding the cover outwards.
polarity.



Cleaning & Care

This appliance requires little maintenance and contains no user-serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed. The fan is permanently lubricated and will not require additional lubrication for the life of the fan.

Cleaning

1. Before cleaning, turn the fan off and unplug it from the electrical outlet.
2. Wipe off excess dust from the surface with a lint-free cloth, soft and dry cloth.
3. To ensure adequate air circulation to the motor, keep vents located at the rear of the motor housing free from dust accumulation.
4. A vacuum cleaner hose can be used to clean dust from the vents.
5. Do not immerse the fan in water or any other liquid.

Storage

1. Make sure to disassemble and clean the fan before storing it.
2. Retain the original packaging to store the fan.
3. Always store the fan in a dry place.
4. Never store the fan while it is still plugged in.
5. Never wrap the cord tightly around the fan, and do not put any stress on the cord where it enters the fan housing - This could cause the cord to fray and break.

Disposing Of The Product


Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

Correct Disposal Of This Product

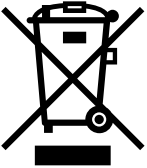

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team:

Please have your Model No. available. This can be found on the front cover of this manual and on the products rating label.

We're here to help!



01274 752624



customerservice@rediffusion.uk



www.rediffusion.uk

Happy with your new product?

We would love to hear your suggestions and feedback about your experience.



Guarantee & Warranty



Register your purchase

www.rediffusion.uk/registermywarranty

Scan QR code using mobile device



Rediffusion offers a standard one-year warranty. The standard one-year guarantee is only extended to 2 years upon registration of the product within 30 days of purchase. If you do not register the product with us within the 30-day period, your product is guaranteed for 1 year only.

The extended warranty is only valid with proof of purchase. Proof of purchase and the registration confirmation (supplied via email upon registration) must be kept for the entirety of the guarantee in order to remain valid.

Do not return this appliance to the store to make a warranty claim. Please call 01274 752624 or email customerservice@rediffusion.uk. For faster service, locate the model number on the rating label on your appliance.

This warranty applies to products purchased and used in the UK. This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period from the original purchase date; this time frame can vary based on the product. Please refer to our product pages or contact our customer service team if you are unsure of the duration of the product's warranty period. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace it with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required for a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.*



Capture, tag, and win with
#Rediffusionfamily



@Rediffusionuk

Tag us with **#Rediffusionfamily** on social media. We love seeing your amazing home transformations so much that we regularly feature our favourites and even host exclusive giveaways to show our online family some extra love!

Rediffusion

Belfry House, Roydsdale Way,
Bradford, BD4 6SU
01274 752624
www.rediffusion.uk

Illustrations may differ from actual product. We are consistently striving to improve our products, therefore all specifications contained herein are subject to change without notice.