



LOMBARDIA U-SPOUT WIDESPREAD LAVATORY FAUCET

ROHL Modern Bath Lombardia

A2218LM (Metal Levers)
A2218XM (Cross Handles)

FEATURES


- Fixed spout
- 8" centers
- 5 29/32" overall spout height
- 3 x 1 3/8" cutouts
- 1/4-turn ceramic disc control cartridges
- 6 11/16" spout reach
- 1/2" NPT connectors
- Matching tub filler A2224
- 1.2 GPM
- Brass construction

COLORS/FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Tuscan Brass
- Matte Black
- Unlacquered Brass

WARRANTY

- Limited Lifetime*
- * No warranty on Tuscan Brass
- * 5-year warranty on Inca Brass
- * 5-year warranty on Matte Black

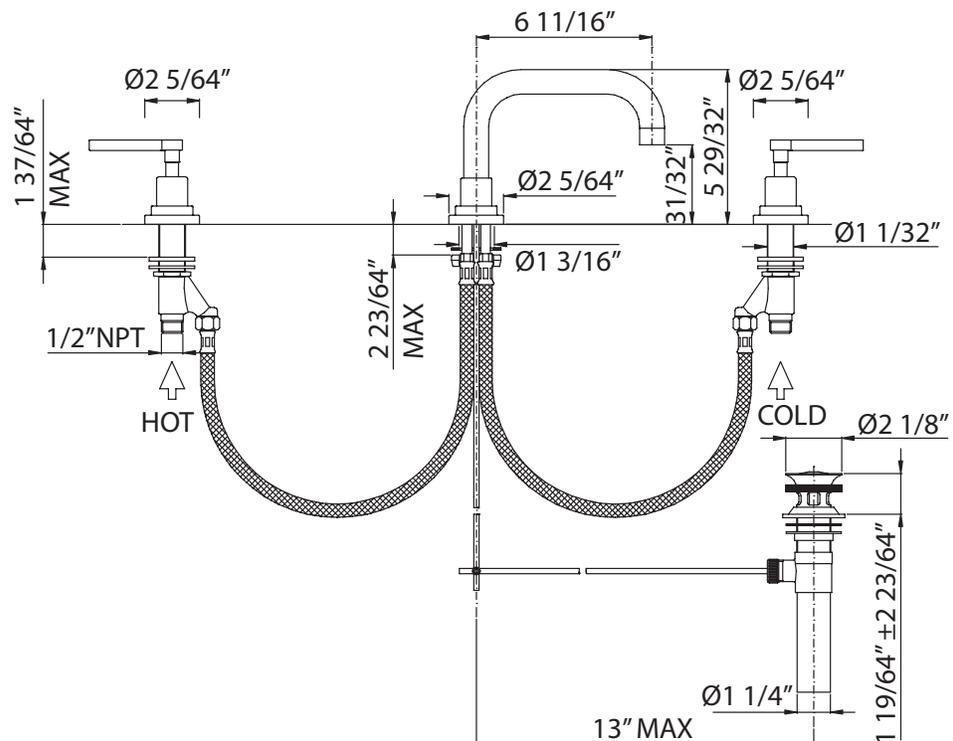


INSTALLATION INSTRUCTIONS

INSTALLATION AND CARE & MAINTENANCE GUIDE

Installation guide

Wash basin mixer with automatic pop-up waste

Art. A2218XM-- -2 Art. A2218LM-- -2

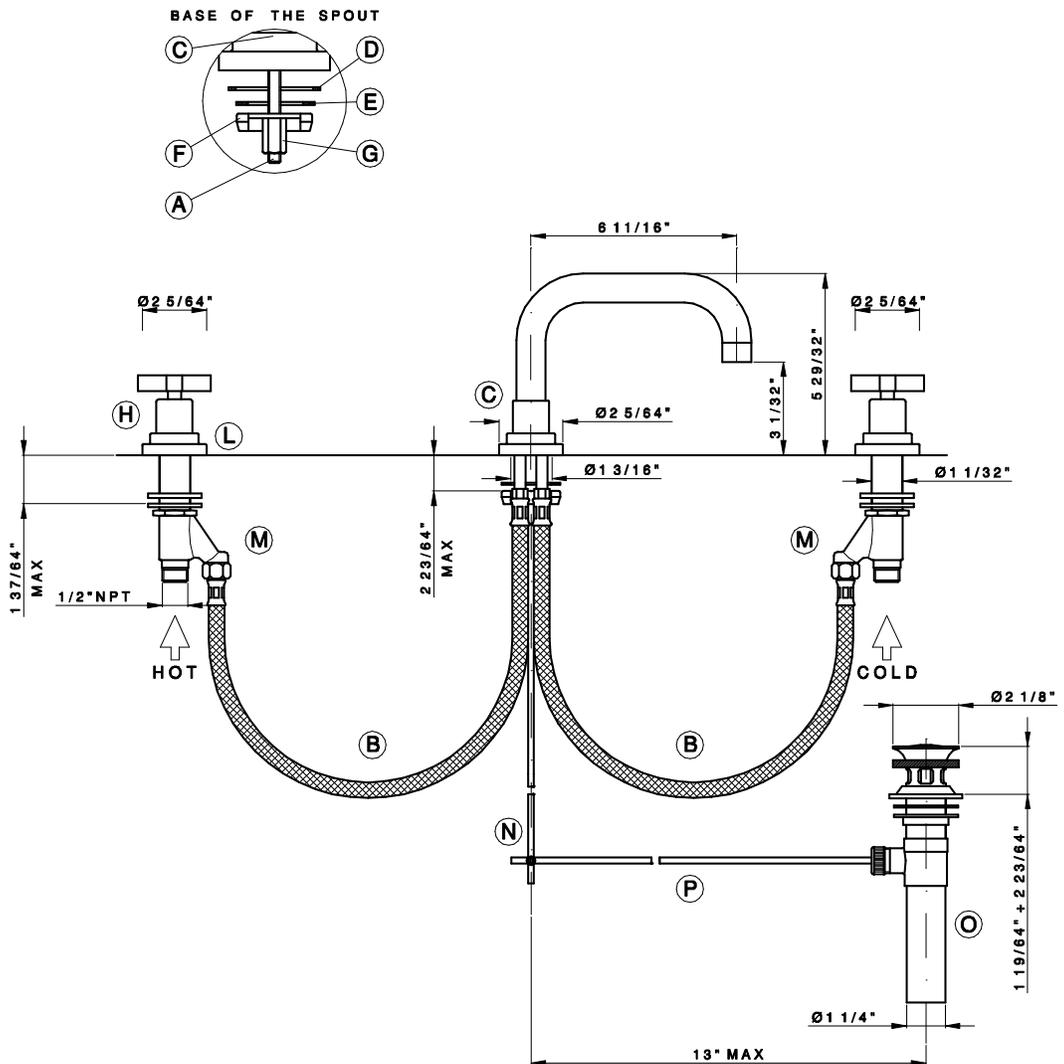

INSTALLATION INSTRUCTIONS

a – Preparation

Flush out the pipework to remove any foreign matter.
The hot supply should be on the left when viewed from the front of the fitting.

b – Assembly

- Introduce the rod (N) in the spout (C).
- Assemble the threaded pivot (A) and the flexible hoses (B) at the spout (C).
- Introduce the spout (C) in the central hole of the wash basin, placing before the rubber washer (D) between the spout (C) and the wash basin.
- Fix the spout (C) placing, before the shaped rubber washer (E) and then the half-moon plate (F) and the lengthen nut (G).
- Unscrew the handle set (H) and extract. Unscrew the cap (L).
- Assemble the valve body (M), placing before the nut and then the rubber washer.
- Introduce the valve body (M) in the hole of the wash basin and fix it, placing before the cap (L).
- Screwing the handle set (H). ATTENTION: Be sure that the handle has no play.
- Unscrew the cap (L) just to get in touch with the cover valve (H).
- Lock the valve body (M) underside with the brass fixing nut.

A T T E N T I O N

Maximum fixing nut torque value = 10 lbf.ft.

- Repeat this procedure for the cold valve.
- Connect the side valves (M) to the nozzle using the flexible hoses (B).
- Assemble the automatic pop-up waste (O). Introduce and fix it in the hole of the wash basin. Join the vertical rod (N) to the horizontal rod (P) using the double connector.
- Connect hot and cold water supplies to side valve inlet.
- Ensure all connections are firmly tightened.

c – Before use

Turn on the Hot and Cold supplies to the faucet.
Maximum temperature for Hot water supply to the faucet is 145° F.
Minimum recommended pressure is 15 psi – Maximum recommended pressure is 75 psi.
Check the installation carefully for leaks.
If further building work is to be carried out in the vici of the faucet, it should be covered to prevent paint, adhesive, etc. from damaging the surface.

Cleaning

Clean the chromium plated surfaces with soap and water or with mild liquid detergent. Do not use any abrasive cleaners or chloride bleach.

The gold plated or nickel plated surfaces; even if make on thickness way; must be cleaned only with a damp cloth or with a non abrasive and acid fluid very diluted.

Use the same cleaning procedure for all other finishings including satin nickel, inca brass.

WARNING: the use of cleaning products not recommended might irreparably harm the surfaces of the faucets which in such case are not covered by our warranty.

Limescale

The faucet is fitted with an aeration device in the Hot/Cold water outlet.
This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar or lemon juice.

Do not use chemical descaling liquids for this purpose.

INSTALLATION INSTRUCTIONS

CARE & MAINTENANCE

Spare Parts

