 


IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

ELECTRIC FIREPLACE

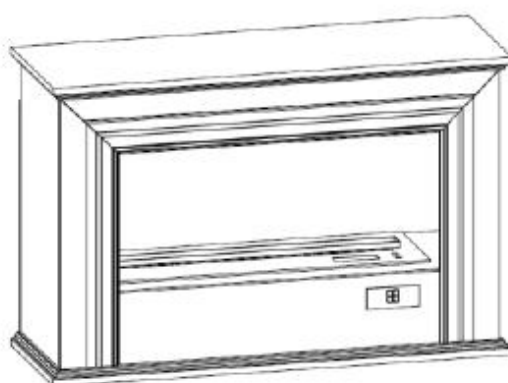

SMFP

NO VENTING REQUIRED

WARNING

Read and understand this entire owner's manual, including all safety information before plugging in or using this appliance. Failure to do so could result in fire, electric shock, or serious personal injury.



+1(503)928-7812




hellovitesse@gmail.com

Please choose SMS or email as your first choice for communicating with us.

THIS EQUIPMENT IS CERTIFIED BY CANADIAN AND AMERICAN NATIONAL STANDARDS : ETL



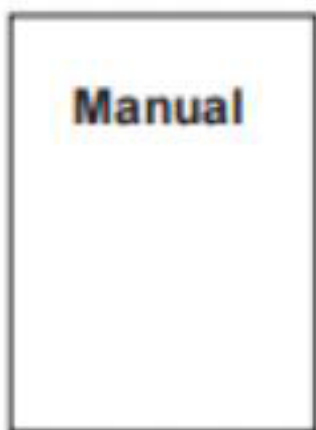





①



②



    ③

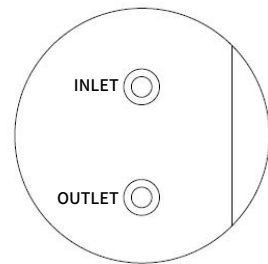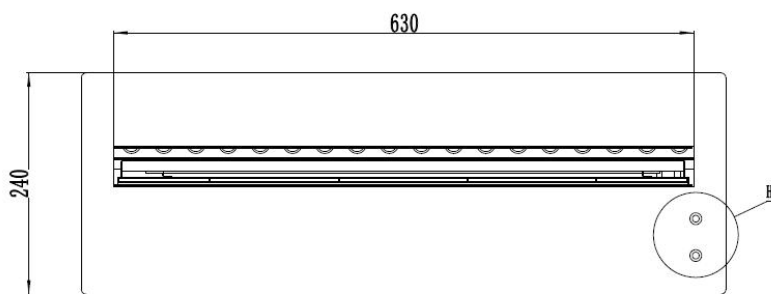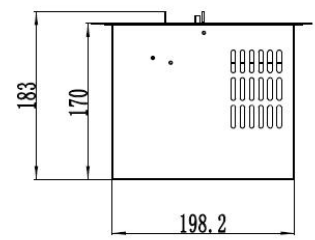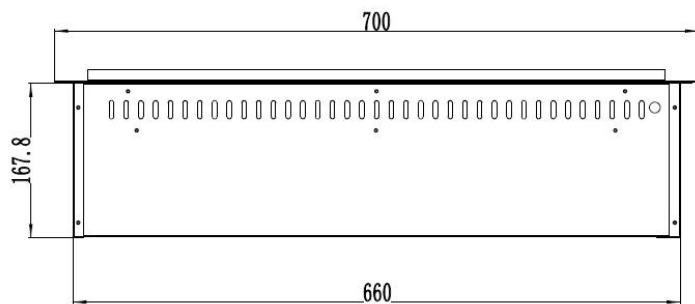

$\frac{H}{3:1}$

1. Please read the instructions carefully before use.

2. When using the fireplace, you must take certain basic precautions to reduce the risk of fire, electric shock, and personal injury. These precautions include:

1) Do not place any items or clothing on top of the fireplace, and do not block the air circulation around it.

2) Do not use the unit if it is damaged.

If damage is found, consult your supplier before installation and use.

If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a similarly qualified person to avoid hazards.

3) Do not use outdoors.

Do not use near a bathtub, shower, or swimming pool.

Do not install the fireplace directly below a fixed power outlet or junction box.

Keep furniture, curtains, or other flammable materials at least 1 meter away from the unit.

Place the appliance on a flat and stable surface.

4) The fireplace must be positioned so that the plug or grounding terminal remains accessible.

Keep the power cord away from the top of the fireplace.

5) In case of malfunction, disconnect or isolate the fireplace from the power supply.

If the appliance will not be used for an extended period, disconnect it, drain all internal water, and store it properly.

6) This fireplace can be used by children aged 8 years and above, and by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children under 3 years should be kept away from the appliance unless continuously supervised.

Children aged 3 to 8 years are only allowed to operate the on/off functions of the appliance, provided that the appliance is placed or installed in its intended normal operating position, and they have received supervision or instruction on the safe use of the appliance and understand the hazards involved.

Children aged 3 to 8 years shall not connect, adjust, clean the appliance, or perform user maintenance.

7) CAUTION: This fireplace must be connected to a power supply with a proper ground wire.

This unit is designed for use with alternating current (AC) only—ensure the supply voltage matches the voltage rating marked on the appliance. Read all safety


instructions and the operating guide before use.

WARNING: Some parts of this product can become extremely hot and may cause burns. Extra caution is required in locations where children or vulnerable individuals are present.

CAUTION: To prevent overheating, do not cover the appliance.

Warning: Keep batteries out of reach of children.

1. Ingestion of batteries can cause severe injury or be life-threatening within just two hours, as they can lead to chemical burns and potential perforation of the esophagus.
2. If you suspect a battery has been swallowed or inserted into any part of the body, seek immediate medical attention.
3. Inspect the remote control and ensure the battery compartment is securely fastened—for example, check that any screws or other mechanical fasteners are properly tightened. Do not use the remote if the battery compartment is not secure.
4. Handle used batteries safely. Even discharged batteries may still pose a hazard.

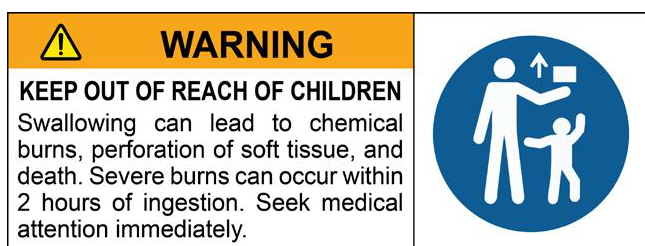

Specifications

1. Voltage: 120V 60Hz
2. Power: 210W
3. Material: Metal
4. Dimensions: 700*240*180mm


Product Information

1. Important: You must use filtered water with this fireplace.
2. When adding water, be careful not to spill any outside the fill port. Avoid letting water flow into the interior of the product, as this may damage the internal electrical components. A full tank typically provides 8 – 10 hours of operation.
3. The 3D simulated flame can be affected by external conditions. In winter, the flame may take slightly longer to rise when first turned on. It is recommended to install the fireplace in an area with minimal air flow.
4. This model is designed as a freestanding unit and is typically placed near a wall.
5. Always ensure the unit is placed on a level surface.


6. In environments with very low background noise, you may hear a dripping sound. This is normal and not a cause for concern.
7. Once installed, do not move or tilt the unit.
8. If the unit needs to be moved, be sure to drain the water tank, disconnect the power supply, and then proceed to relocate it.
9. If the fireplace will not be used for more than one week, drain the water from the





storage tank and power it off. Press and hold the  for 5 seconds to drain water (drainage timer: 5 minutes). If water is not completely drained, repeat the operation as shown.

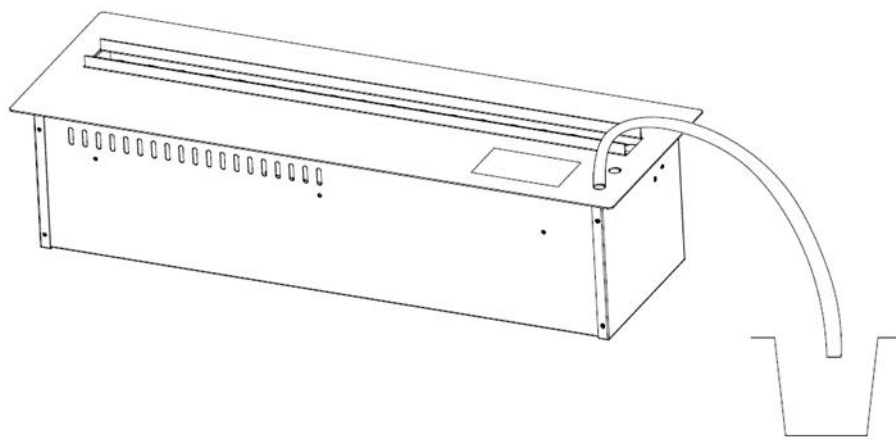

 10. The water storage tank of this product should be treated regularly with a biocide.
11. Ensure all items inside the packaging have been removed (read all warning labels carefully), and keep all packaging properly stored for potential future use—such as when moving or returning the device to the supplier.

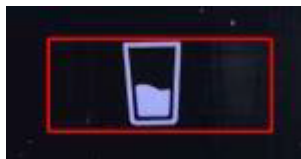

12. Before connecting to the power supply, verify that the mains voltage matches the voltage indicated on the appliance.

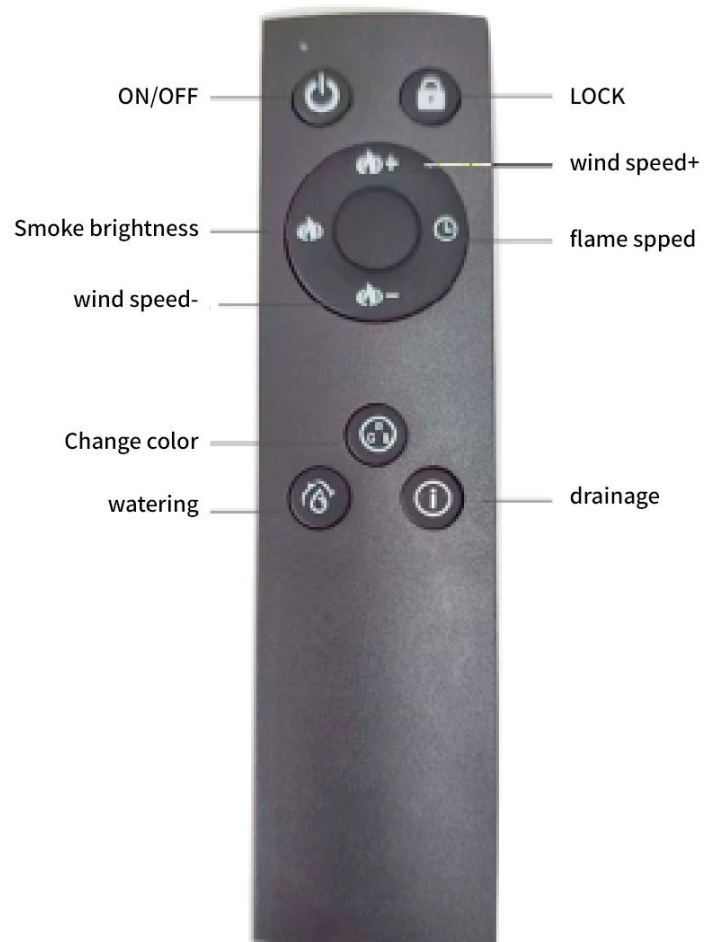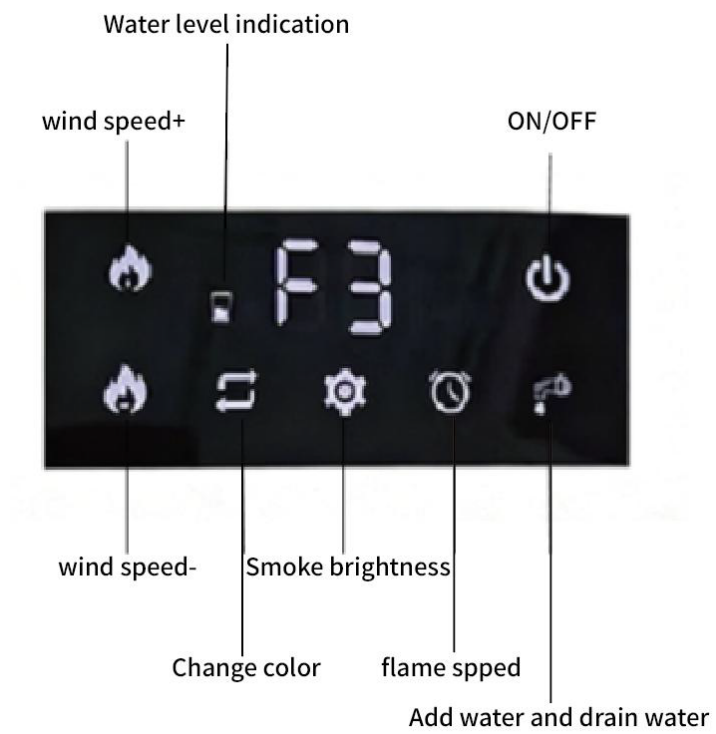

Function introduction

1.  Power Button

Press briefly to turn the unit on or off.

2.  Add Water /Drain Water. The light will not turn on if the water level is insufficient.

To add water: Press briefly while the unit is on.

To drain water: While the unit is off, press and hold for 5 seconds to activate drainage (drainage timer: 5 minutes).

3.  Timer

Press briefly while the unit is on to set the timer.

The timer cycles through the following settings in order:

H0 – Timer off

H1 – 1 hour


H2 – 2 hours

... and so on up to H9 – 9 hours


(The number following “H” indicates the set hours.)

4.  Brightness & Fog Effect Control

Short press: Adjusts the flame light brightness through levels L1 to L5 (low to high). Press and hold for 5 seconds: Activates fog effect adjustment mode.

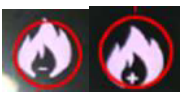Short press the  to adjust the fog intensity: settings cycle from U9 (maximum fog) down to U1 (minimum fog).

The displayed number corresponds to the fog level, with higher numbers indicating more fog.

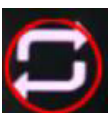5.  Light Mode Selection

Short press: Cycles through color/mode options in the following order:

d0 → d1 → ... → d9 → dA → db → dc → dd

Corresponding functions:

d0 – Humidification Mode, d1 – Red, d2 – Green, d3 – Blue, d4 – Orange, d5 – Purple, d6 – Cyan, d7 – White, d8 – Pink, d9 – Yellow, dA – Gradual Color Change, db – Pulsing Color Change, dc – Jumping Color Change, dd – Music Sync Mode

When dA, db, or dc is selected:



Short press  or  to adjust the effect speed.


Speed settings cycle from p1 (slowest) to p9 (fastest).



6. Fan Speed Adjustment  &  Press Icon 1 or Icon 2 briefly to adjust the fan speed.


The speed settings cycle through F1 to F9, where F1 is the lowest speed and F9 is the highest speed.

7. Water Level Indicator Corresponds to: Low

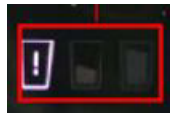

Medium

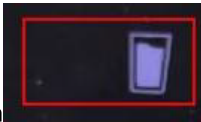

High  water levels.


When the water in the tank runs out, the flame and fog effects will turn off, and you



will see  displayed. To continue using the unit, refill the water by following the steps below.

Drainage and Water Filling Operation Guide

1. Insert one end of the silicone tube into the water fill port, and place the other end into a container filled with water, as shown in the illustration.

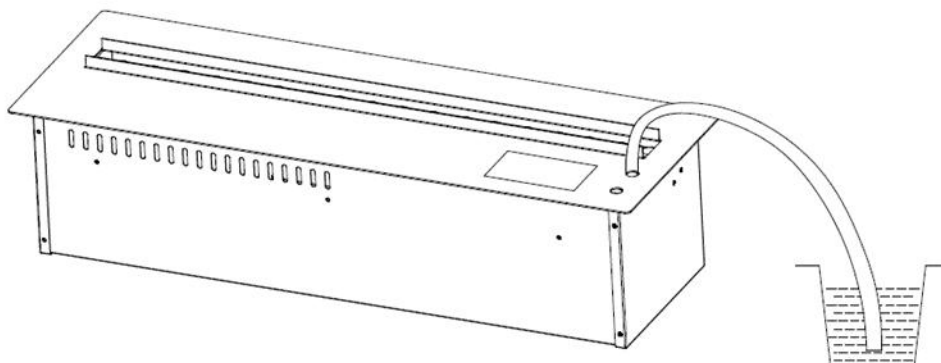

2. While the unit is on, briefly press  to start adding water. The machine will

automatically stop refilling once the tank is full.

Your product is covered by a one- year warranty from the date of purchase. During this period, provided the unit has been installed and operated according to the instructions in this manual, we promise to repair or replace the product free of charge (subject to parts availability).



■ Electrical products sold in the United States should not be disposed of with household waste at the end of their service life. Please recycle them where appropriate facilities are available. Consult your local authorized service provider or dealer for recycling information in your country.