

For longer use

Re-tighten bolts every 6 months by using the enclosed allen-key.

\*Using an electric drill can damage the chair. Please re-tighten bolts manually.





## **Safety Information**



Sit in the center of the chair, with your back to the backrest



Do not sit at the front edge of the chair



Do not stand on the



Do not use the chair with more than one person



Do not push the chair around when a person is sitting in it



Do not push down on the backrest when a person is reclined



Do not place all your weight on only the

## INSTRUCTION MANUAL

Model: C-3789F



# **INSTRUCTION** MANUAL

C-3789F

#### **Package List**



(A)\*1 Backrest





(B)\*1 Lumbar Support



(C)\*1 Head Rest



(D)\*1 Cushion



(E)\*1 Mechanism



(F)\*1L\*1R Armrests



(G)\*1 Gas Lift



(H)\*1 Base



(I)\*5 Casters



(J)\*5 Legs



(K)\*8 Bolts

M6x20mm



(L)\*6 Bolts

M8x35mm



(M)\*5 Bolts M6x16mm





(N)\*2 Bolts M6x20mm





(O)\*1 Wrench


## **Assembly Instruction**

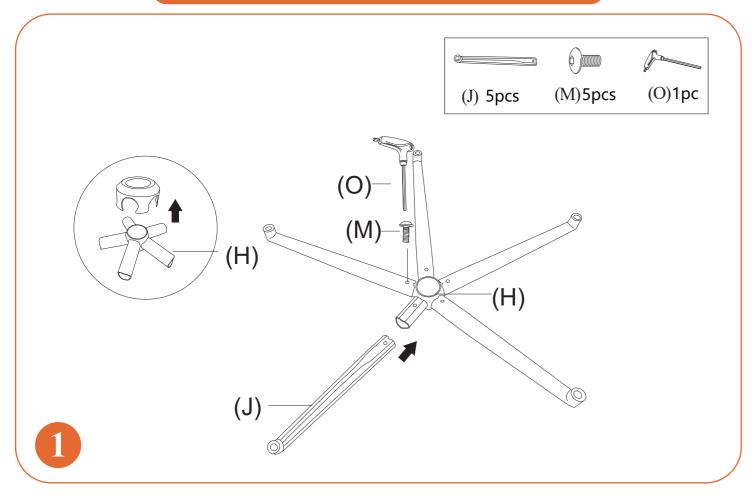


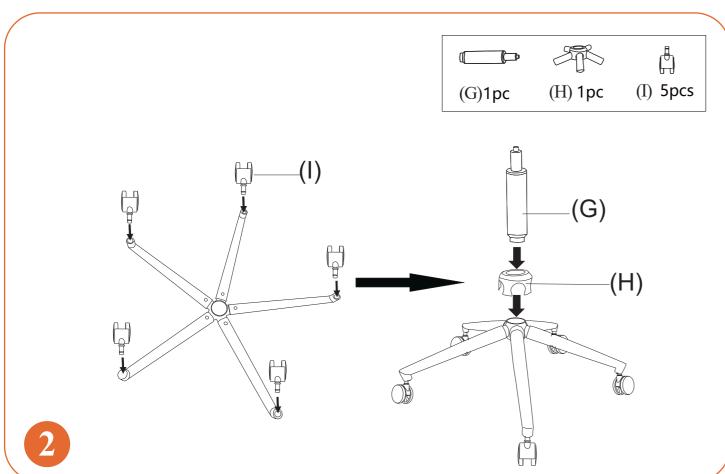


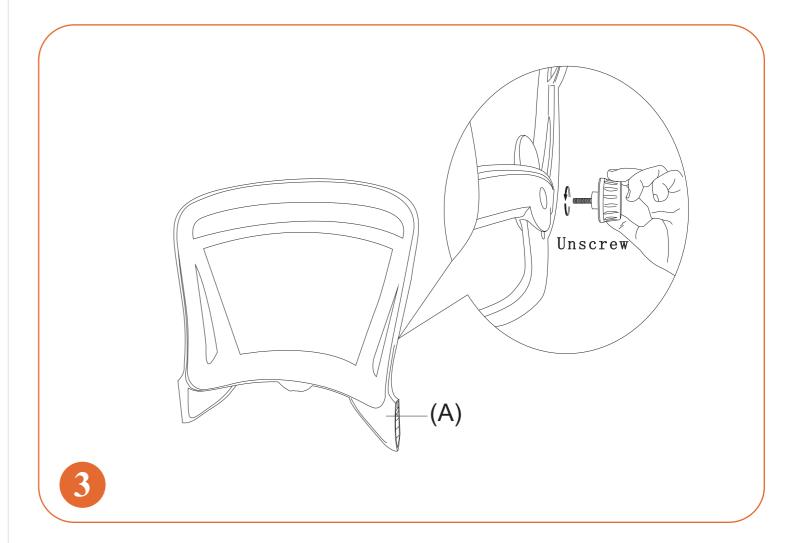


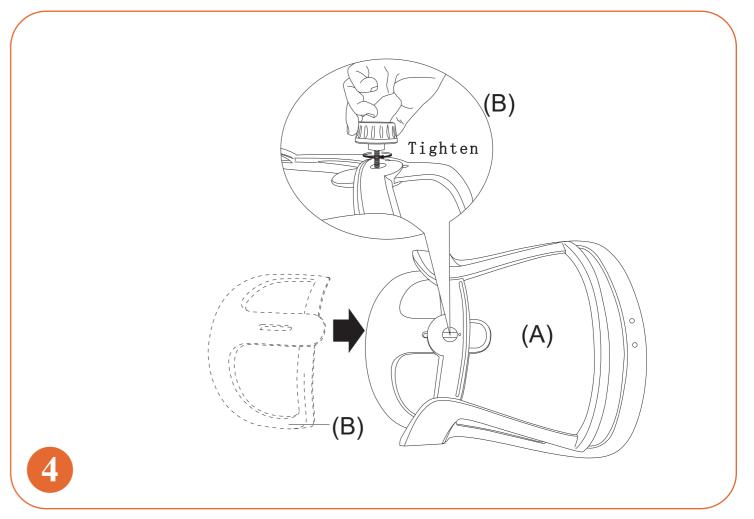


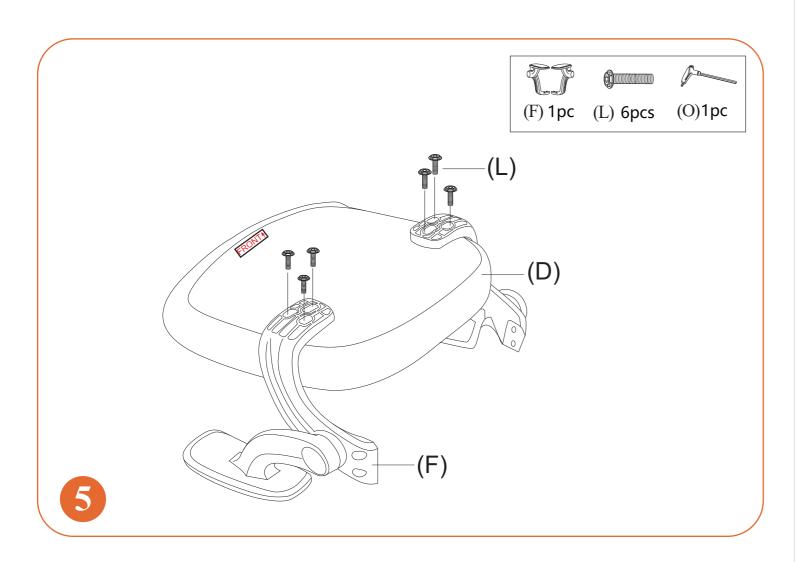


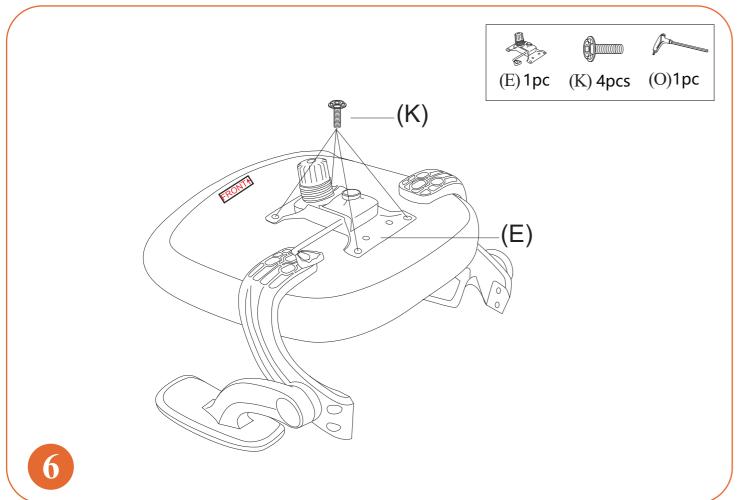


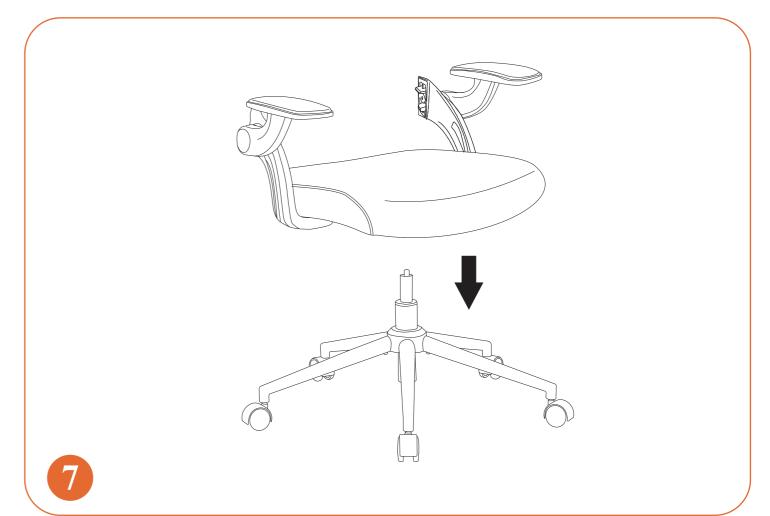

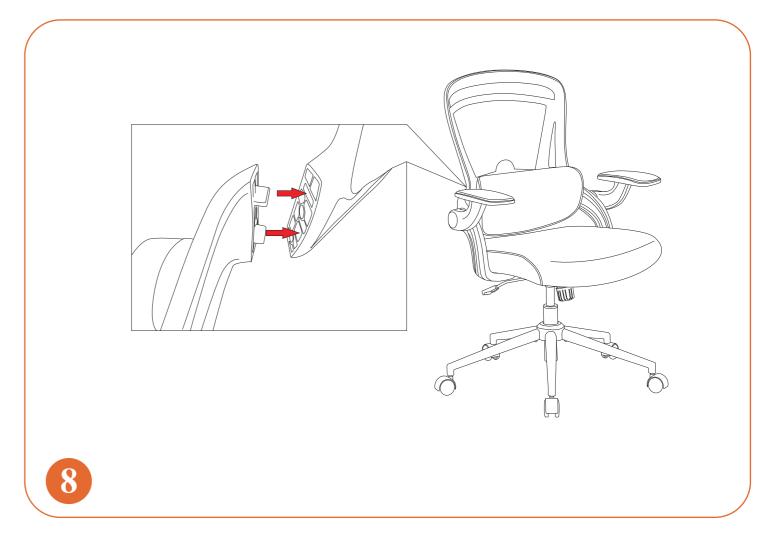

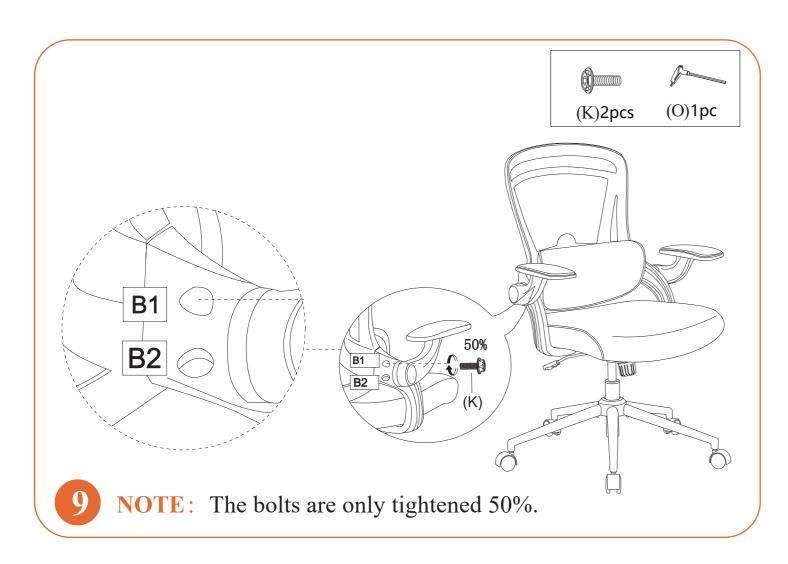

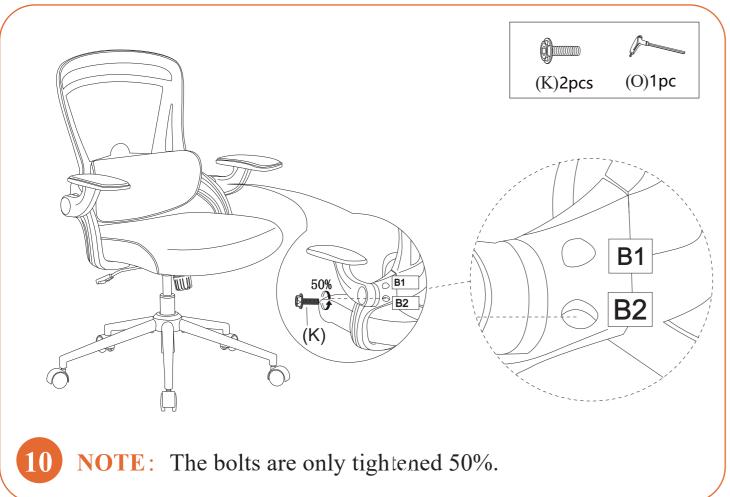

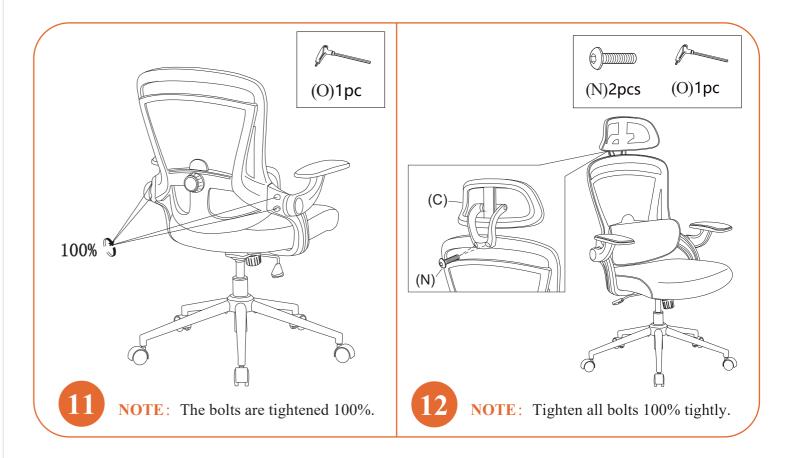

#### **Instructions For Use**



### **CAUTION:**

- \* Before using the chair, check to ensure that all bolts are fully tightened.
- \* Lubricate all parts and tighten all bolts every 6 months or whenever needed.

**NOTE**: 1. All bolts are 100% tightened.