 
 


TIM67 67" TV STAND

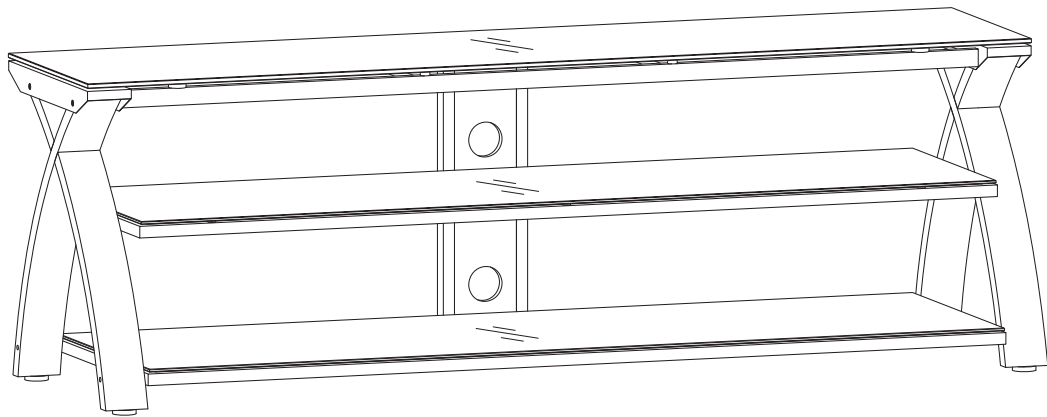

Assembly Instructions - Important:

Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products, please visit our website: www.officestar.net or call or write us.

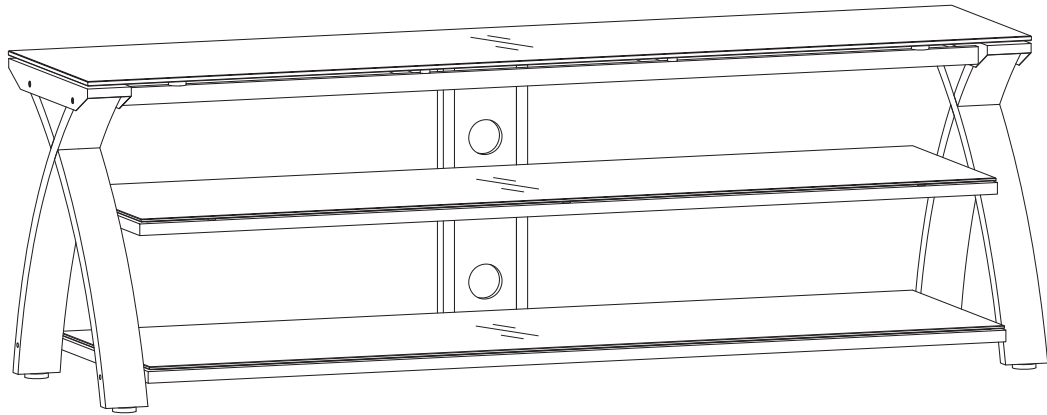 


1. Do not use this product unless all screws and bolts are securely tightened.
2. Check that all screws and bolts are tight every three months or as needed.
3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
4. Do not use this product as a stepladder.
5. Use this product for its intended purpose only.
6. **FOR INDOOR RESIDENTIAL USE ONLY.**

LIMITED WARRANTY

OSP Home Furnishings® warrants to the original purchaser that this product will be free from defects in material and workmanship as described below. Home Furnishings® will repair or replace, at its option, without charge to the original purchaser only, defective products or parts for one (1) year from the date of purchase. Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty shall be effective for the applicable time period beginning from the date of purchase as shown on your original sales receipt. This warranty is your sole remedy for product defects and excludes defects due to or arising in connection with product abuse or misuse, use modification of, or attachments to the product, and products or parts not used, maintained, or installed in accordance with the company's installation, maintenance and/or applicable guidelines. There are no other warranties, express or implied, other than those specifically described, including without limitation any implied warranty of merchantability or of fitness for a particular purpose. OSP Home Furnishings® will not be responsible for incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via e-mail parts.department@officestar.net by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 3:30 p.m. Pacific Time. To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At its option OSP Home Furnishings® will:

- (a) Supply compatible components of current manufacture.
- (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid by OSP Home Furnishings®.

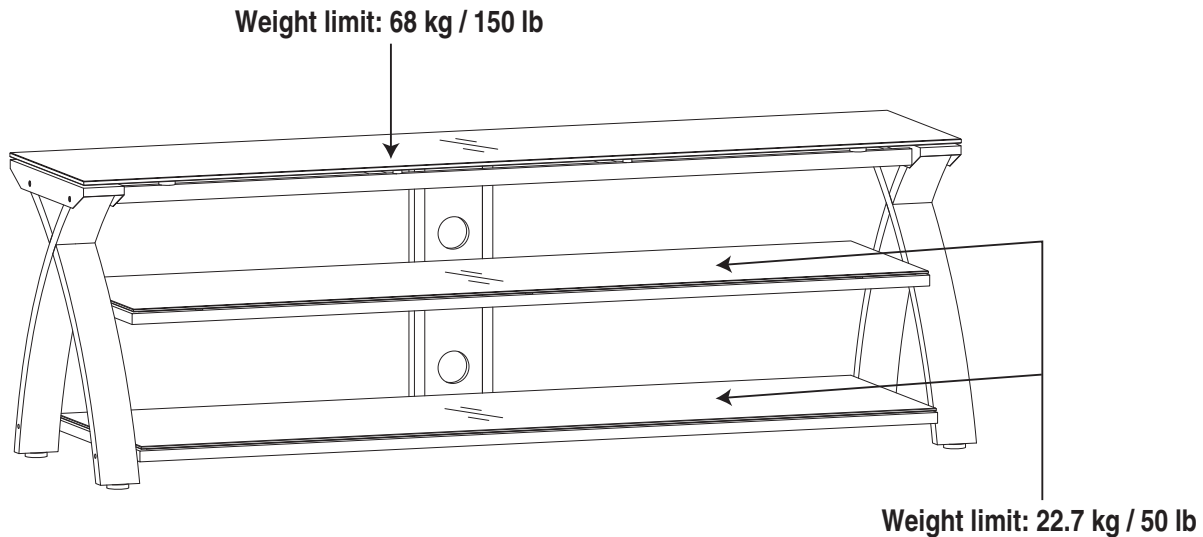

WARNING

FOR USE WITH TELEVISIONS WEIGHING 150 LBS (68 KG) OR LESS. USE WITH HEAVIER TELEVISIONS MAY RESULT IN INSTABILITY, CAUSING TIP OVER RESULTING IN DEATH OR SERIOUS INJURY.

PLASMA / LCD-FLAT PANEL TV SCREEN OF VARIOUS SCREEN TO A MAXIMUM TV SCREEN SIZE OF 80 INCHES. ALL OTHER SHELVES SHOULD NOT BE LOADED WITH MORE THAN 50 LBS.

DO NOT EXCEED RECOMMENDED LOAD. USE WITH PRODUCTS HEAVIER THAN THE MAXIMUM SIZES AND WEIGHTS INDICATED MAY RESULT IN INSTABILITY CAUSING POSSIBLE INJURY.

DO NOT ALLOW CHILDREN UNDER 16 YEARS TO MOVE UNIT.

“WARNING - DEATH OR SERIOUS INJURY MAY OCCUR WHEN CHILDREN CLIMB ON AUDIO AND/OR VIDEO EQUIPMENT FURNITURE. A REMOTE CONTROL OR TOYS PLACED ON THE FURNISHING MAY ENCOURAGE A CHILD TO CLIMB ON THE FURNISHING AND AS A RESULT THE FURNISHING MAY TIP OVER ON TO THE CHILD”.

“WARNING - RELOCATING AUDIO AND/OR VIDEO EQUIPMENT TO FURNITURE NOT SPECIFICALLY DESIGNED TO SUPPORT AUDIO AND/OR VIDEO EQUIPMENT MAY RESULT IN DEATH OR SERIOUS INJURY DUE TO THE FURNISHINGS COLLAPSING OR OVER TURNING ONTO A CHILD”.

 CAUTION - THIS CART IS INTENDED FOR USE ONLY WITH THE PRODUCTS AND MAXIMUM WEIGHTS INDICATED. USE WITH OTHER PRODUCTS OR PRODUCTS HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY CAUSING POSSIBLE INJURY.

 
PARTS




(A) Front Left Side Frame (1 PC)




(B) Front Right Side Frame (1 PC)

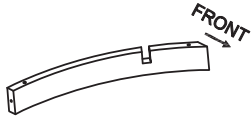

 
(C) Rear Left Side Frame (1 PC)

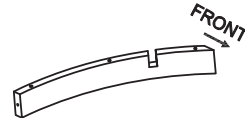

 
(D) Rear Right Side Frame (1 PC)

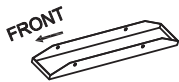

 
(E) Upper Side Crossbar (2 PCS)

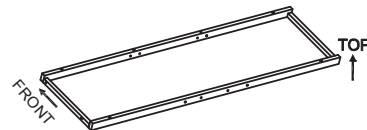

 
(F) Top Shelf Frame (1 PC)

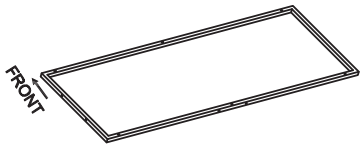

 
(G) Middle Shelf Frame (1 PC)

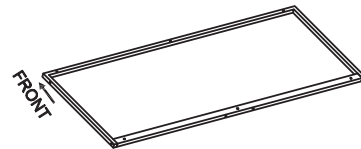

 
(H) Lower Shelf Frame (1 PC)

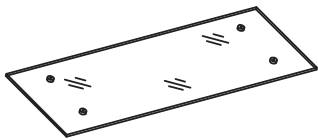

 
(I) Top Glass Shelf (1 PC)

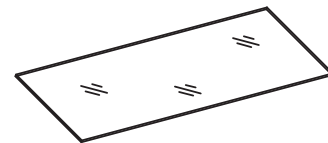

 (J) Middle Glass Shelf (1 PC)

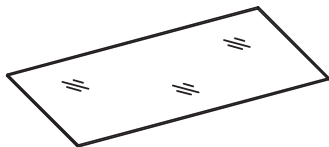


 (K) Lower Glass Shelf (1 PC)




(L) Back Panel (1 PC)

  PART

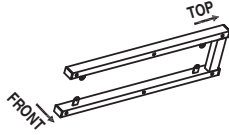

 

 









(M) Rear Frame (1 PC)








 (N) Upper Shelf Support (2 PCS)


HARDWARE LIST

NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
1		Floor Leveler	∅	4 PCS
2		Plastic Spacer	∅	2 PCS
3		Allen Bolt	6 x 32 x 16mm	4 PCS
4		Allen Bolt	6 x 89 x 16mm	8 PCS
5		Adjustable Glass Support	∅	2 PCS
6		Wood Screw	4 x 12 x 8mm	4 PCS
7		Flat Head Allen Bolt	6 x 41 x 10mm	4 PCS
8		Plastic Glass Support	∅	12 PCS
9		Allen Bolt	6 x 38 x 16mm	6 PCS
10		Allen Bolt	6 x 63 x 10mm	2 PCS
11		Allen Wrench	∅	1 PC
12		Allen Bolt	6 x 12 x 10mm	4 PCS

   WALL MOUNTING HARDWARE


NO	DRAWING	DESCRIPTION	SIZE	QUANTITY
WA		Machine Screw	4.5 x 10 x 8mm	2 PCS
WB		Wood Screw	4 x 25 x 8mm	2 PCS
WC		Wall Anchor	∅	2 PCS
WD		Mounting Bracket	∅	4 PCS
WE		Mounting Strap	∅	2 PCS

 STEP 1

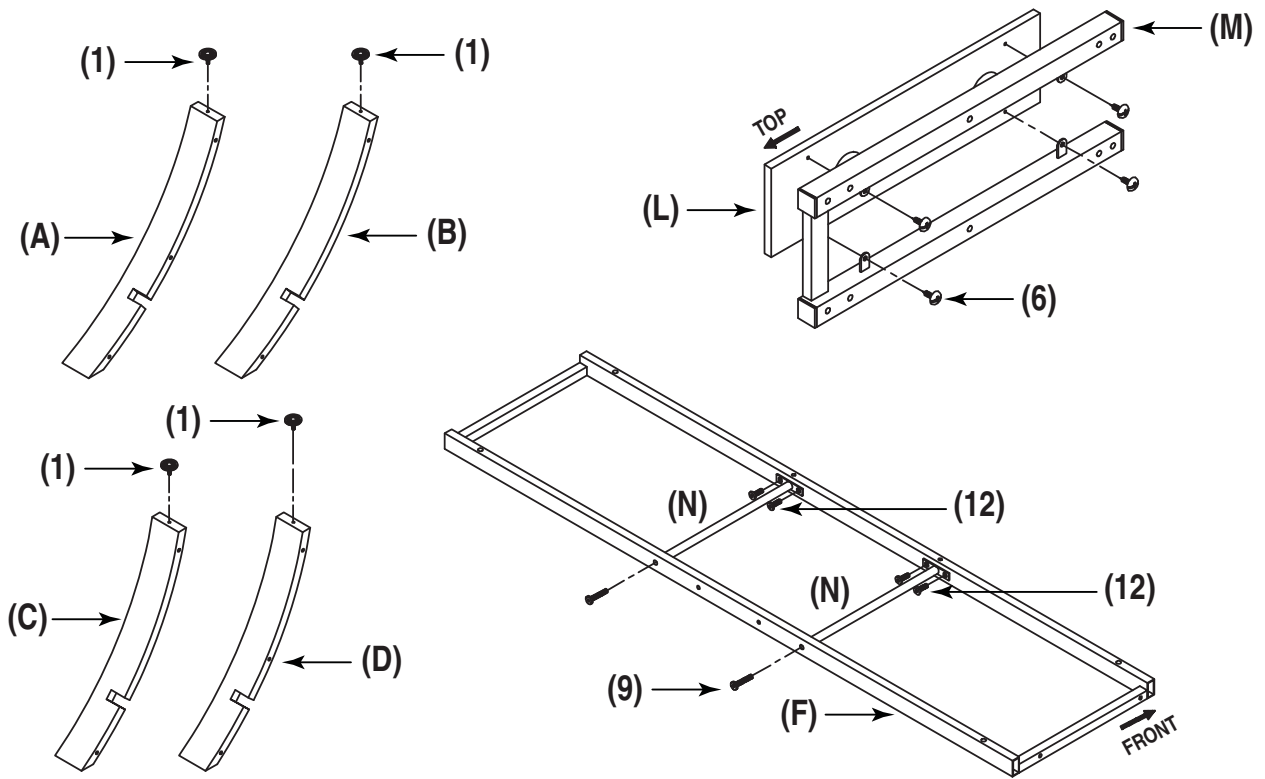


DO NOT FULLY TIGHTEN BOLTS OR SCREWS.

 STEP 2

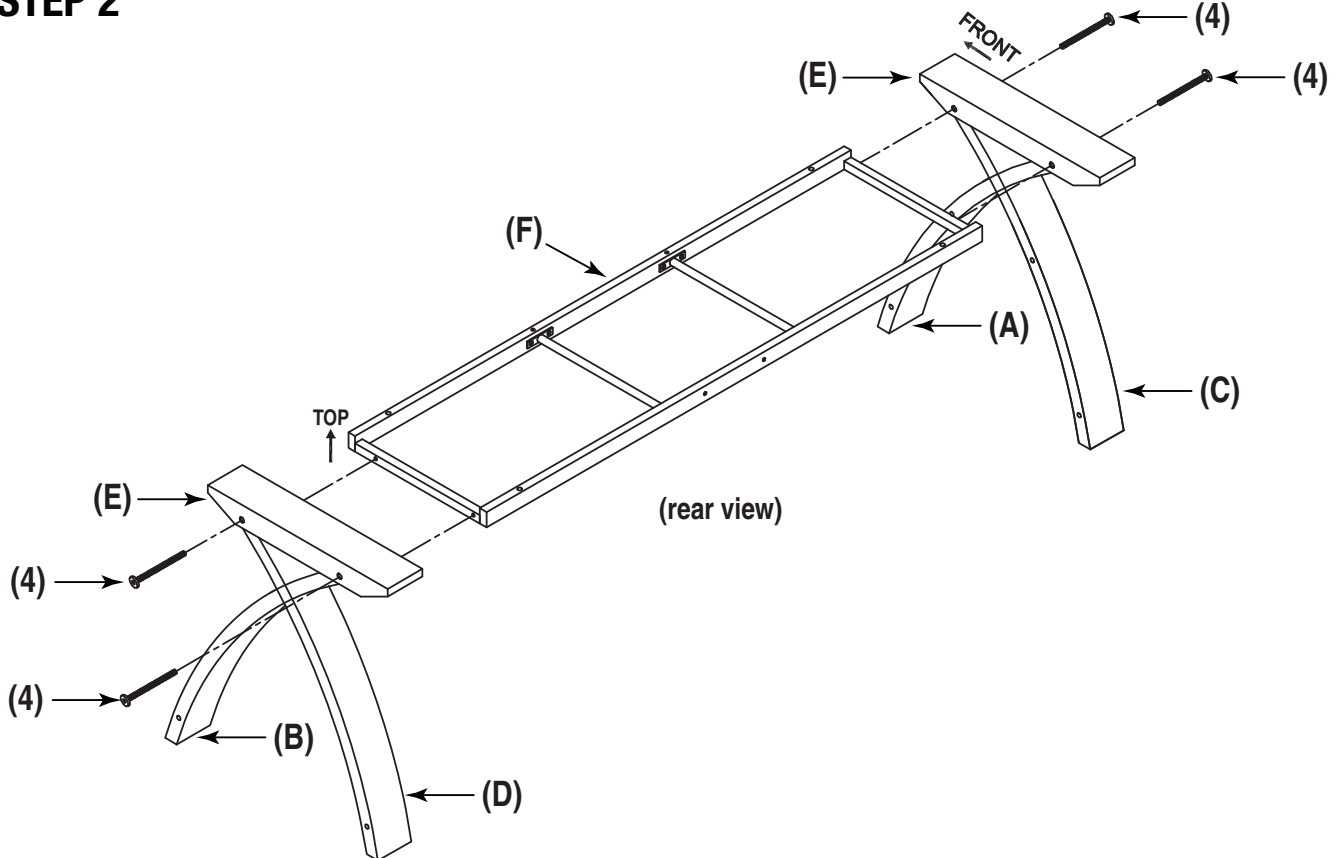


DO NOT FULLY TIGHTEN BOLTS.

 STEP 3

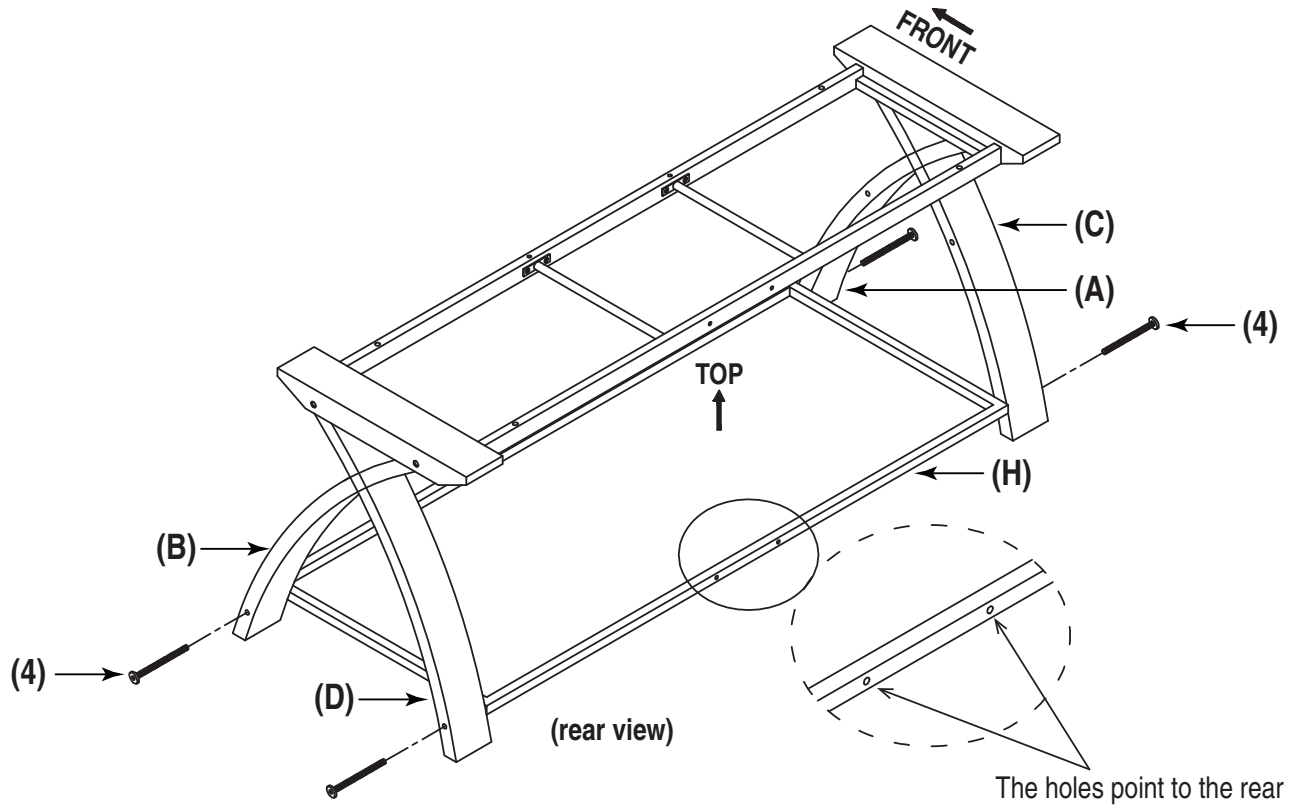


DO NOT FULLY TIGHTEN BOLTS.

 STEP 4

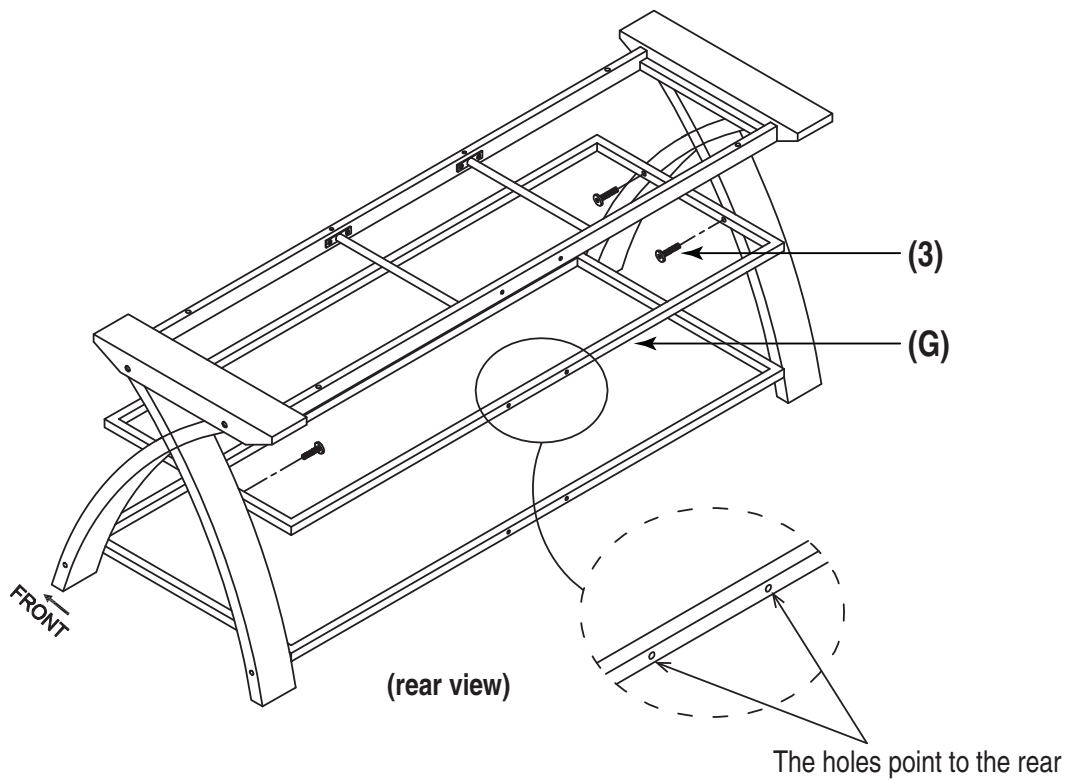



DO NOT FULLY TIGHTEN BOLTS.

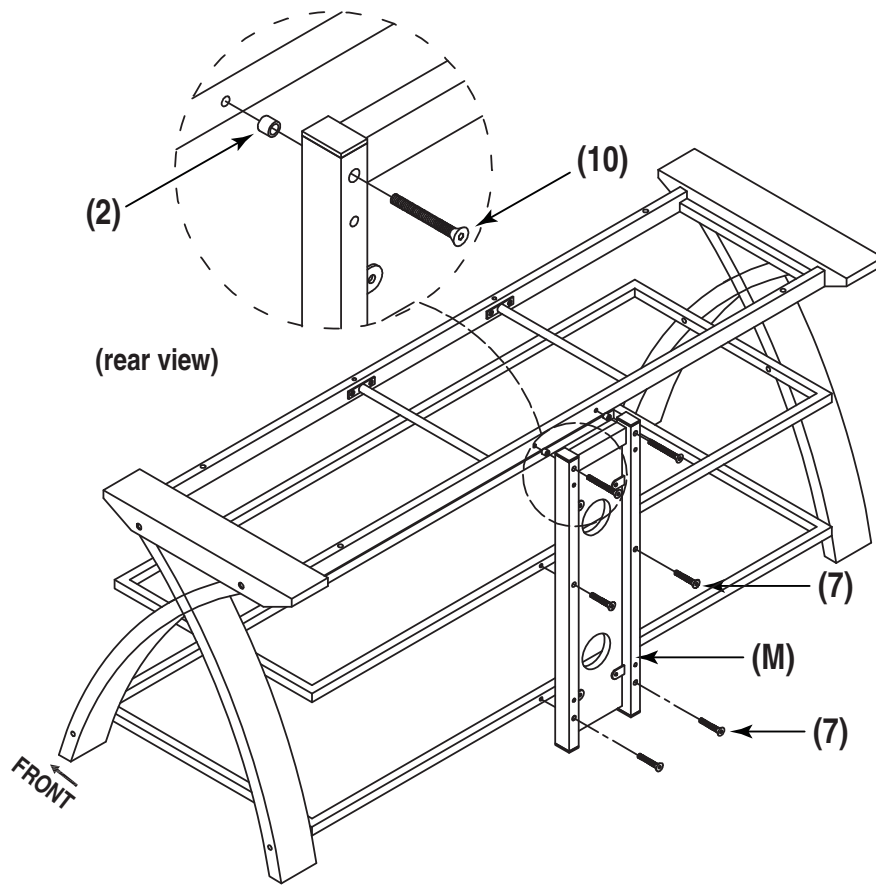 
STEP 5




DO NOT FULLY TIGHTEN BOLTS.


STEP 6

5		x2
8		x12

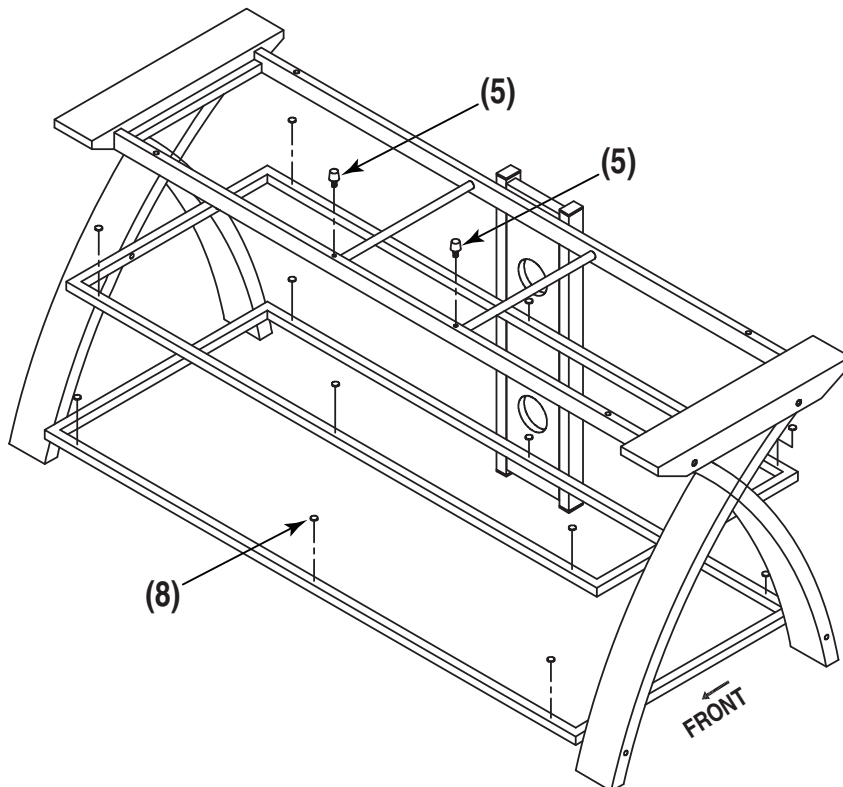 

  
STEP 7


 
 


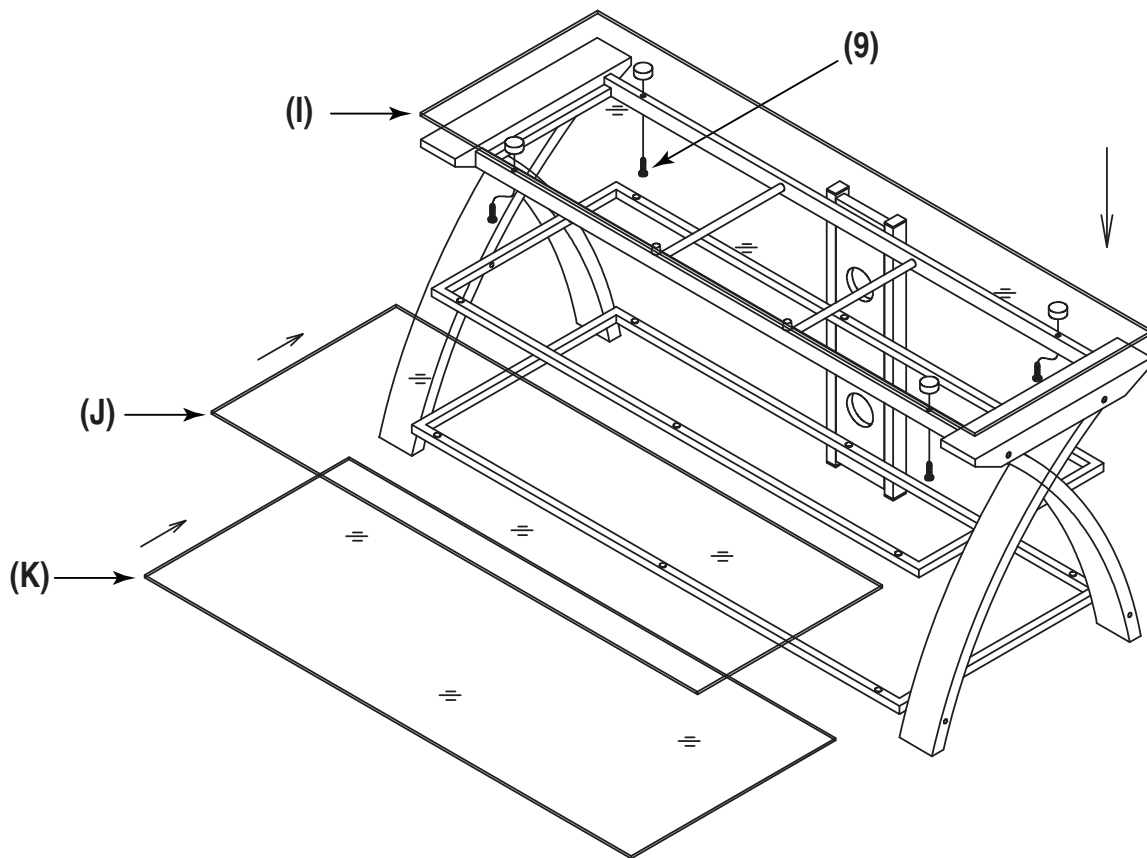9		x4
---	---	----



AT THIS TIME - FULLY TIGHTEN ALL BOLTS & SCREWS.

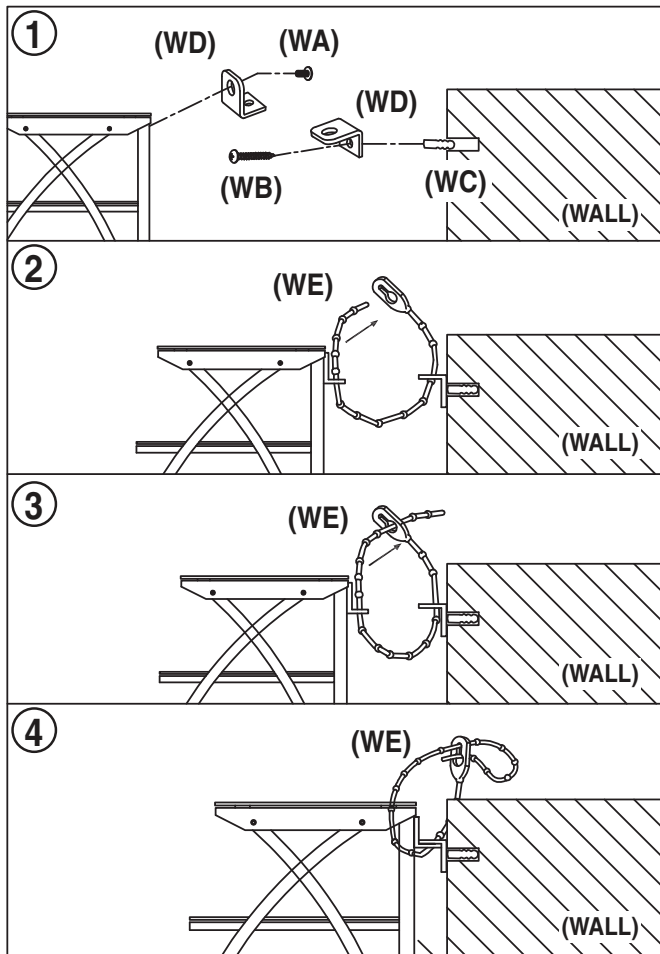WALL SAFETY STRAP INSTALLATION



WA		x2
WB		x2
WC		x2
WD		x4
WE		x2

Place product in desired location

Step 1: Attach one Mounting Bracket (WD) to top rear corners of product using one Machine Screw (WA) for each Mounting Bracket (WD).

Step 2: Drill 2 (two) pilot holes approximately 2" below the corresponding positions of Mounting Brackets (WD). Insert one Wall Anchor (WC) into each pilot hole. **Note: You may need to gently tap anchors into pilot holes using a rubber mallet.**

Step 3: Attach Mounting Brackets (WD) to wall using one Wood Screw (WB) for each Mounting Bracket (WD).

Step 4: Connect corresponding Mounting Brackets (WD) using Mounting Straps (WE). Tighten as desired before locking into place.