 
 


Assembly KnstructKons

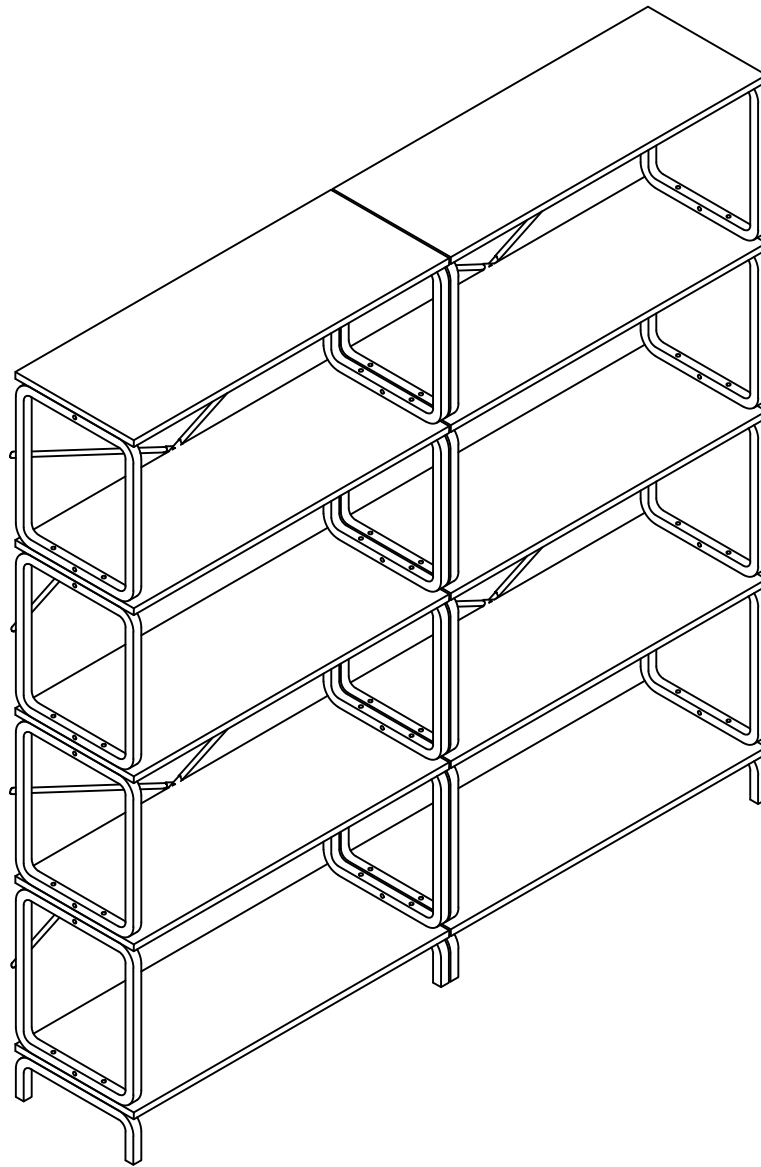 


KnstallatKon of Cams and PKns






Screw the pKn Knto the hole. To set the cams correctly, ensure that the arrow on the cam Ks openKng to the hole of the pKn Kt Ks lockKng. Lock the cam by turnKng the cam head wKth a screwdrKver untKl Kt Ks tKghtened. Please do not use an electrKc screwdrKver to assemble the unKt.

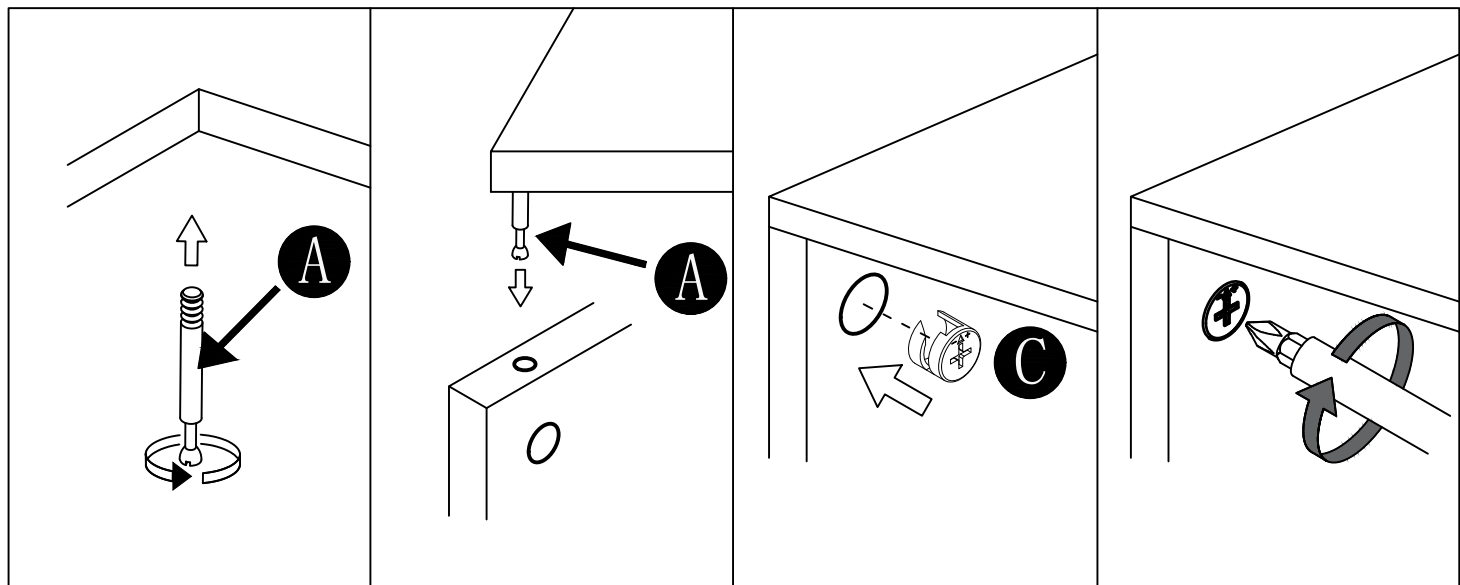



Read each step carefully before startKng. Kt Ks very Kmportant that each step of KnstructKon Ks performed Kn the correct order. Kf these steps are not followed Kn sequence, assembly dKffKcultKes wKll occur.

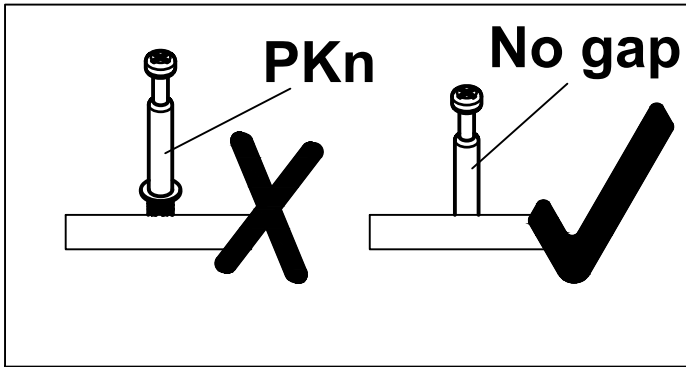



Parts & Hardware LKst

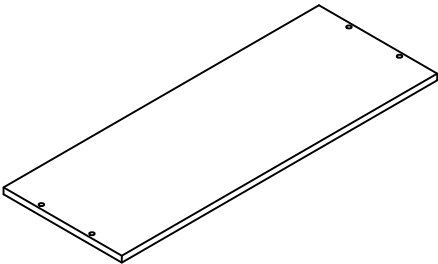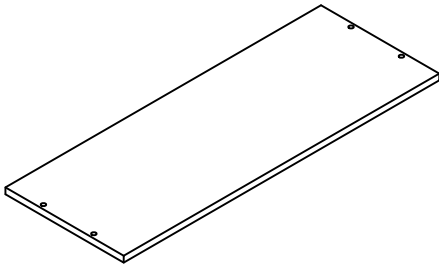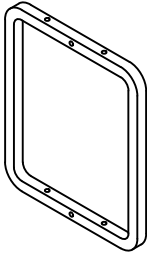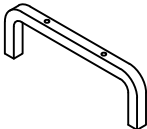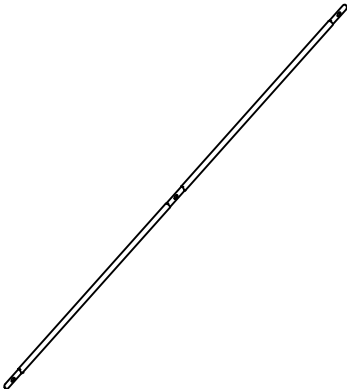      1 2pcs	 2 8pcs	 3 16pcs
 4 4pcs	 5 8pcs	


 
 
Parts & Hardware LKst

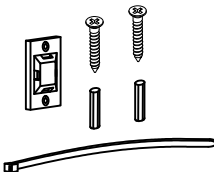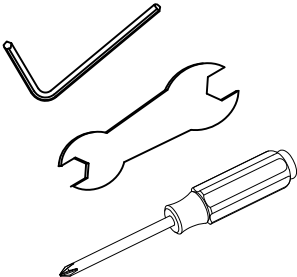 F 8pcs	 I 8pcs	 K 32pcs	 N 20pcs
 V 44pcs	 Y 8pcs	 Z 2set	

  1

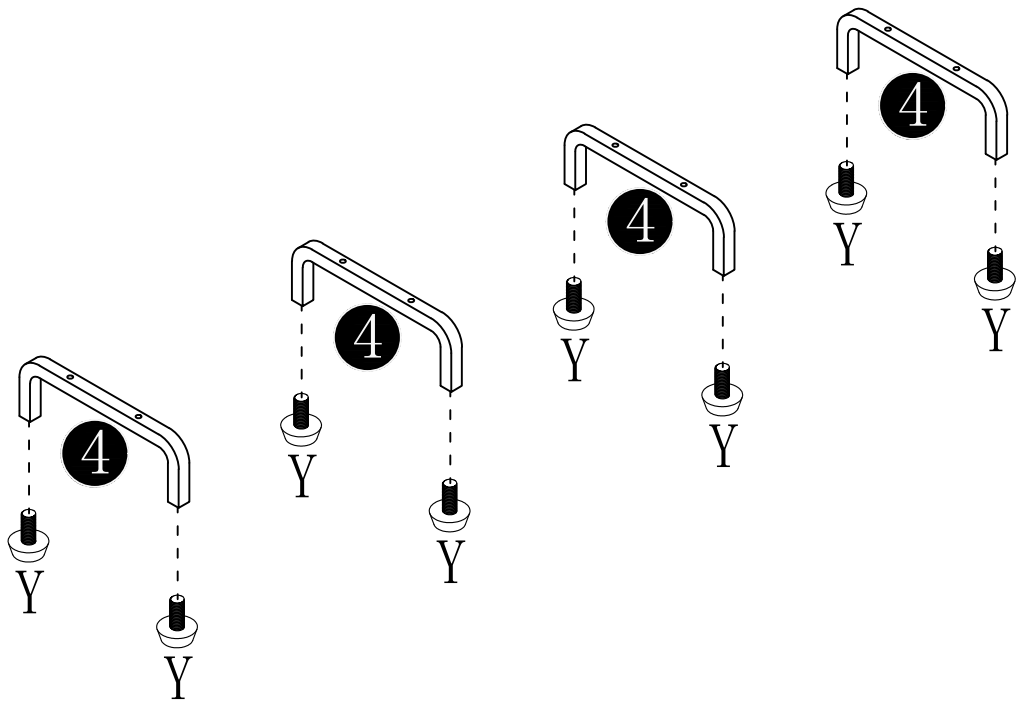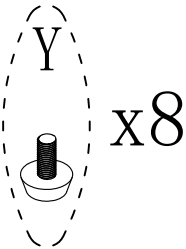


2

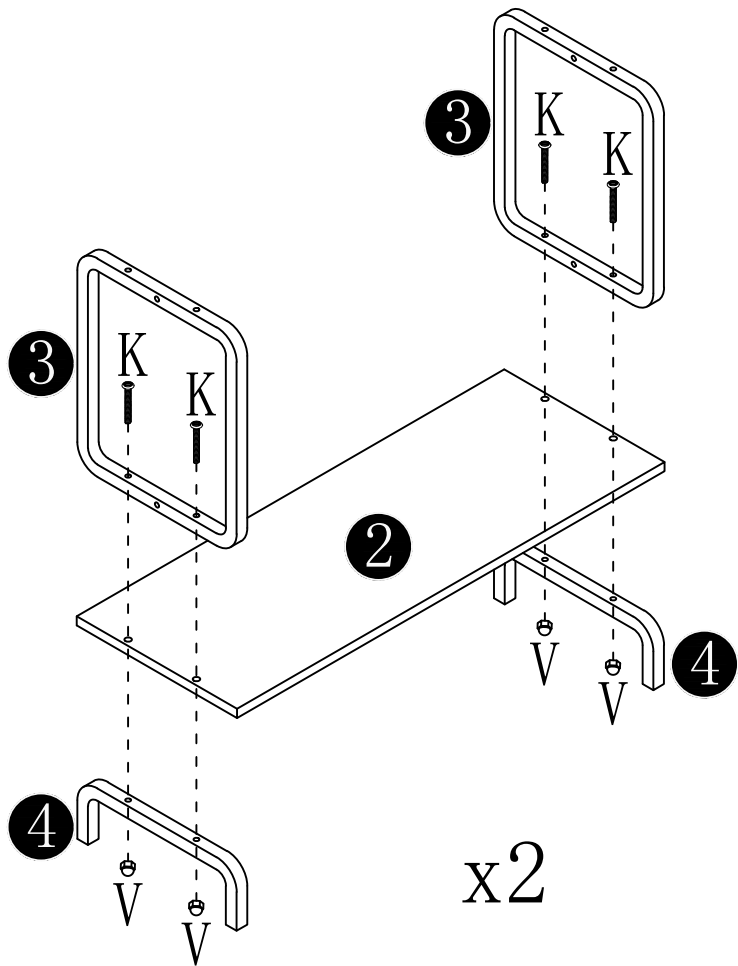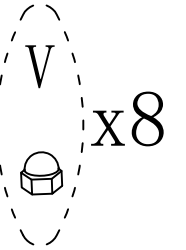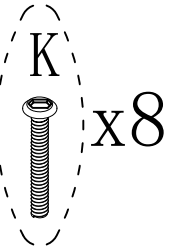   



3

K
x24



 
V
x24

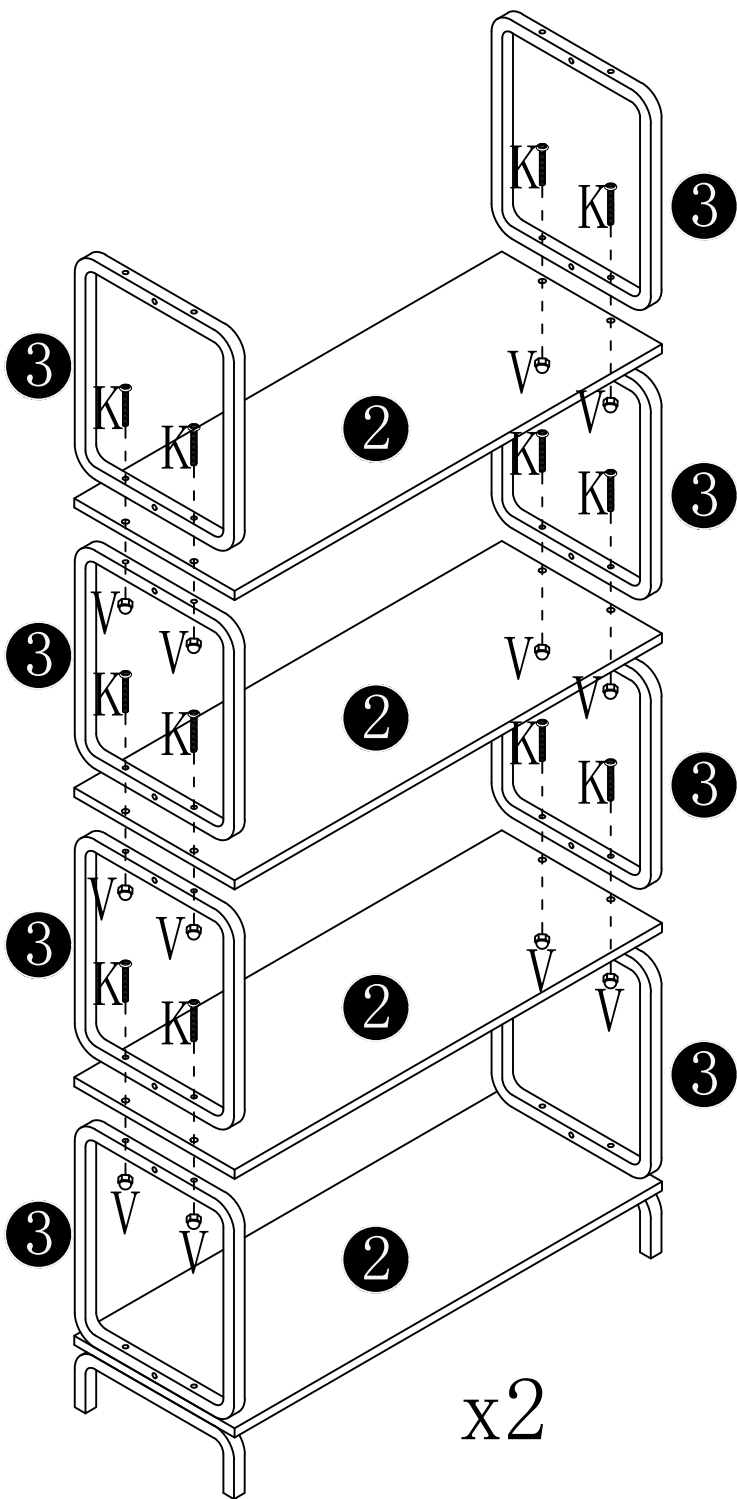



4

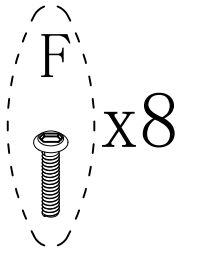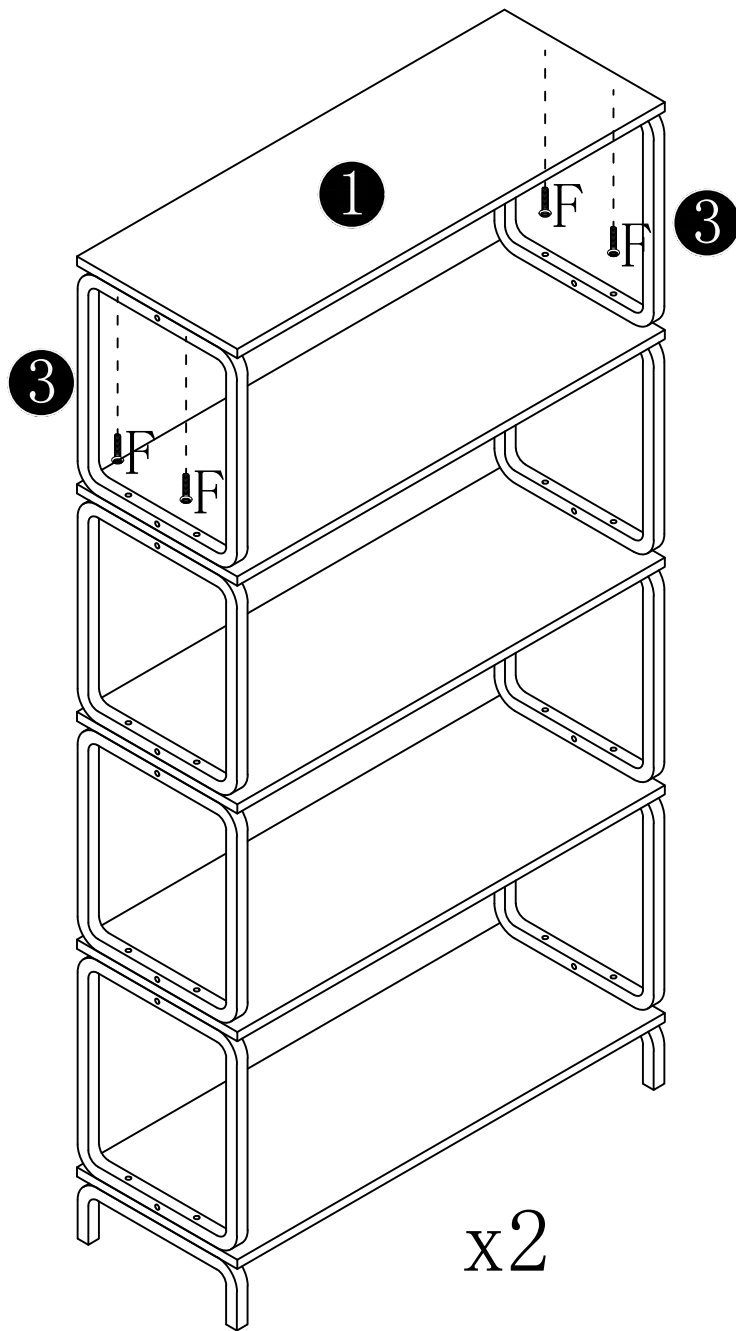  




5

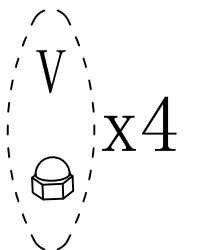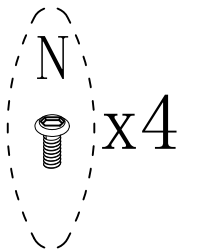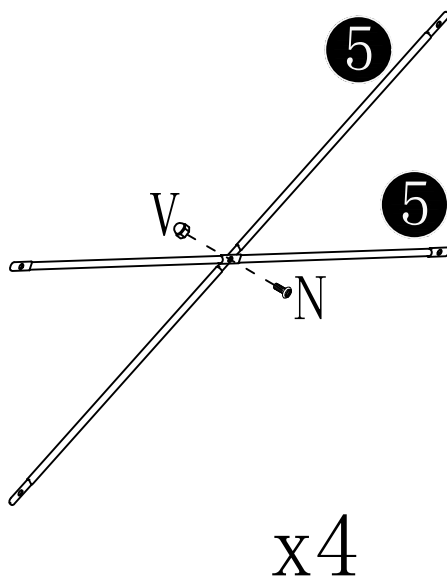   

6

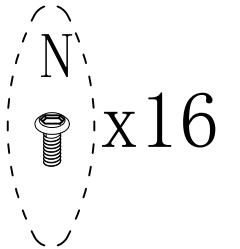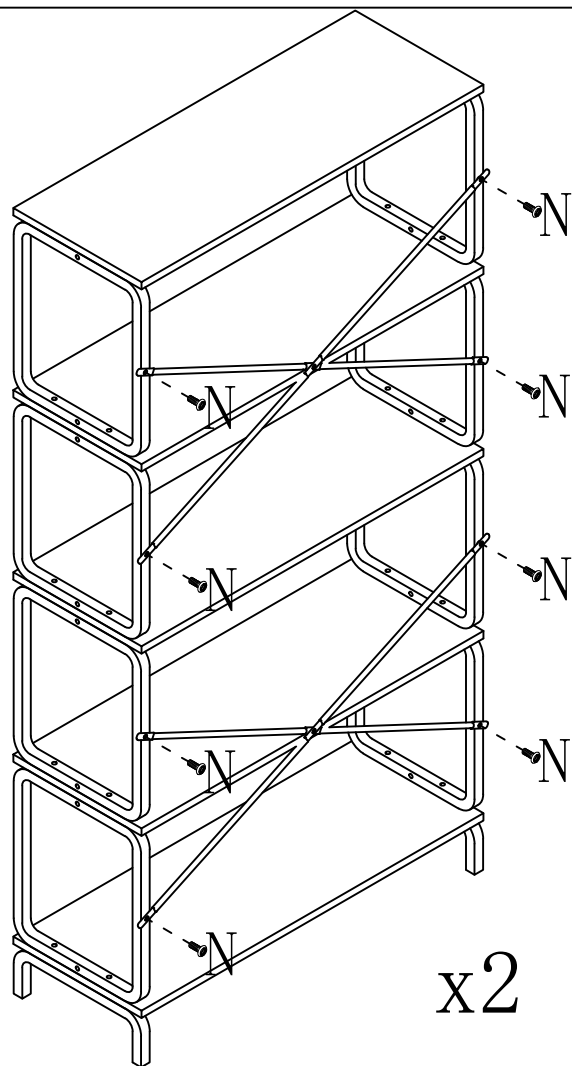  

7

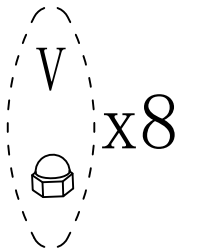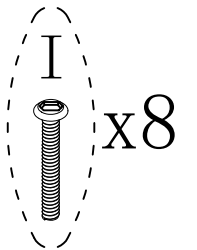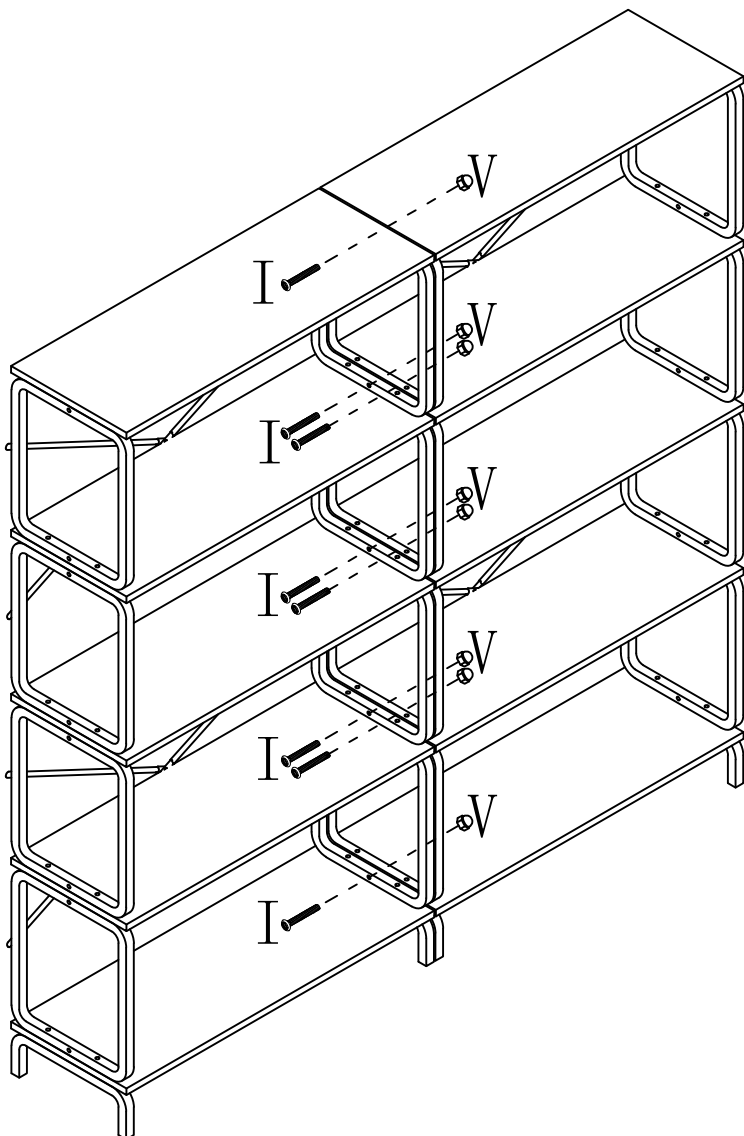   

8

