
 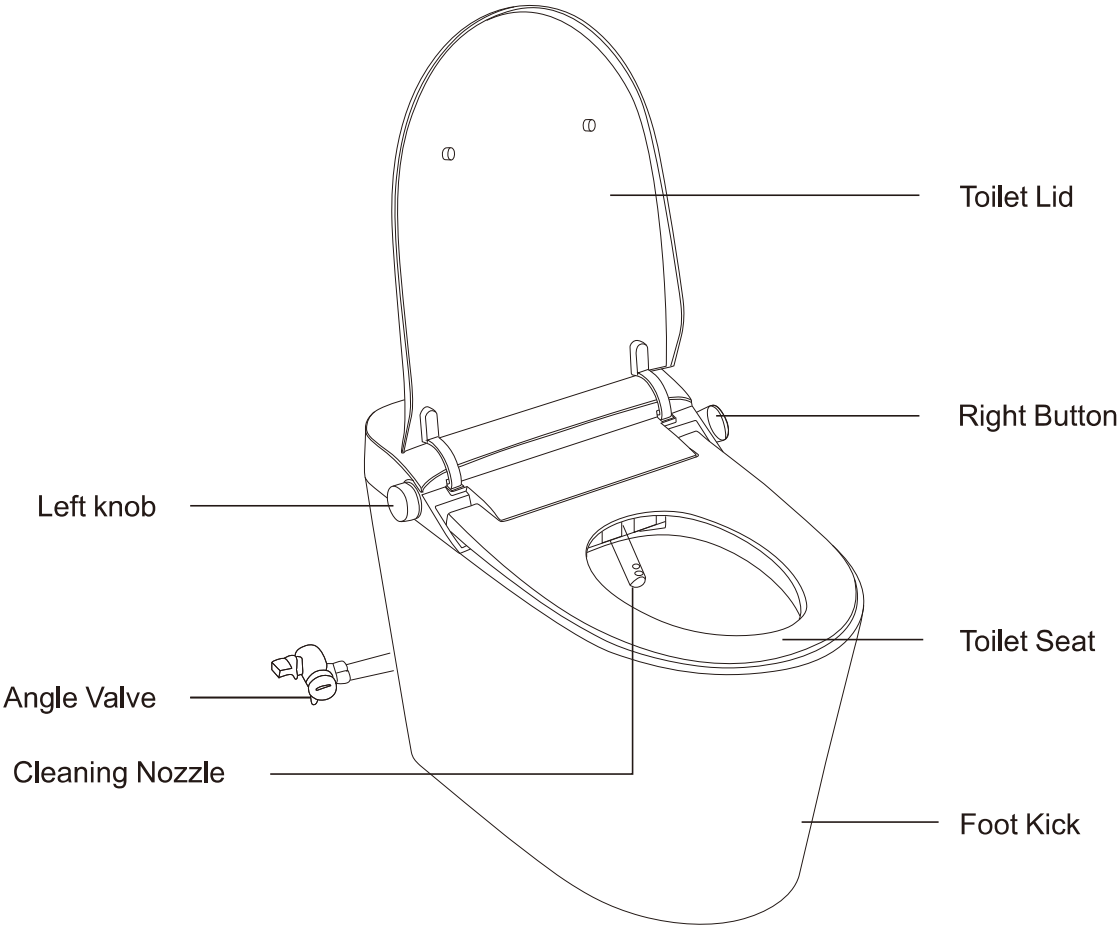


Component name



Hardware Lists

Please check if all accessories listed below have been received.

1pc	1pc	1set	1pc	1pc	1set
					
flange ring	instruction	angle valve	fixed disk	three links	fixed disk screws
A	B	C	D	E	F

Installation & Environment

1. Please install in a dry, ventilated area. Avoid prolonged exposure to high-humidity environments (even though it is non-electric, moisture can still cause component aging).
2. Install away from sharp objects/heavy impacts to prevent housing damage that may affect the cold-water flushing function.

Usage Notes

1. This product is designed for cold-water flushing. Do not connect it to a hot water source, as this may cause component deformation and damage.
2. Keep sharp objects away from the flushing nozzle. Gently press to reset after use; do not wipe forcefully.

Maintenance & Cleaning

1. Clean with a soft, damp cloth. Do not rinse the device directly with water (even non-electric, internal water accumulation should be avoided).
2. Drain any remaining water inside before long-term non-use to prevent pipe freezing and cracking in low-temperature environments.

Safety & Prohibitions

1. Do not stand on or place heavy objects on the toilet lid to avoid damage to the soft-close mechanism.
2. Do not allow children to operate the flushing function unsupervised, to prevent accidental cold-water splashing.


Please be sure to observe the following

- Do not allow urine to splash onto the nozzle.
- Do not flush the unit directly with water.
- Do not wipe the seat or cover with rough cloth or toilet paper. Use a soft damp cloth instead.

Please do not open the seat ring or cover violently.
- May cause cracking or malfunction.



Please take antifreeze measures by freezing.

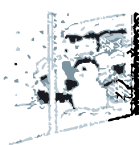

Please do not put heaters near this product.
- Discoloration or malfunction will occur.



Daily cleaning and maintenance

Cleaning and maintenance of spray head


If there is dirt in the nozzle, clean it with a small brush such as a toothbrush. (Note: First close the angle valve and rotate the knob to extend the spray rod)

- Do not stretch and bend the spray head.



Cleaning of the Angle Valve Filter Screen

- Check the filter screen of the angle valve filter regularly (recommended once a month).
- Close the angle valve to cut off the water supply, then remove the angle valve filter screen and clean it thoroughly with clean water.

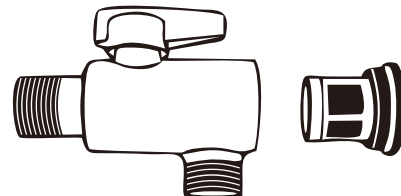

Instructions for Using the Knob and Buttons on the Side of the Toilet

Left knob



Buttock cleaning: This function requires you to sit on the toilet seat. Rotate the knob counterclockwise by 90 degrees to activate the buttock cold-water cleaning function; return the knob to the original position to stop the function.



Feminine cold-water cleaning: This function requires you to sit on the toilet seat. Rotate the knob clockwise by 90 degrees to activate the feminine cold-water cleaning function; return the knob to the original position to stop the function.

Right button




Press the right button once to activate the flushing function.

Foot kick



Lightly kick the foot sensor to activate the flush.

Installation steps for smart toilet

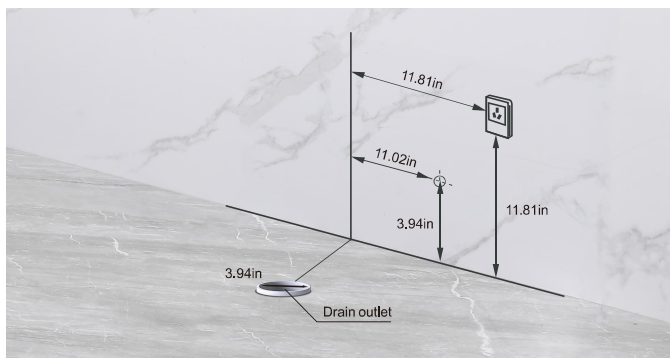

The confirmation of the installation environment.



1. The confirmation of the installation environment:
The measurement distance is 11.81 in or greater.



2. Place the fixed disk into the drain outlet and mark the screw hole positions.



3. Take off the fixed disk and drill four holes for screws.



4. Put the screws into the holes.

Corresponding to the following accessories/quantities:



5. Place the fixed disk into the drain outlet and tighten the screws to secure it.

Corresponding to the following accessories/quantities:





6. Install two long screws as shown in the picture below.

Corresponding to the following accessories/quantities:



7. Install the white snap onto the positioning screw.

Corresponding to the following accessories/quantities:



8. Lock the gasket screws.

Corresponding to the following accessories/quantities:



9. Gently turn the toilet over to access the base and install the flange ring.



10. Apply a layer of silicone sealant to the base of the toilet. (The silicone sealant adhesive in the picture needs to be purchased by oneself.)



11. Move the toilet to the location where it will be installed.



12. Fix the white screws into the screw holes on both sides of the ceramic.

Corresponding to the following accessories/quantities:



13. Lock the silver fixing screws on both sides.

Corresponding to the following accessories/quantities:




14. After the screws are tightened, install the white decorative cover.

Corresponding to the following accessories/quantities:



15. Apply some silicone sealant to fix the toilet and insulate the outside dirt from entering.
(The silicone sealant adhesive in the picture needs to be purchased by oneself.)

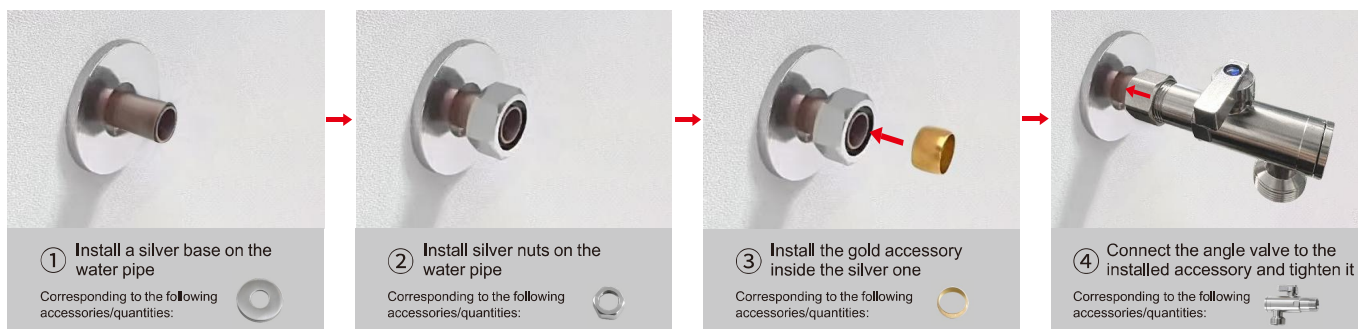

Our angle valve is a standard American-controlled angle valve. If the valve is incompatible with your plumbing setup, please contact us in time. Email: customerservice@hkfoam.com, we will solve your problem as soon as possible.



16. Connect the three-way joint to the angle valve and tighten it securely, then insert the cleaning inlet pipe into the snap-fit hole of the three-way joint and fasten it in place.



17. Finally connecting the flexible tube to the inlet angle valve and turn on the angle valve switch.

Note: If the water pressure is too high and water splashes over the toilet seat when flushing, slightly close the angle valve to reduce the water flow.