

ASSEMBLY INSTRUCTIONS

EDINA DINING TABLE

30 MINUTES	1 PERSON ASSEMBLY	NO ADDITIONAL TOOLS REQUIRED
APPROXIMATE ASSEMBLY TIME		REQUIRED ASSEMBLY TOOLS

Thank you for purchasing our product !
Please refer and use this assembly instruction to assemble the product.
Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.



We appreciate your business !


ASSEMBLY PREPARATION

Remove all packaging materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

- CAUTIONS:** 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS AS IT MAY DAMAGE THE SCREW THREAD.
 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

PARTS LIST (FOR 1 TABLE)

NO.	PART	QTY.
I	 TABLE TOP	1 PC
II	 TABLE LEG	4 PCS

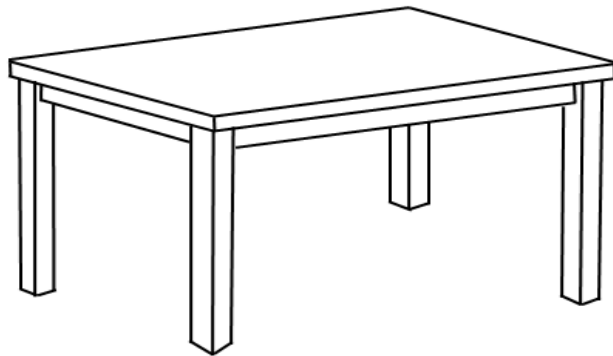


COMPLETED ASSEMBLY

HARDWARE LIST (FOR 1 TABLE)

NO.	HARDWARE	QTY.
A	JCBC M6 x 60	8 PCS
B	SPRING WASHER	8 PCS
C	FLAT WASHER	8 PCS
D	ALLEN KEY	1 PC

STEP 1

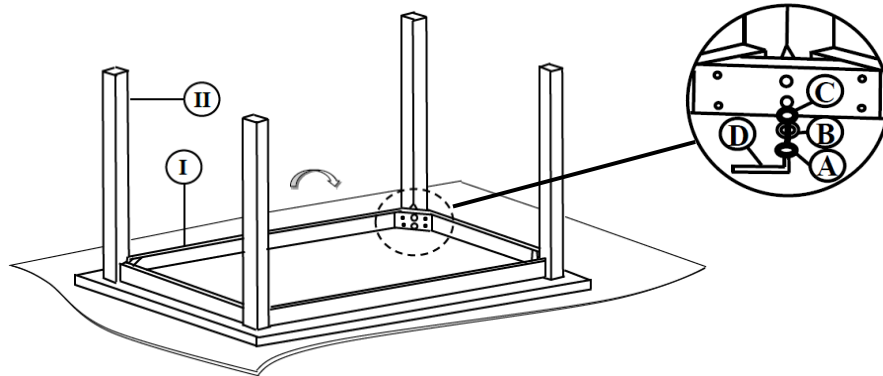

- 1a. Place Table Top (I) face down on a soft material to avoid scratchers or damage to table surface.
- 1b. Place Spring Washer (B) and Flat Washer (C) on JCBC Bolt (A).
- 1c. Place Table Leg (II) as shown.
- 1d. Insert JCBC Bolt (A) - with Spring & Flat Washer - through table frame to Table Leg (II) and use Allen Key (D) to tighten the Bolts.

CARE AND MAINTENANCE

SAFETY - Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals.
CLEANING - Use a damp cloth with mild detergent to clean the product. Do not use bleach or abrasive cleaning material.
FITTINGS - Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
 Not for commercial use.