CUBE STORAGE WITH DRAWERS



FOR REPLACEMENT PARTS OR HELP WITH ASSEMBLY PLEASE CONTACT US

PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET

TO RETURN THE PRODUCT:

PLEASE CONTACT THE RETAILER

WHERE THE ITEM WAS PURCHASED FROM

ENTER TO WIN

Upload an image of our furniture n your home with a short review our facebook page for a chance to

Win up to \$3000 of us !!!

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.


May require 2 people for ease of assembly.


CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.


Do not use ammonia-based cleaning products, as they will damage the finish. Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight. Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

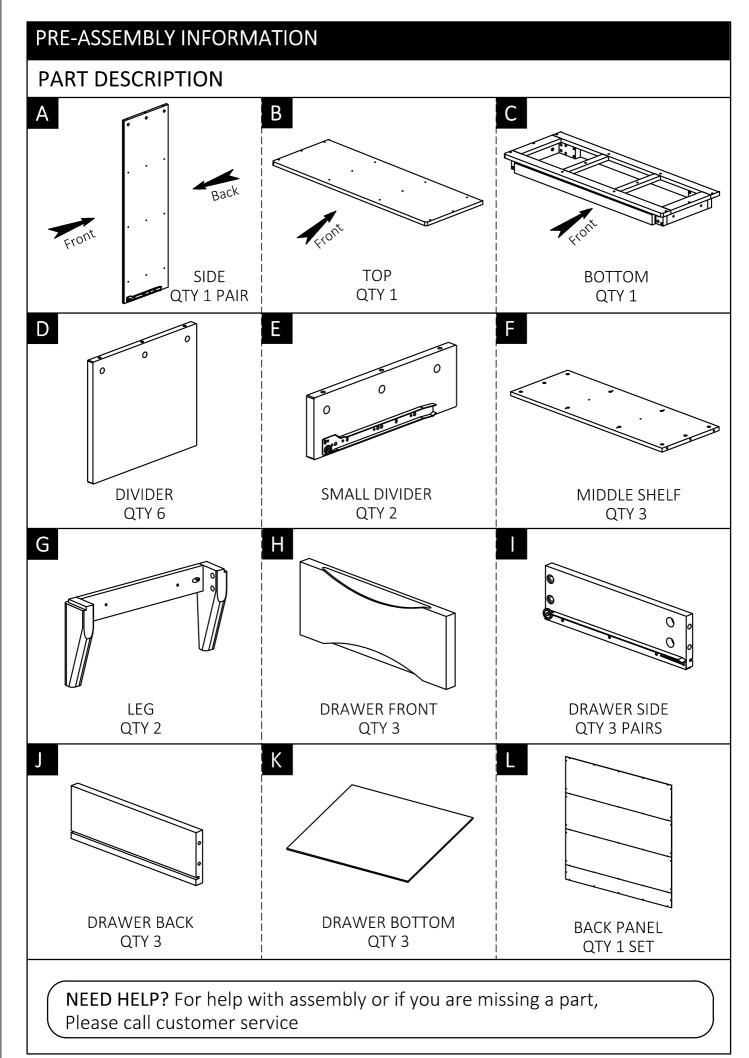


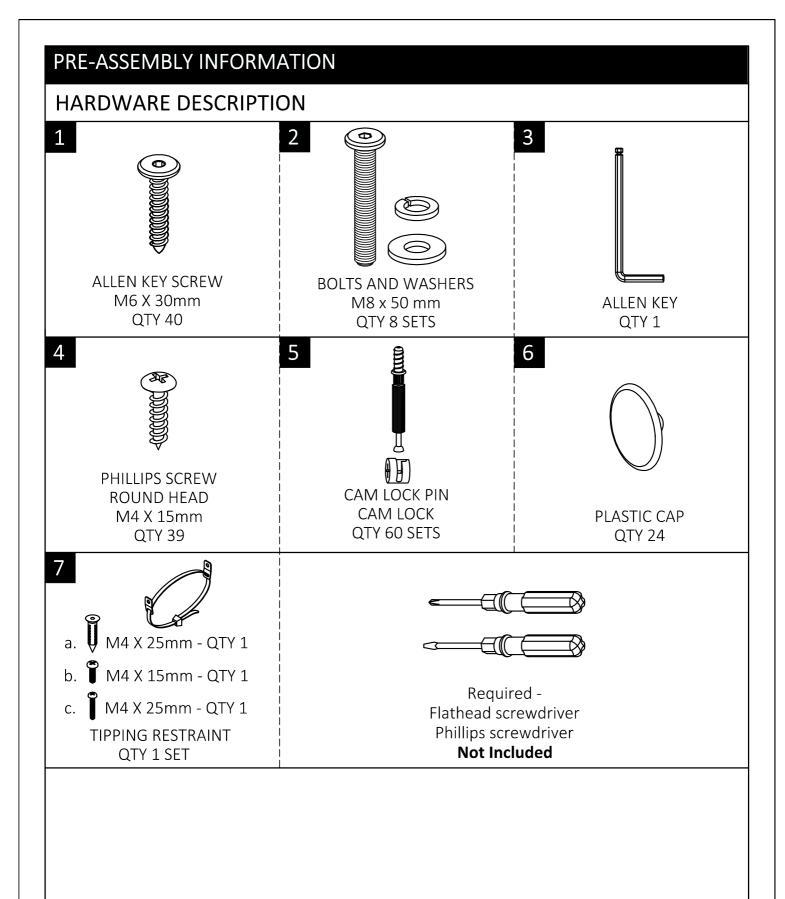

NEED HELP? For help with assembly or if you are missing a part, Please call customer service

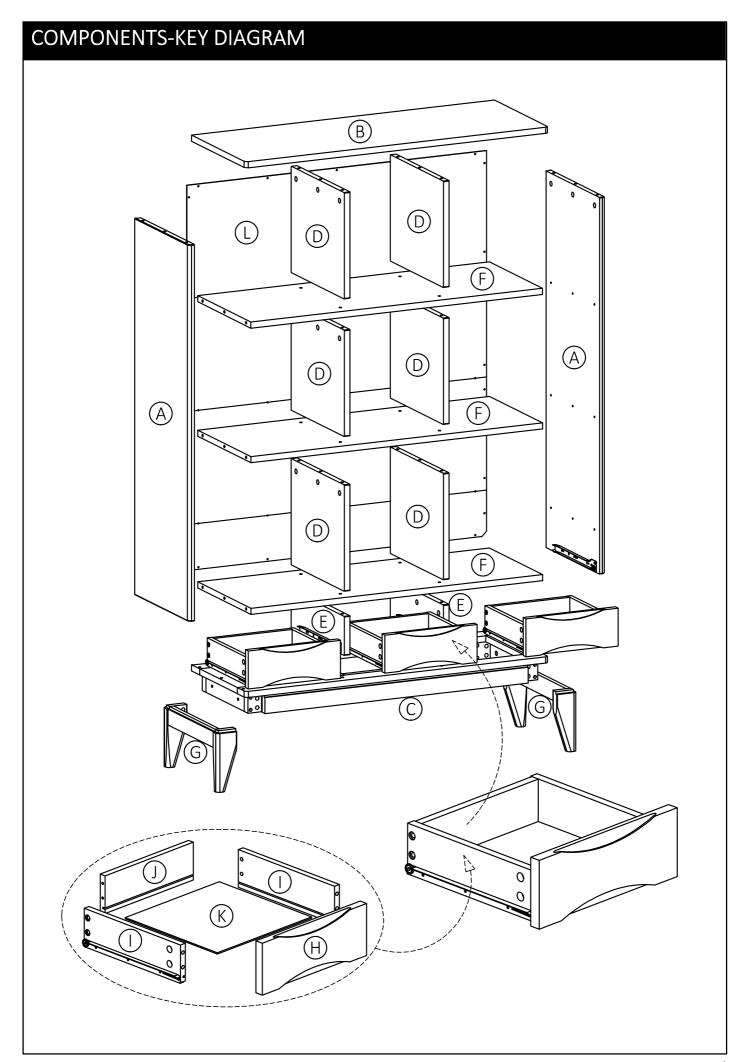


STEP-1

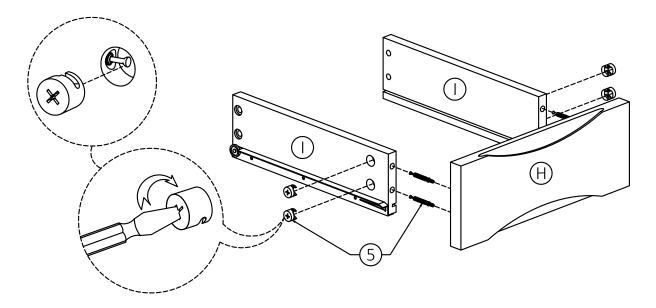


- 1. Attach four Cam Lock Pins 5 to back of Drawer Front H.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (1).
- 3. Insert two Cam Lock (5) into pre-drilled holes on each Drawer Side (1).
- 4. Use flathead screwdriver to secure Cam Locks.

STEP-2

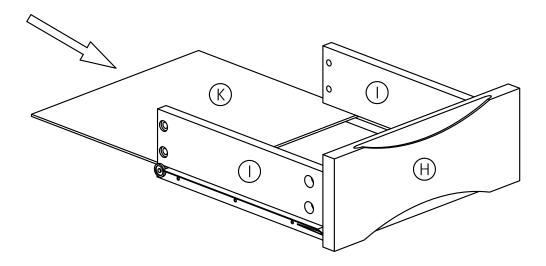

1. Slide Drawer Bottom(K) firmly into slots on Drawer Sides(1) and Drawer Front(H).


STEP-3

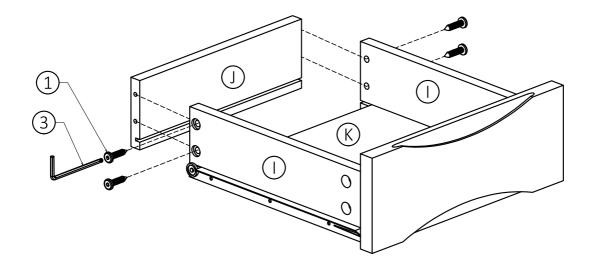


- 1. Align Drawer Back () with Drawer Bottom () and press firmly into slot.
- 2. Attach Drawer Back (J) using two Allen Key Screws (1) through pre-drilled holes on each Side (1).


 3. Use Allen Key (3) to tighten Screws. Do not over-tighten.

Repeat Step 1-3 for the second and third drawer.

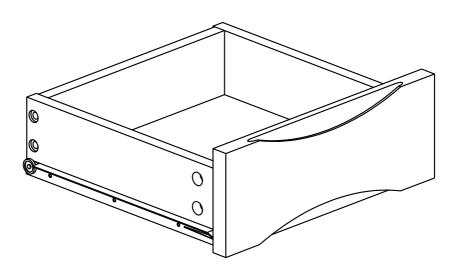


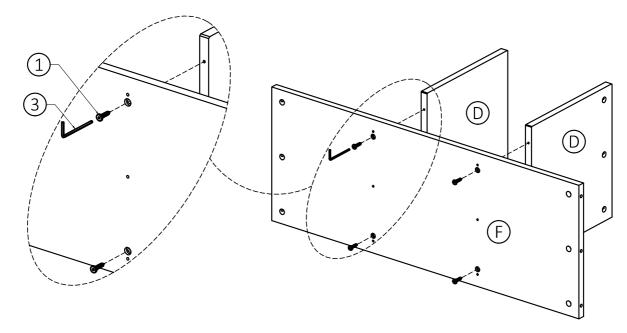


- 1. Attach Dividers (D) to Middle Shelf (F) using four Allen Key Screws (1) (two Screws on each Divider).
- 2. Use Allen Key 3 to tighten Screws. Do not over-tighten.

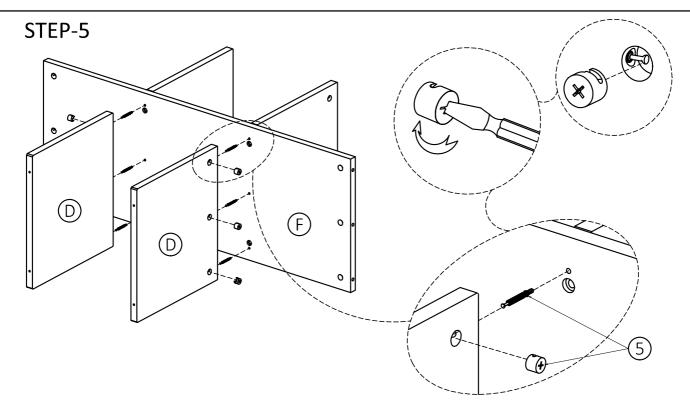


- 1. Attach six Cam Lock Pins (5) to back of Middle Shelf (F).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Dividers ①.
- 3. Insert three Cam Lock 5 into pre-drilled holes on each Divider 0.
- 4. Use flathead screwdriver to secure Cam Locks.

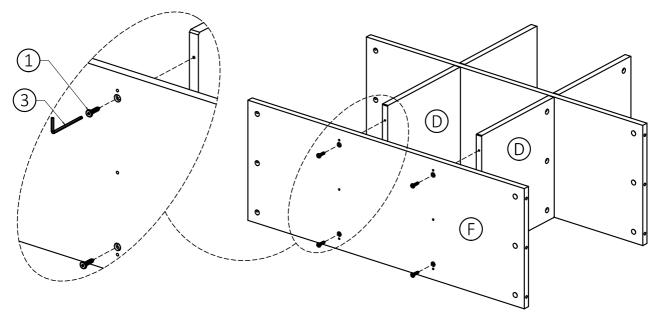


- 1. Attach Middle Shelf (F) to Dividers (D) using four Allen Key Screws (1) (two Screws on each Divider).
- 2. Use Allen Key(3) to tighten Screws. Do not over-tighten.

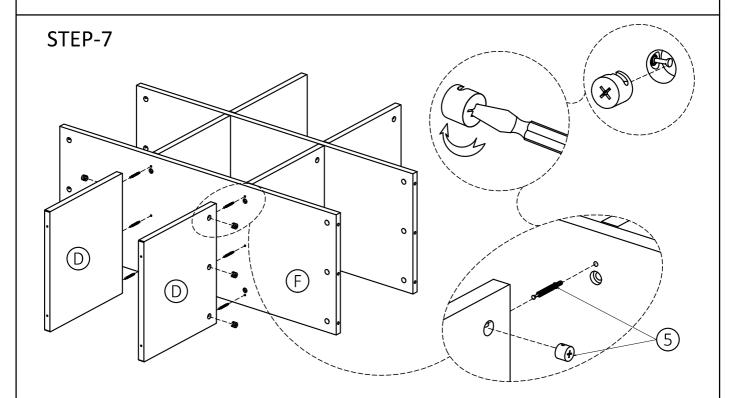


- 1. Attach six Cam Lock Pins 5 to back of Middle Shelf F.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Dividers ①.
- 3. Insert three Cam Lock 5 into pre-drilled holes on each Divider D.
- 4. Use flathead screwdriver to secure Cam Locks.

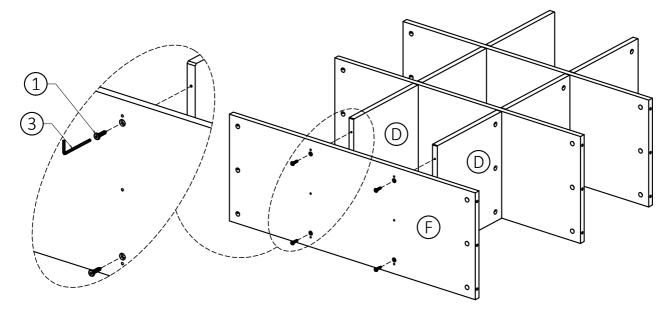


- 1. Attach Middle Shelf (F) to Dividers (D) using four Allen Key Screws (1) (two Screws on each Divider).
- 2. Use Allen Key(3) to tighten Screws. Do not over-tighten.

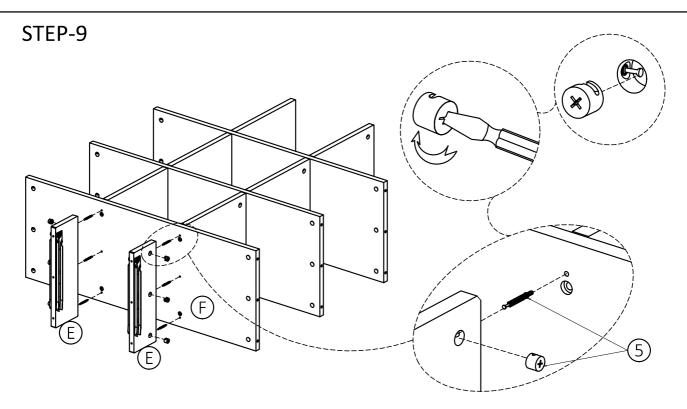


- 1. Attach six Cam Lock Pins 5 to back of Middle Shelf F.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Small Dividers (E).
- 3. Insert three Cam Lock(5) into pre-drilled holes on each Small Divider(E).
- 4. Use flathead screwdriver to secure Cam Locks.

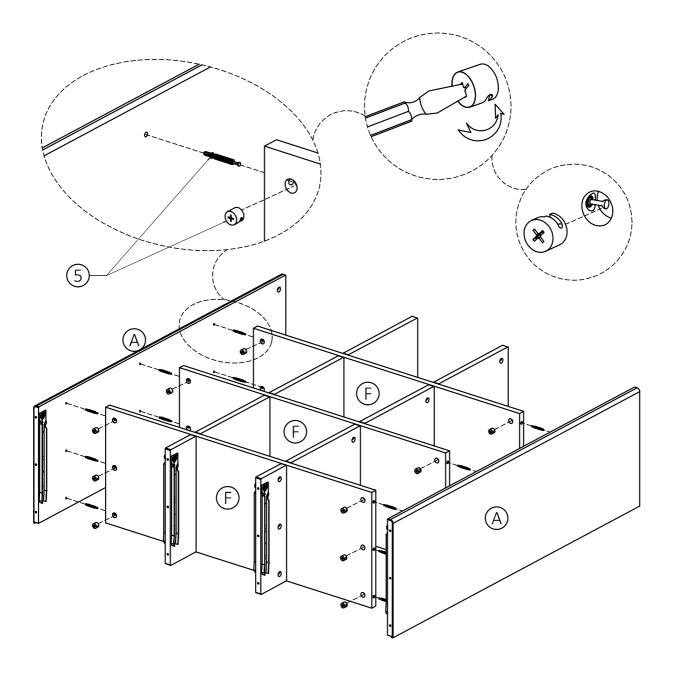

- 1. Attach eighteen Cam Lock Pins (5) to back of Sides (A) (nine Cam Locks on each Divider).
- 2. Align Cam Lock Pins with pre-drilled holes and attach Middle Shelfs (F).
- 3. Insert six Cam Lock (5) into pre-drilled holes on each Middle Shelf (F).
 4. Use flathead screwdriver to secure Cam Locks.

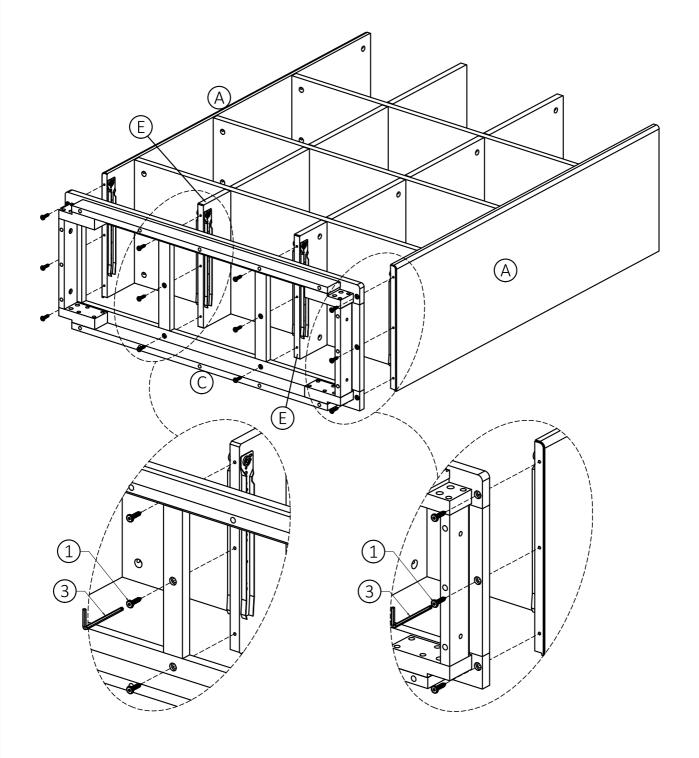


- Attach Bottom Cto Sides A and Small Dividers E using twelve Allen Key Screws (1) (three Screws on each Side and Small Divider).
 Use Allen Key (3) to tighten Screws. Do not over-tighten.

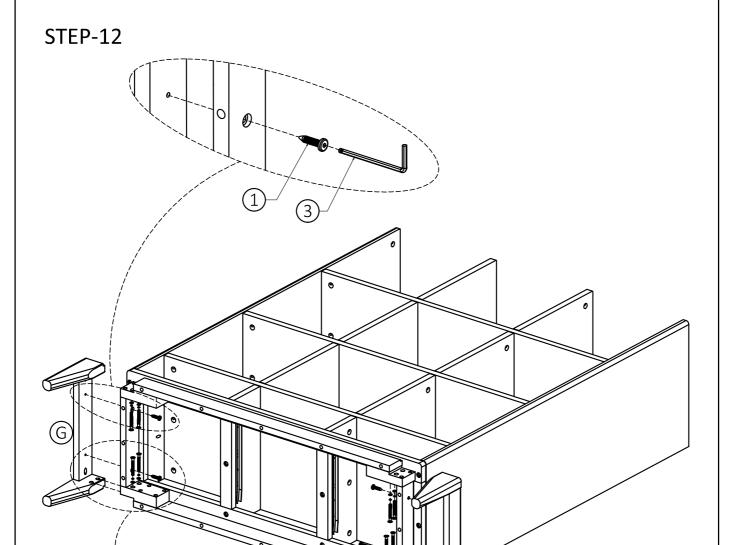


1. Attach Legs (G) to Bottom (C).


3

- 2. Use four Allen Key Screws 1 to secure part C and G (two Screws on each Leg).
 3. Use eight sets Bolts and Washers 2 to secure part C and G (four sets on each Leg).
 4. Use Allen Key 3 to tighten Bolts and Screws. Do not over-tighten.

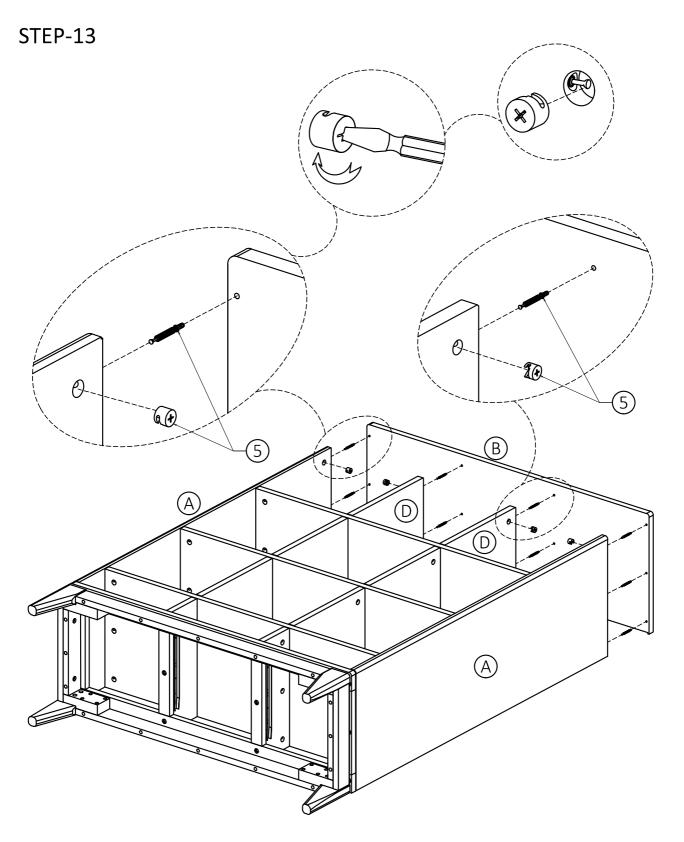


- 1. Attach twelve Cam Lock Pins 5 to underneath of Top B.
- 2. Align Cam Lock Pins with pre-drilled holes and attach Sides (A) and Dividers (D).
- 3. Insert three Cam Lock 5 into pre-drilled holes on each Side (A) and Divider (D).
- 4. Use flathead screwdriver to secure Cam Locks.

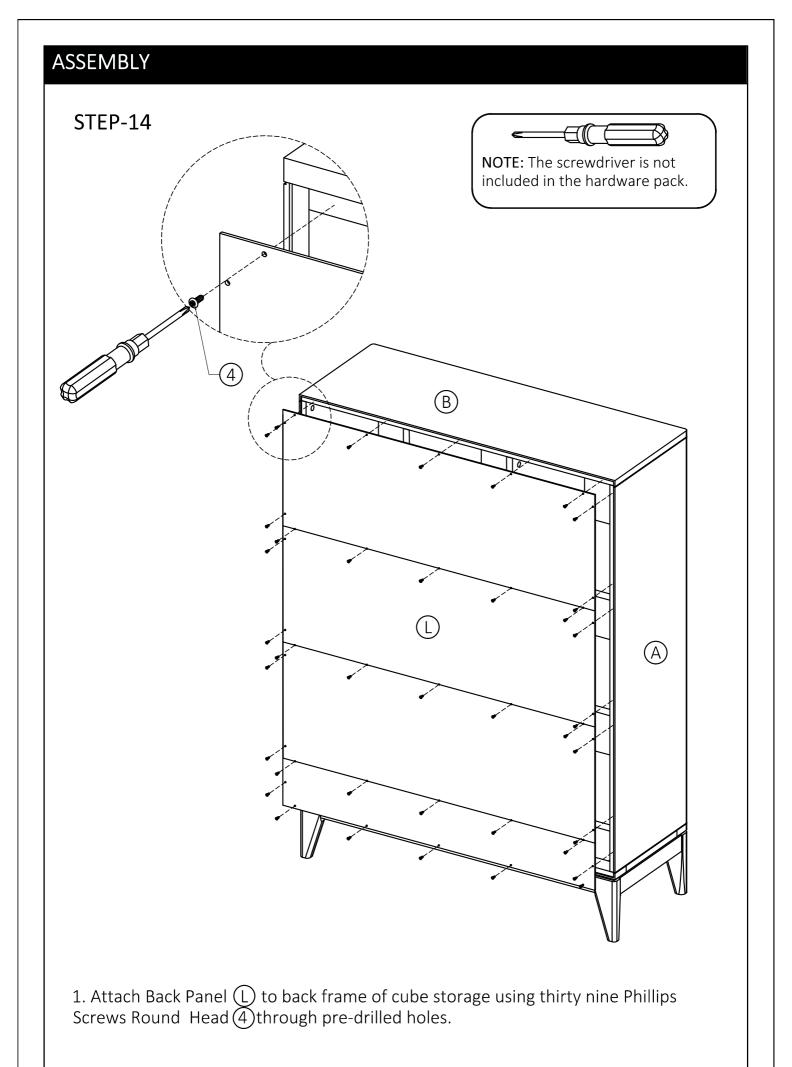

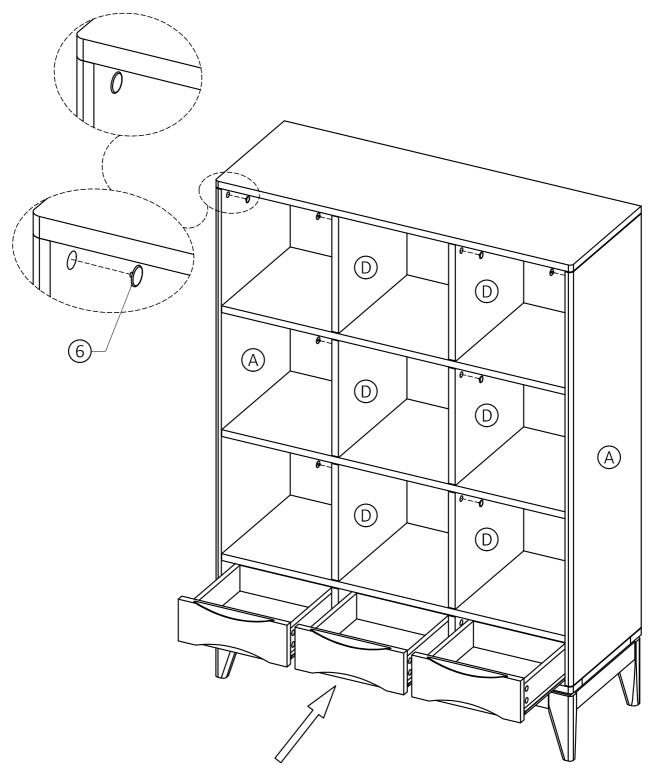

- Insert assembly drawers into glides on assembly cube.
 Insert six Plastic Caps 6 into holes Cam Locks on top Sides A and eighteen Plastic Caps 6 into holes Cam Locks on Dividers D.

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

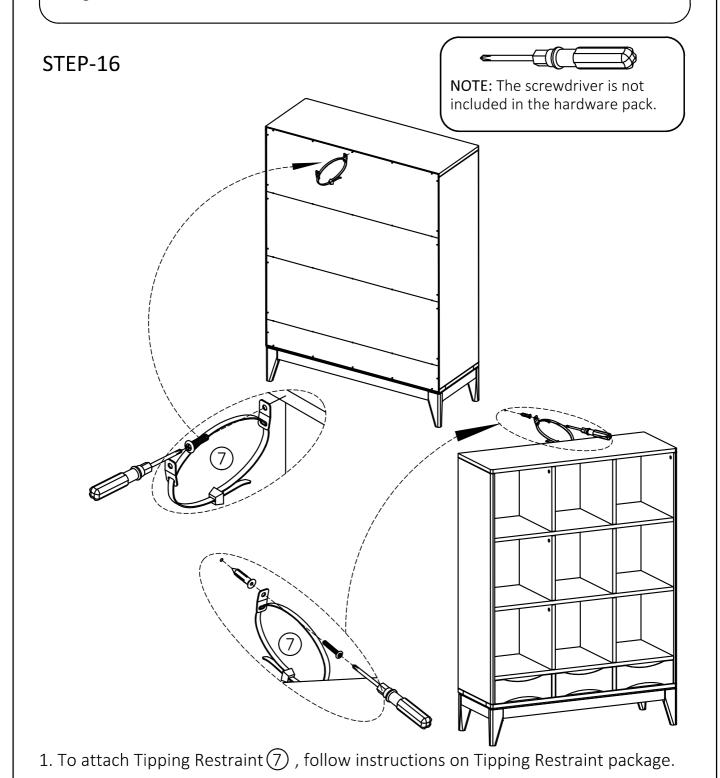

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.

WARRANTY

Thank you for purchasing product us. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.