

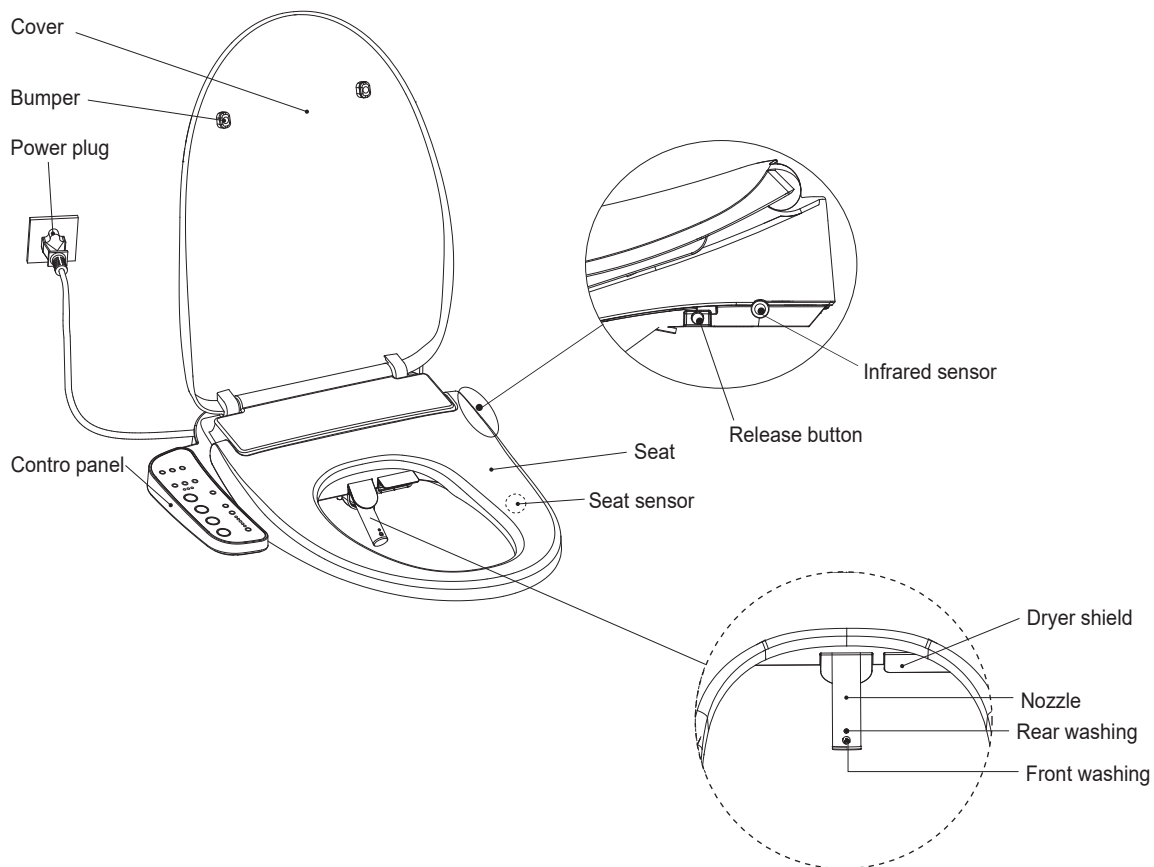


Installation and Operation Manual

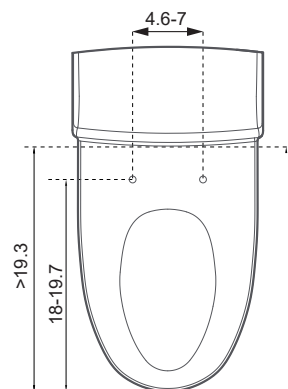

A Size drawing

Unit: in

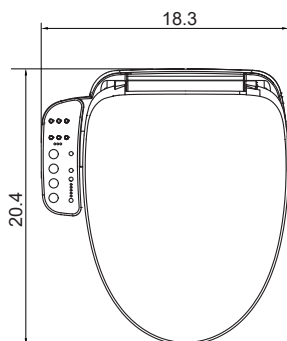


※Note: Please make sure this seat fits your current toilet.


B Packing list

Dear users:


Please count the number of items in the box after unpacking, the items included in the product box are as follows:

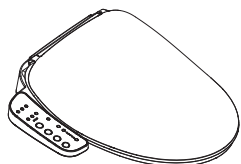


Host Machine

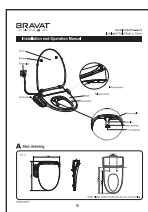


Installation manual

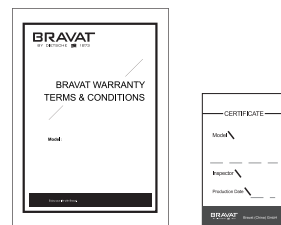

Warranty card
and certificate

 


Screws and expansion nuts

 


T-valve




Fixing brackets

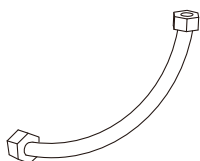

Hose

 

Base plate

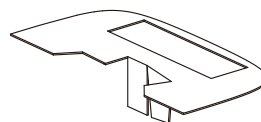


Mounting template

C Technical specifications

Name		Intelligent Toilet Seat & Cover	
Model		CZ9054W-1-US	
Technical specifications	Clean	Rear wash	●
		Front wash	●
		Auto wash	●
		H/C massage	●
		Oscillating wash	●
		Adjustable water pressure	5 positions
		Adjustable water temperature	3 ranges
		Adjustable nozzle position	5 positions
	Fresh air and warm air	Warm dryer	●
		Adjustable dryer temperature	3 ranges
	Seat and cover	Heated seat	●
		Soft close	●
	Sensor	Seat sensor	●
		Adjustable seat temperature	3 ranges
	Cleaning and hygiene	Night light	●
		Anti-bacterial seat	●
		Nozzle self-cleaning	●
		Cleaning nozzle	●
		Detachable nozzle	●
	Rated voltage		120V~
	Rated frequency		60Hz
	Rated power		1050W
	Maximum input power		1550W
	Ambient temperature		5℃-40℃
	Water pressure range		0.08MPa(Dynamic pressure) - 0.8MPa(Static pressure)
	Water supply temperature		5℃-40℃
	Waterproof level		IPX4
	Power cord length		1.2m
	Warm water	Water temperature	Ordinary temperature-39℃
		Heater power	1500W
	Heating seat ring	Surface temperature	Ordinary temperature-39℃
		Heater power	40W
	Warm air	Warm air temperature	Ordinary temperature-55℃
		Heating power	250W
	Size		20.4x18.3x5.6in

D Required tools

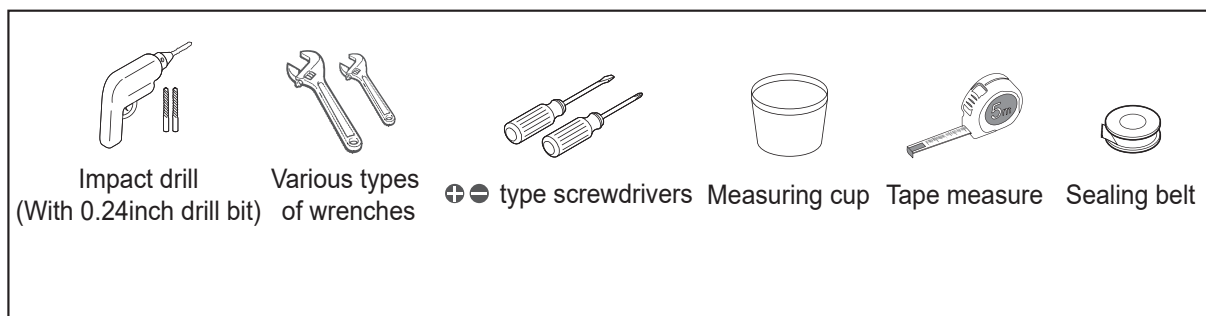

E Declaration

This product manual is prepared in accordance with the latest product information. THE COMPANY, following the sustainable development strategy, improves the product specifications and performance continuously, subject to change without notice. (THE COMPANY reserves the right of interpretation)

F Installation notes

Please read this manual carefully before installation, and install in strict accordance with the instructions. Please put this manual in a conspicuous place and keep it properly after reading.

Please strictly observe safety warnings and precautions to avoid injury and property damage to users and others.

Signs and descriptions

 Warning	Indicates that if there is a misoperation due to non-compliance with provisions of this warning, it may cause serious injury or casualty.
 Caution	Indicates that if there is a misoperation due to non-compliance with provisions of this warning, it may cause personal injury or property damage.

The following signs are used to indicate important safety precautions when using products.

Signs	Descriptions
	It indicates that it is not feasible and means [forbidden].
	It indicates what must be [enforced].

 Warning



Lighted cigarettes and other burning materials cannot be put into the toilet seat cover, otherwise it may cause fire.



Do not disassemble, repair or modify products voluntarily, otherwise it may cause fire or electric shock.
Do not pour water or detergent on the body or power plug, otherwise it may cause fire or electric shock.
Do not touch the power plug with wet hands, otherwise it may cause the electric shock.
Do not share the socket with other electrical appliances.
Do not use power extension cord or loose and unstable power socket, otherwise it may cause fire or electric shock as a result.
If the power cord is damaged, it must be replaced by professionals of the manufacturer, its maintenance department or similar departments in order to avoid danger.
This product is electrical product. It is forbidden to put it in places that are easy to be drenched by water, and please do not sprinkle urine or other liquids onto the body.
Please do not put your fingers or other objects into or block the drying air outlet, otherwise it may cause scald, electric shock or burning.
During the power on of the product, do not put the product sideways or upside down, otherwise it may cause fire or burn.



Required

Do not install the product in a room with humidity above 90%RH (relative humidity). Do not install this toilet in a wet area of the bathroom, such as a shower enclosure.
This product must be grounded reliably, and the reliable connection is required to be ensured between the ground wire of the AC socket and the earth. The grounding wire should use three-pin socket. Please ask a qualified electrical or maintenance personnel to check and confirm, if you are not sure whether this product has been grounded reliably. Please ensure that the wiring of the power socket used is in line with the national standard (left is zero line and right is live wire), and cannot be reversed.
This product must be connected to a special standard socket and wiring of 120V/60Hz with a load current of at least 16A, and the socket must be equipped with a ground fault circuit breaker or ground leakage protector or similar highly sensitive and fast type leakage switch (rated sensitive current below 10mA).
Install the socket in a place where it is not easy to be drenched by water.
Waterproof socket is recommended.
New hose assemblies and other attached or specified parts shall be used in the installation. Do not use the old hose assemblies, otherwise water leakage, fire or electric shock may be caused.
Let the product stand for 2 hours first after it is moved from cold or damp places to the room, by which the condensate in the machine can fully volatilize, and then start the machine for use, in order to avoid short circuit of the product.



Warning



When thunder strikes, unplug the power supply.
Do not put the product in a position where it may fall or be pulled into the bathtub or the water tank.
Do not put products in water or other liquids.
Do not touch products that have dropped or submerged in water, and unplug the power plug immediately.
Do not stand on the ceramic toilet, and do not hit the body with strong force, in order to prevent damage and water leakage.
It is forbidden to bury cementitious materials (cement mortar) in the base of ceramic toilet, otherwise the ceramic toilet may be cracked due to expansion of cementitious materials.
Do not exert the strong force or impact, do not stand on the seat, cover or body of the toilet, and do not place heavy objects.
It is forbidden to clean this product with banana oil, gasoline, liquid medicine and detergent, insecticide, toilet cleaner and stiff brush.
Do not use water sources other than tap water, otherwise this may cause problems such as skin inflammation.
Please do not expose the product to sunlight, so as to avoid discoloration of the product and affect the remote control reception effect.
The seat ring and toilet cover of this product have the function of slow descent, so please do not press hard to avoid damaging the descent control device.
Do not connect the inlet pipe with the outlet pipe of the water heater.
The inlet water temperature is 5 °C-40 °C, otherwise, it will lead the built-in heating unit to failure.
When sitting on the seat, please do not lean back against the toilet cover to avoid damaging the product.
Please do not throw items that can easily block the toilet, such as newsprint, urinal pads, and sanitary napkins into the toilet.
In case of abnormal function or failure of the product, please stop using and shut off the power supply immediately, and contact the service provider in time.




Required

Unplug the power plug and close the water supply valve before installing, disassembling, repair and maintaining the product.
Do not use under the environment of below 0 °C.
Shut off the power supply and drain the water in the toilet and pipeline in case of idling for a long time.
People (including children) suffering with physical, perceptual or intellectual disabilities or lack of experience and common sense need to use this product under the supervision of special person, Patients with heart disease should use it carefully.
Do not allow the children to operate this product.
Please keep warm and raise the toilet temperature to prevent damage caused by freezing.


G Installation of Main Unit

1. Installation of base plate

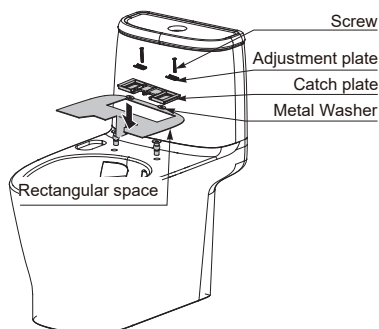


Install the expansion nuts into the toilet mounting holes first, and then securely install the base plate, fixing brackets and screws in sequence as shown.

2. Install the electronic toilet seat

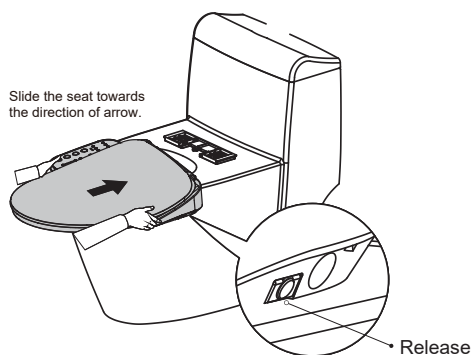

- (a.) Remove Fixed Card.
- (b.) Press the push button and slide the seat into the fixing plate.
- (c.) Adjust the seat for best fit. Loosen the screws for adjustment when needed.

3. Installation of water inlet pipe and T-valve

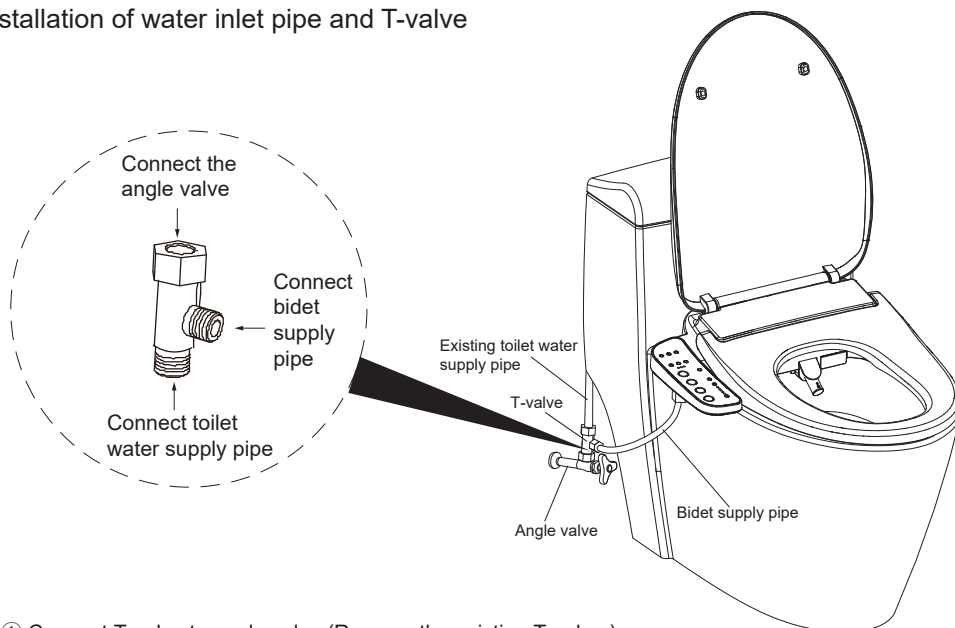


- ① Connect T-valve to angle valve (Remove the existing T-valve.);
- ② Connect toilet water supply pipe to T-valve as shown above;
- ③ Connect bidet water supply pipe to T-valve as shown above.

Notice:

When installing, do not twist or damage the water inlet hose, otherwise it may cause water leakage; Do not use other brands of water inlet hose or other parts, otherwise it may cause danger; It is not recommended to use the old water inlet hose or other parts of our brand, otherwise it may cause danger.


H Preparation

1. Turn the water supply on. The angle valve should be fully open.
 2. Check for leaks. Make sure there is no leakage.
- If there is leaking from any connection, re-install the part.

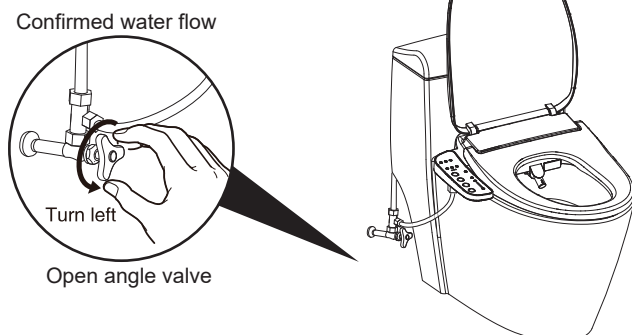


2. Connect power

1. Insert the bidet plug into the outlet (120V~).
 2. Confirm the power connection.
- Press the Power/Stop button to turn on the bidet seat.

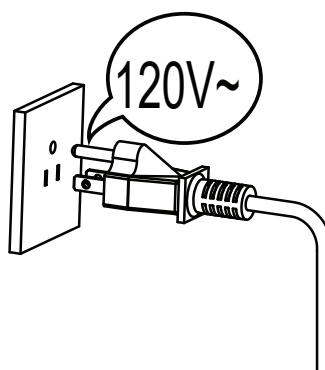

3. Test run


Put your hands on the sensing area, press the Control panel button of the remote control Rear Wash/ Front Wash, and check whether the nozzle is working normally.

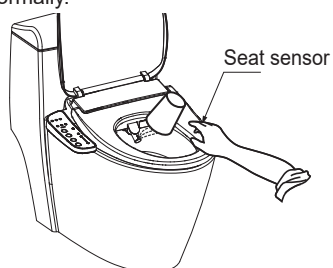

※ Be careful to block the cleaning water flow of the nozzle with a water cup, so as not to spray the water on the body or clothes.

Function Introduction

Control panel

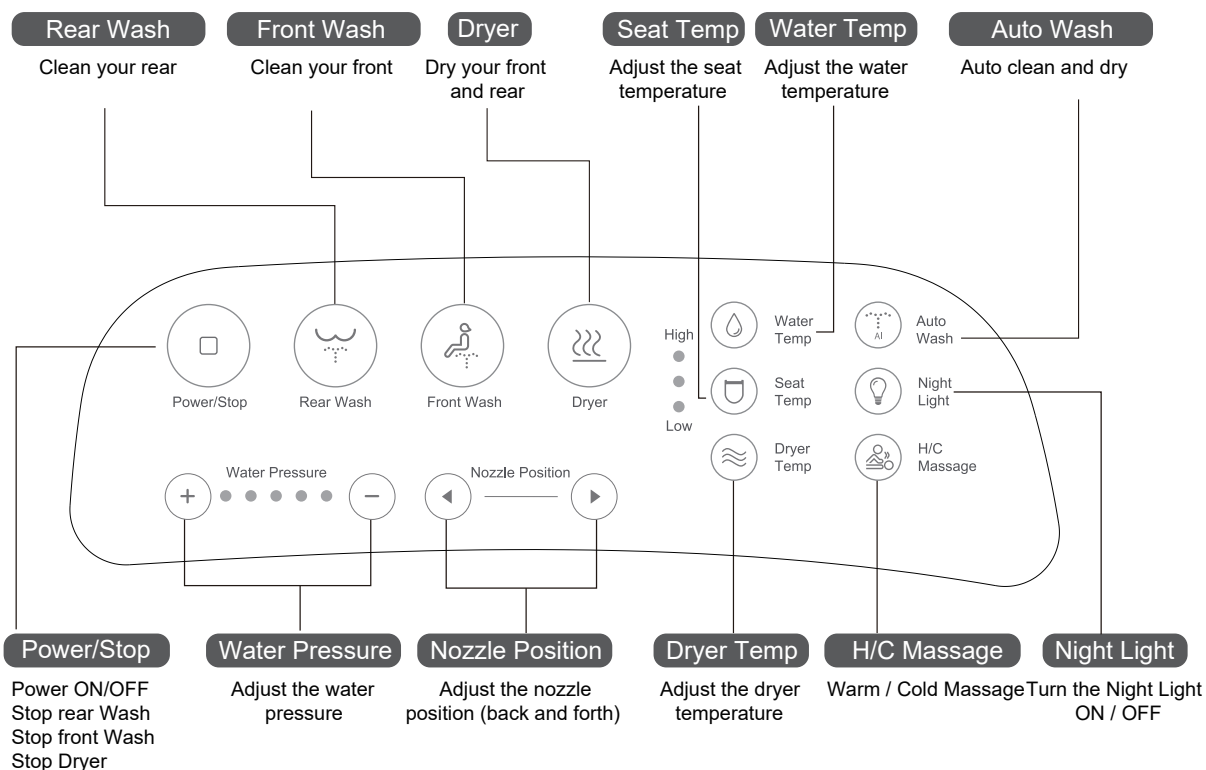


J Use instruction

Rear/Front cleaning


· Function: Water sprays from the nozzle to wash the rear.

To Activate: Press "Rear Wash" button once. Press button twice to start oscillating spray.

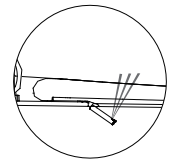


· Function: Water sprays from the nozzle to wash the front (for Women).

To Activate: Press "Front Wash" button once. Press button twice to start oscillating spray.

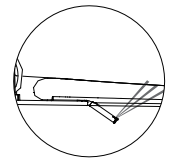

Water volume adjustment


· Press "+" to increase spray strength. Press "-" to decrease spray strength.

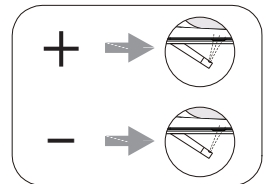

Spray nozzle position adjustment


· Press "▶" to lower the nozzle angle. Press "◀" to raise the nozzle angle.

· There are 5 different nozzle position levels.

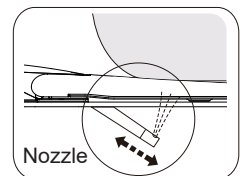

Drying Operation

· Press "Dryer" button, dry the cleaned area.

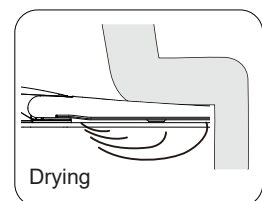

Dryer temperature adjustment

- Function: Adjust dryer temp.
- To Change Temp: Press the button to change the temp. Keep pressing until your desired temperature is selected.
- There are 3 different temp.levels: Low, Medium, High.



Water temperature adjustment

- Function: Adjust water temp.
- To Change Temp: Press the button to change the temp. Keep pressing until your desired temperature is selected.
- There are 3 different temp.levels: Low, Medium, High.



Seat temperature adjustment

- Function: Adjust seat temp.
- To Change Temp: Press the button to change the temp. Keep pressing until your desired temperature is selected.
- There are 3 different temp.levels: Low, Medium, High.



Night light

- Short press "Night Light" button to turn on/turn off night light.




H/C Massage

- Function: Alternate between cold and hot water spray to clean.
- To activate: Under wash mode, press the "H/C Massage" button once.



Auto fuction

- Function: when seated, press the "Auto Wash" button, it will launch 90s rear wash and follow a 4 mins drying.
- Auto clean is more convenient for kids and elders.

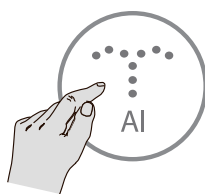

Auto rear cleaning



Rear cleaning 90s




Drying 240s



Automatic stop

Anti low temperature burns

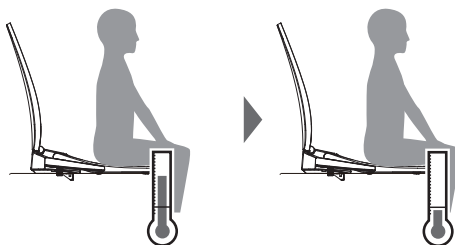


The control system starts to automatically reduce the temperature of the seat to prevent people from low temperature burns after someone sits.

K Maintenance

Maintenance of Main Unit

1. Shut off power supply before doing maintenance.
2. Use only a soft, damp cloth to clean. Avoid using harsh chemicals.
3. Once cleaning is completed and all surfaces are dry, re-connect the power plug.


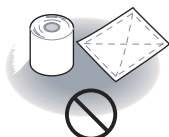


Note: Do not rinse the surface of the product directly with water during maintenance.

Nozzle Maintenance

When there is dirt on the nozzle, maintain it according to the following methods:


1. When no one is seated, press and hold the “◀” button without occupying the seat, the nozzle will extend and can be cleaned with a soft brush.
2. Do not try to pull the nozzle out with force, or the nozzle may break.
3. When the nozzle is clogged, it is recommended to replace it with a new one.

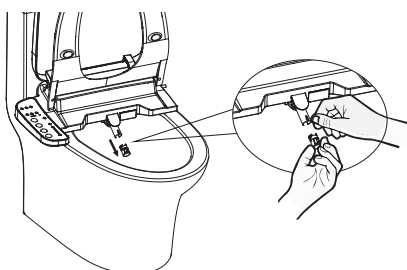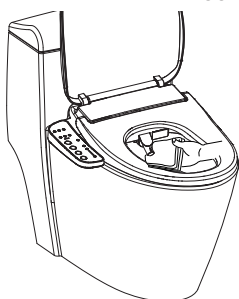

Note: Do not pull or push the wand, to avoid damage.

Maintenance of Steel Mesh Filter

1. For your health, as well as optimal performance of the bidet, please clean or replace the filter regularly.
2. If you notice that the water pressure is becoming weaker, please wash or replace the filter.
3. Please make sure to turn off the water supply completely before removing the filter. Attach the new filter securely to avoid leakage.
4. Turn the coin counterclockwise to open the filter and use a brush to clean.

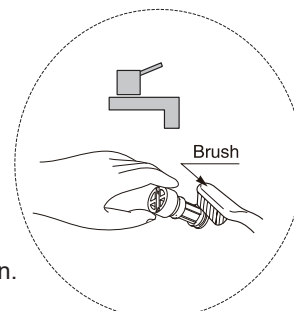

L Problem judgment and handling

Answers to general FAQs

Please read the following FAQs carefully, and follow the instructions to solve the problem. If the product still doesn't work properly, please contact the local dealer or call the service hotline for help.

Tips!

Please close the angle valve switch immediately and shut off the power supply in case of water leakage.

Please confirm the following possible causes of failure:

1. Power inspection

(1) Is the power supply working?

2. Water supply inspection

(1) Is the water supply normal?

(2) Is the valve closed?

Failures	Causes	Solution
Water does not spray	No water in the supply	Wait for the water to restore to its normal levels
	Water supply is turned off	Turn water supply valve to turn on water
	Filter screen is stuck	Clean or replace filter screen
	Water hose is twisted	Stretch hose until it becomes untwisted
Water pressure is weak	Water level is set to LOW	Turn up water level to higher setting
	Filter screen is stuck	Clean or replace filter screen
Spray is off-center	Operational failure	Unplug device and re-plug in after 1 min
Water is not warm	Water temp. is set to LOW	Turn up water temp. level to higher setting
Water is leaking	Parts are loose or damaged	Contact us
Wash function does not activate	Check if the seat is lifted or sitting on something	Fix seat so it is flush on the bowl and remove any objects underneath
	Body sensor is broken	Contact us
Dryer is not warm	Dryer temp. is set to OFF	Turn up dryer temp. to higher setting
	Dryer is broken	Contact us
Dryer stops during use	Dryer will stop every 4 mins	Enable dryer again
Seat temp not warm	Seat temp. is set to OFF	Turn up seat temp. to higher setting
cover or seat closes fast	Damping is broken	Contact us
Functions work in turns nonstop	QA testing model activated	Unplug device and re-plug in after 1 min
 Caution	If the problem cannot be resolved as per above solutions, please disconnect the power and contact service providers.	
	If the power off (Power indication light not on), please press Power/Stop button until indication light turns on.	

BRAVAT
BY DIETSCH  1873