

## INSTALLATION INSTRUCTIONS

- Power sockets must be installed with a reliable grounding wire to ensure safety.
- Do not share sockets with other electrical appliances to avoid wire overheating and catching fire.
- Install the product in a well-ventilated, dry and cool place to avoid direct sunlight and stay away from various heat sources and gas appliances or electrical appliances.
- When installing the ground, ensure that the product should not be tilted to prevent the goods from falling out.
- Make sure to leave min.100 mm space for back and each side.
- Carefully check other factors that may cause the machine to be fixed reliably to prevent accidents.
- Before installation, check the strength and surface flatness of the installation part, otherwise it may cause the skew and dislocation of the door.
- The power socket shall be set within 1.2m from the power cord lead outlet of the housing.

## CORRECT DISPOSAL OF THIS PRODUCT



This symbol on the product or its packaging indicates that it should not be treated as household waste. Instead, it must be taken to a designated waste collection point for recycling electrical and electronic equipment. Proper disposal helps prevent potential negative impacts on the environment and human health that could result from improper handling. For more information about recycling this product, please contact your local council, waste disposal service, or the store where you purchased it.