
# AI-ACSC6DRSC

## Assembly Instructions

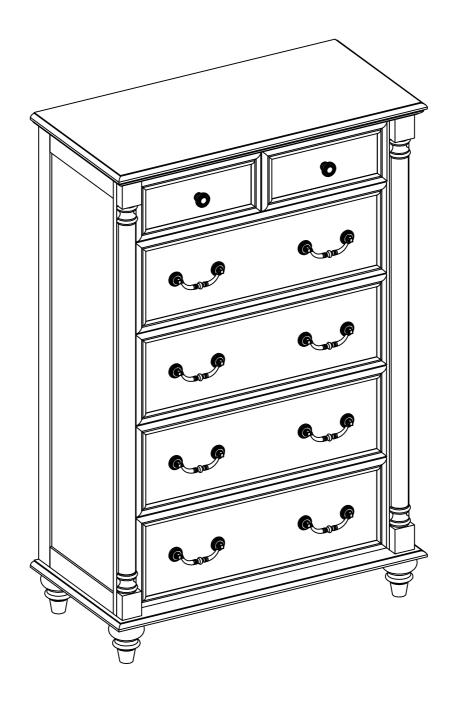

 
Customer Service E-mail Address: xiuxiumaoyius@163.com

### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product.




V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




- VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS
  - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
  - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
  - 3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
  - 4. Use the sticker to conceal the Cam.

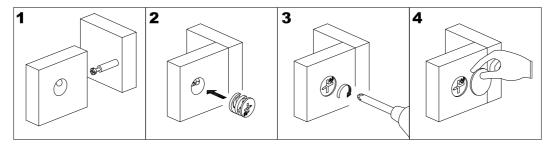

 
VII. Power tools should not be used to assemble this product.



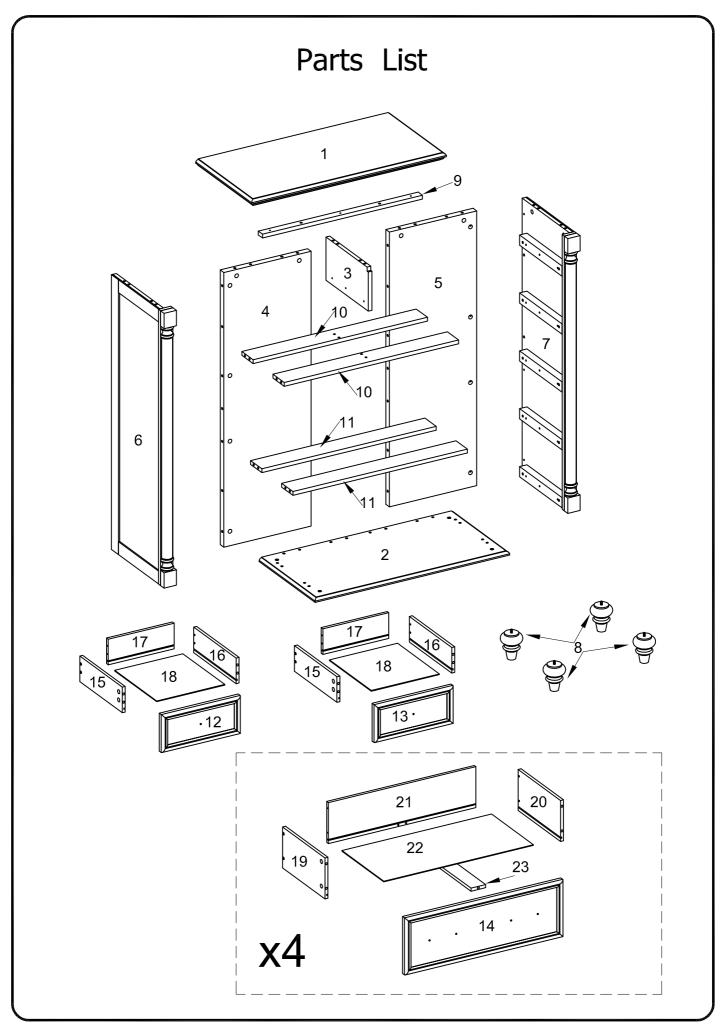

### Hardware List

 Α		Ø8x30mm	Dowel	34 pcs
В		Ø6x35mm	Cam bolt	54 pcs
С	The state of the s	Ø15x11mm	Large Cam lock	26 pcs
D		Ø30mm	Cam cover	54 pcs
E			Glue	2 pcs
F		Ø4x25mm	Small screw	3 pcs
G		Ø8x20mm	Small dowel	2 pcs
Н		Ø4x12mm	Knob bolt	18 pcs
J			Knob	2 pcs
K	6		Handle	8 pcs
L,		Ø15x9.5mm	Small Cam lock	28 pcs
М		Ø4x38mm	Long Screw	32 pcs
N	<i>ananan</i> 🗀	Ø6x50mm	Screw	10 pcs
Р		M 4	Allen wrench	1 pc
Q		Ø8x40mm	Long dowel	7 pcs
R		Tipping I	Restraint Hardware	2 sets



Philips head screwdriver required for assembly (not included)

### Hardware List


S	<	Ø3.5x12mm	Screw	72	pcs
Т	0.5	12"	Left Glide Track	6	pcs
U	0.019	12"	Right Glide Track	6	pcs
V	2 2	12"	Left Glide Runner	6	pcs
٧	00000	12"	Right Glide Runner	6	pcs





Philips head screwdriver required for assembly (not included)


# Step 1




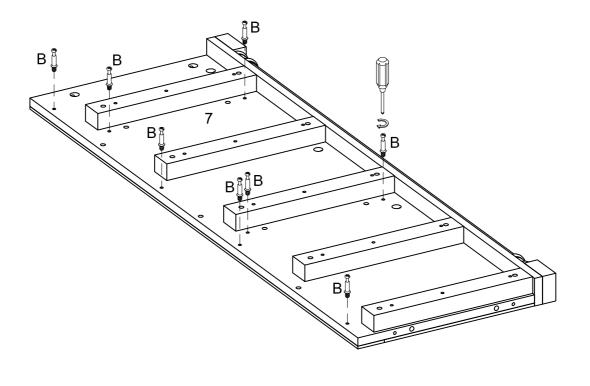

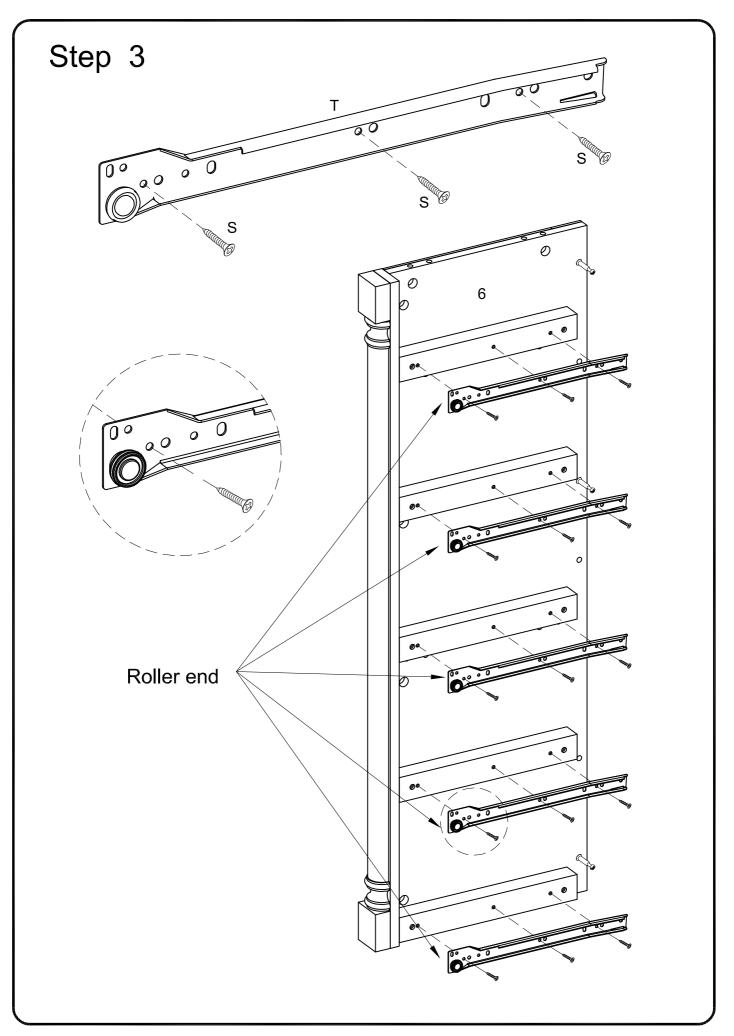

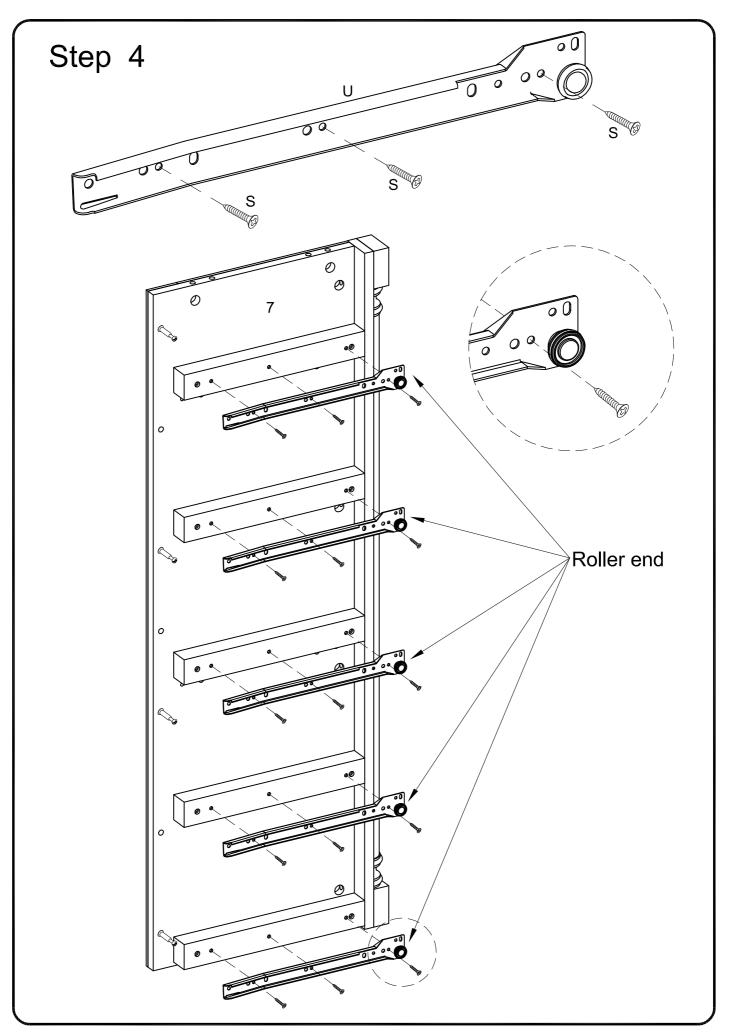


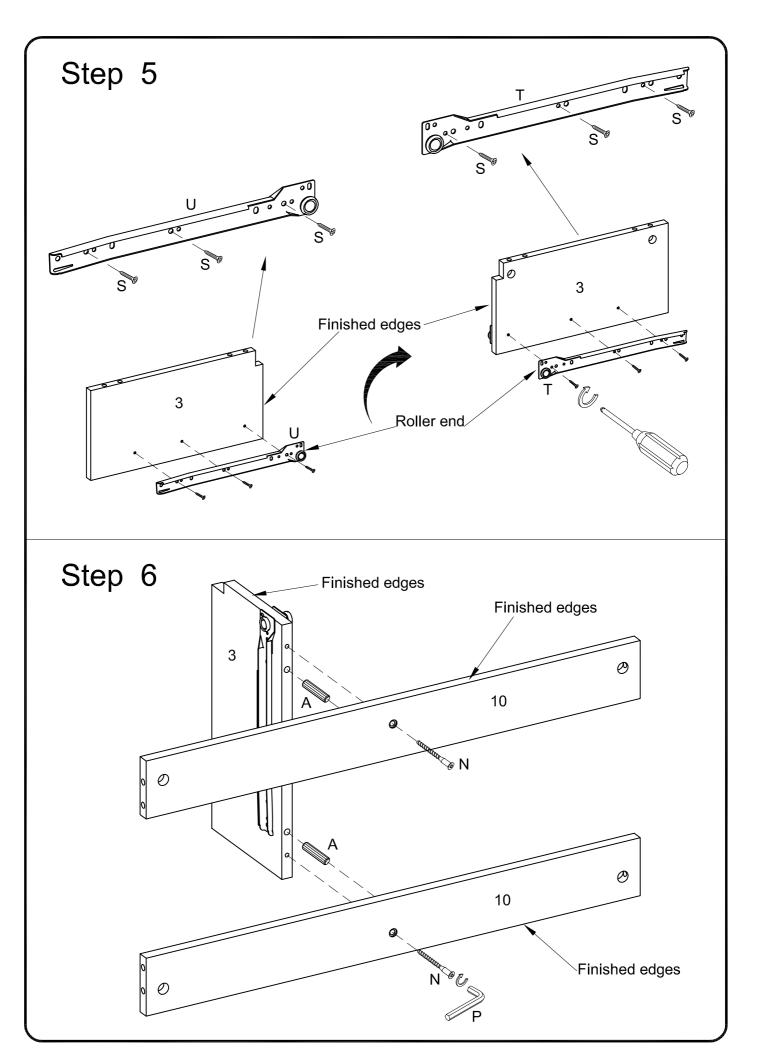


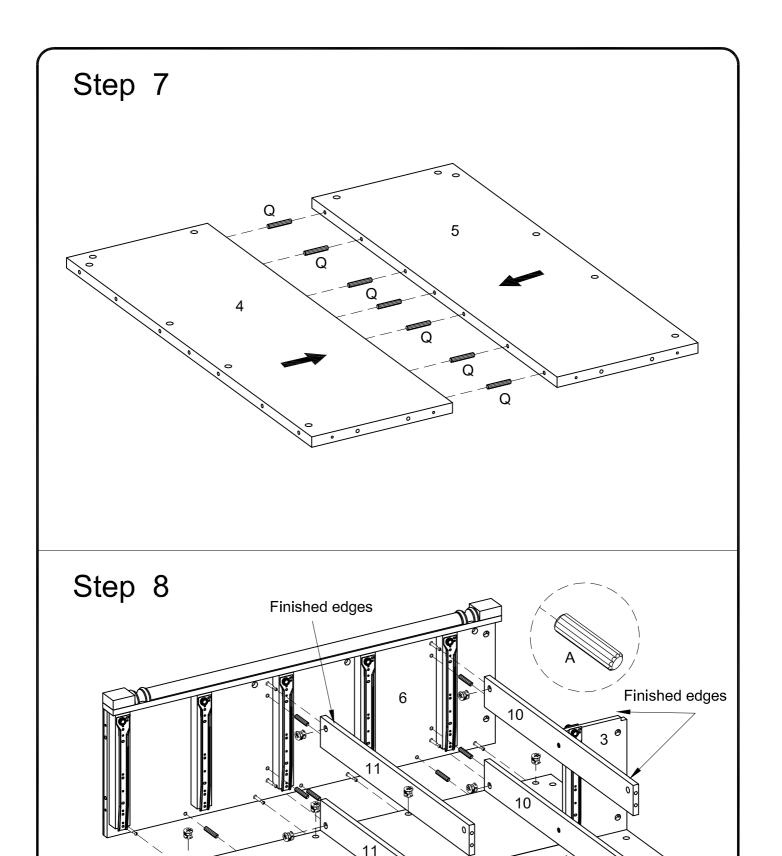


5


Finished edges

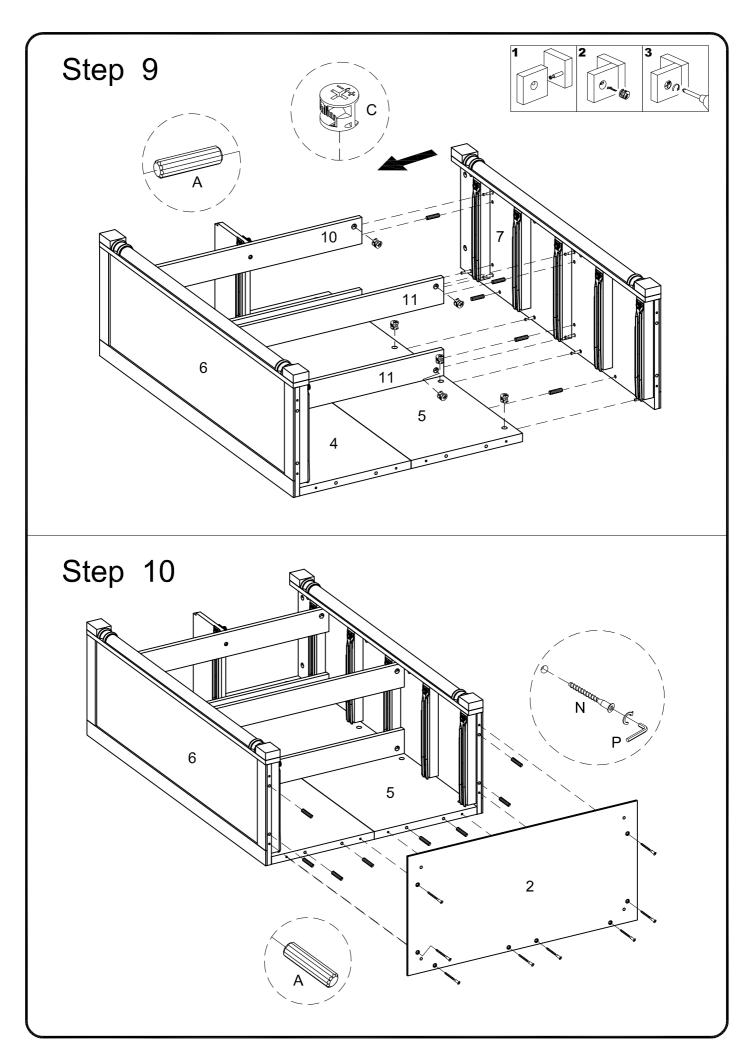


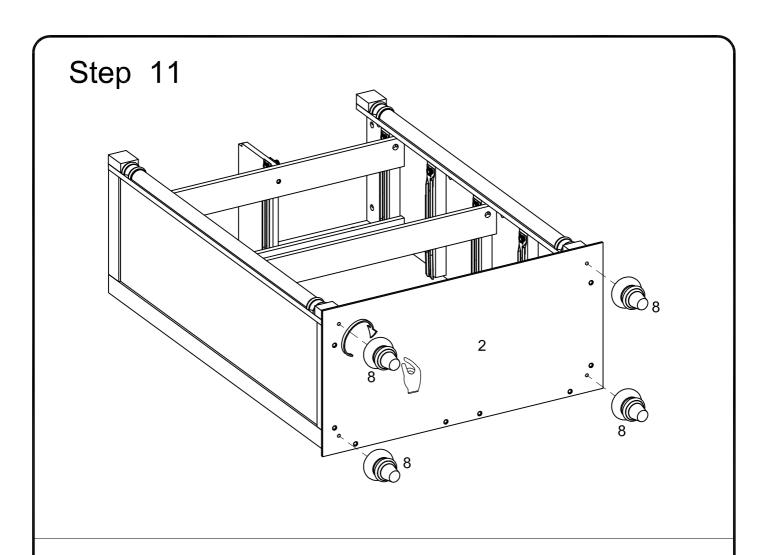





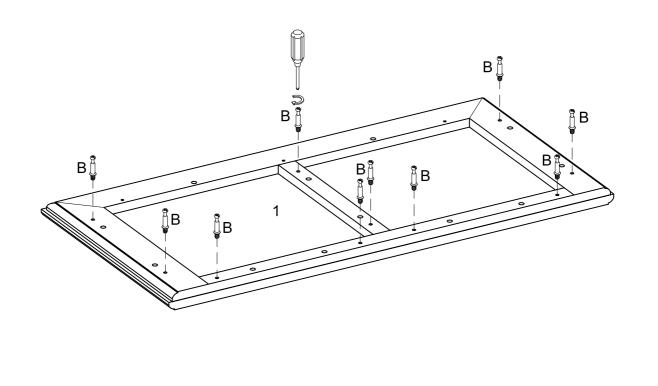


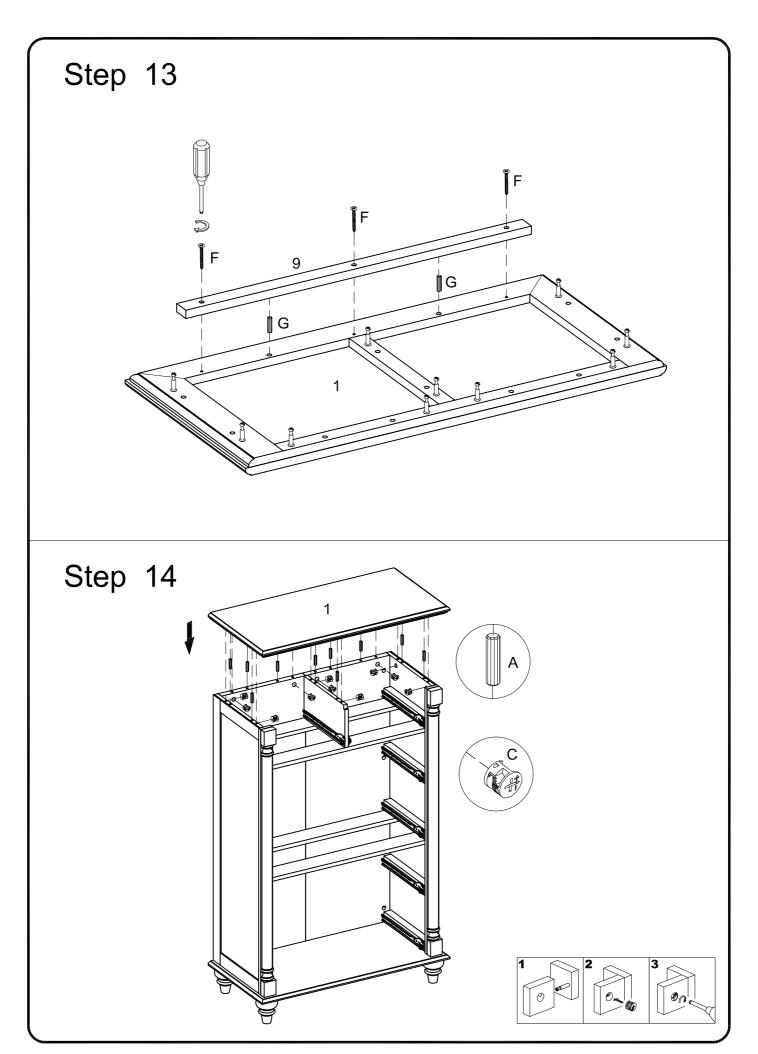

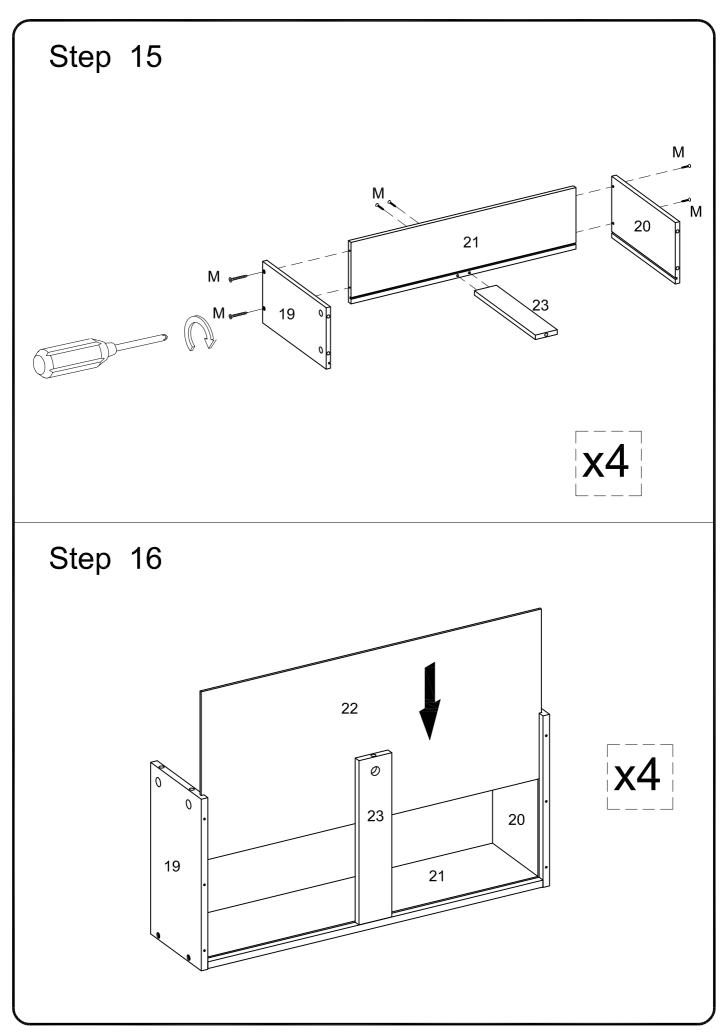


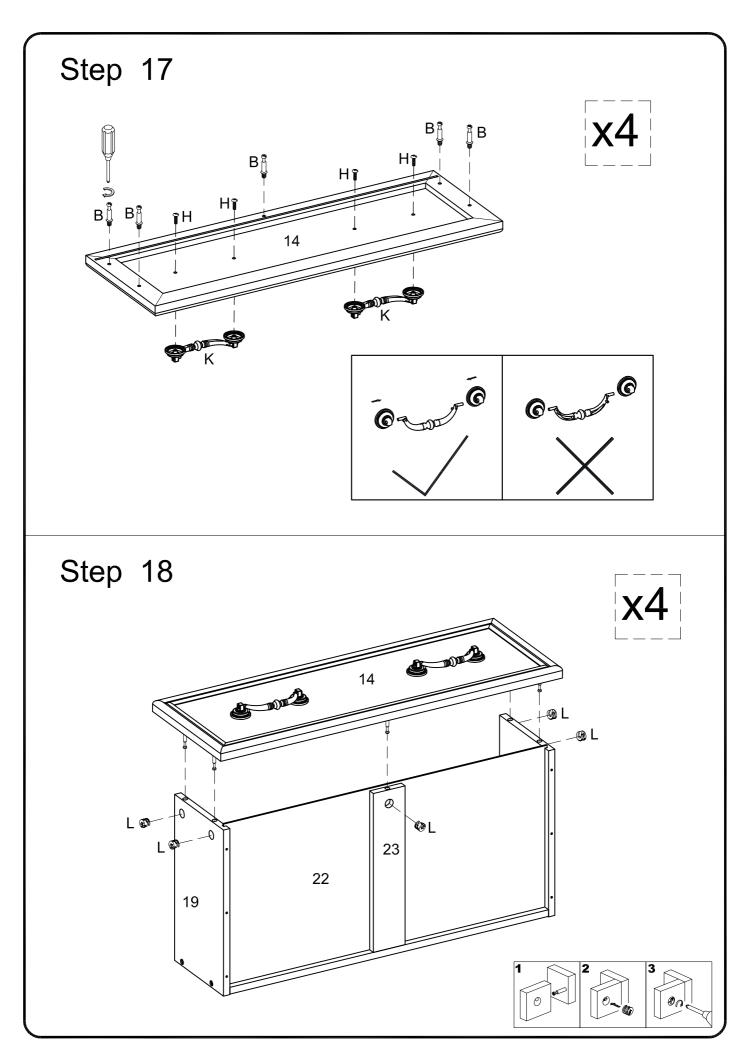


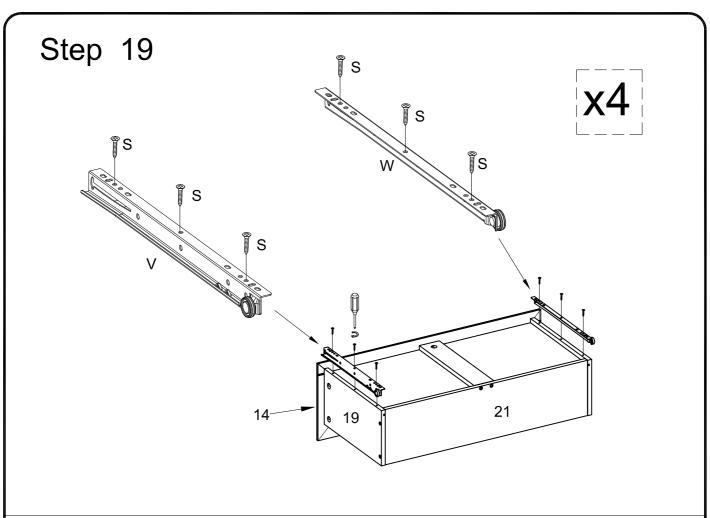


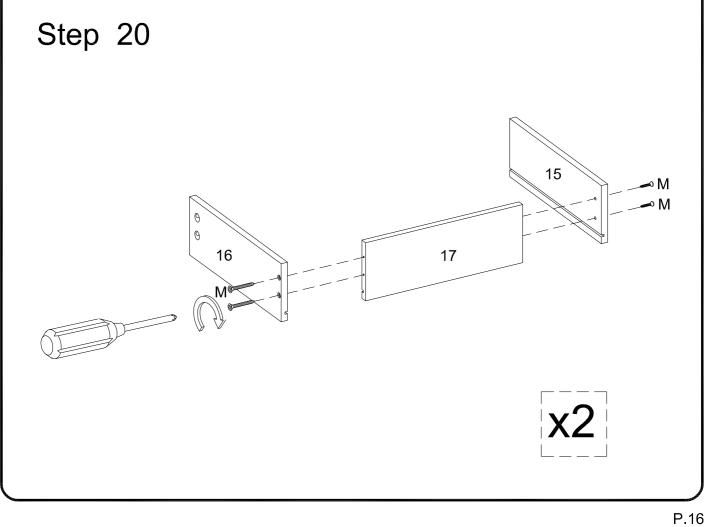


# 

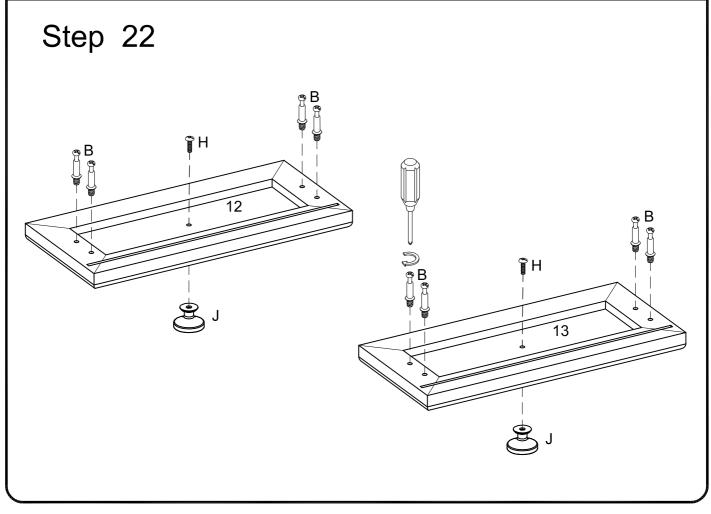


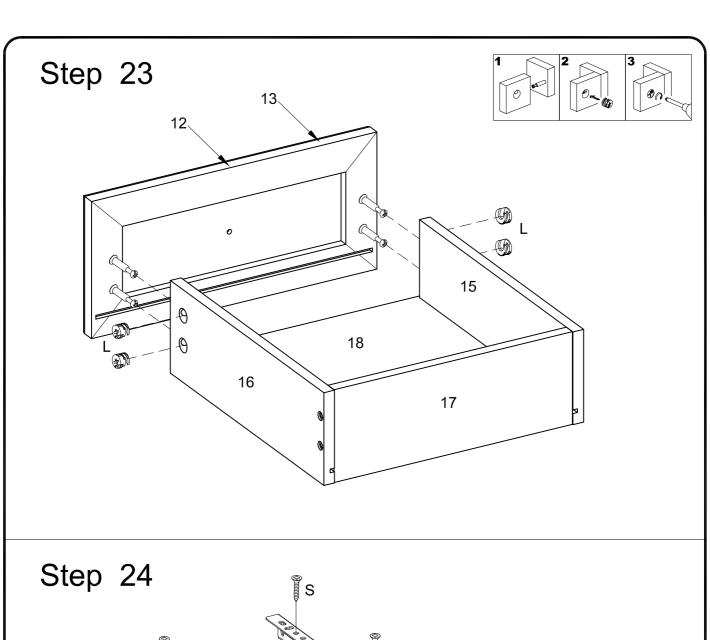

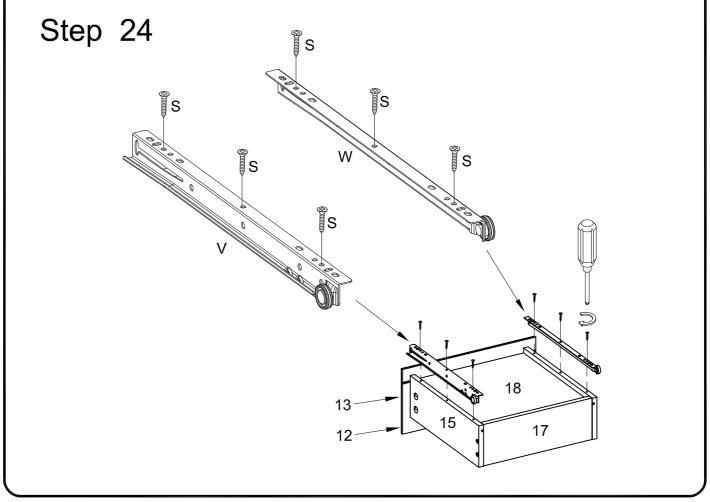

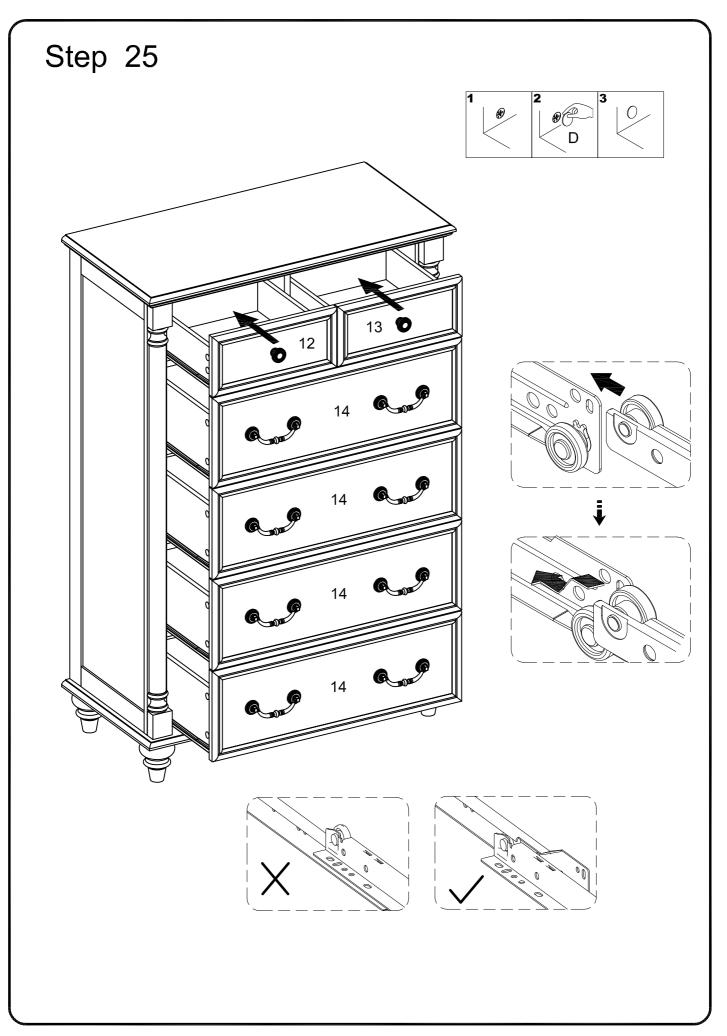

### Step 26

 

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

