 
 


Manual of pure fingerprint lock

Thank you for purchasing our product. By default, the product is in no account status. Any fingerprint can be opened. When the fingerprint is set, your finger will become the key. By default, the fingerprint entered for the first time is the administrator's fingerprint. Other fingerprint entries can only be entered through the administrator's fingerprint authorization.

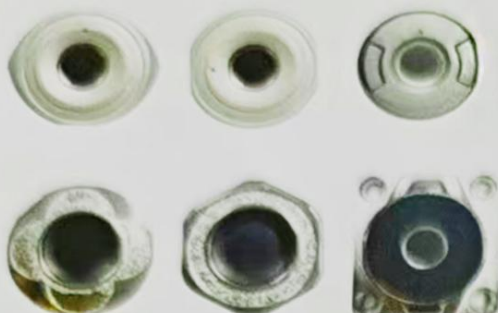

Fingerprint input demonstration

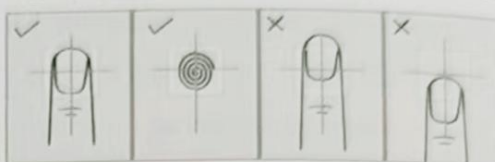

1、Functional features


- [your finger is the key]
Fingerprint unlocking is convenient
- [multi capacity]
Support up to 20 sets of fingerprints.
- [waterproof and dustproof]
The waterproof grade reaches IP65, which can effectively prevent rain and dust.
- [unlock in 1 second]
Super CPU, good recognition, high recognition rate.
- [low power consumption]
3000 times switch lock operations can be provided after full charge
- [Fast charging time]
It only takes 1 hour to fully charge
- [Emergency Morse code unlock]

2、Indicator light description

Different colors of indicator lights represent different states of equipment. Details are shown in the table below:


state	Indicator Status
Low power	Red flashing
Charging	Red light breathing flashes
Fully charged	The green light is always on
Fingerprint collection mode	The blue light is flashing
Fingerprint collection successful	green light
Fingerprint collection failed	red light
Unlocking successful	The green light is flashing

3、Description of fingerprint input of administrator (the first to third fingerprints are the administrator)

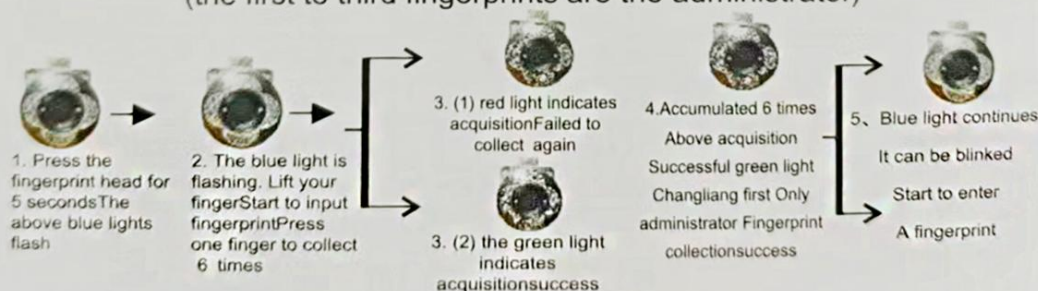

remarks: the first time to record fingerprint that need to record three fingerprints at least.

4、General user fingerprint input description

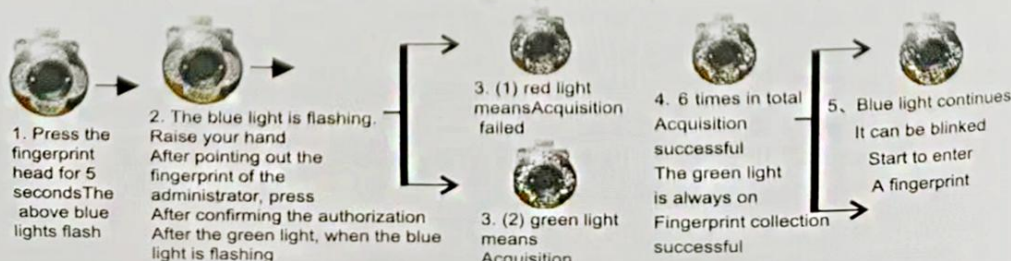

5、Emergency unlock password setting (Morse code)

1. Management fingerprint after unlocking, the middle blue light is not released, long press until the white light after release.
2. After release, the green light will turn on. Press the fingerprint to count once (for example, press 5 is the number 5) and press the time you set Count and wait for the blue light to come on.
3. After the blue light comes on, press the set number (for example, press 6 is the number 6), and wait for the blue after the set number is pressed When the indicator is off, the blinking green indicates that the setting is successful, and the blinking red indicates that the setting is incorrect.
4. When the green light presses the number and the blue light presses the number into two digits (such as 56), remember your password.

6、Emergency password use

1. when the fingerprint can not open the lock, use any fingerprint long press until the white light flashes and release.
2. After release, the green light will turn on. Press the set number of times (such as 5 times) and wait for the blue light to turn on.
3. Press the set number of times (such as 6 times) after the blue light comes on, and then wait for the light to go out.
4. If the red light blinks before the indicator is off, the password is incorrect. If the green indicator blinks, the password is correct.
5. After the password is correct, the lock will be automatically opened and restored to the factory state. You need to re-register the fingerprint before normal use.
6. If you did not set the emergency unlock password before, please use the default password 23 (press the green light twice and then blue) Press 3 times under the light). If it is set, the default password is invalid.

7、Delete fingerprint and restore factory settings



1. Press the fingerprint head for 8 seconds The above red light is always on



2. Long red light tube Check the fingerprint once



3. Delete when the green light is on for a long time All fingerprints are restored to factory settings

8、Frequently asked questions

problem	reason	resolvent
Touch fingerprint recorder The indicator light doesn't work	The fingerprint lock is dea	Please charge the fingerprint lock
	In standby mode	Please touch the fingerprint reader
Can't charge	Is there any foreign matter in the charging por	Please keep the charging port clean and tidy
Can't unlock	Your hands are too dry	Please rub gently or breathe on your fingers
	Your hands are too wet	Please dry the sweat or water from your fingers
	The fingerprints are not clean	Please keep your fingers clean
	The fingerprint reader is not clean	Please clean the fingerprint reader

9、Warning

The following conditions may cause equipment damage, personal injury or loss of life, please operate with care

1. Don't put fingerprint padlocks in your mouth or body.
2. Keep away from flammable and explosive gases.
3. Make sure that the output of the adapter is 5V when charging.
4. Do not insert foreign objects into USB port or keyhole.
5. Don't put fingerprint padlocks in water or other liquids.
6. Don't put fingerprint locks on fire
7. When you unlock the lock, the red light flashes, indicating that the battery is low. Please charge it in time, In case the battery is out of charge and can't be unlocked
8. For more convenience, please fully charge before installation, recording more fingerprints
9. Note that the charging cable and the usb charging port are inserted in the corresponding direction.