#### **ASSEMBLY INSTRUCTIONS**

ASSEMBLY REQUIREMENTS 2-Person Assembly 1 Hours Assembly Time (Approximate)

Tools Required (Not Provided)

Phillips
Screwdriver



#### Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damage parts or hardware.

Replacement parts are normally shipped within 2 or 3 days.

#### **ASSEMBLY PREPARATION:**

- 1. Remove all packaging materials, staples and packing straps from the carton.
- 2. Refer to Parts List and Hardware List. Ensure all the parts, hardware and quantities are correct before assembling the product. Contact customer service for missing parts.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

#### **SAFETY PRECAUTION:**

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

#### TIPS FOR ASSEMBLY:


- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Identify all of the parts, hardware and quantities required for each step.
- 4. During assembly, do not over-tighten any fittings as this may cause damage.
- 5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6. Always place the product on a flat, level surface.
- 7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

#### **CARE AND MAINTENANCE:**

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and pull your furniture.

This product is for indoor and household use only - not for commercial or industrial use.

# **ASSEMBLY INSTRUCTIONS**

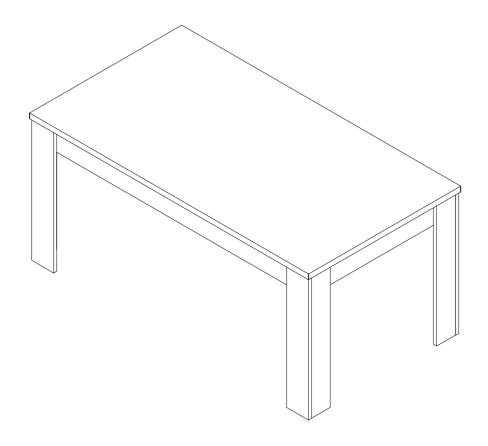

#### HARDWARE LIST

NO.	DESCRIPTION			EXTRA
А	<i>\$1111111118</i>	CSK SCREW M4 X 30MM	16	1
В		WOOD DOWEL (Ø8 X 25MM)	84	1
С		9047975 BOLT DOWEL DU319 20X5MM	44	


NO.	DESCRIPTION			
D		9064684 CAM 15/15	44	
Е		PLASTIC LEG STUD	12	
F		GLUE	4	

<sup>\*</sup>EXTRA HARDWARE FOR SPARE USE.

#### PARTS LIST


NO.	PART NAME	QTY	NO.	PART NAME	QTY
1	LEG PANEL (A)	2	6	APRON (B)	2
2	LEG PANEL (B)	2	7	TOP SUPPORT	2
3	LEG PANEL (A)	2	8	SUPPORT RAIL	2
4	LEG (PANEL (B)	2	9	TOP PANEL	1
5	APRON (A)	2		ı	

#### PARTS LIST - ASSEMBLY OVERVIEW

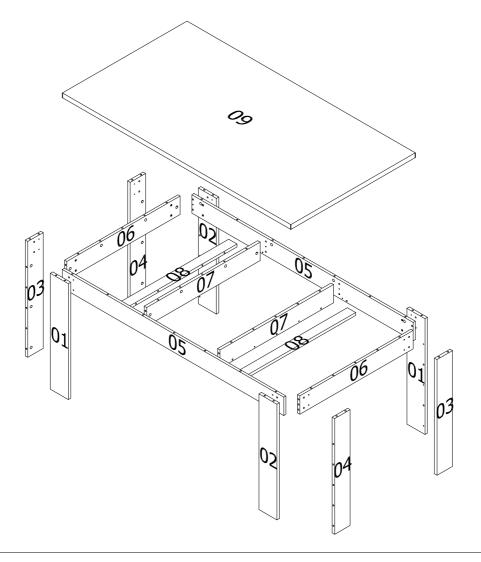


# Instructions For Fastening CAM-BOLT and CAM-LOCK



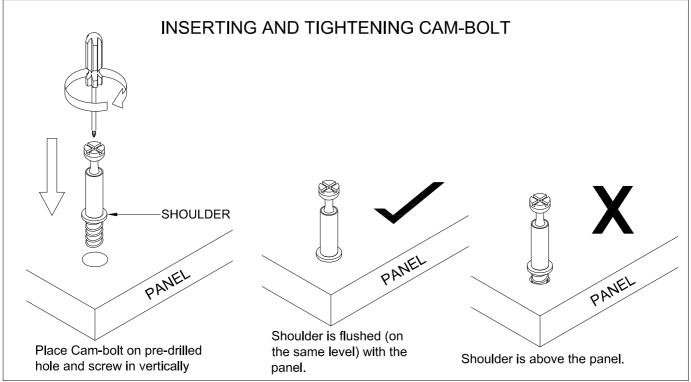


Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel. Do not over-tighten or under-tighten.

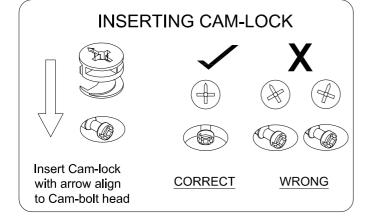



#### **CAM-LOCK**

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

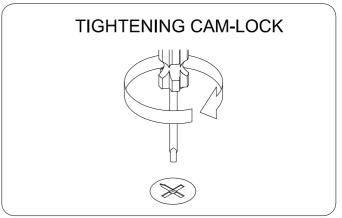



Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about one half a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

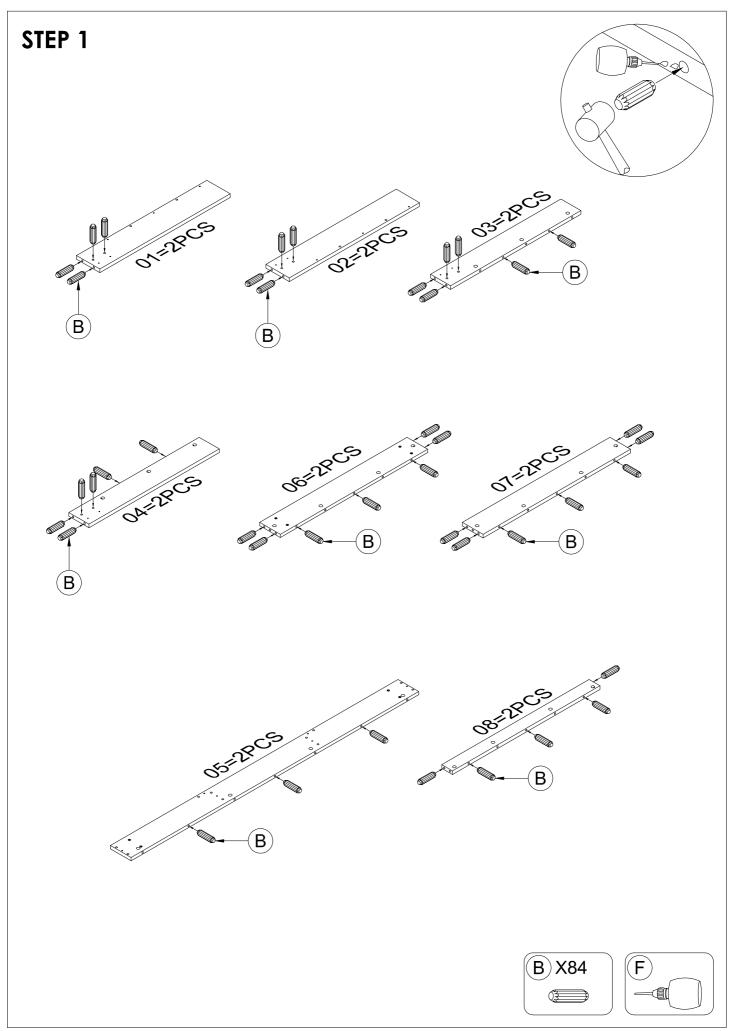


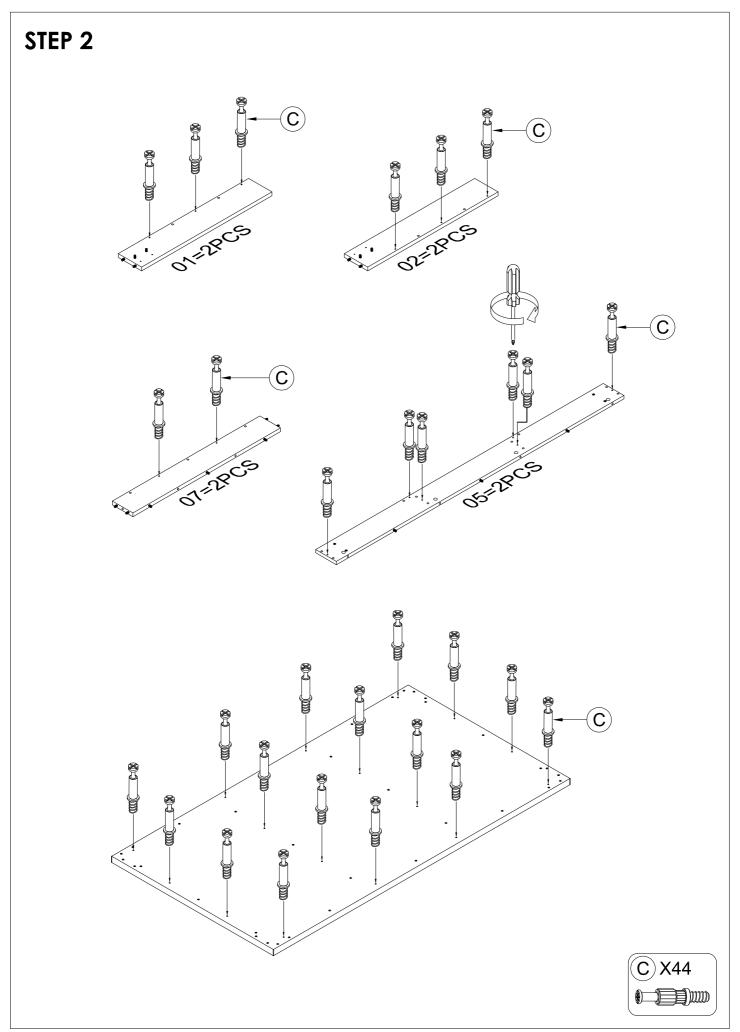

### STEP 3

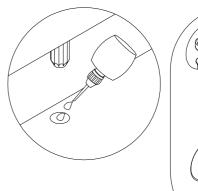


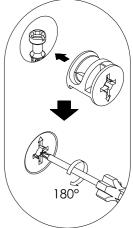


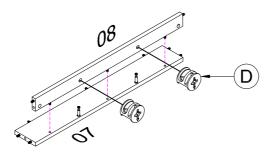


# **X2**



 

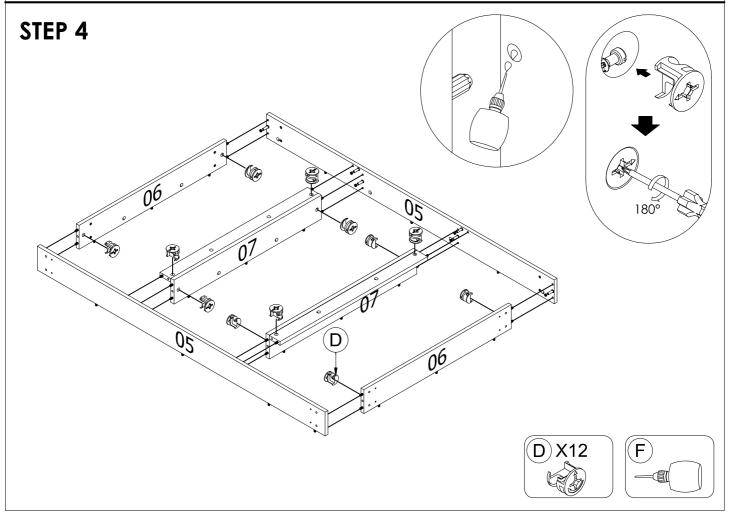



# STEP 5 03 06 8X (A) F

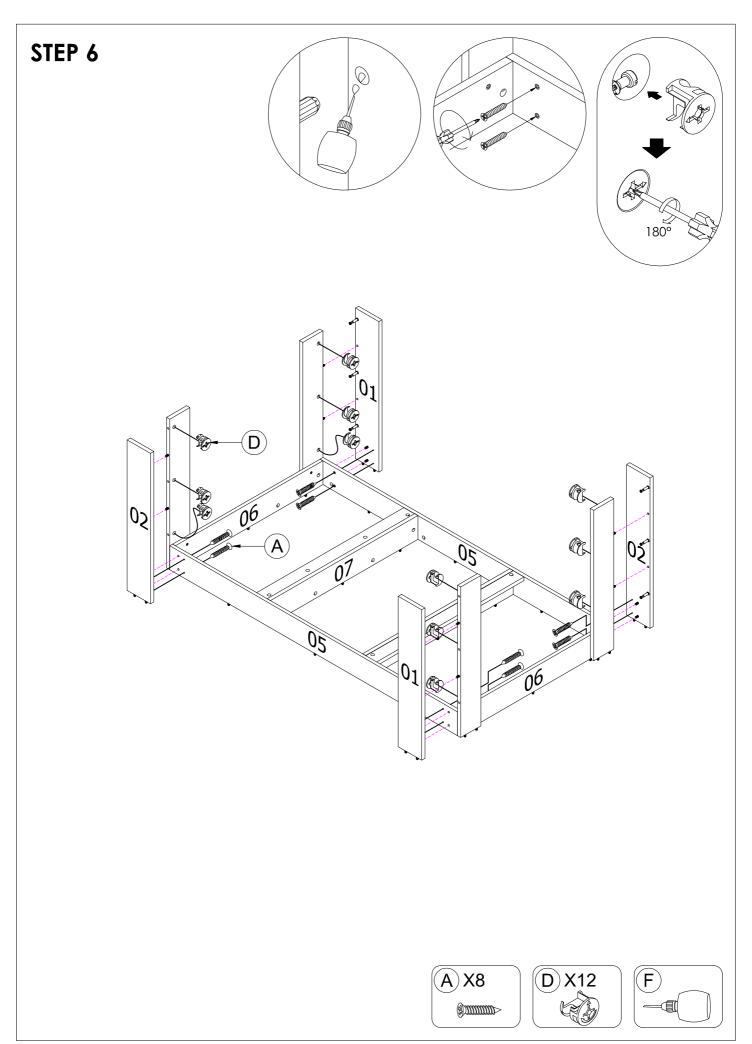

# STEP 7



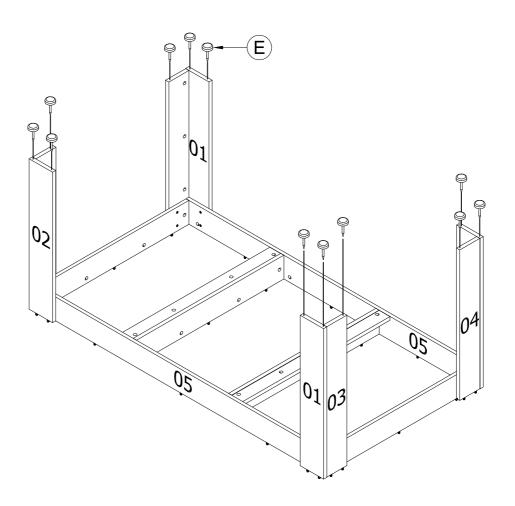

 

# STEP 8 180° D οS $|01|_{03|}$ 09 D X16 F

