


DC7Y100 Assembly Manual

 

Dining Chair

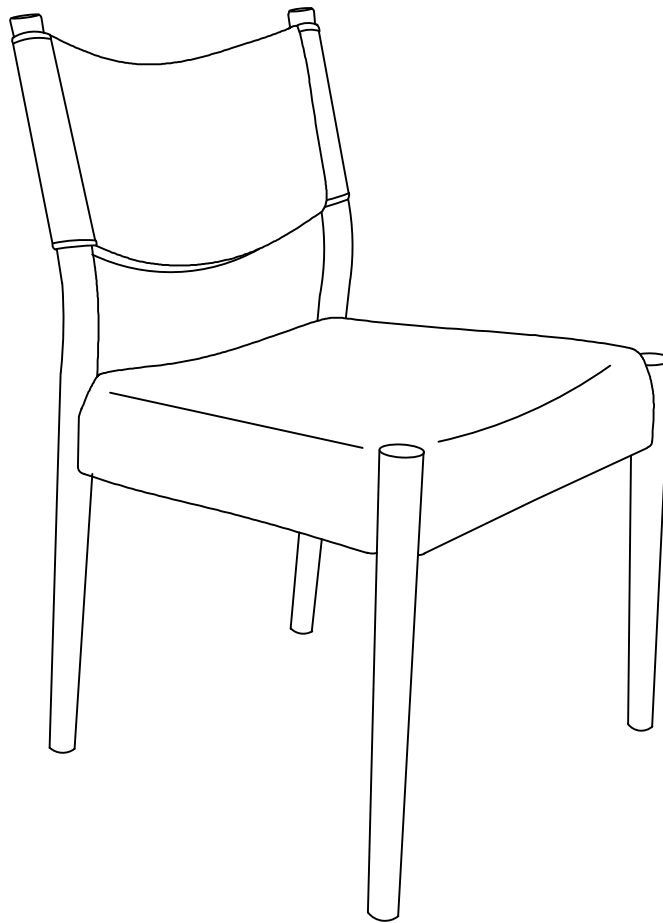

CS.furniture@outlook.com

 CAUTION


THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

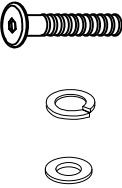A x 1  Backrest	B x 2  Front Leg	C x 1  Seat Cushion	H1 x 8  M6 x 90mm Bolt
H2 x 8  5/16" Spring Washer	H3 x 8  1/4" x 19mm Flat Washer	H4 x 1  M4 Allen Wrench	 Extra Hardware

Before you begin:

1. Check if you have received all parts using the diagram on this page. Do not start the assembly process until all parts are present. If you have not received all parts or received wrong or damaged ones, please contact our customer service and we will get back to you.
2. Do not discard any of the packaging until you are certain that you have all the necessary parts for the assembly.
3. Do NOT use power tools for assembly.


- 1 Tear off the non-woven cover under the Seat Cushion (C).

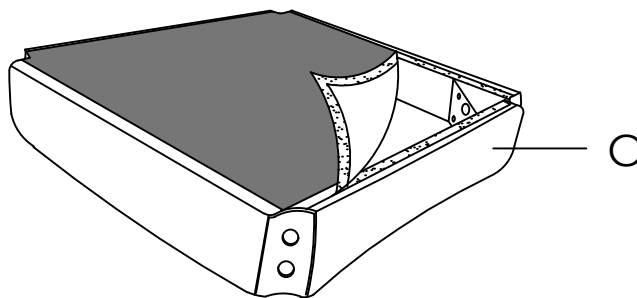


- 2 Attach the Front Legs (B) to the Seat Cushion (C), using Flat Washers (H3), Spring Washers (H2), Bolts (H1) and the Allen Wrench (H4).

Do Not Fully Tighten Yet.


Note: Please pay attention to the Front Sticker.

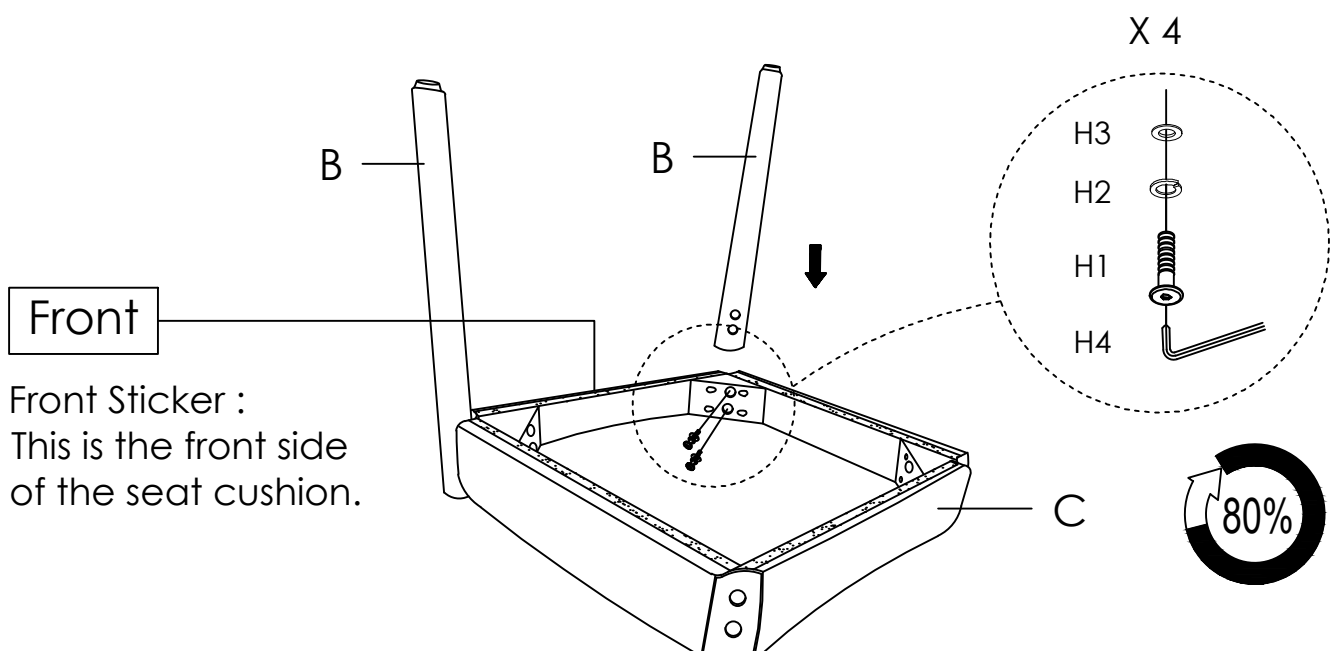


- 3** Attach the assembled Seat Cushion (C) to the Backrest (A) using Flat Washers (H3), Spring Washers (H2), Bolts (H1) and Allen Wrench (H4).
Do not fully tighten yet.

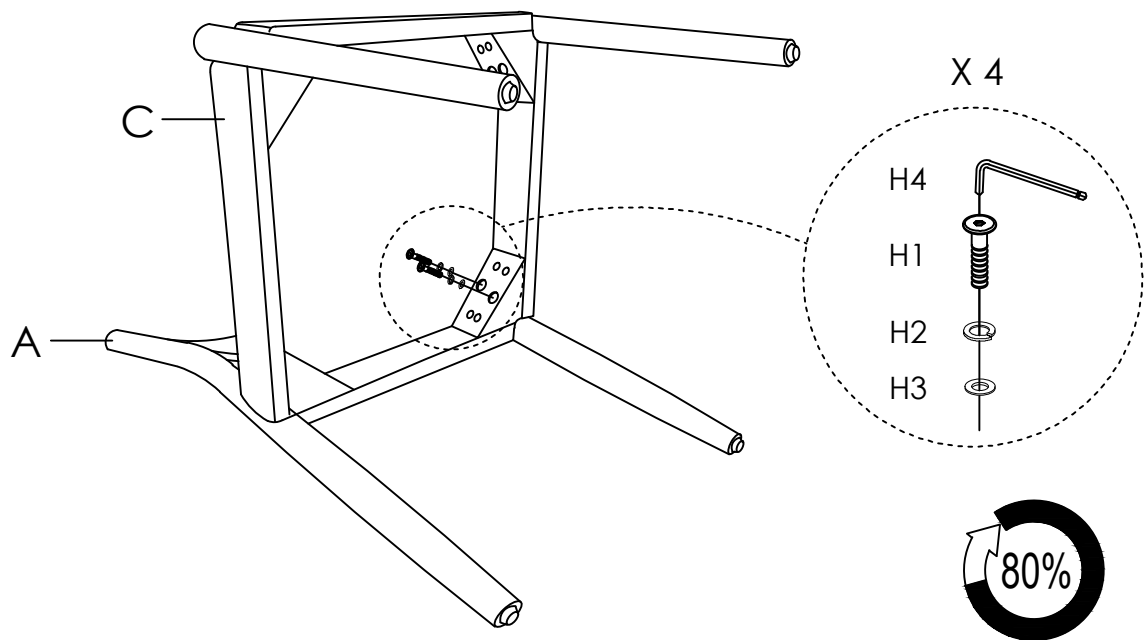


- 4** Turn assembled chair upright and place on a flat surface. Push legs up or down as necessary to level.

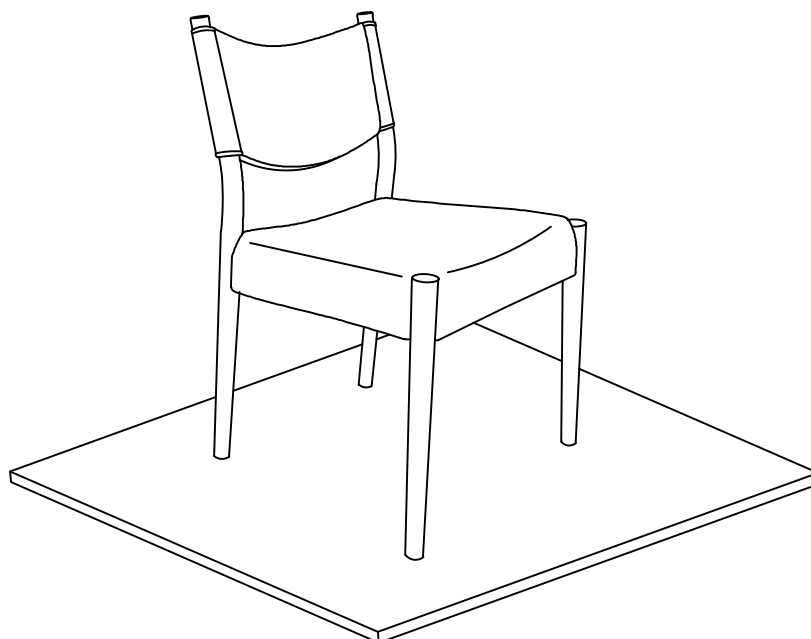


- 5** Use the Allen wrench (H4) to tighten all of the bolts from step 2 and step 3 as indicated below.

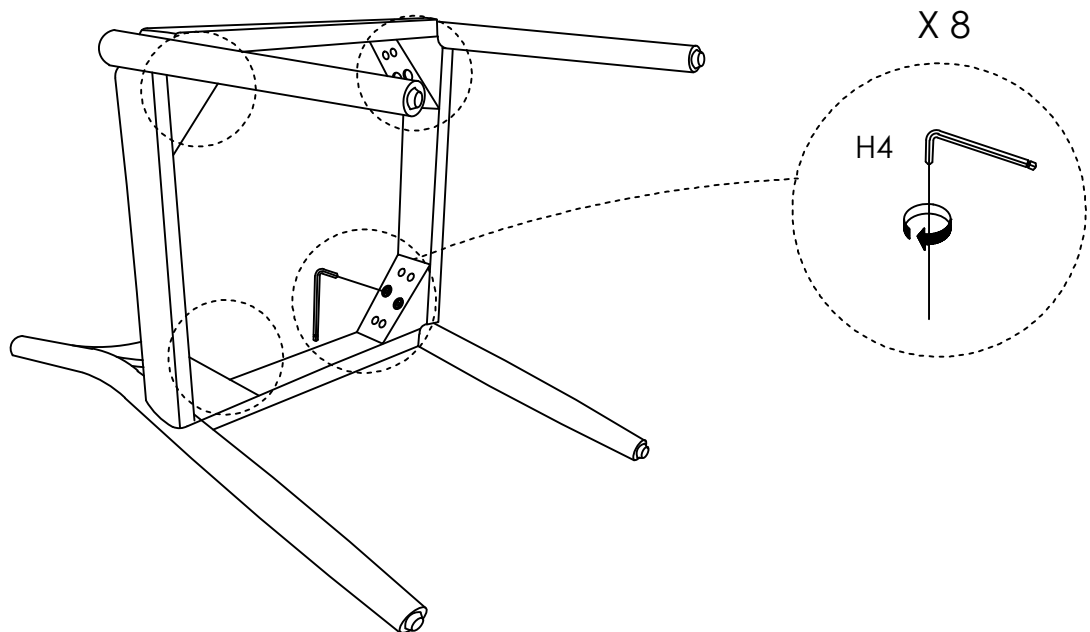

- 6** Stick back the non-woven cover on the dining chair seat cushion after complete assemble.

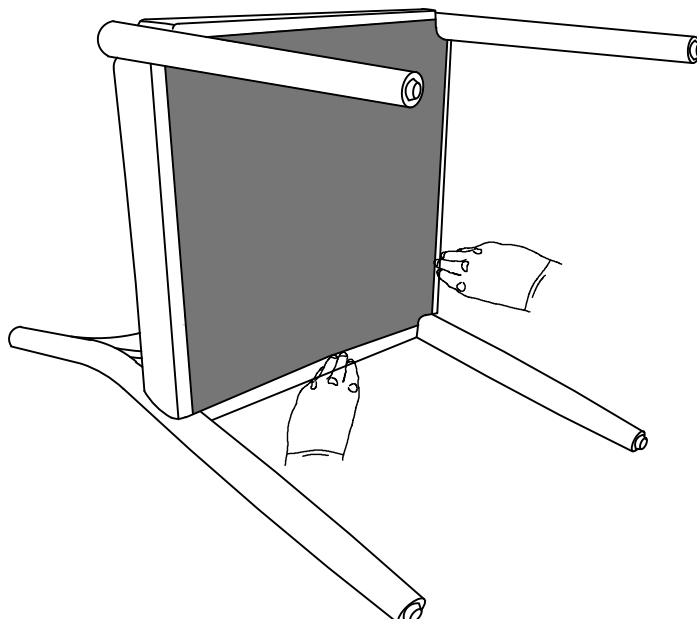

- 7** Note: Each leg has an adjustable foot leveler to help level the chair.

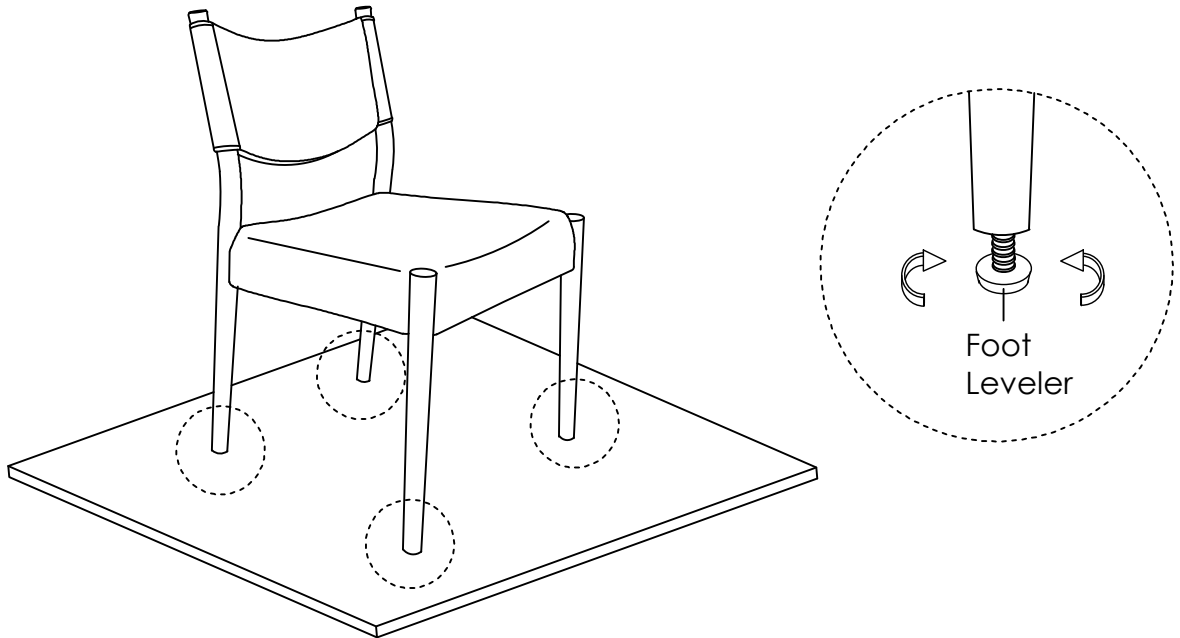

Design Exquisite Furniture For Your Home

PRODUCT WARRANTY

- . 1-year limited on cover against splitting, peeling, and/or tearing.
- . 1-year limited on internal and external frame structure.
- . 1-year limited on cushioning material, seat springs and mechanism.

Contact us:

We make all efforts to guarantee that the products you receive are in excellent condition. If there are any parts missing or damaged, the Customer Service Team will be happy to provide free replacements for you. We have professional warehouses where the current inventory of parts is enough so that will arrive in your hands as fast as possible.

Assistance with assembly or product details is available; don't hesitate to get in touch with us to get priority service.

Our E-mail address: CS.furniture@outlook.com.



CS.furniture@outlook.com