

Professional Ionic Standing Hair Dryer



Operating Instructions / Safety Guide

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.
- KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electric parts are electrically live even when the switch is off.

To reduce the risk of death by electrical shock:

- Always “unplug it” immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner or dropped into water. Return the appliance to us for repair or replacement.
- Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Attachments will be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating or while switch is turned on.
- While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
- Do not operate with a voltage converter.


SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

TO ASSEMBLE UNIT:

1. Remove all components from the box as per (Figure.1)
2. Connect the Telescoping Tube to the Center Hub. Place the Center Hub on the floor or flat surface and push down firmly while rotating the tube clockwise until it reaches the bottom of the Hub. (Figure.2)
3. Turn the Center Hub with tube over and begin connecting each of the (5) legs to the Hub making sure they are pushed in as far as possible. (Figure.3)
4. Place the Metal Plate over the recessed middle area of the Center Hub and tighten into place using the “L” shaped bolt manually so the legs, center hub and telescoping pole are all secured together. (Figure. 4 and 4A)
5. Place the wheel base on the floor with telescoping tube in the upright position. Extend the Telescoping Tube to the desired height.
6. Place the Bonnet Hood on top of the Telescoping Tube by inserting the top of the tube into the attachment opening on the back of the Bonnet Hood.(Figure.5)
7. **Note:** The front visor may be adjusted up and down to the desired position. The rear visor is fixed into permanent position so don't try to adjust it.

IMPORTANT: The front visor must be in the lowest position for the power of the Bonnet to turn on. The unit is now assembled.

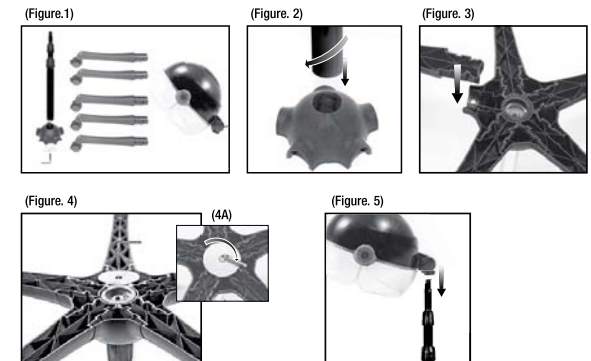

HOW TO USE YOUR ROLLABOUT DRYER:

1. Find a comfortable location for using the dryer. For your convenience, the base has wheels with (2) locks that make it easy to move around and set in place.
2. Adjust the height of the Bonnet Hood by loosening the lower adjustment ring first. When this ring is loose, raise the lower portion of the Telescoping pole to the desired height, then tighten the ring. Repeat the process above for the upper section of the stand if needed.
NOTE: Make sure you tighten each of the height adjustment knobs securely in order to support the weight of the hood during use.
3. Make sure the power/heat control switch is in the OFF position and plug cord into an electrical outlet.
4. Use the convenient clips to fasten the cord onto the telescoping tube.
5. The Front Visor must be pulled down completely or the unit will not turn on.
IMPORTANT: For the unit to operate, the face shield must be in the down position. As soon as you raise the shield, the unit turns off automatically.
6. Adjust the airflow vents by sliding the switch inside the front of the hood.
7. Select the temperature. This dryer features a power switch with (3) temperature settings including Cool.
 - Use the Hi Heat setting to dry wet hair and then switch to the Lo Heat setting as hair starts drying.
 - To dry synthetic wigs or hair extensions, always use the "LoHeat" setting.
 - The "Lo" Heat Setting is also ideal for intensifying conditioning treatments.
 - Use the Cool setting to help set the style.
8. To select the Ionic function, turn the Ionic ON(-) / OFF(O) switch to the ON position. The built-in Ionic Generator in this dryer will automatically emit millions of negative ions for overall hair conditioning while helping to minimize static frizz.
NOTE: The Ionic generator also helps to reduce drying time and leaves hair shiny, free of static electricity.
9. To turn off the unit, raise the face shield or turn OFF the power temperature control.

USER MAINTENANCE INSTRUCTIONS

MAINTENANCE

This appliance requires no special user maintenance or lubrication. Should your dryer require cleaning, unplug it first then simply wipe the outer housing with a damp cloth.

Air-Intake Grille

Clean removable air-intake grille as well as fixed grille with a small brush or a vacuum cleaner brush attachment to remove lint and dust buildup.

1. To remove the grille at the top of the hood, place thumb on the large tab, apply pressure and push up to loosen grille then lift off.
2. To replace grille, insert small tab into small slot on the hood then press grille down until it snaps into place. Each time you use the appliance untwist the cord to avoid tangling and internal damage.

STORAGE

Store in a clean, dry place, out of reach of children. Never store it while still hot or plugged into an outlet. Never wrap the cord tightly around the unit. **Do not** pull the appliance by the power cord and avoid jerking or straining especially at the point where it enters the unit and at the plug connection.



WARRANTY Owner Warranty certificate

Product name:	Warranty period:
Model:	Invoice number:
Place of origin:	Date of purchase:

Maintenance records

Repair date:	Date of inspection:
Failure, maintenance, handling of:	
Maintenance units:	Repairer's signature:



Service Email: sdtproservice@outlook.com