

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Safety

- This product is intended for indoor use only.
- Never expose the product to impacts, shocks, moisture or water.
- Do not place the product where there is a risk of it falling into water or other liquids.

Battery-operation (AA/LR6 batteries sold separately)

1. Open the battery compartment on the bottom of the Christmas village and insert batteries . Refer to the markings in the battery compartment to ensure correct polarity. Never mix old and new batteries. Never mix rechargeable and non-rechargeable batteries.
2. Refit the battery compartment cover.

Care and maintenance

- Carefully vacuum the Christmas village as necessary. Set the vacuum cleaner to a low suction power setting.
- Whenever it is not to be used for an extended period, the batteries should be removed from the product and it should be stored in a dry, dust-free environment, out of children's reach.

Responsible disposal

This symbol indicates that this product should not be disposed of with general household waste. This applies throughout the entire EU. In order to prevent any harm to the environment or health hazards caused by incorrect waste disposal, the product must be handed in for recycling so that the material can be disposed of in a responsible manner. When recycling the product, take it to your local collection facility or contact the place of purchase. They will ensure that the product is disposed of in an environmentally sound manner.

