
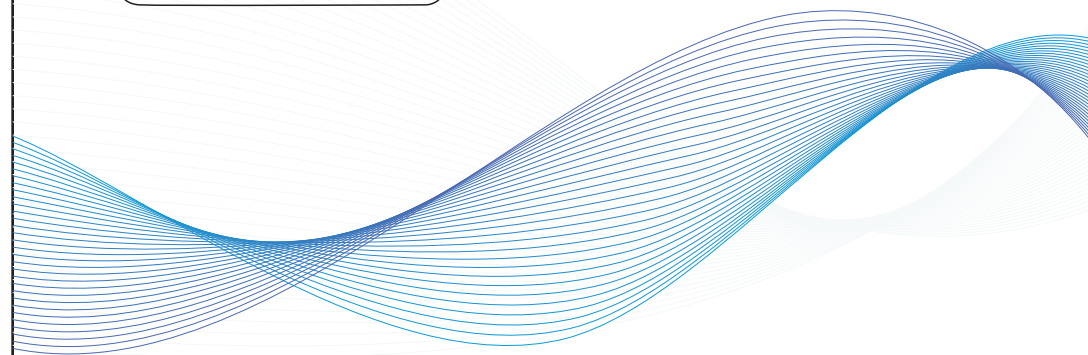


**COMFORT  
IN  
THE BOX**


**Thank you for choosing**

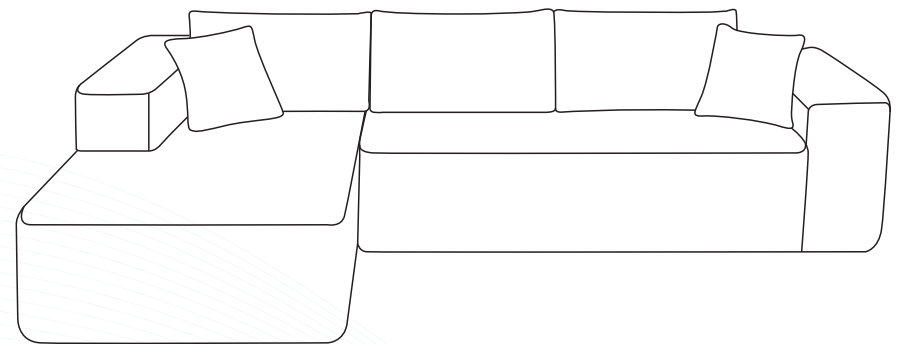

# Compressed sofa


--HOW TO UNPACK YOUR SOFA

1

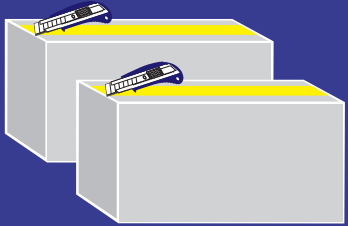


LAY DOWN THE PACKAGE IN YOUR ROOM . AND OPEN IT WITH THE SCISSORS PLEASE DO IT WITHIN 72 HOURS OF RECEIPT.

2

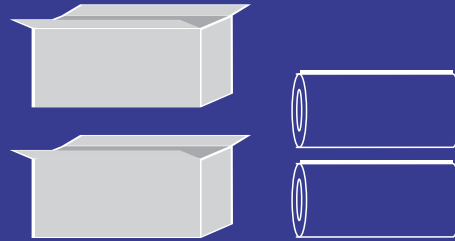


TAKE THE SOFA OUT OF THE BOX

3

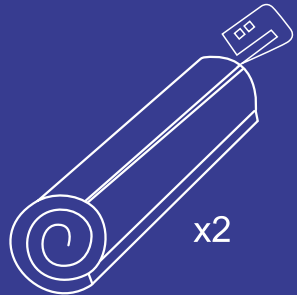


REMOVE THE SOFA FROM THE PLASTIC BAG. DO NOT USE KNIVES OR SCISSORS, SINCE THEY MIGHT DAMAGE YOUR SOFA.

4

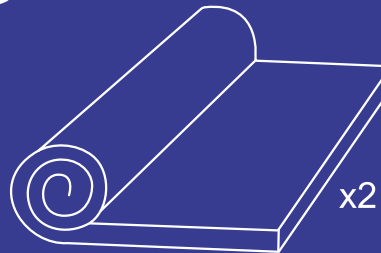


UNFOLD THE COMPRESSED SOFA ONTO A CLEAN SURFACE.

5

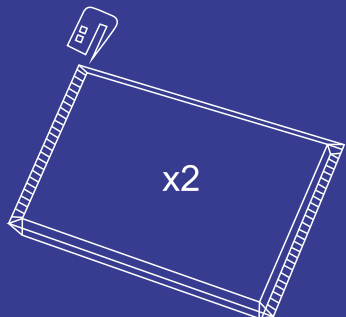

CAREFULLY OPEN THE PLASTIC BAG ALONG THE EDGE AND DECOMPRESS THE SOFA. TAKE OUT THE BAG.

6

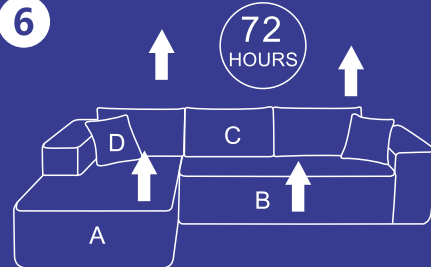

Ax1 Bx1 Cx3 Dx2

ALLOW UP TO 72 HOURS FOR THE SOFA TO FULLY RETURN TO ITS ORIGINAL SHAPE, ALSO LET IT AIR IF THERE ARE ANY ODORS.

## Compressed sofa LIMITED WARRANTY

### How long does it last?

It will run for 1 year from the date of purchase.

### What's covered?

It covers any defects in materials or workmanship and it applies only to the original purchaser .

### What's not cover?

- (1) Normal changes in softness or resilience
- (2) Normal impressions less than 1.5 inches in depth
- (3) Wear and tear
- (4) Stains in use
- (5) Misuse or improper maintenance
- (6) Alteration or repair by unauthorized representatives
- (7) Damages resulting from transit or handling