

Early Education by Flash Furniture Hercules Art Easel




User Guide

Children will enjoy painting and drawing again and again with this sturdy, wooden, free-standing easel. Water based markers may be used on the clear acrylic window to let kids express their creativity. When art time is over, simply wipe clean with a damp cloth to be ready for the next art session. A built in bottom tray holds markers or paint brushes. The multi-functional design of this stand enables other wall elements or panels to be inserted over the acrylic window for endless hours of educational fun.

Skills:

- Imaginative Play
- Creative Expression

Hercules Free-Standing STEM Easel
MK-ME03669-GG

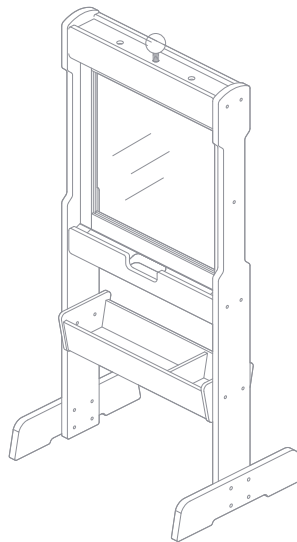

No Tools Required

Simply loosen the top wooden knob to insert or remove panels or wall elements.



Congratulations!

You just purchased a piece of happiness. At Belnick, we believe you can transform your spaces into the most inspired places with furnishings that are the perfect combination of form, function and style. As original innovators of online furniture retail, we offer the best selection of popular, contemporary styles at cool, comfortable prices. And, with decades of proven shipping and packaging expertise, our Extended Quality Checklist ensures a rewarding, hassle-free experience time and time again. It's just what you need to bring your vision to life.

Thank you & Enjoy!!

your friends at Belnick



LIKE IT!

*Share it on social
& Tell a friend!
#Spaces2Places*



LOVE IT!

*Write an online
product review
where purchased*



NOT SURE?

*Let us help!
Contact our
customer support.*

Have a question, concern or simply need a hand? Your satisfaction is our top priority. Contact us at 866-552-2810 or customerexperience@belnick.com. We're here to help!

Browse Our Branded Collections

There's something for everyone inside our family of brands.



MERRICK | LANE

Emma+Oliver

TAYLOR + LOGAN

BlackArc

Visit www.belnick.com/brands or scan this code to go even faster!



BELNICK

ONE VISION. ENDLESS POSSIBILITIES.



We pride ourselves on providing an excellent customer experience starting right here with your package and instructions. Everything you need should be right where you need it, so you can get to enjoying your new item ASAP. But despite our best efforts, sometimes "slips happen." If you need any support, from replacement parts to recommendations, please reach out to our wonderful customer support team at 866-552-2810 or customerexperience@belnick.com. We're here to help!

EVERY BELNICK PRODUCT



Quality &
Durability Tested



Packaged
with Care



Shipped from
our U.S. Facility



Designed
for Easy
Assembly




Ethically
Sourced

Please visit <https://www.belnick.com/warranty> for complete warranty information.

Read this manual before using this product. Failure to follow the instructions and safety precautions in this manual can result in serious injury or death. Keep this manual in a safe location for future reference.

Installing a Wall Element


Easily adjusts to fit your needs in minutes. Turn the wooden knob on the top counter-clockwise to loosen the frame. Insert the desired wall panel then twist the wooden knob clockwise to lock the top bar in place.

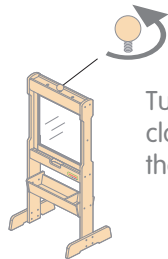

Turn the wooden knob counter-clockwise to loosen the top bar.

Step 1:


Slide the upper end of the wall element into the slot under the top bar on either side of the acrylic panel.

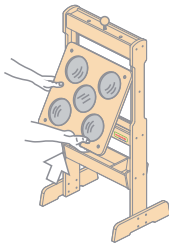

Step 1 Image

Step 2:


Move the lower end of the wall element towards the panel.

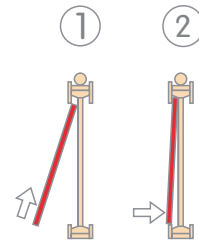

Step 2 Images

Step 3:


Let the lower half of the wall element fall into the lower slot.

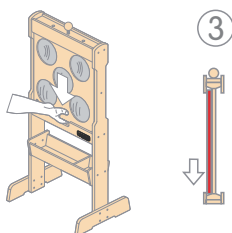

Step 3 Image

Step 4:


When the wall is in place, turn the wooden knob clockwise to tighten the topbar. The wall element is now ready for play.

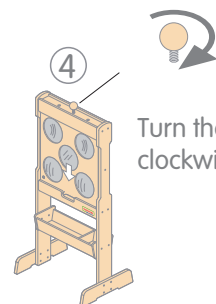

Turn the wooden knob clockwise to tighten the top bar.

Step 4 Image


Removing a Wall Element

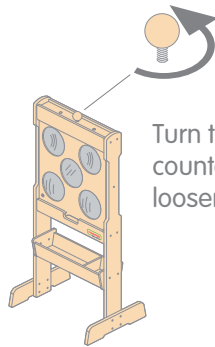

Turn the wooden knob counter-clockwise to loosen the top bar.


Step 1:

Lift the wall element until it hits the top bar.

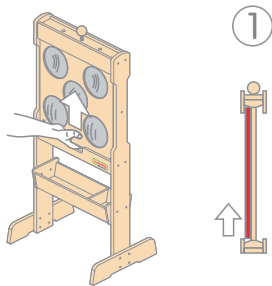


Step 2:

While the wall element is at its highest position, pull the lower end of the wall element outwards.

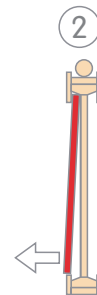


Step 3:

Pull downwards and remove the wall element from the stand.

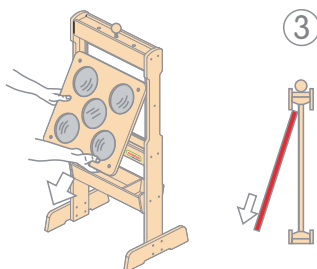

Step 4:

Turn the wooden knob clockwise to tighten the top bar.

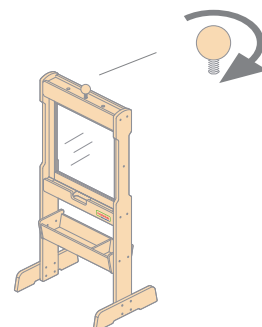

We take pride in our play, products and planet. All of our materials are ethically sourced and constructed of premium-grade wood materials including natural European beechwood and engineered wood from New Zealand. Other environmentally-friendly materials, like non-toxic water-based colors, soy ink and recycled packaging, are utilized across our entire collection.

Maintenance

Our products are preservative-free, so nothing is added that may contaminate or pollute. In exchange, a little extra care is needed. Please keep your new items in a low humidity environment and wipe clean and dry regularly.