 




43 INCH OSCILLATING TOWER FAN

MODEL NO: PM743

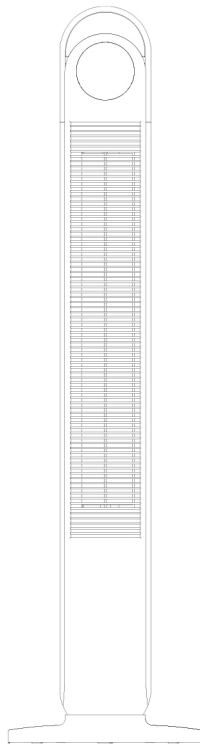

INSTRUCTION MANUAL

WARNING: To avoid damage, please ensure the item is placed on a flat and sturdy surface.

Thank you for purchasing the innovative PureMate 43 INCH OSCILLATING TOWER FAN We wish you many years of healthy indoor air with this efficient and effective product.

 
SAFETY GUIDELINES

- To avoid fire or shock hazard, plug the appliance directly into a 220-240V AC electrical outlet.
- Disconnect the power plug before dismantling, assembling or before cleaning.
- Keep unit away from heated surfaces and open flames.
- To protect against electrical hazards, DO NOT immerse in water or other liquids. Do not use near water.
- Children cannot recognize the hazards associated with the usage of electrical appliances. For this reason, always supervise children when they are near the unit.
- Always unplug the tower fan before moving it, opening the aroma Box, cleaning or whenever the tower fan is not in use. Be sure to pull by the plug and not the cord.
- NEVER drop or insert any object into any openings.
- DO NOT run cord under carpeting. DO NOT use outdoors.
- DO NOT cover cord with throw rugs, runners, or similar coverings.

- DO NOT route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Please Call Customer Service for assistance.
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- Do not operate the appliance with wet hands, in order to avoid damage.
- Do not knock or shake the body of tower fan when use, otherwise it may cause stop.
- Disconnect the power plug before dismantling, assembling or before cleaning.
- Never insert fingers, pencils or any other objects through the guards whenever Do not use the appliance for any other purpose than its intended use.
- Do not use the appliance for any other purpose than its intended use, as described in the manual.

- Always ensure the appliance is placed on a flat, stable and suitable surface.
- Do not cover or restrict airflow to the inlet or outlet grills.
- Never unplug the appliance from the mains until it has been switched off.
- Unplug the fan and store in a dry, safe place when not in use.

COMPONENTS

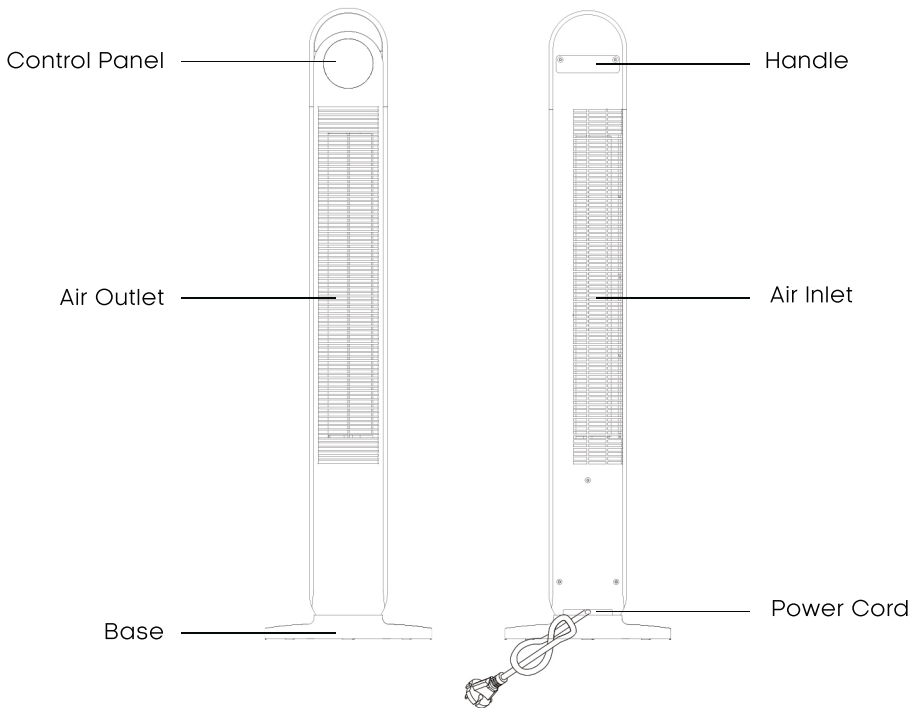


ASSEMBLY INSTRUCTIONS


- 1- Unpack and remove the tower fan. Please assemble it correctly according to the order when using it and keep the packaging materials in a safe place for storage.
- 2- Check if the parts in the package match the packing list in the manual.
- 3- Install the front and rear bases (as shown below).

Step1: First, fix the left and right two bases with four self-tapping screws.

Step2: Assemble and combined base 2 through hole on the alignment machine together, and lock the fuselage and base with 4 self-tapping screws.

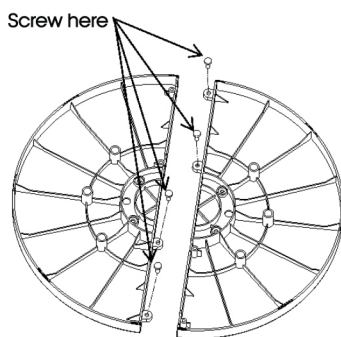


Step 1

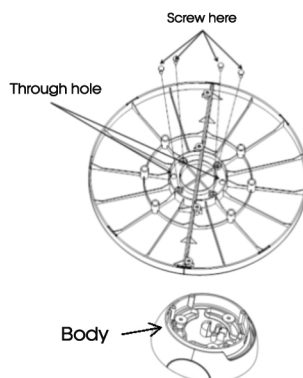

Step 2

CONTROL PANEL & REMOTE CONTROL

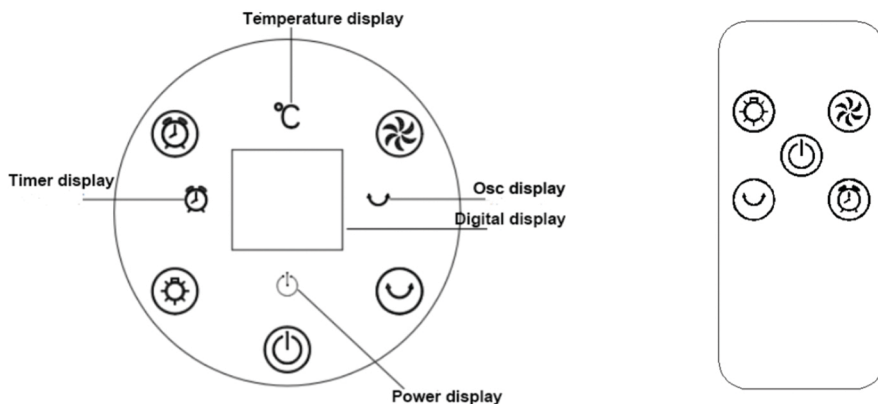

OPERATING INSTRUCTIONS

- ⏻ Press to turn on the power. Press again to turn off.
- 🌀 Press to select a fan speed. Choose between low, medium and high.
Please note: The default speed is medium.
- 🕒 Press to activate the timer function. Each time the button is pressed the timer will be increased by 1 hour up to a maximum of 12 hours.
- 🌀 Press to start oscillation. Press again to stop oscillation.
- ⚙️ Press to turn off all the lights on the tower fan display panel. Press the button again to light up.
Please note: the screen will automatically turn off after 10 minutes without instruction.

REMOTE CONTROL

NOTE: The remote control buttons perform the same functions as those on the control panel on the unit.



The remote control requires 1x CR2025 3V lithium battery (not included)

IMPORTANT

Follow the instructions of use and the recycle rules given on the battery packaging.

- 1- Open the battery compartment by sliding the cover down.
Insert the battery into the compartment,

observing the polarity in the diagram (see below drawing).
- 3- Close the battery compartment.

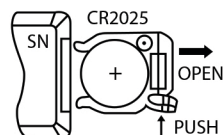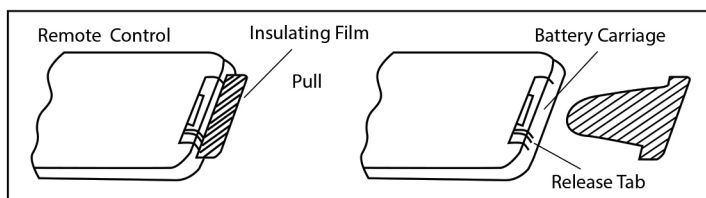

CLEANING AND MAINTENANCE

- Always disconnect the cord from the electrical outlet when cleaning your fan.
- Light accumulated dust may be removed from the fan with a soft cloth or vacuum cleaner using the dusting brush attachment.
- Wipe the exterior surfaces of the fan occasionally with a cloth moistened (not dripping wet) with a mild soap solution. Dry the case thoroughly with a soft dry cloth before operating the fan.
- Avoid the use of gasoline, benzene, thinner etc as they may result in damage to the fan.
- Store the fan in a clean dry place when not in use.

ACCESSORIES

Screws to assemble the base: Remote control , User Manual

SPECIFICATION

Model No:	PM 743
Voltage:	220-240V~50Hz
Power:	60W
Certifications:	CE, UKCA, Rohs
Product Size:	30 x 30 x 109 cm
Net Weight:	3.4Kg

DISPOSAL OF THIS DEVICE



At the end of the product life cycle, you should not throw this machine into the normal household garbage but ring the product to a collection point for the recycling of electrical and electronic equipment.

FIND US ONLINE





43 INCH OSCILLATING TOWER FAN | MODEL NO: PM743

Super Tech Health Limited
129 Shady Lane
Great Barr
Birmingham
West Midlands
B44 9ER
United Kingdom

WWW.PUREMATE.CO.UK

© Copyright 2021