

Coat Rack

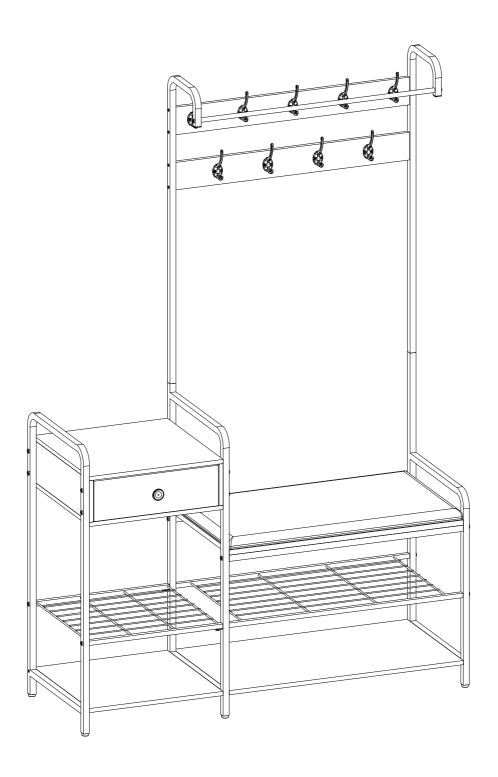


Version:1.0


1


INSTRUCTION ASSEMBLY

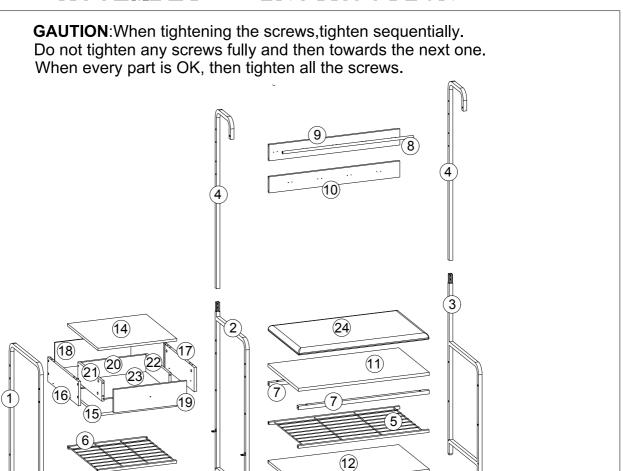

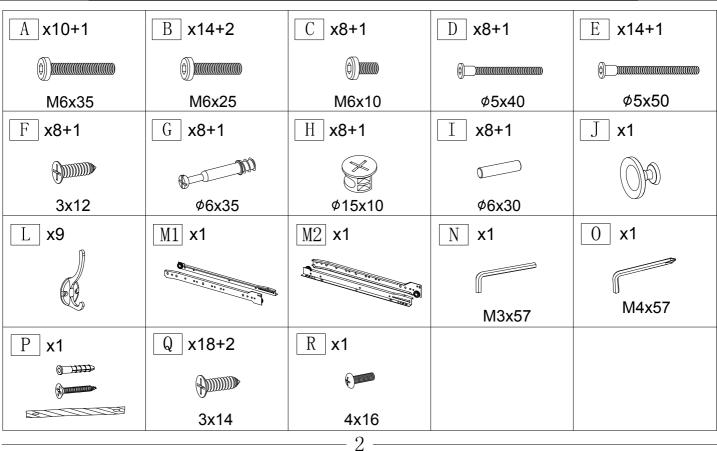


(13)

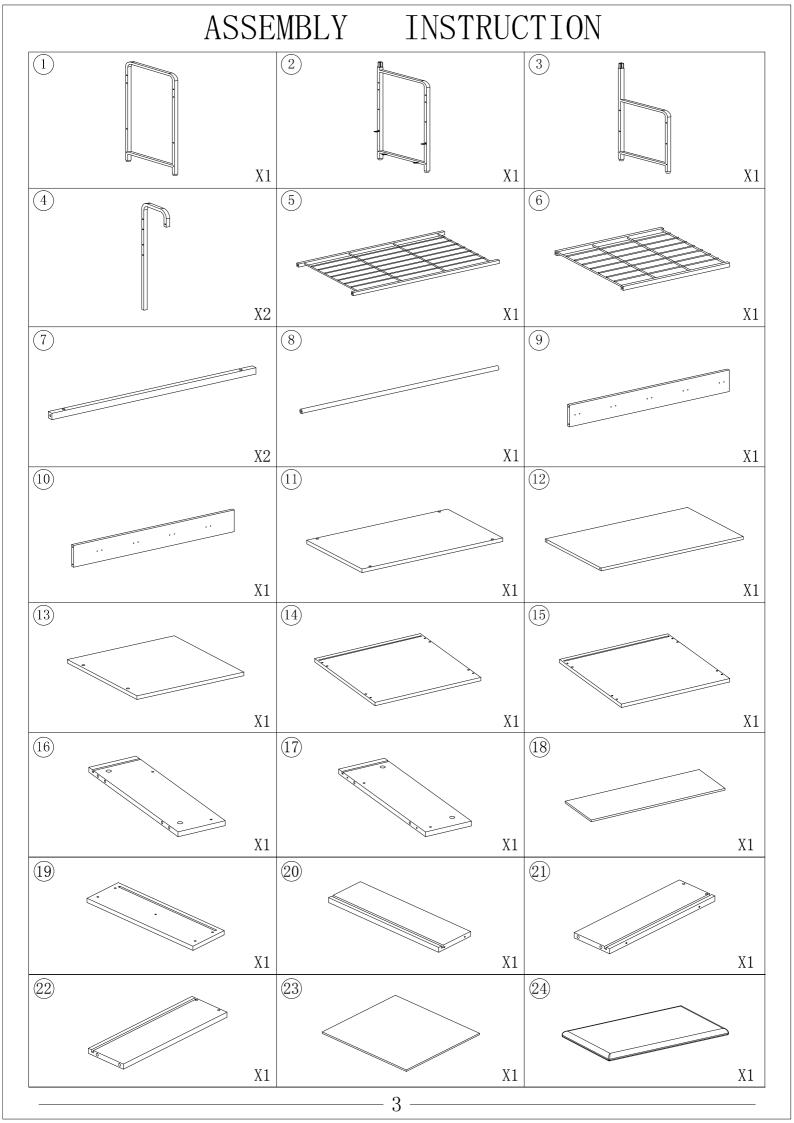

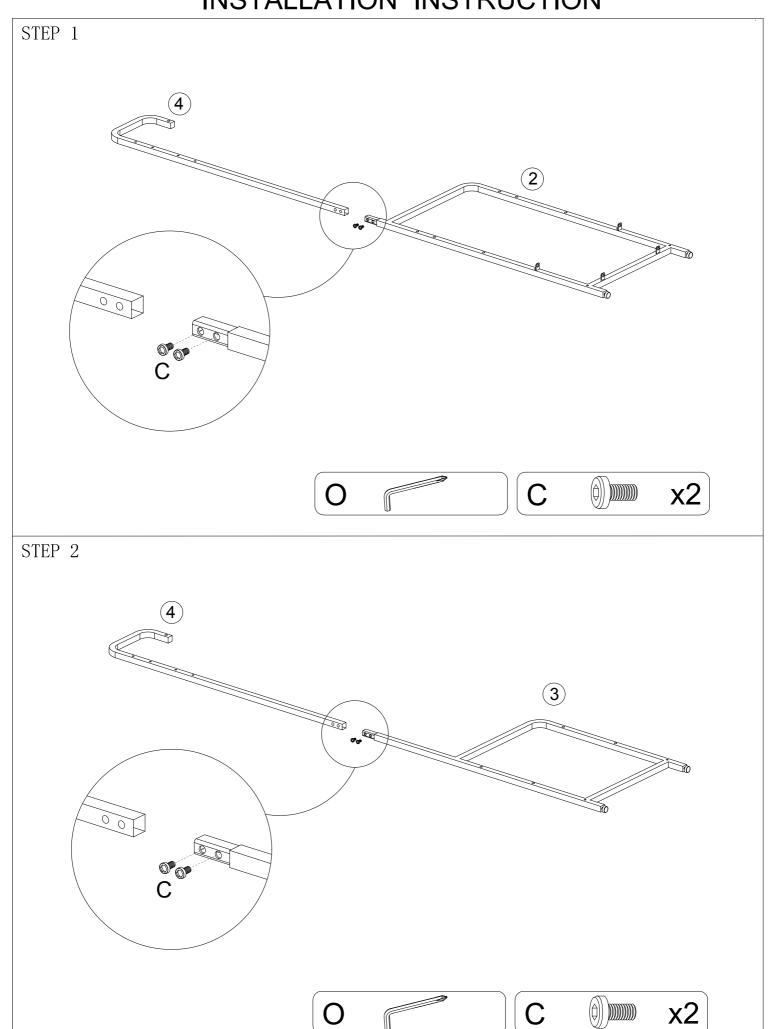

INSTALLATION INSTRUCTION STEP 3 9 K **x**5 x10 Q STEP 4 10 O **x**4 8x 5

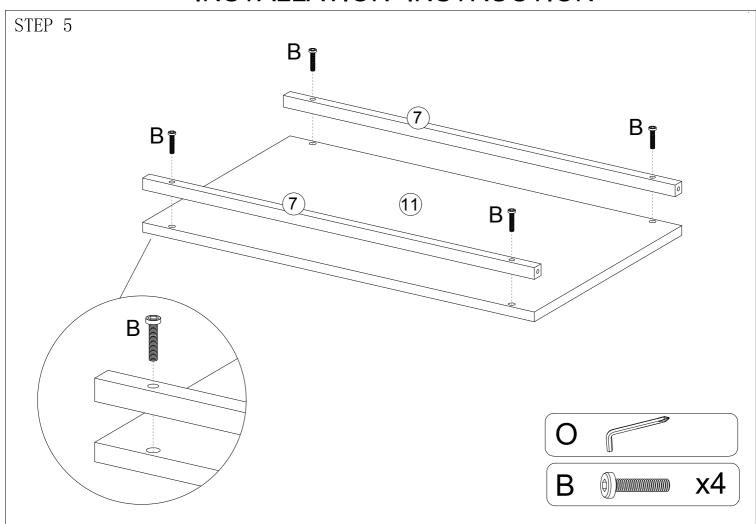


STEP 6

GAUTION: When tightening the screws, tighten sequentially.

Do not tighten any screws fully and then towards the next one.


When every part is OK, then tighten all the screws.

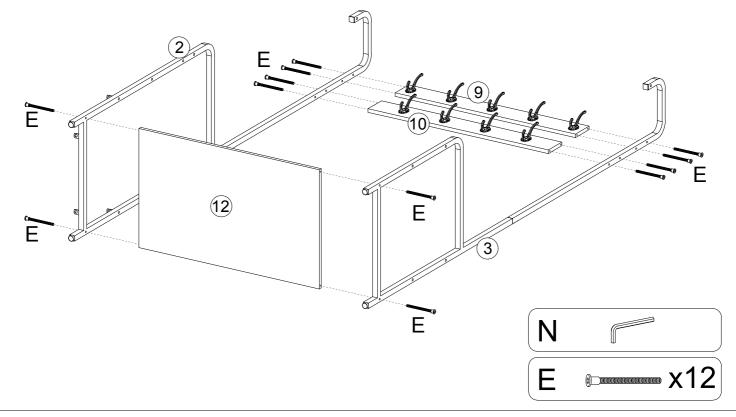

STEP 7 **GAUTION**:When tightening the screws,tighten sequentially.

Do not tighten any screws fully and then towards the next one.


When every part is OK,then tighten all the screws.

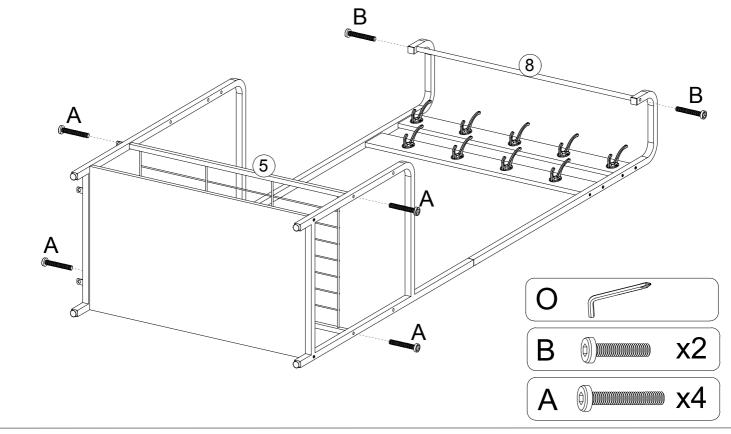



GAUTION: When tightening the screws, tighten sequentially.


Do not tighten any screws fully and then towards the next one.

When every part is OK, then tighten all the screws.

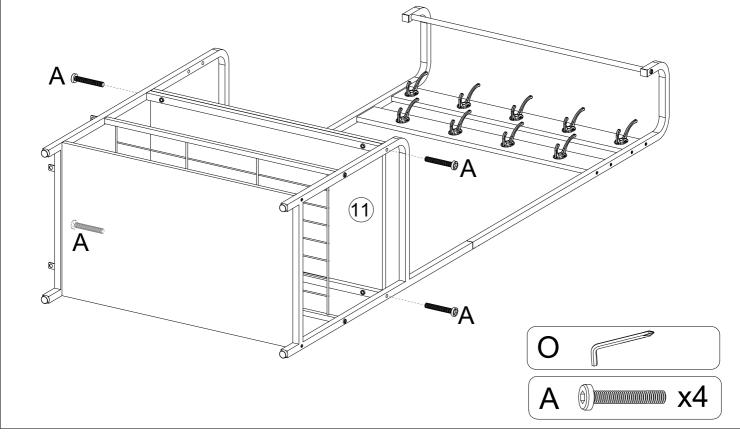


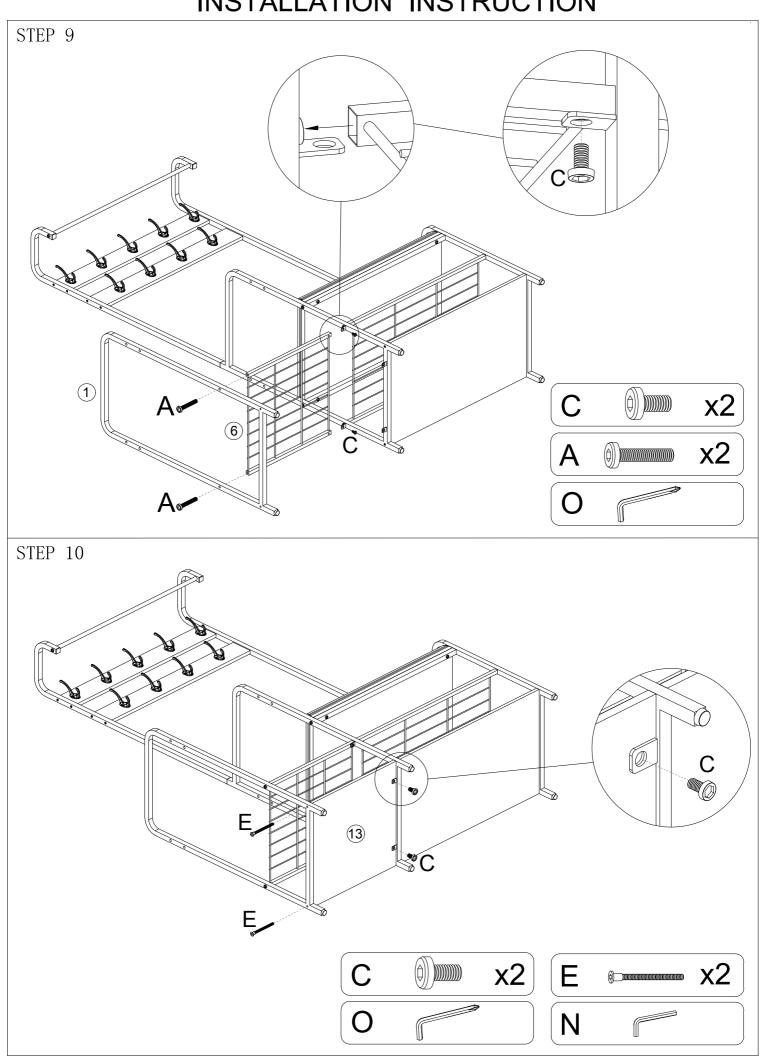

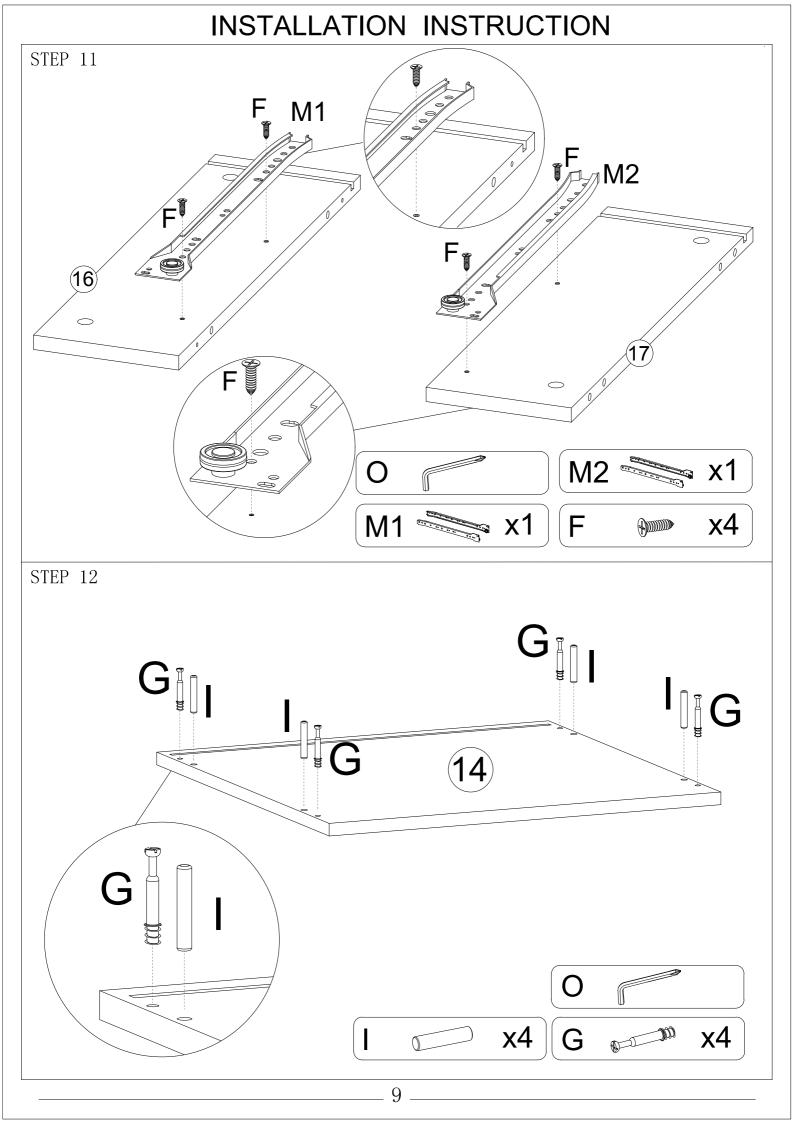


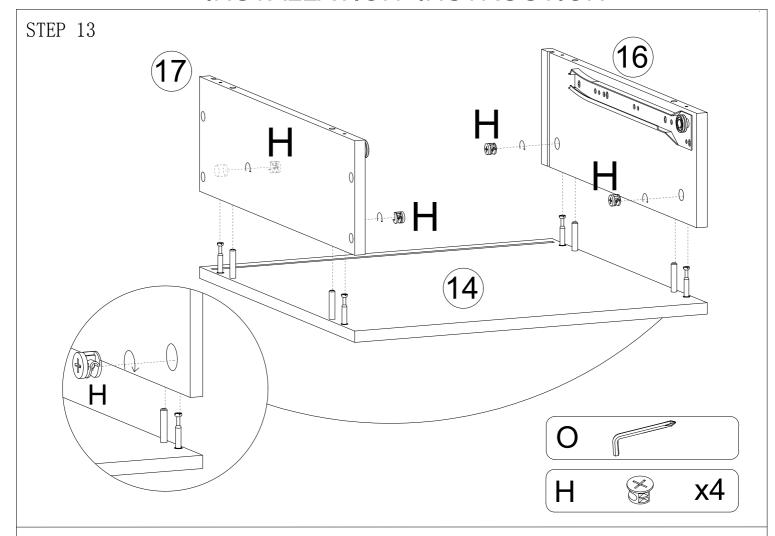




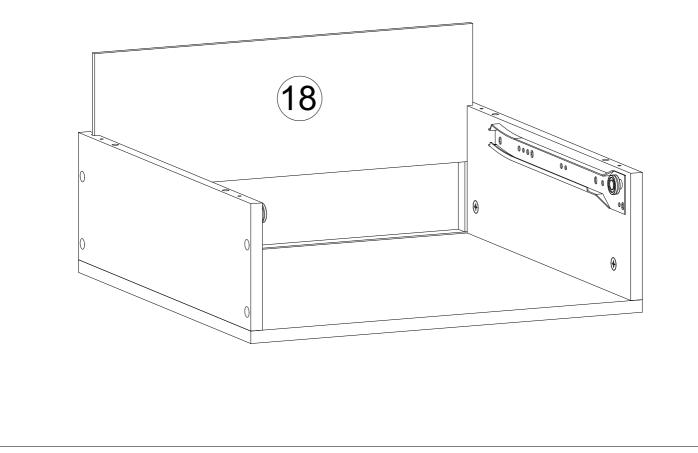

INSTALLATION INSTRUCTION STEP 15 **15**) Ν **x**4 **x**4 STEP 16 20 21 Ν **x**4 -11

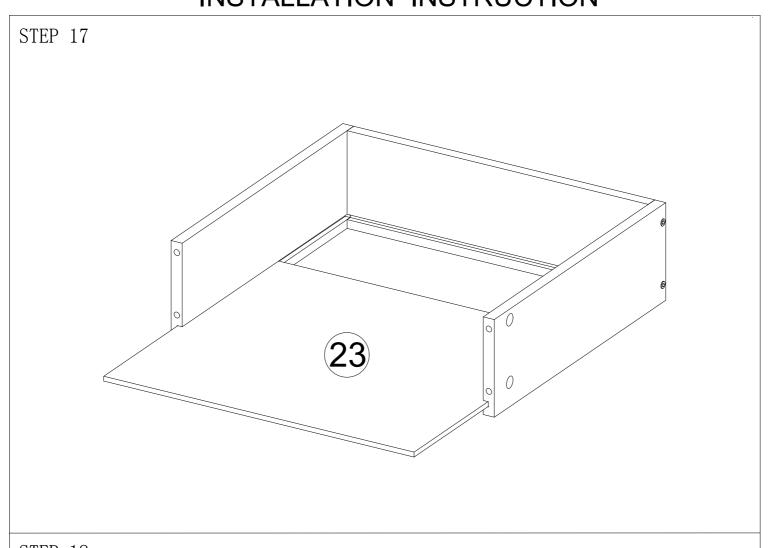

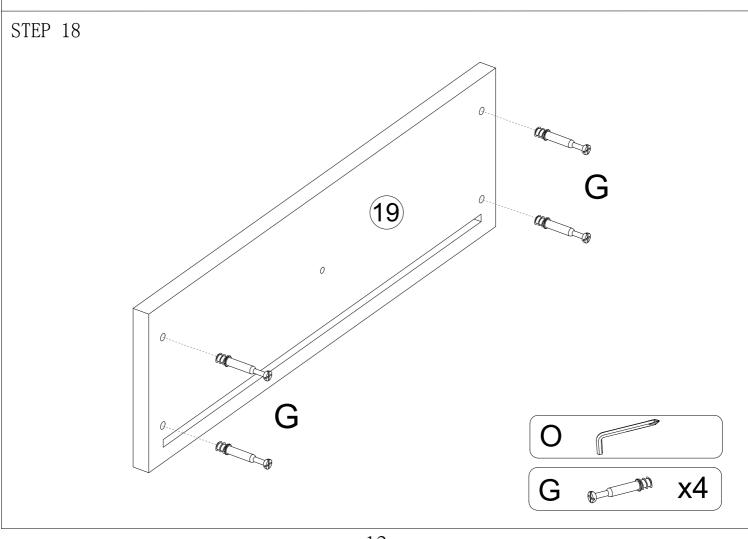

INSTALLATION INSTRUCTION STEP 19 19 O **x**1 J R **x**1 STEP 20 H 🙈 **21** 19 22 H H THE SECOND SECON **x**4 Н

INSTALLATION INSTRUCTION STEP 21 F M1 F **M2** 19 M1 **x**1 O M2 ** **x**1 F **x**4 STEP 22 B 🕽 - B

8x

В

