 

IMPORTANT – Please read these instructions carefully before assembling



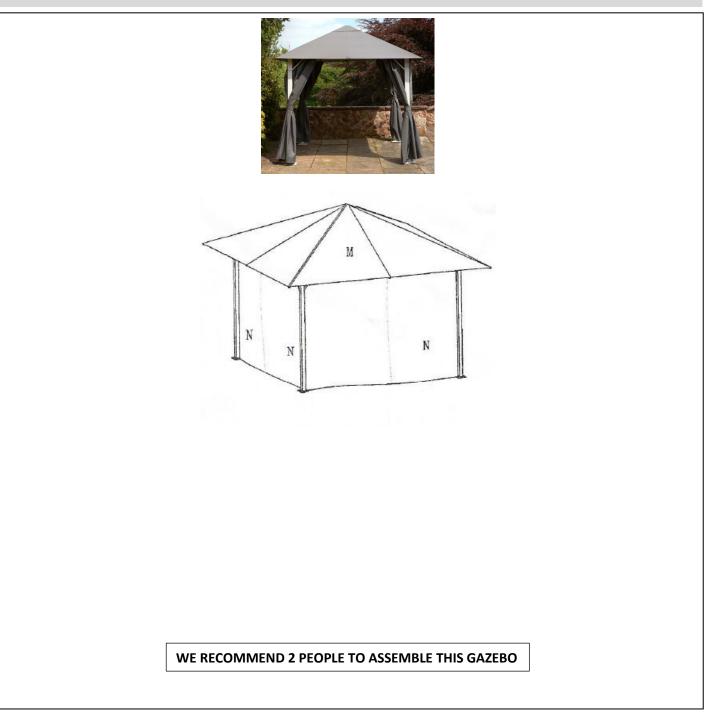


Please check if you have all the parts as listed **Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

Part#	Image	Qty
1	₩: :	4
2	l d	4
3	· · · · · · · · · · · · · · · · · · ·	4
$\begin{array}{c} 2\\ 3\\ 4\\ 5\end{array}$	n	
5		4 8 8
7		8
8	Surg Surg	1
10		4
H1	IIIII] <u>M6</u> ≉15	56
H_2	00000⊑[) M6 ≈ 30	8
H3	<u>mmm⊐</u>] <u>M</u> 6 ∗ 35	8
Ι		16
J		8
K		2
L	\frown	1
М		1
Ν	~	4

Dimensions EXTERNAL				
Width	250 cm			
Depth	250 cm			
Height	260 cm			

Assembly Requirements			
Number of people required to assemble	2		
Approximate assembly time	1-2 Hours		


Assembly Instructions

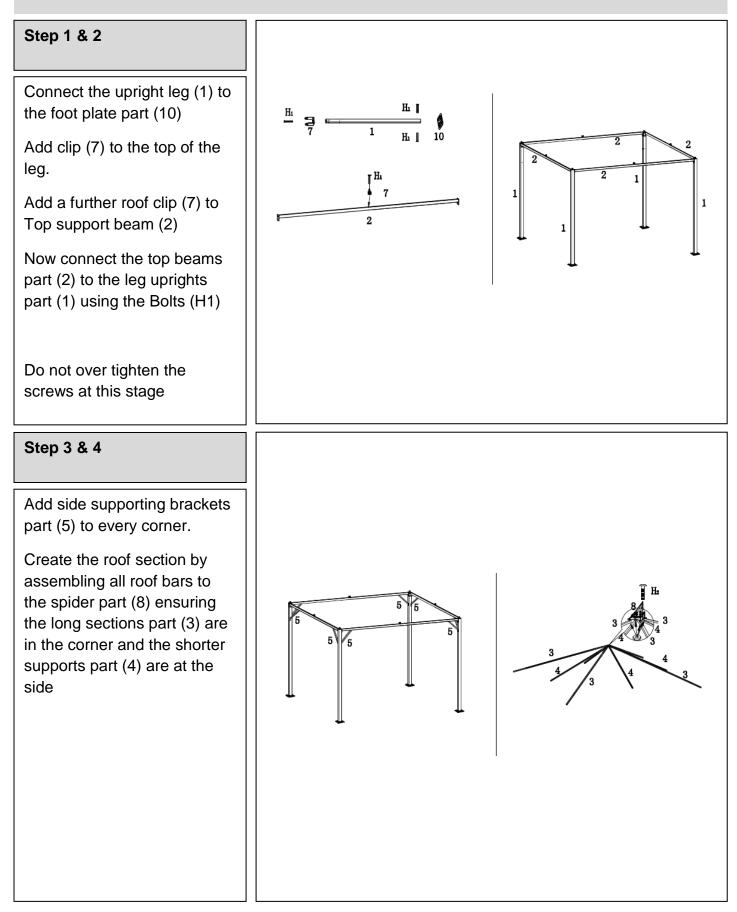

Step 5


Lift up the roof section onto the frame and connect using Bolt (H3) & Nut (I)

Now ensure all the nuts & bolts are tight across all the gazebo.

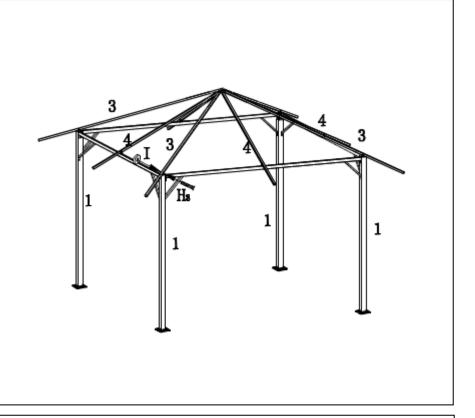

Step 6

The gazebo is now ready to add the roof and curtains. First apply the roof canopy (M) simply apply the roof over the top section and spread it out so that all the corners are close to the roof bars. The easiest way to secure the roof is to pull the canopy over using the elasticated ends and secure the mid sections first, always making sure the canopy is even across the roof leaving the 4 corners until last. For the curtains undo each section (as they are all zipped together and from the internal (inside) Fit one curtain to every corner across one leg so when zipped it will all join up.

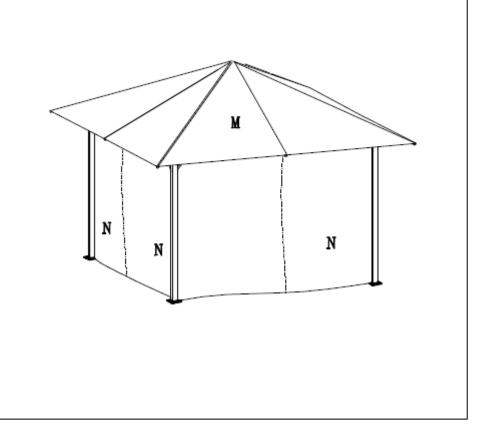

Safety and Care Advice

Your Gazebo frame can be left outside all year round but we advise the curtains & Canopy are taken off during the winter months and stored in a cool dry frost free place (do not store wet). This will prevent them from deteriorating. (To keep the canopy refreshed use a water proofing spray on the outside of the roof & curtains at least 3 times a year) Available at all good tent/camping shops.

*VERY IMPORTANT YOU MUST SECURE YOUR GAZEBO TO THE GROUND AS SOON AS IT IS BUILT – in heavy winds remove the canopy to avoid wind damage – Do Not BBQ under this gazebo

To secure to grass use the tent pegs provided for hard surface patios fixing bolts must be used (not Supplied).